

CATERPILLAR D6H

1FJ / SEBP2370


Contents

Section	Page
Power train	2

MOUNTING GP

Mounting Gp

Drawing 1 of 1

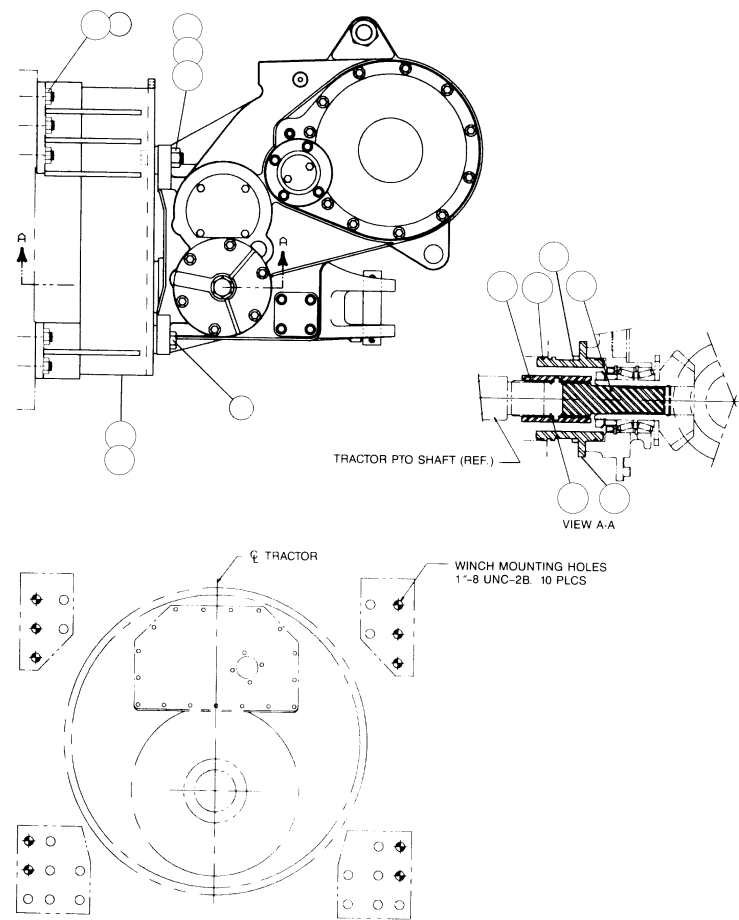


Ref.	Part number	Description	Qty	Code	Group page
1	119-0171	STUD (1 - 8 x 3 1/4 Gd8)	10		
2	8S-5654	O-RING	2		
3	002-3455	RETAINING RING	2		
4	118-6595	PTO SHAFT	1		
5	118-5863	COUPLING	1		
6	7X-0405	CAPSCREW, HEX HEAD (1 - 8 x 2 3/4 Gd8)	4		
7	7X-0450	NUT, HEX (1 1/8 - 7)	4		
8	133-9224	STUD (1 1/8 - 7 X 4 3/4)	4		
9	118-6929	ADAPTER, RH	1		
10	118-6930	ADAPTER, LH	1		
11	118-6537	PILOT, PTO	1		
12	5P-2228	CAPSCREW, HEX HEAD (1/2 - 13 X 1)	4		
13	119-1551	WASHER, HARDENED, 1 1/8	4		
14	6V-8190	NUT, HEX (1 - 8)	10		

CONTROL GP

Control Gp


Drawing 1 of 5

**MODEL PA56
CONTROL GROUP
D6H PS**

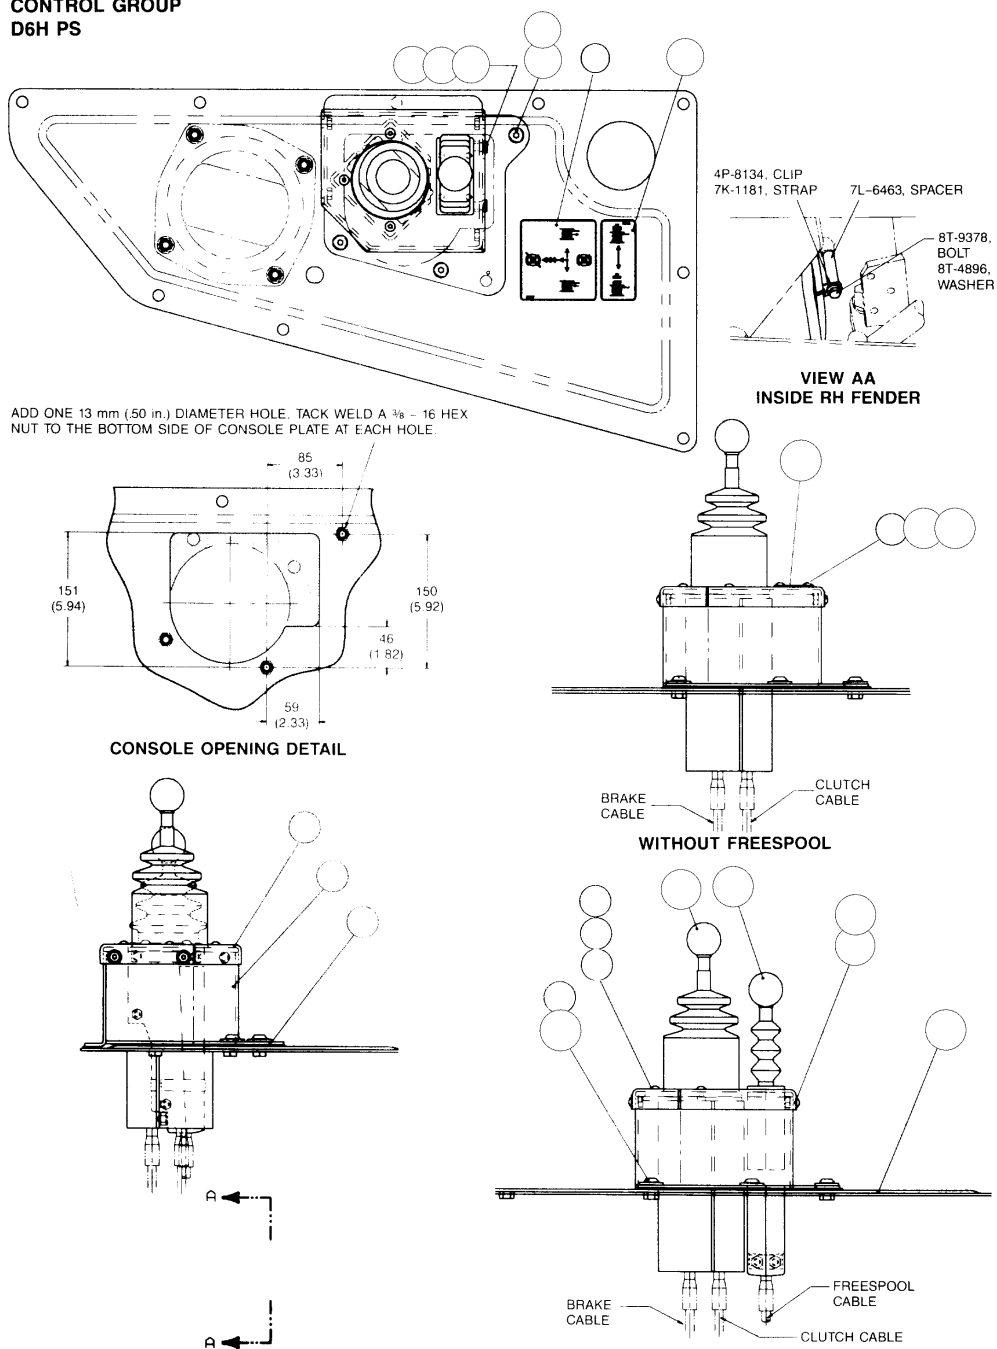


CONTROL GP (continued)


Drawing 2 of 5

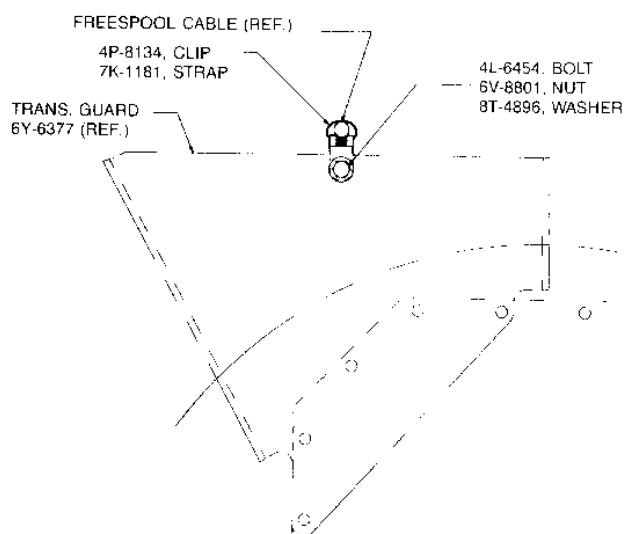


**VIEW OF TRACTOR
REAR FACE**

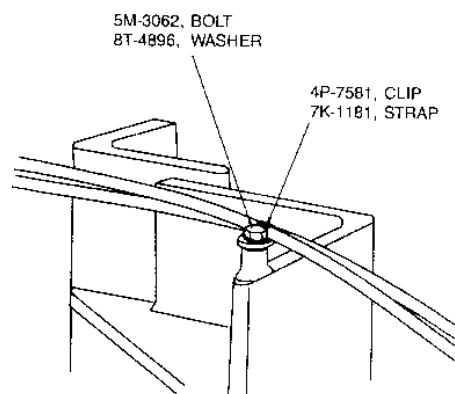

**TOP OF RH WINCH
ADAPTER BRACKET**

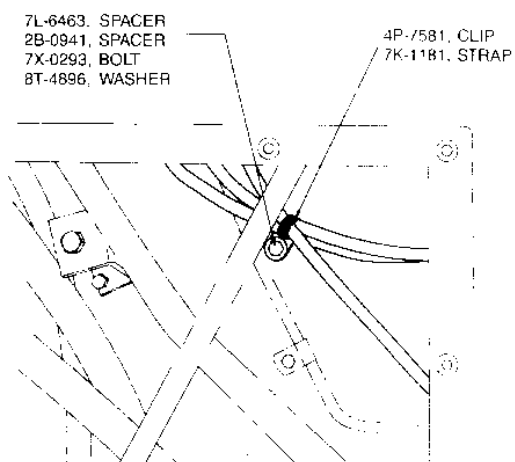

**TOP OF CASE
BELOW PLATFORM
CLUTCH/BRAKE STEERING
ONLY**

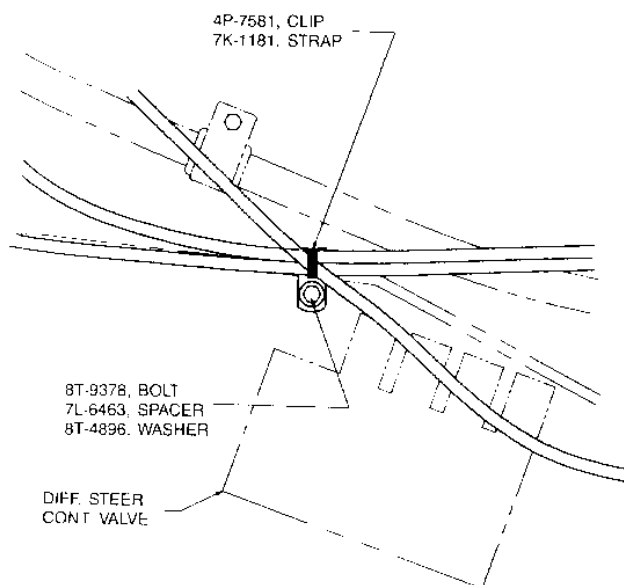

**TOP OF CASE
BELOW PLATFORM
DIFFERENTIAL STEERING
ONLY**

CONTROL GP (continued)

Drawing 3 of 5

MODEL PA56
CONTROL GROUP
D6H PS

CONTROL INSTALLATION INSTRUCTION


Note: These instructions are provided as a general guide. Tractor options, application requirements or local regulations may require deviation from these recommendations.

1. Modify the right hand console cover by removing the shaded area as shown.
2. Install the gasket, item 10, to the bottom of the control bracket, item 3.
3. Install the control bracket onto the right hand console plate, item 14, using button head capscrews and washers, items 50 and 51.
4. Carefully route control cables from winch to underside of right hand console.

CAUTION

Avoid routing cables near moving shafts or linkage which may cause damage to cables or restrict free movement of tractor components.

5. Route the control cables up through the opening of the control bracket and install cables into controllers as follows:

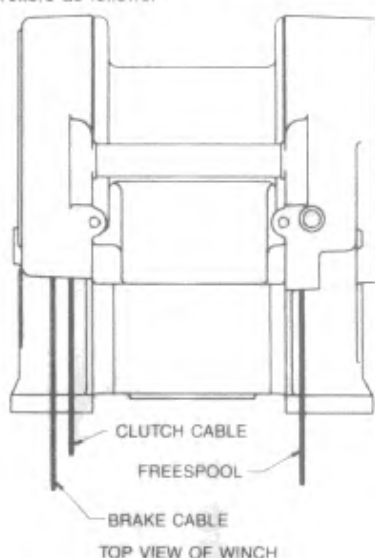

Power Shift Control - Dual Axis


1. Remove the six through-bolts, item 34, from the control stand and separate the two cable support

housings, items 37 & 38. From each plunger, remove the sliding lock screw and threaded bushing, items 35 & 36.

2. Install the sliding lock screw, item 35, onto the control cables. Apply two drops of Loctite 242 to the cable threads and install the threaded bushing, item 36, onto the cable core until the end of the cable core is level with the end of the bushing.
3. Hold the controller in your left hand with the knob end up and the mounting bolts located at 6, 9 and 12 o'clock positions. Mark the plunger closest to the 6 o'clock position as the "clutch" control. Mark the plunger closest to the 12 o'clock position as the "brake" control. The "clipped" corner of the control will be installed toward the rear of the tractor.
4. Install the brake cable to the "brake" control plunger and the clutch cable into "clutch" control plunger. Move the control lever to extend the plungers far enough to expose the wrench flats. With a wrench, hold the plunger as you tighten the sliding lock screw to 50 lb•ft (68 N•m) torque. Photo 1

CAUTION

Tightening the sliding lock screw without holding the plunger with a wrench will result in damage to the control assembly.

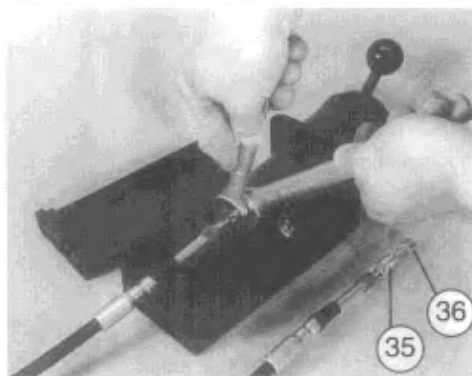

5. Install the cable support housings, items 37 & 38, onto the controller. Place the groove of the control cable housings into the saddle of the cable anchors, items 39 & 40. Install the six through-bolts, washers, lockwashers and nuts, items 31, 33, 34 & 41. Evenly tighten the bolts to 85 lb•in. (10 N•m) torque.
6. Insert the controller/cables sub-assembly from the bottom into the opening of the control bracket cover,

CONTROL GP (continued)


Drawing 4 of 5

MODEL PA56 CONTROL GROUP D6H PS

item 11, and secure with three button, socket-head capscrews, lockwashers and nuts, items 4, 5 & 6. If the winch is equipped with freespool, install the freespool controller/cable sub-assembly at this time. If not equipped with freespool, install the cover/controllers sub-assembly onto the control bracket with four capscrews, item 4.

Freespool Control Lever

1. Remove the knob, item 32, and the four oval head machine screws and lockwashers, items 16 & 17, from the long lever housing cover and remove the cover.
2. Prepare the control cable for installation by installing the o-ring, item 18, over the control lever end of the cable. The control lever end is identified by the u-bolt groove in the cable housing.
3. Install one nut, item 19, onto the cable core followed by the lockwasher, item 31.
4. Install the clevis, item 21, and one more nut, item 19, onto the cable. The cable core end must extend beyond the nut by $\frac{7}{32}$ in. (5.5 mm). Tighten the first nut to secure the clevis in this position.
5. Slip the clevis over the bellcrank of the lever and install the clevis pin, item 22, and secure in place with cotter pin, item 23. Photo 2
6. Remove the u-bolt, item 24, from the housing.
7. Position the o-ring, item 18, on the control cable housing so that when the cable is lowered into place, the o-ring fits in the groove in the housing.
8. Install the u-bolt, item 24, over the cable and through the housing. Install the spacer, item 25, over the u-bolt followed by the lockwashers and nuts, items 20 & 26. Tighten the u-bolt nuts to 90 lb•in. (10 N•m) torque.
9. Install the cover onto the housing with the four oval head machine screws and lockwashers, items 16 & 17.
10. Remove the two through-bolts and nuts, items 19 and 29, from the top two mounting holes of the lever housing.
11. Remove the four oval head machine screws, item 27, from the boot retainer plate, item 30. Remove the boot, item 28, and boot retainer plate.
12. Secure the lever to the control bracket with capscrews, nuts and lockwashers, items 5, 6 and 7. The long cover of the lever housing must face toward the operator.
13. Install the control bracket cover/controller sub-assembly onto the control bracket base using four button, socket-head capscrews and washers, items 4 and 12. Install the boot and retainer plate, items 28 and 30, removed in step 11 above. Secure the boot retainer plate with machine screws, item 27. Install the knob, item 32, onto the lever.

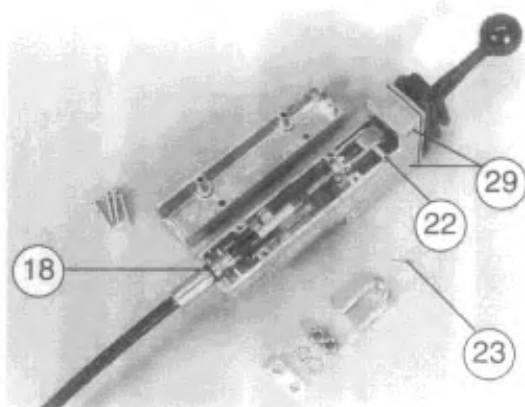


General Instructions

1. Install the control instruction self-adhesive decal(s), items 8 and 9, onto the console cover to the rear of the control bracket.
2. Fill winch to proper level with recommended oil. Refer to oil specifications found in the Operation and Preventive Maintenance Manual, publication SEBU 6884 (Paccar Winch PC-209).
3. Verify proper control cable and operating pressure adjustment by following the procedures found in the Operation and Preventive Maintenance Manual, publication SEBU 6884 (Paccar Winch PC-209) or the service manual, publication SENR 5358 (Paccar Winch PC-210).

CONTROL GP (continued)

Drawing 5 of 5

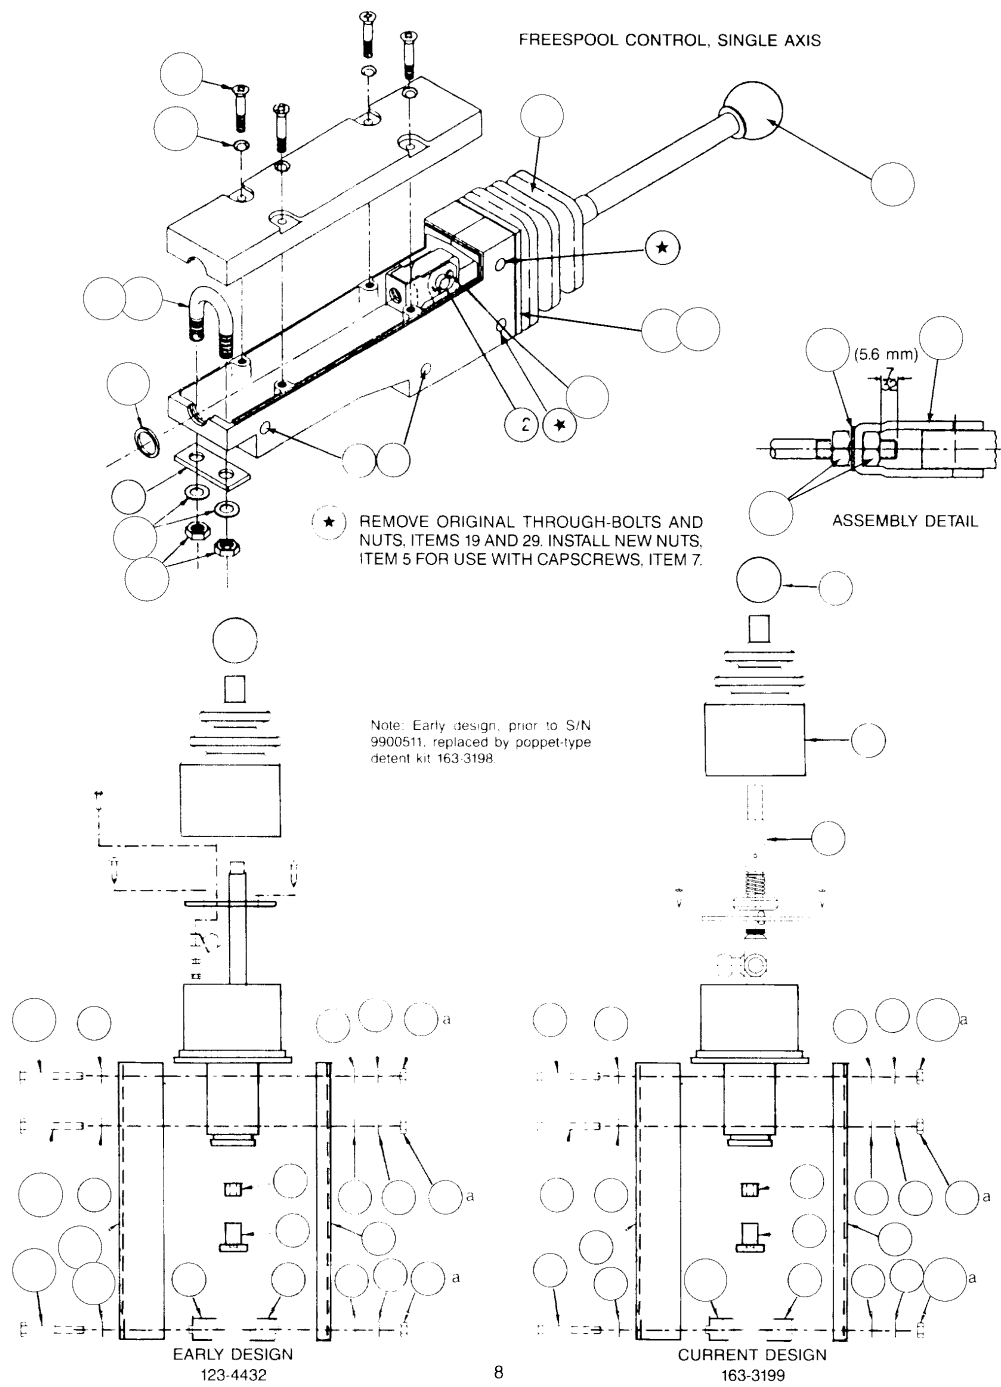

Ref.	Part number	Description	Qty	Code	Group page
1	123-4432	CONTROL, DUAL AXIS - EARLY DESIGN w/o Freespool	Qty is 1	N	
	163-3199	CONTROL, DUAL AXIS - NEW DESIGN w/o Freespool	Qty is 1	1	
2	123-4433	CONTROL, FREESPOOL, SINGLE AXIS w/o Freespool	Qty is 0	1	
3	128-1994	CONTROL BRACKET BASE w/o Freespool	Qty is 1	1	
4	123-4435	CAPSCREW, BUTTON SOCKET HEAD w/o Freespool	Qty is 11	7	
5	6V-8185	NUT (1/4-20) w/o Freespool	Qty is 5	7	

CONTROL GP (continued)

Ref.	Part number	Description	Qty	Code	Group page
6	3B-4504	LOCKWASHER (1/4) w/o Freespool Qty is 7	5		
7	8T-9368	CAPSCREW, HEX HEAD (1/4-20 X 2 1/4) w/o Freespool Qty is 0	2		
8	123-4439	DECAL, POWERSHIFT CONTROL w/o Freespool Qty is 1	1		
9	123-4440	DECAL, FREESPOOL CONTROL w/o Freespool Qty is 0	1		
10	128-1995	GASKET w/o Freespool Qty is 1	1		
11	128-1996	CONTROL BRACKET COVER w/o Freespool Qty is 1	1		
12	8T-4205	WASHER (1/4) w/o Freespool Qty is 4	4		
13	126-2826	COVER w/o Freespool Qty is 1			
14	128-1997	CONSOLE PLATE w/o Freespool Qty is 1	1		
15	123-4424	CONTROL CABLE - 90 IN. (2286 MM) w/o Freespool Qty is 2	3		
16	126-5992	MACHINE SCREW, CSK, OVAL HEAD (8-32 X 1 1/4) w/o Freespool Qty is 0	4		
17	9F-5602	LOCKWASHER, CSK (8) w/o Freespool Qty is 0	4		
18	8F-9206	O-RING w/o Freespool Qty is 0	1		
19	9S-8748	NUT (1/4-28) w/o Freespool Qty is 0	6		
20	7H-3937	LOCKWASHER, EXTERNAL TOOTH (5/16) w/o Freespool Qty is 0	2		
21	126-2799	CLEVIS w/o Freespool Qty is 0	1		
22	126-2800	CLEVIS PIN w/o Freespool Qty is 0	1		
23	3B-4604	COTTER PIN (1/16 X 1/2 w/o Freespool Qty is 0	1		
24	126-2798	U-BOLT w/o Freespool Qty is 0	1		
25	126-2801	U-BOLT SPACER w/o Freespool Qty is 0	1		
26	6V-8186	NUT (5/16-24) w/o Freespool Qty is 0	2		
27	126-5990	MACHINE SCREW, CSK, OVAL HEAD (8-32 X 1/2) w/o Freespool Qty is 0	4		
28	126-2825	BOOT, FREESPOOL LEVER w/o Freespool Qty is 0	1		
29	126-5991	MACHINE SCREW, FLSTR HEAD (1/4-28 X 1 7/16) w/o Freespool Qty is 0	4		
30	126-2802	BOOT RETAINER PLATE w/o Freespool Qty is 0	1		
31	1H-3338	LOCKWASHER, EXTERNAL TOOTH (1/4) w/o Freespool Qty is 6	7		
32	7R-5874	KNOB w/o Freespool Qty is 1	2		
33	6V-8185	NUT (1/4-20) w/o Freespool Qty is 6	6		
34	8T-9367	CAPSCREW, HEX HEAD (1/4-20 X 2) w/o Freespool Qty is 6	6		
35	126-2821	SLIDING LOCKSCREW w/o Freespool Qty is 2	2		
36	126-2822	CABLE BUSHING w/o Freespool Qty is 2	2		
37	126-2823	CABLE SUPPORT HOUSING, OUTER w/o Freespool Qty is 1	1		
38	126-2824	CABLE SUPPORT HOUSING, INNER w/o Freespool Qty is 1	1		
39	126-2818	CABLE ANCHOR, OUTER w/o Freespool Qty is 1	1		

CONTROL GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
40	126-2820	CABLE ANCHOR, INNER w/o Freespool Qty is 1	1		
41	8T-4205	WASHER, FLAT-THIN(1/4) w/o Freespool Qty is 12	12		
42	126-2803	CABLE CLAMP w/o Freespool Qty is 1	1		
43	163-3201	BOOT w/o Freespool Qty is 1	1		
44	163-3198	BRAKE-OFF DETENT KIT w/o Freespool Qty is 0	1	N	

CAT codes: N.

WINCH CASE & COVERS

WINCH CASE & COVERS

Drawing 1 of 1

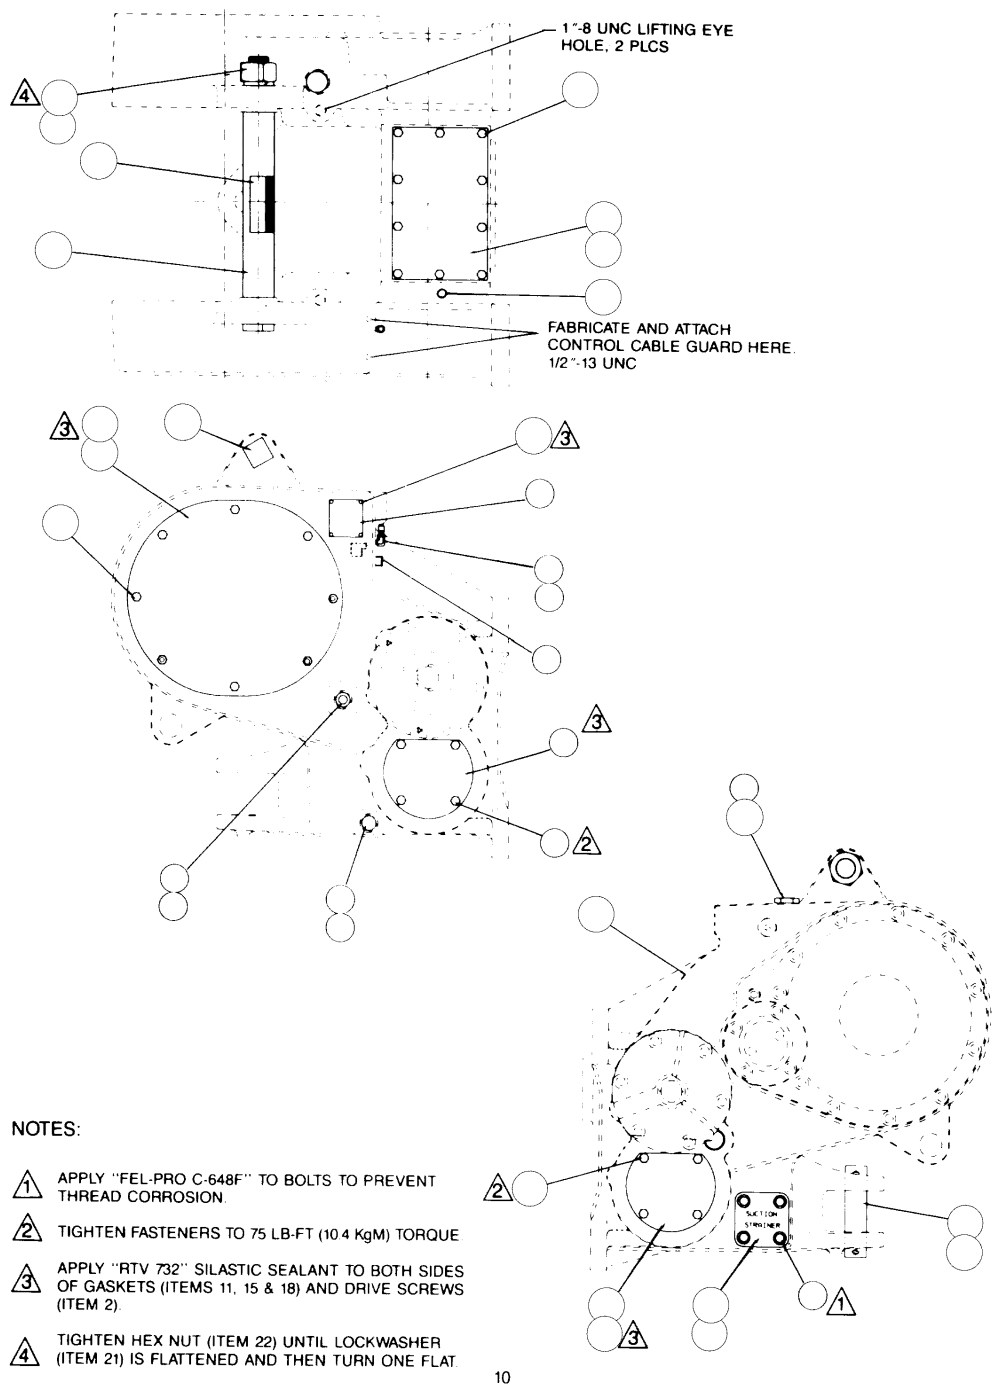

Ref.	Part number	Description	Qty	Code	Group page
1	5P-2228	CAPSCREW, HEX HEAD (1/2 - 13 NC X 1)	12		
2	7H-4543	DRIVE SCREW	4		
3	5P-9436	PLUG, DRAIN (MAY BE SUBSTITUTED FOR ITEM 7)	1		
4	5P-1403	PLUG, OIL FILL (INCLUDES ITEM 27)	1		
5	6L-9965	O-RING	1		

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

1FJ-SEBP2370

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99