

CATERPILLAR 75E

1HM / SEBP2833


Contents

Section	Page
Basic engine	2
Lubrication system	
Cooling system	
Air inlet and exhaust	
Fuel system	
Basic engine	
Basic engine	
Electrical and electronics	
Power train	
Frame, guards and enclosure	
Hydraulic system	
Power train	
Hydraulic system	
Hydraulic system	
Hydraulic system	
Air inlet and exhaust	
Catalog items	

180-1647 AIR COMPRESSOR GP -TRAILER BRAKES

180-1647 AIR COMPRESSOR GP -TRAILER BRAKES S/N 1HM1-UP PART OF 180-1652 BRAKE AR-TRAILER

Drawing 1 of 1

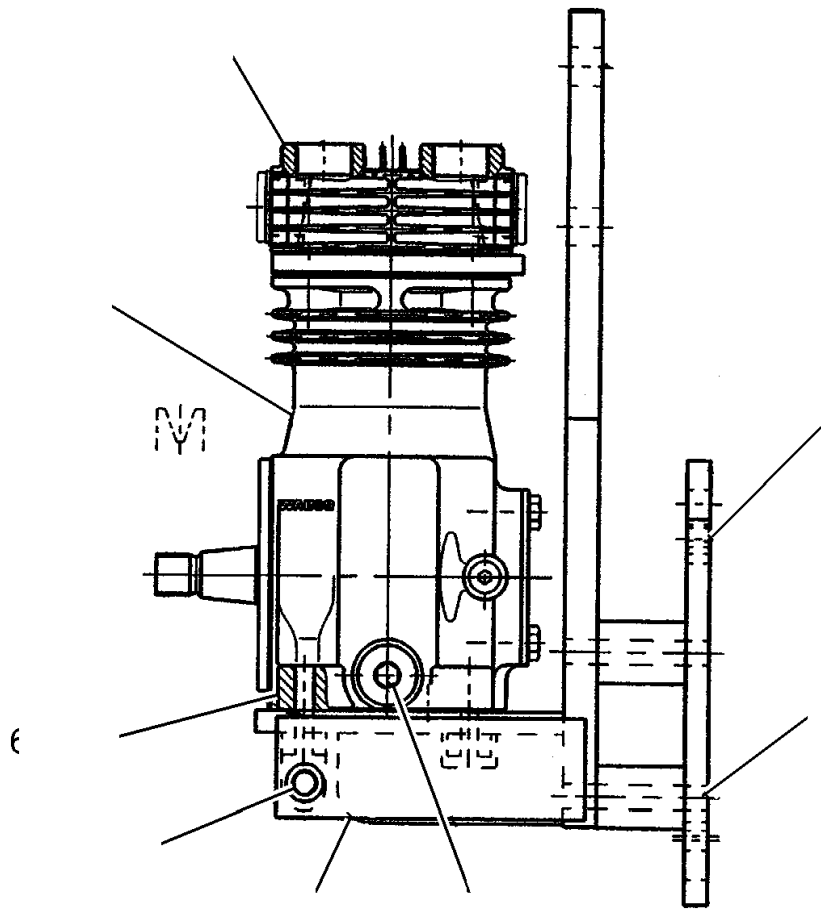


Ref.	Part number	Description	Qty	Code	Group page
1	180-6045	FITTING-STRAIGHT	1		
2	147-9054	SEAL-O-RING	1		
3	180-2514	COMPRESSOR	1		
4	7X-0818	BOLT (M8X1.25X45-MM)	2	M	
5	180-6046	BOLT	2	M	
6	151-9076	WASHER	4		
7	155-2199	BOLT (M10X80-MM)	1	M	
8	180-2516	BRACKET	1		
9	180-5040	FITTING-ELBOW	1		
10	8T-4172	BOLT (M10X1.5X80-MM)	4	M	
11	151-9077	WASHER	4		
12	8T-4133	NUT (M10X1.5-THD)	4	M	
13	180-2515	BRACKET	1		

CAT codes: M.

115-9382 CAMSHAFT GP

115-9382 CAMSHAFT GP S/N 7ZR1450-UP PART OF 160-8574 ENGINE AR-CORE

Drawing 1 of 1

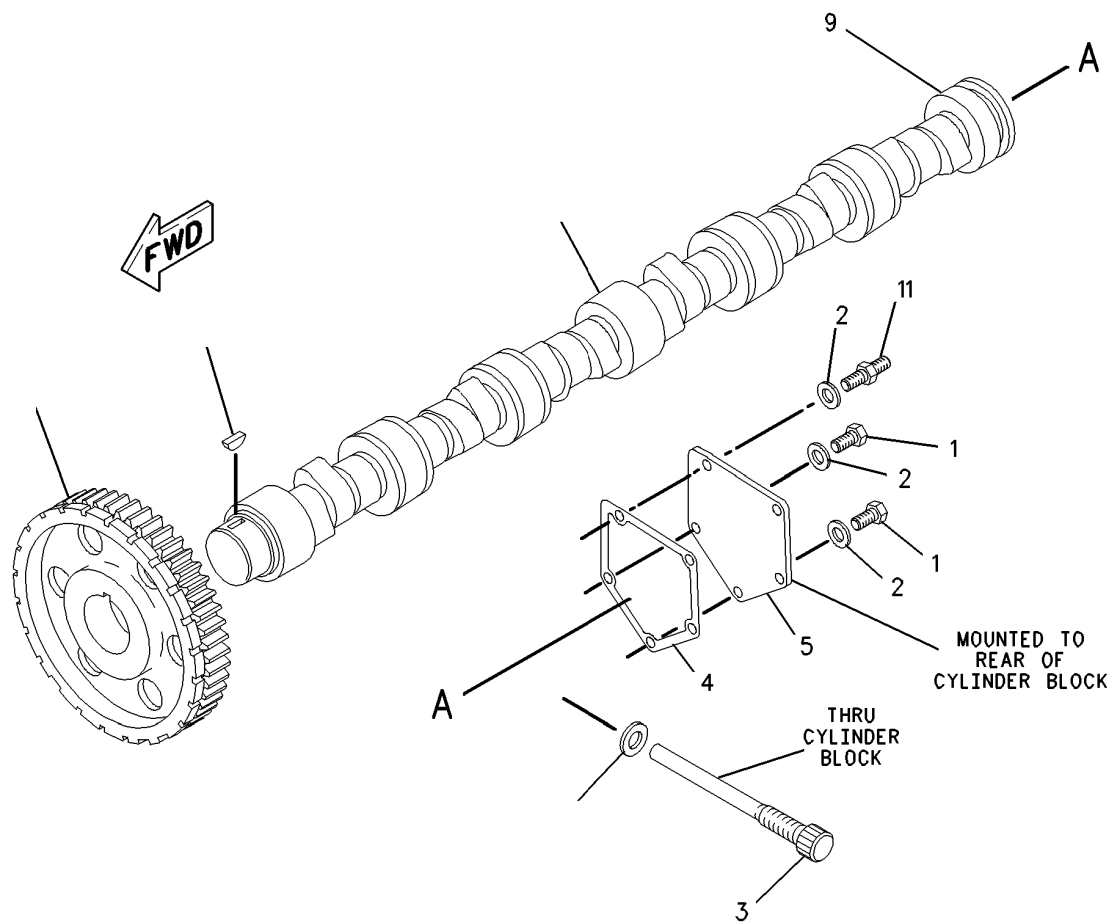


Ref.	Part number	Description	Qty	Code	Group page
1	6V-5217	BOLT (M8X1.25X20-MM)	2	M	
2	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	5		
3	178-3643	PIN-THRUST	1		
4	133-7068	GASKET-CAMSHAFT COVER	1		
5	118-0459	COVER	1		
6	129-2888	CAMSHAFT AS	1		
7	1B-8705	KEY-WOODRUFF	1		
8	6I-3733	GEAR-CAMSHAFT DRIVE (96-TEETH)	1		
9	128-0411	JOURNAL	1		
10	4K-9841	WASHER (0.406X0.75X0.064-IN THK)	1		
11	9X-2097	STUD (M8X1.25-THD)	3	M	

CAT codes: M, R.

115-2985 COVER GP-CYLINDER BLOCK

115-2985 COVER GP-CYLINDER BLOCK S/N 7ZR1450-UP PART OF 160-8575 ENGINE AR-COMplete FOR USE WITH 117-2786, SPIN ON PAPER BYPASS FILTER OR WHEN NO BYPASS FILTER IS USED

Drawing 1 of 1

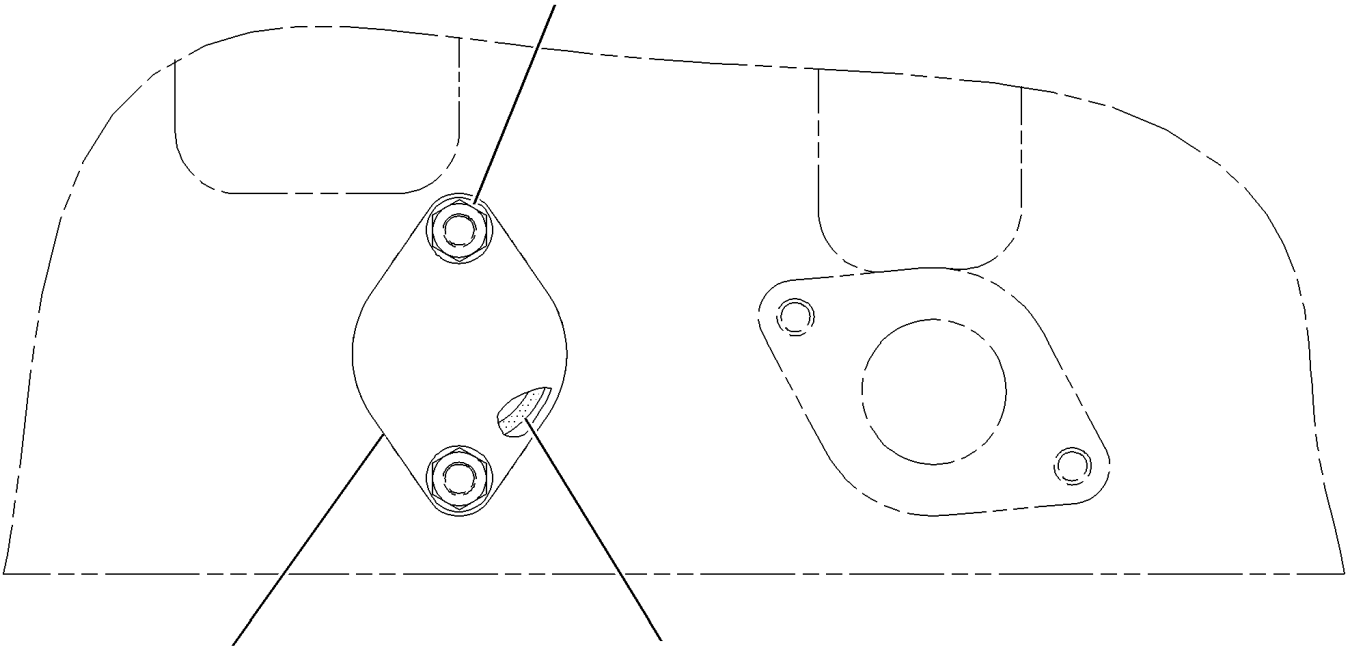

RIGHT SIDE VIEW


Ref.	Part number	Description	Qty	Code	Group page
1	4P-6587	COVER	1		
2	6V-5217	BOLT (M8X1.25X20-MM)	2	M	
3	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	2		
4	6V-1250	SEAL-O-RING	1		

CAT codes: M.

122-0761 COVER GP-FRONT HOUSING

122-0761 COVER GP-FRONT HOUSING S/N 7ZR1450-UP PART OF 160-8575 ENGINE AR-COMPLETE CANNOT BE USED WITH OIL FILLER

Drawing 1 of 1

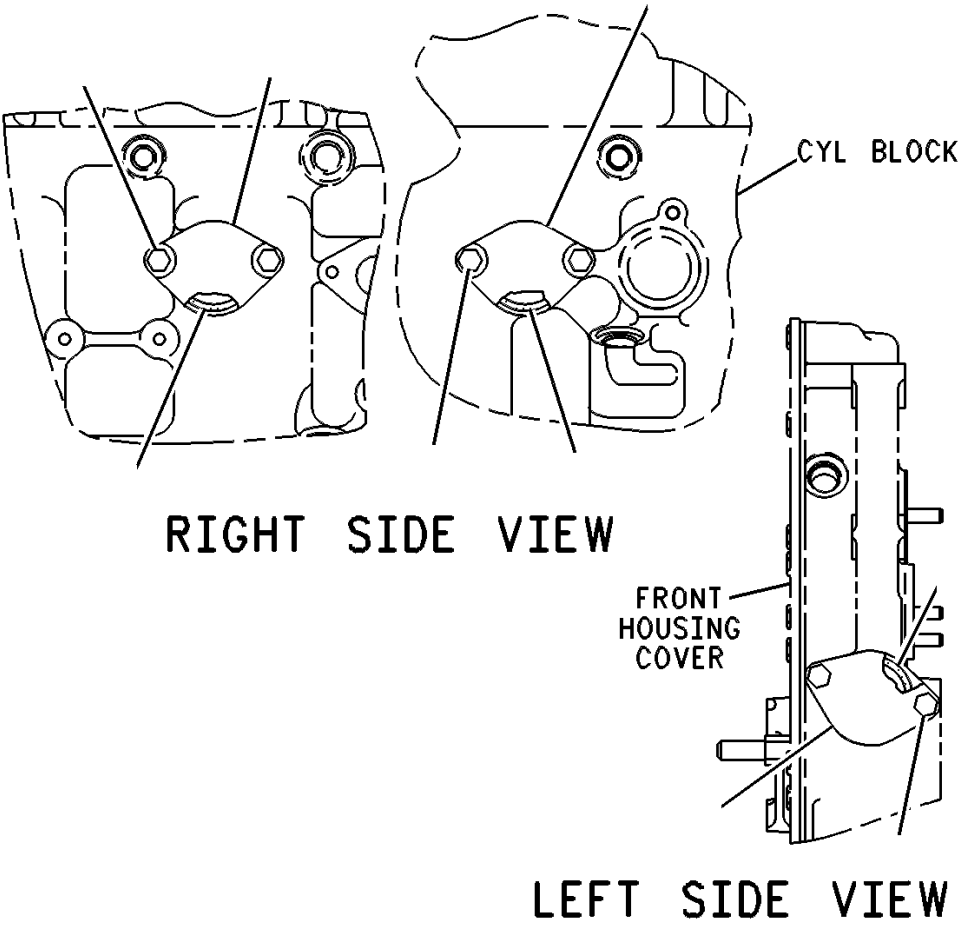


Ref.	Part number	Description	Qty	Code	Group page
1	6V-5217	BOLT (M8X1.25X20-MM)	4	M	
2	6V-3940	BOLT (M8X1.25X25-MM)	2	M	
3	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	6		
4	061-9455	SEAL-O-RING	3		
5	7C-1445	COVER	3		

CAT codes: M.

136-4307 COVER GP-FRONT HOUSING

136-4307 COVER GP-FRONT HOUSING S/N 7ZR1450-UP PART OF 160-8574 ENGINE AR-CORE

Drawing 1 of 1

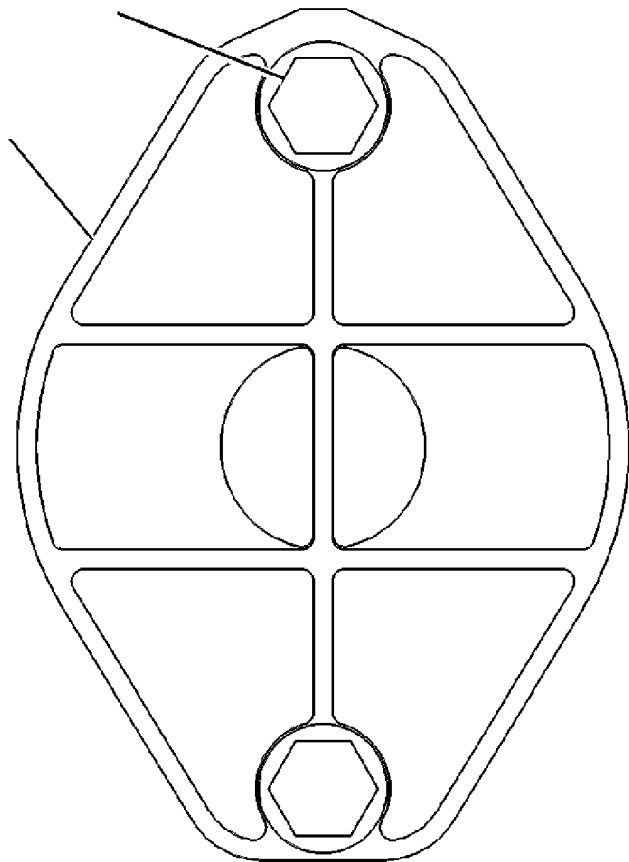

REAR VIEW


Ref.	Part number	Description	Qty	Code	Group page
1	4P-1650	COVER	1		
2	1H-7339	SEAL-O-RING	1		
3	6V-1820	BOLT (M10X1.5X30-MM)	2	M	
4	6V-5839	WASHER (11X21X2.5-MM THK)	2		

CAT codes: M.

117-2743 CRANKSHAFT GP

117-2743 CRANKSHAFT GP S/N 7ZR1450-4904 PART OF 160-8574 ENGINE AR-CORE

Drawing 1 of 1

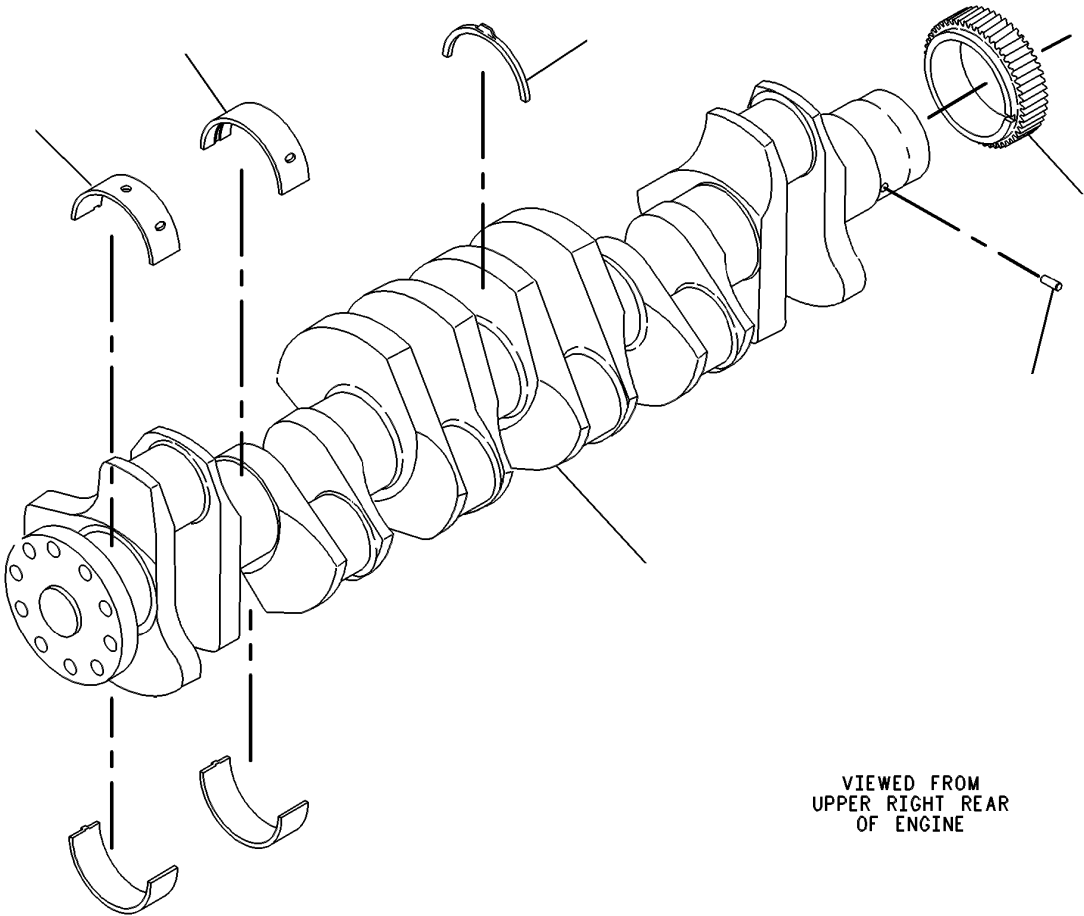

Ref.	Part number	Description	Qty	Code	Group page
1	116-1109	BEARING-MAIN	3	J	
	128-0382	BEARING-MAIN (0.51-MM US)	1	AB	
	128-0383	BEARING-MAIN (0.76-MM US)	1	AB	
	128-0384	BEARING-MAIN (0.51-MM OS)	1	AB	
	128-0385	BEARING-MAIN (0.51-MM OS, 0.51-MM US)	1	AB	
2	116-1107	PLATE-THRUST	2	J	
3	116-1108	BEARING-MAIN	4	J	
	128-0400	BEARING-MAIN (0.51-MM US)	1	AB	
	128-0401	BEARING-MAIN (0.76-MM US)	1	AB	
	128-0402	BEARING-MAIN (0.51-MM OS)	1	AB	
	128-0403	BEARING-MAIN (0.51-MM OS, 0.51-MM US)	1	AB	
4	151-2920	CRANKSHAFT AS	1		
5	6V-3536	DOWEL	1		
6	160-8143	GEAR-CRANKSHAFT (48-TEETH)	1		
	9Y-0810	SLEEVE-WEAR (REAR SEAL)	1	F	

117-2743 CRANKSHAFT GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
	9Y-0821	SLEEVE (FRONT SEAL)	1	F	
AVAILABLE REPAIR KIT(S):					
	196-9521	BEARING GP-MAIN (CRANKSHAFT)		J	

CAT codes: A, B, F, J, R.

117-2743 CRANKSHAFT GP

117-2743 CRANKSHAFT GP S/N 7ZR4905-UP PART OF 160-8574 ENGINE AR-CORE

Drawing 1 of 1

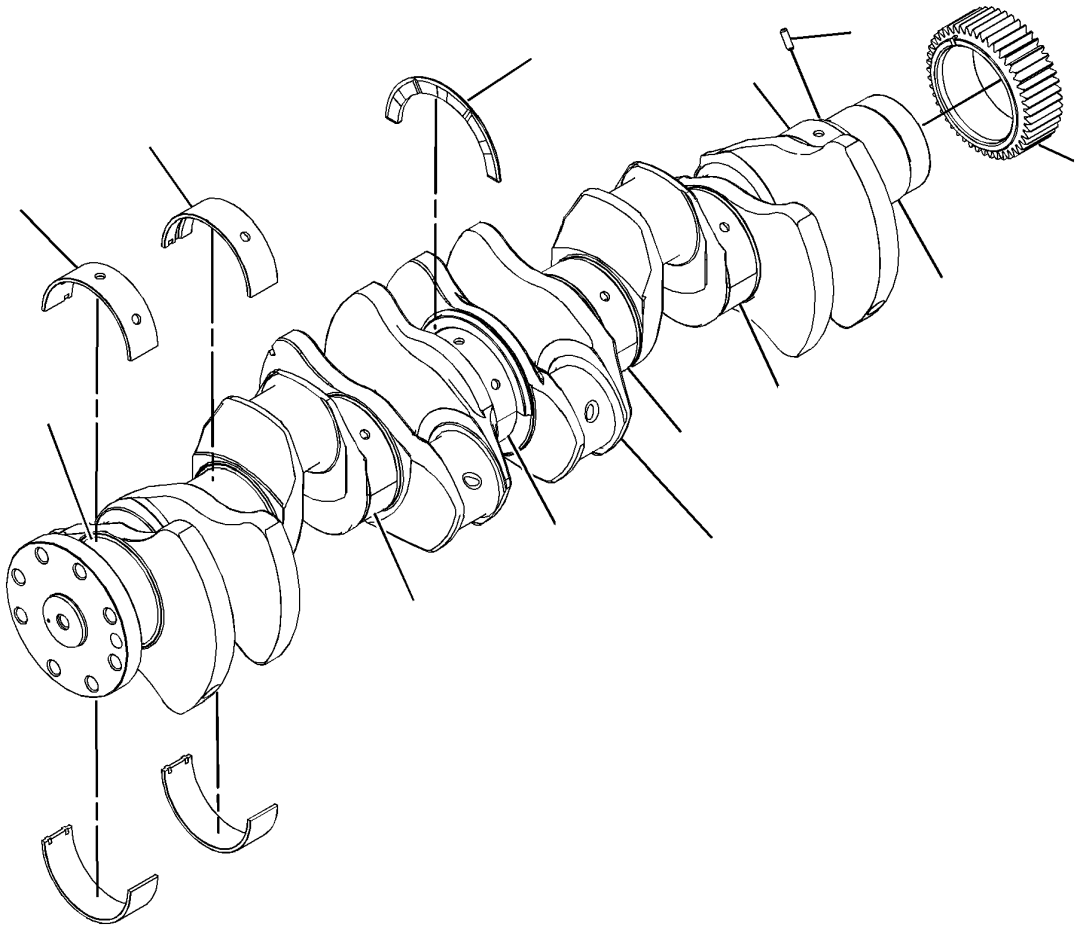

Ref.	Part number	Description	Qty	Code	Group page
1	211-0588	BEARING-MAIN (STANDARD)	3	J	
	128-0382	BEARING-MAIN (0.51-MM US)		AB	
	128-0383	BEARING-MAIN (0.76-MM US)		AB	
	128-0384	BEARING-MAIN (0.51-MM OS)		AB	
	128-0385	BEARING-MAIN (0.51-MM OS, 0.51-MM US)		AB	
2	246-3144	PLATE-THRUST	2	J	
3	211-0587	BEARING-MAIN (STANDARD)	4	J	
	128-0400	BEARING-MAIN (0.51-MM US)		AB	
	128-0401	BEARING-MAIN (0.76-MM US)		AB	
	128-0402	BEARING-MAIN (0.51-MM OS)		AB	
	128-0403	BEARING-MAIN (0.51-MM OS, 0.51-MM US)		AB	
4	326-4278	CRANKSHAFT AS	1	C	
4A	6V-3536	DOWEL	1		
4B	187-8972	GEAR-CRANKSHAFT (48-TEETH)	1		
4C	9Y-0821	SLEEVE (FRONT)	1		

117-2743 CRANKSHAFT GP (continued)

Ref.	Part number	Description	Qty	Code	Group page
4D	9Y-0810	SLEEVE-WEAR (REAR)	1		
AVAILABLE REPAIR KIT(S):					
	196-9521	BEARING GP-MAIN (CRANKSHAFT)(STANDARD)		J	
(INCLUDES STANDARD MAIN BEARINGS & THRUST PLATES)					

CAT codes: A, B, C, J, R.

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

1HM-SEBP2833

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99