

CATERPILLAR SR4B

2SN / SEBP2414


Contents

Section	Page
Lubrication system	2
Air inlet and exhaust	5
Air inlet and exhaust	
Fuel system	
Electrical and electronics	
Basic engine	

131-0539 COVER GP-GENERATOR -COUPLING

131-0539 COVER GP-GENERATOR -COUPLING S/N 2DM1-UP; 2GM1-UP; 3HN1-UP; 4EN1-UP; 4GN1-UP; 4WN1-UP; 5WN1-UP; 6SN1-UP; 7DN1-UP; 7TN1-UP; 9CN1-UP; 8XS1-UP; 3BM1-UP; 4DM1-UP; 1HN1-UP; 2DN1-UP; 2FN1-UP; 2SN1-UP; 3EN1-UP; 3FN1-UP FOR USE WITH 2-BEARING, 820-FRAME, 690-FRAME AN ATTACHMENT

Drawing 1 of 1

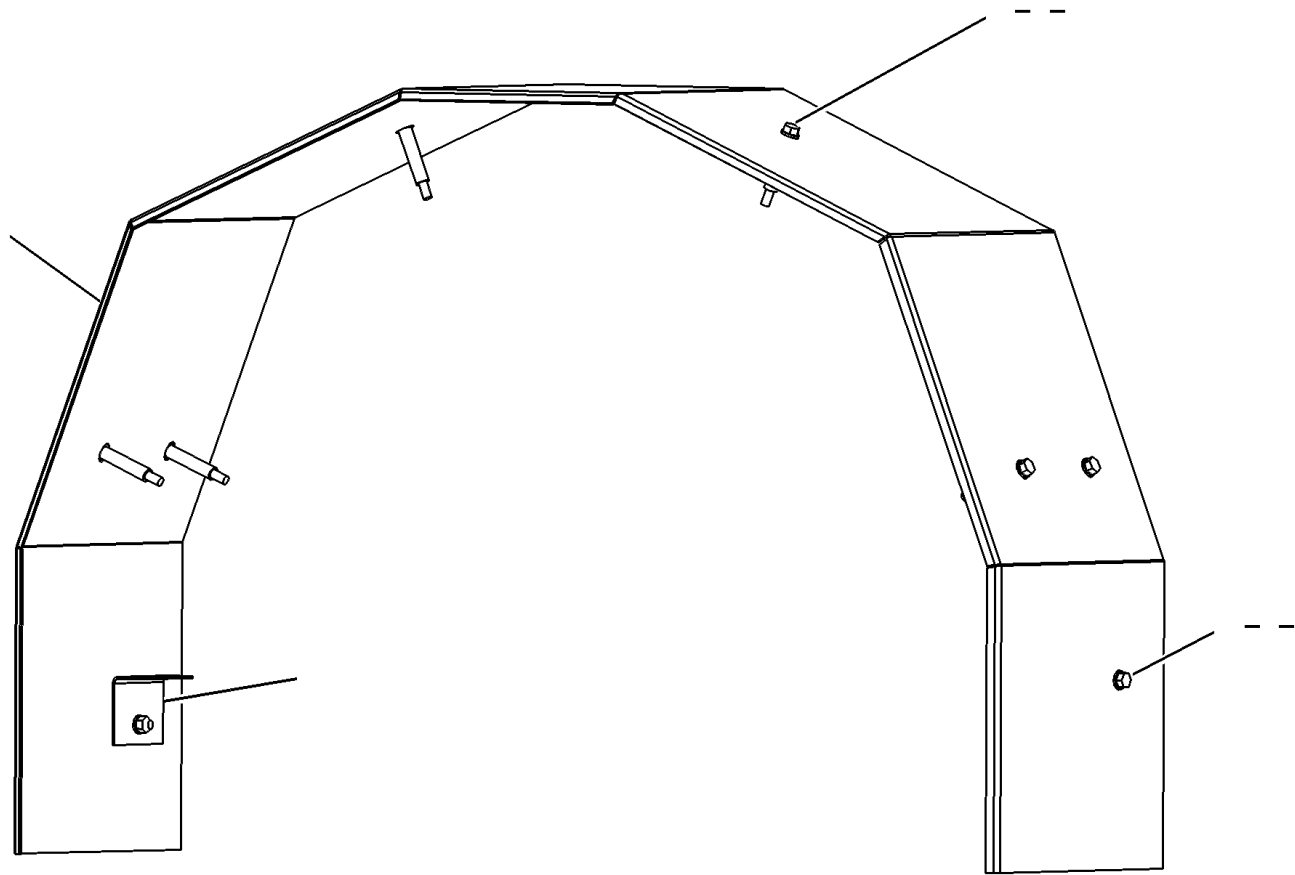 


Ref.	Part number	Description	Qty	Code	Group page
1	7E-4475	TUBE-SPACER (8.3X11.9X50.8-MM THK)	6		
2	129-0799	BRACKET-MOUNTING	2		
3	130-9238	COVER-DRIP	1		
4	0S-1617	BOLT (5/16-18X0.75-IN)	2		
5	1D-4540	BOLT (5/16-18X2.75-IN)	6		
6	5S-0003	NUT (5/16-18-THD)	2		
7	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	10		

141-4987 COVER GP-GENERATOR -COUPLING

141-4987 COVER GP-GENERATOR -COUPLING PART OF 144-1665, 144-1667, 144-1669, 144-1673, 144-1677, 144-1679, 144-1685, 144-1687, 144-1689, 144-1691, 144-1693, 144-1695, 144-1697, 144-1699, 144-1701, 144-1703, 144-1705, 144-1707, 144-1711, 144-1715, 144-1717, 144-1723, 144-1731, 144-1735, 144-1743, 144-1745, 144-1747, 144-1749, 144-1751, 144-1753, 144-1755, 144-1757, 144-1759, 144-1767, 144-1771, 144-1775, 144-1811, 144-1813, 144-1815, 144-1819, 144-1823, 144-1825, 144-1827, 144-1829, 144-1831, 144-1833, 144-1835, 144-1837, 144-1839, 144-1841, 144-1843, 144-1845, 144-1847, 144-1951, 144-1963, 144-1967, 144-1971, 144-1973, 144-1975, 144-1977, 144-1983, 144-1985, 144-1989, 144-1991, 144-1995, 144-1999, 144-2001, 144-2003, 144-2005, 144-2023, 144-2025, 144-2027, 144-2029, 144-2035, 144-2037, 144-2041, 144-2067, 144-2071, 144-2079, 144-2083, 144-2087, 147-9437, 147-9439, 147-9441, 147-9443, 147-9449, 147-9451, 147-9453, 147-9455, 147-9489, 147-9493, 147-9497, 160-4021, 162-9493, 163-8541, 163-8543, 163-8545, 163-8547, 164-4945, 166-2651, 166-2653, 166-2655, 166-2657, 166-2659, 166-2661, 166-2663, 166-2665, 166-2667, 166-2669, 166-2671, 166-2673, 166-2675, 166-2677, 166-2679, 166-2681, 166-2683, 166-2685, 166-2687, 166-2689, 166-2691, 166-2693, 166-2695, 166-2697, 166-2699, 166-2701, 166-2703, 166-2705, 166-2707, 166-2709, 166-2711, 166-2713, 166-2715, 166-2717, 166-2719, 166-7187, 166-7457, 166-7459, 166-7461, 178-1617, 225-6313, 226-1215, 276-4650, 276-4651, 276-4652, 276-4653, 276-4654, 279-6661, 284-3061, 284-8213, 296-0411, 318-5143, 318-5147, 318-5153, 318-5155, 320-3715, 321-7203, 333-2097, 334-4381, 339-7751, 344-4897, 344-6515, 352-7343, 352-7345, 352-7347, 352-7349, 352-7351, 352-7353, 368-6955, 371-9666, 382-4977, 382-4979, 434-7057 GENERATOR GP FOR USE WITH 2-BEARING, 820-FRAME, 690-FRAME ALSO AN ATTACHMENT

Drawing 1 of 1

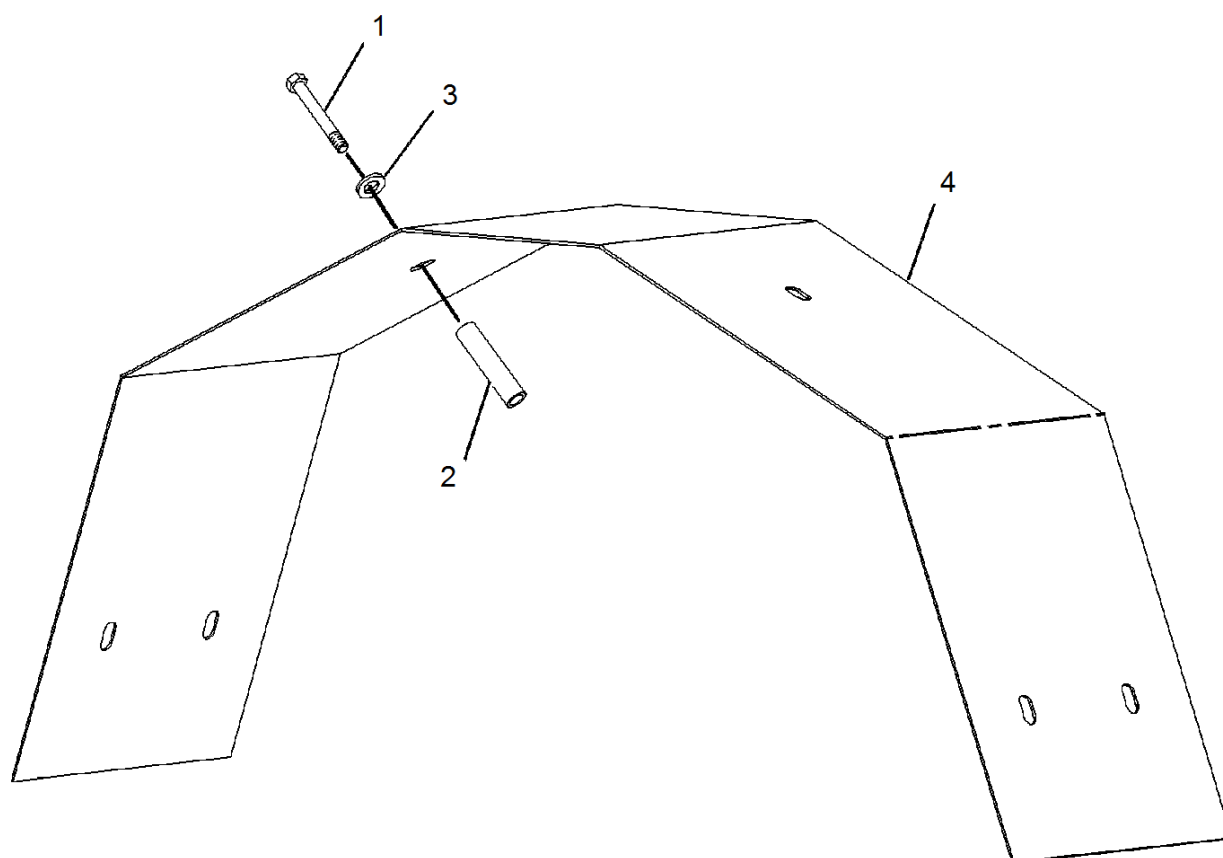 


Ref.	Part number	Description	Qty	Code	Group page
1	1D-4540	BOLT (5/16-18X2.75-IN)	6		
2	7E-4475	TUBE-SPACER (8.3X11.9X50.8-MM THK)	6		
3	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	6		
4	128-0594	COVER-DRIP	1		

122-4869 PANEL AS-ENCLOSURE -EXTENSION BOX

122-4869 PANEL AS-ENCLOSURE -EXTENSION BOX S/N 2DM1-UP; 2GM1-UP; 1HN1-UP; 2DN1-UP; 2FN1-UP; 2GN1-UP; 2HN1-UP; 2SN1-UP; 3EN1-UP; 3FN1-UP; 3GN1-UP; 3HN1-UP; 3BM1-UP; 4EN1-UP; 4FN1-UP; 4GN1-UP; 4WN1-UP; 5SN1-UP; 5WN1-UP; 6SN1-UP; 7DN1-UP; 7TN1-UP; 8NN1-UP; 4DM1-UP; 9CN1-UP; 9EN1-UP; 8GW1-UP; 5DM1-UP; 6GM1-UP; 7GM1-UP; 8DM1-UP; 8HM1-UP; 1BN1-UP FOR USE WITH 800-AMPERE TO 1200-AMPERE CIRCUIT BREAKERS IN 690-FRAME, 820-FRAME AN ATTACHMENT

Drawing 1 of 1

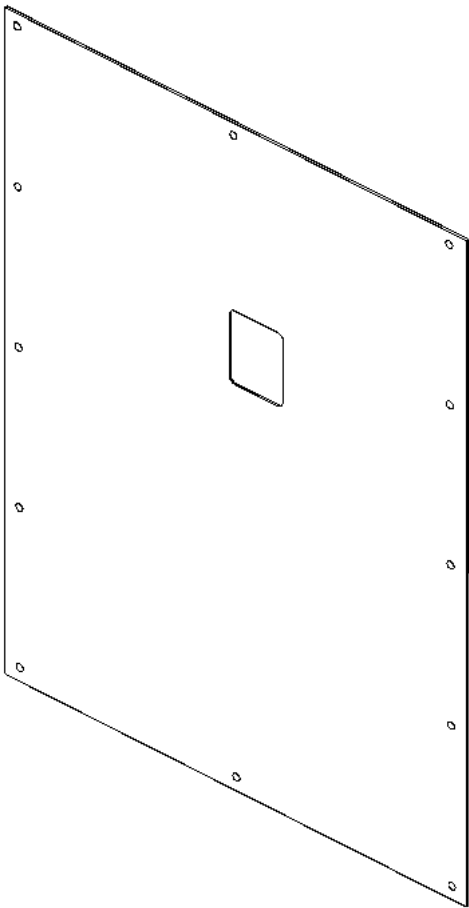 

Ref.	Part number	Description	Qty	Code	Group
			.		page
(NO SERVICED PARTS)					

235-2276 ADAPTER -UPPER

235-2276 ADAPTER -UPPER S/N AEB1-UP; AAJ1-UP; 4FN1-UP; 4GN1-UP; 5SN1-UP; 5WN1-UP; 7TN1-UP; 8NN1-UP; 9CN1-UP; AAR1-UP; ADR1-UP; 8XS1-UP; 6GM1-UP; 2GZ1-UP; AEZ1-UP; 7GM1-UP; 8DM1-UP; 1BN1-UP; 1HN1-UP; 2HN1-UP; 2SN1-UP; 4EN1-UP FOR USE WITH 820-FRAME FIELD INSTALLATION

No separate drawing is provided in the current catalog card.

Ref.	Part number	Description	Qty	Code	Group
			.		page
(NO SERVICED PARTS)					

235-2277 ADAPTER -LOWER

235-2277 ADAPTER -LOWER S/N AEB1-UP; AAJ1-UP; 4FN1-UP; 4GN1-UP; 5SN1-UP; 5WN1-UP; 7TN1-UP; 8NN1-UP; 9CN1-UP; AAR1-UP; ADR1-UP; 8XS1-UP; 6GM1-UP; 2GZ1-UP; AEZ1-UP; 7GM1-UP; 8DM1-UP; 1BN1-UP; 1HN1-UP; 2HN1-UP; 2SN1-UP; 4EN1-UP FOR USE WITH 820-FRAME FIELD INSTALLATION


No separate drawing is provided in the current catalog card.

Ref.	Part number	Description	Qty	Code	Group page
		(NO SERVICED PARTS)	.		

142-4456 ADAPTER GP-GENERATOR COUPLING

142-4456 ADAPTER GP-GENERATOR COUPLING S/N 1HN1-UP; 7TN1-UP; 9CN1-UP; 2SN506-UP PART OF 4P-4579, 4P-4600, 9Y-0167, 9Y-0463, 9Y-0533 GENERATOR GP

Drawing 1 of 1

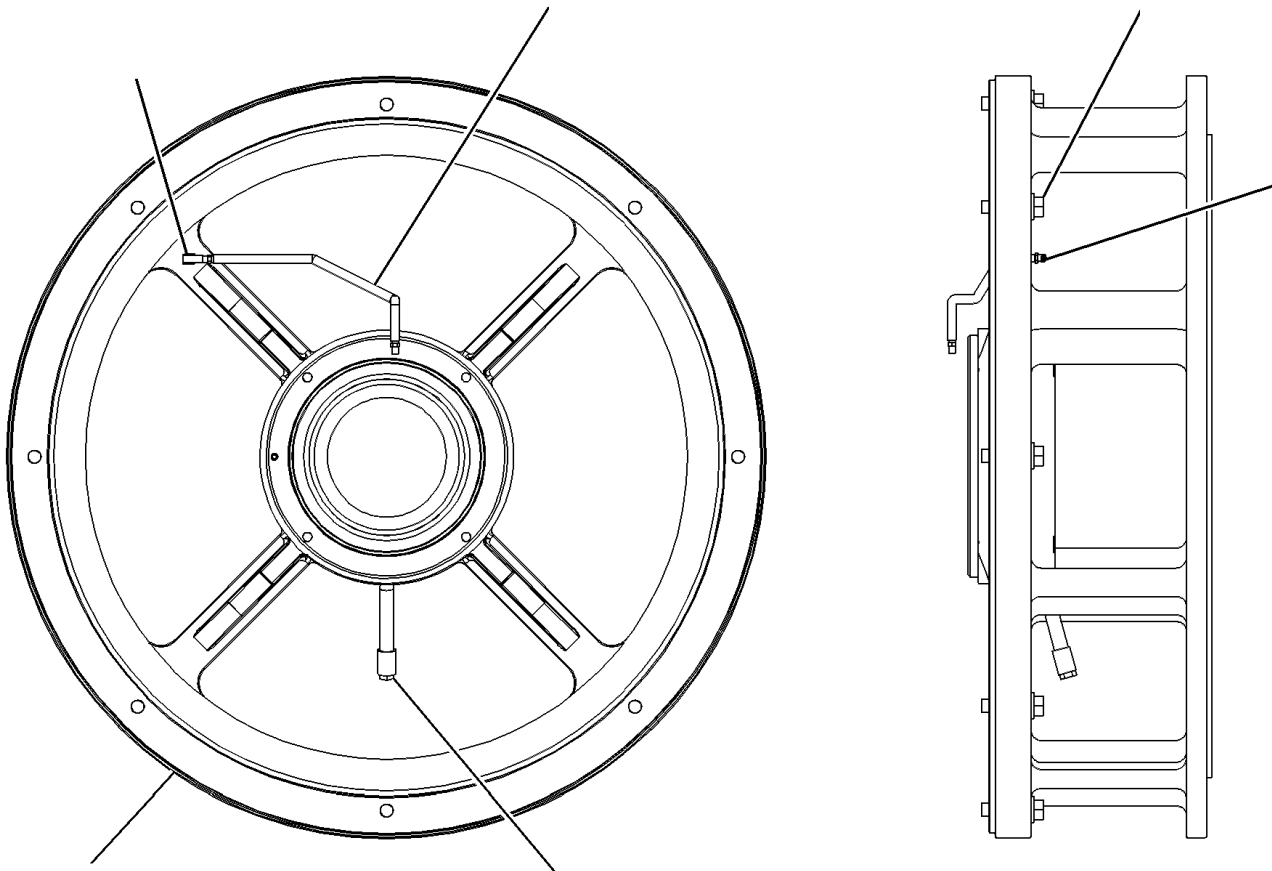 


Ref.	Part number	Description	Qty	Code	Group page
1	3B-8488	FITTING-GREASE (1/8-27 PTF)	1		
2	5D-1707	FITTING	1		
3	7W-8705	FITTING	2		
4	7W-8706	FITTING	1		
5	9X-8882	BOLT (5/8-11X2.5-IN)	8		
6	138-7753	ADAPTER AS-COUPLING	1		
	7M-5130	PIN-SPRING	1		
	116-7476	SLEEVE-WEAR	1		
7	139-2843	HOSE	1		
8	3J-5390	PLUG (3/8-18-THD)	1		
9	5B-1309	COUPLING-PIPE	1		
10	5P-8247	WASHER-HARD (17X32X3.5-MM THK)	8		

154-3413 ADAPTER GP-GENERATOR COUPLING

154-3413 ADAPTER GP-GENERATOR COUPLING S/N AEB1-UP; AAD1-UP; 8XS1-UP; AAY1-UP; 2GZ1-UP; AEZ1-UP; AAJ1-UP; 1HN1-UP; 2SN1-UP; 4GN1-UP; 5SN1-UP; 7TN1-UP; 9CN1-UP; AAR1-UP PART OF 144-1679, 144-1717, 144-1825, 144-1827, 144-1829, 144-2001, 144-2003, 144-2005, 163-8541, 163-8543, 163-8545, 163-8547, 166-2715, 166-2717, 166-2719, 294-7497, 296-0411, 318-5153, 318-5155, 333-2097, 371-9666, 382-4977, 434-7057, 4P-4579, 4P-4600, 9Y-0167, 9Y-0463, 9Y-0533 GENERATOR GP ALSO AN ATTACHMENT

Drawing 1 of 1

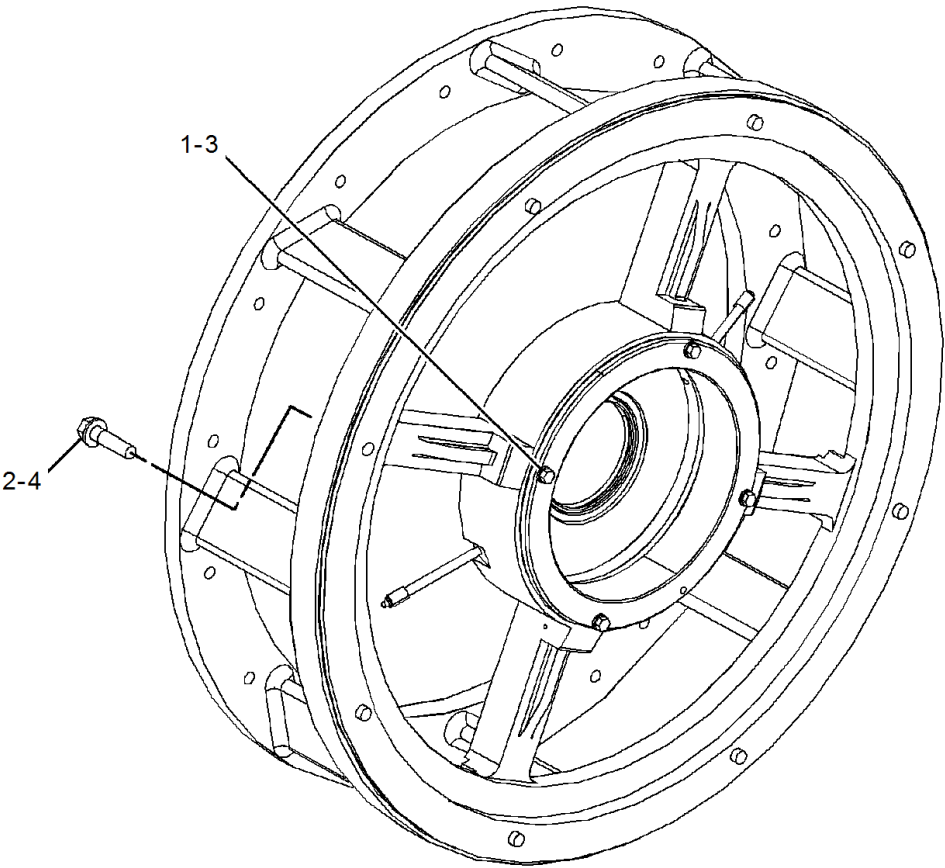 


Ref.	Part number	Description	Qty	Code	Group page
1	0S-1588	BOLT (3/8-16X1.25-IN)	4		
2	0S-1625	BOLT (5/8-11X2.5-IN)	8		
3	5M-2894	WASHER-HARD (10.2X18.5X2.5-MM THK)	4		
4	5P-8247	WASHER-HARD (17X32X3.5-MM THK)	8		
	127-4374	SEAL	1	F	
	152-5183	SLEEVE-WEAR	1	F	
	7M-5130	PIN-SPRING	1	F	
AVAILABLE REPAIR KIT(S):					
	342-2409	KIT-BEARING	1		
(INCLUDES COUPLINGS, NIPPLES, PLUGS & FITTING)					

CAT codes: F.

121-5423 AIR FILTER GP-GENERATOR

121-5423 AIR FILTER GP-GENERATOR S/N AAD1-UP; AAJ1-UP; 4GN1-UP; 5SN1-UP; 5WN1-UP; 7TN1-UP; 8NN1-UP; 9CN1-UP; AAR1-UP; 8XS1-UP; AAY1-UP; 2GZ1-UP; 6GM1-UP; 7GM1-UP; 8DM1-UP; 1HN1-UP; 2HN1-UP; 2SN1-UP; 4EN1-UP; 4FN1-UP FOR USE WITH 820-FRAME AN ATTACHMENT

Drawing 1 of 1

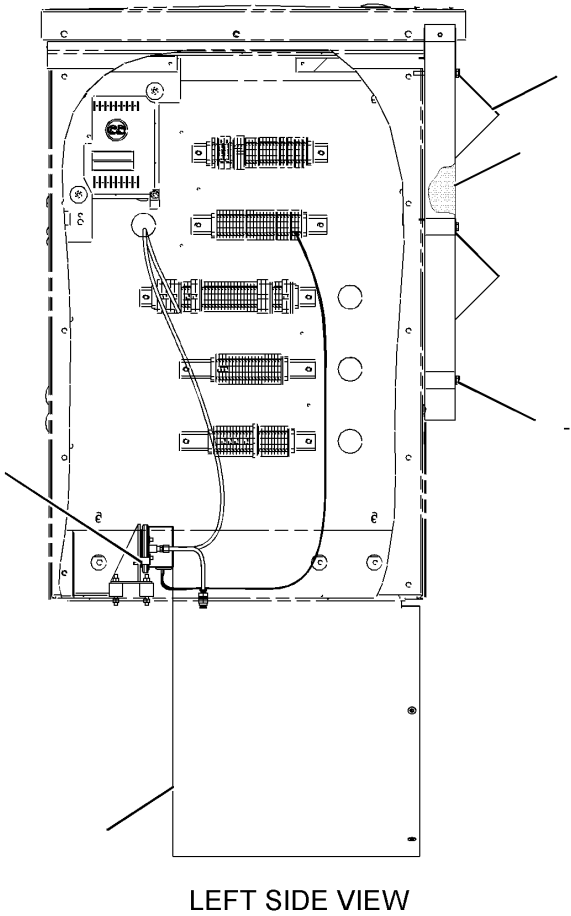 


Ref.	Part number	Description	Qty	Code	Group page
1	128-1110	FRAME AS-FILTER	1		
2	128-1112	FILTER ELEMENT-AIR (GENERATOR)	1		
3	128-1114	SHIELD AS-FILTER	1		
4	128-1117	SWITCH AS-PRESSURE (AIR DIFFERENTIAL, GENERATOR)	1		
	4P-8767	SWITCH-PRESSURE (AIR DIFFERENTIAL, GENERATOR)	1		
	6V-8185	NUT (1/4-20-THD)	8		
	7C-6121	MOUNT-FLEXIBLE	4		
	178-3339	SCREW (8-32X0.5-IN)	2		
5	1D-4541	BOLT (5/16-18X3-IN)	6		
6	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	6		
AVAILABLE REPAIR KIT(S):					
	128-1116	KIT-GASKET (AIR FILTER)	1		
(INCLUDES GASKETS)					

361-4913 AIR FILTER GP-GENERATOR

361-4913 AIR FILTER GP-GENERATOR S/N AAD1-UP; AAJ1-UP; 4GN1-UP; 5SN1-UP; 5WN1-UP; 7TN1-UP; 8NN1-UP; 9CN1-UP; AAR1-UP; 8XS1-UP; AAY1-UP; 2GZ1-UP; 6GM1-UP; 7GM1-UP; 8DM1-UP; 1HN1-UP; 2HN1-UP; 2SN1-UP; 4EN1-UP; 4FN1-UP FOR USE WITH 820-FRAME AN ATTACHMENT

Drawing 1 of 1

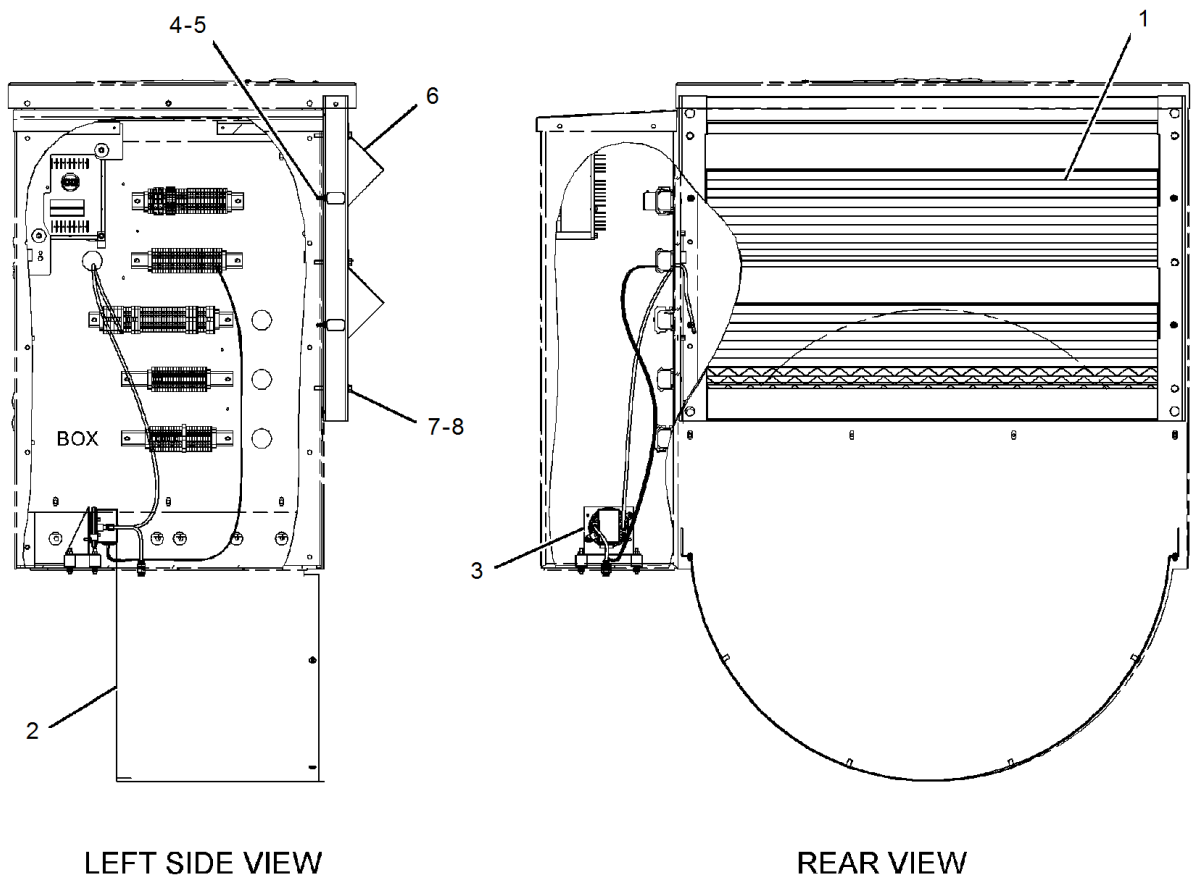 

Ref.	Part number	Description	Qty	Code	Group page
1	128-1112	FILTER ELEMENT-AIR (GENERATOR)	1		
2	128-1114	SHIELD AS-FILTER	1		
3	128-1117	SWITCH AS-PRESSURE (AIR DIFFERENTIAL, GENERATOR)	1		
	4P-8767	SWITCH-PRESSURE (AIR DIFFERENTIAL, GENERATOR)	1		
	6V-8185	NUT (1/4-20-THD)	8		
	7C-6121	MOUNT-FLEXIBLE	4		
	178-3339	SCREW (8-32X0.5-IN)	2		
4	155-2001	RETAINER	4		
5	308-9260	FASTENER-SPECIAL	4		
6	361-4914	FRAME AS-FILTER	1		
7	1D-4541	BOLT (5/16-18X3-IN)	6		
8	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	6		

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

2SN-SEBP2414

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99