

CATERPILLAR E450

3HG / XEBP9896


Contents

Section	Page
Hydraulic system	2
Fuel system	

BASE FRAME

BASE FRAME- Part 1 of 2

Drawing 1 of 1

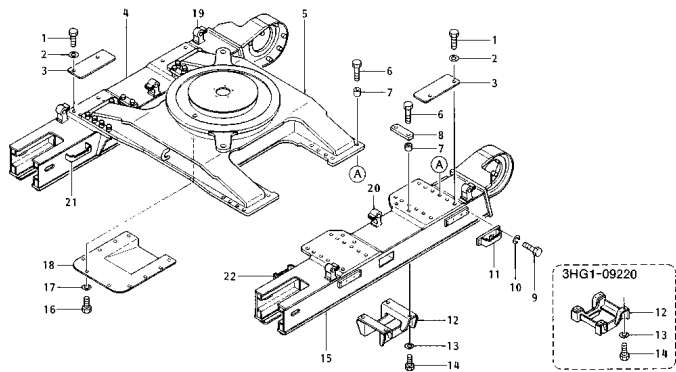 

Key No.	Part No.	Part Name-Description	Qty	Serial No.	
				E450-3HG	
1	095-0626	BOLT	8		
2	095-0808	WASHER	8		
3	099-2297	COVER	4		
4	099-2298	TRACK FRAME, R. H.	1	1-09231	
	085-7564	TRACK FRAME, R. H.	1	09235-09270	
	1R-7883	TRACK FRAME, R. H.	1	09271-	
5	099-2299	CAR BODY	1	1-09248	
	085-6782	CAR BODY	1	09249-	
6	099-2300	BOLT	40		
7	093-0131	SPACER	40		
8	099-2301	PLATE	4		
9	095-0542	BOLT	24		
10	095-0819	WASHER, SPRING	24		
11	099-2302	STEP	4	1-09210	
	099-5176	STEP	4	09211-	
12	096-1913	GUARD	2	1-09220	
	099-7123	GUARD	2	09221-	
13	095-0822	WASHER, SPRING	8		
14	096-0333	BOLT	8	1-09272	
	095-0568	BOLT	8	09273-	
15	099-2303	TRACK FRAME, L. H.	1	1-09231	
	085-7563	TRACK FRAME, L. H.	1	09235-09270	
	1R-7882	TRACK FRAME, L. H.	1	09271-	

Ref.	Part number	Description	Qty	Code	Group page
1	095-0626	BOLT	8		
2	095-0808	WASHER	8		
3	099-2297	COVER	4		
4	099-2298	TRACK FRAME, R. H.	1		
	085-7564	TRACK FRAME, R. H.	1		
	1R-7883	TRACK FRAME, R. H.	1		
5	099-2299	CAR BODY	1		
	085-6782	CAR BODY	1		
6	099-2300	BOLT	40		
7	093-0131	SPACER	40		
8	099-2301	PLATE	4		
9	095-0542	BOLT	24		
10	095-0819	WASHER, SPRING	24		
11	099-2302	STEP	4		
	099-5176	STEP	4		


BASE FRAME (continued)

Ref.	Part number	Description	Qty	Code	Group page
12	096-1913	GUARD	2		
	099-7123	GUARD	2		
13	095-0822	WASHER, SPRING	8		
14	096-0333	BOLT	8		
	095-0568	BOLT	8		
15	099-2303	TRACK FRAME, L. H.	1		
	085-7563	TRACK FRAME, L. H.	1		
	1R-7882	TRACK FRAME, L. H.	1		

BASE FRAME

BASE FRAME - Part 2 of 2

Drawing 1 of 1

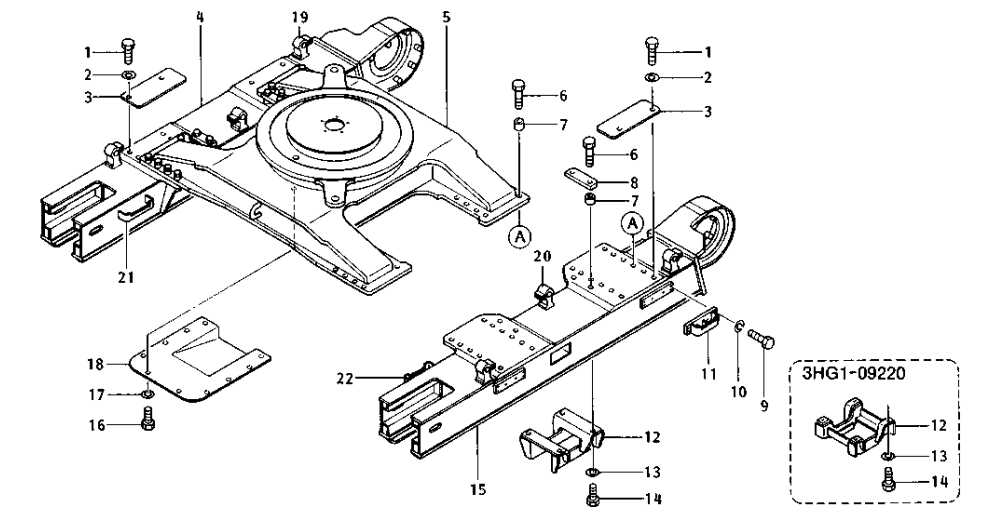 

Key No.	Part No.	Part Name-Description	Qty	Serial No.	
				E450-3HG	
16	095-0554	BOLT	10		
17	095-0821	WASHER, SPRING	10		
18	094-6051	COVER	1		
19	085-8204	STAY	3		
20	085-8204	STAY	3		
21	*	STEP, R. H.	1	1-09210	
	7Y-2481	STEP, R. H.	1	09211-	
22	*	STEP, L. H.	1	1-09210	
	7Y-2481	STEP, L. H.	1	09211-	


Ref.	Part number	Description	Qty	Code	Group page
16	095-0554	BOLT	10		
17	095-0821	WASHER, SPRING	10		
18	094-6051	COVER	1		
19	085-8204	STAY	3		
20	085-8204	STAY	3		
	7Y-2481	STEP, R. H.	1		
	7Y-2481	STEP, L. H.	1		

CAT codes: N.

LOWER STRUCTURE COVER

LOWER STRUCTURE COVER

Drawing 1 of 1

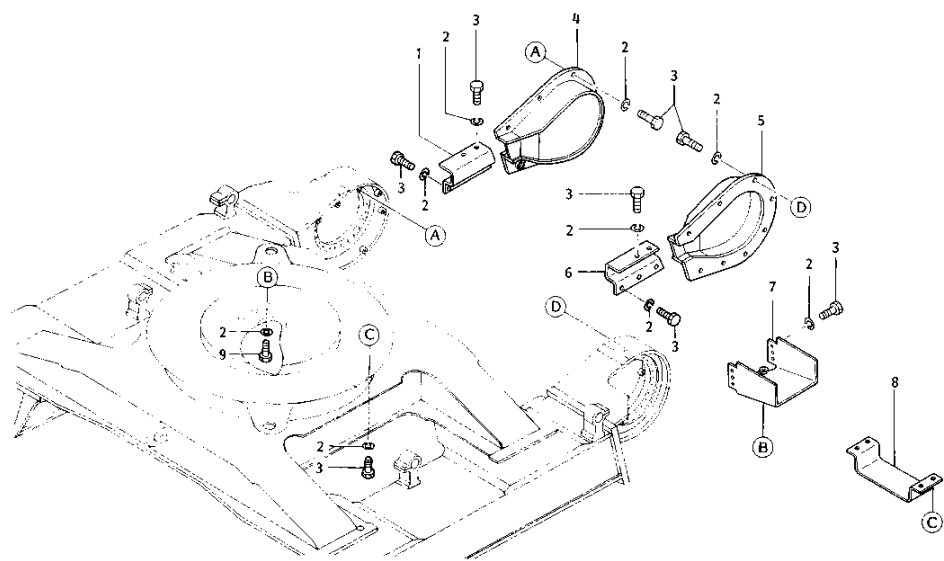 


Key No.	Part No.	Part Name-Description	Qty	Serial No.	
				E450-3HG	
1	099-2304	COVER, R. H.	1		
2	095-0821	WASHER, SPRING	48		
3	095-0556	BOLT	42		
4	099-2305	COVER, R. H.	1		
5	099-2306	COVER, L. H.	1		
6	099-2307	COVER, L. H.	1		
7	099-2309	COVER	2		
8	099-2308	COVER	1		
9	095-0558	BOLT	6		

Ref.	Part number	Description	Qty	Code	Group page
1	099-2304	COVER, R. H.	1		
2	095-0821	WASHER, SPRING	48		
3	095-0556	BOLT	42		
4	099-2305	COVER, R. H.	1		
5	099-2306	COVER, L. H.	1		
6	099-2307	COVER, L. H.	1		
7	099-2309	COVER	2		
8	099-2308	COVER	1		
9	095-0558	BOLT	6		

IDLER WHEEL

IDLER WHEEL

Drawing 1 of 1

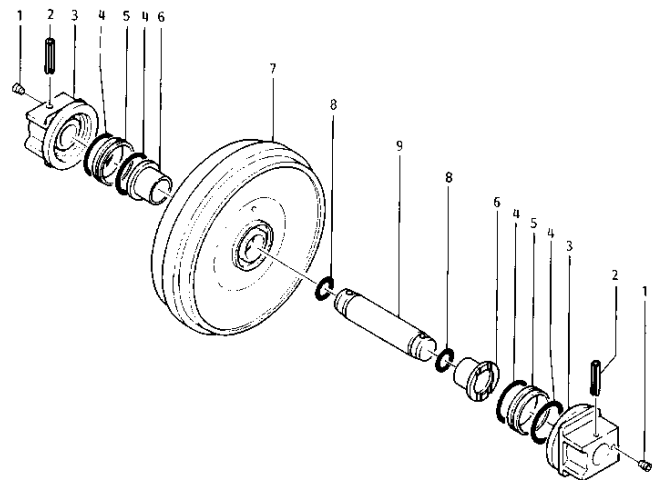 


Key No.	Part No.	Part Name - Description	Qty	Serial No.	
				E450-3HG	
1-9	094-6105	IDLER WHEEL ASSY.	2		
1	095-0965	PLUG	4		
2	094-3709	PIN	4		
3	094-3708	BEARING	4		
4	093-1367	O-RING	8		
5	093-1418	SEAL, FLOATING	4		
6	093-1847	BUSHING	4		
7	094-6106	WHEEL	2		
8	095-1553	O-RING	4		
9	093-1695	SHAFT	2		

Ref.	Part number	Description	Qty	Code	Group page
1-9	094-6105	IDLER WHEEL ASSY.	2		
1	095-0965	PLUG	4		
2	094-3709	PIN	4		
3	094-3708	BEARING	4		
4	093-1367	O-RING	8		
5	093-1418	SEAL, FLOATING	4		
6	093-1847	BUSHING	4		
7	094-6106	WHEEL	2		
8	095-1553	O-RING	4		
9	093-1695	SHAFT	2		

YOKE AND TENSION

YOKE AND TENSION

Drawing 1 of 1

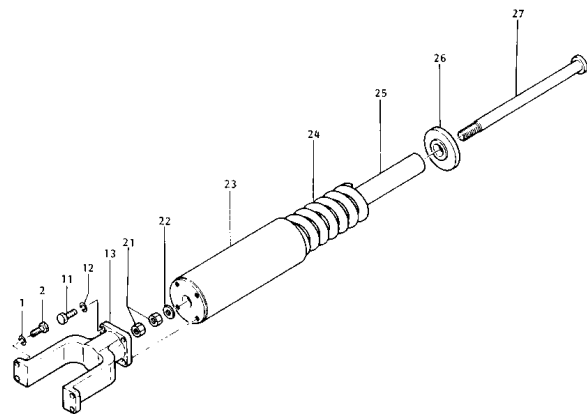 

Key No.	Part No.	Part Name-Description	Qty	Serial No.	
				E450-3HG	
1	095-0821	WASHER, SPRING	8		
2	095-0560	BOLT	8		
11-27	099-2310	TENSION ASSY.	2	1-09286	
	086-1550	TENSION ASSY.	2	09287-	
11	095-0560	BOLT	8		
12	095-0821	WASHER, SPRING	8		
13	094-6110	YOKE	2		
21-27	099-2311	SPRING ASSY.	2	1-09286	
	096-6354	SPRING ASSY.	2	09287-	
21	095-1216	NUT	4		
22	095-7575	WASHER	2		
23	093-2107	SUPPORT	2	1-09286	
	086-1866	SUPPORT	2	09287-	
24	096-9940	SPRING	2	1-09286	
	086-1865	SPRING	2	09287-	
25	099-2312	PIPE	2		
26	093-0412	SUPPORT	2	1-09286	
	086-1863	SUPPORT	2	09287-	
27	096-9941	ROD	2	1-09286	
	086-1873	ROD	2	09287-	

Ref.	Part number	Description	Qty	Code	Group page
1	095-0821	WASHER, SPRING	8		
2	095-0560	BOLT	8		
11-27	099-2310	TENSION ASSY.	2		
	086-1550	TENSION ASSY.	2		
11	095-0560	BOLT	8		
12	095-0821	WASHER, SPRING	8		
13	094-6110	YOKE	2		
21-27	099-2311	SPRING ASSY.	2		
	096-6354	SPRING ASSY.	2		
21	095-1216	NUT	4		
22	095-7575	WASHER	2		
23	093-2107	SUPPORT	2		
	086-1866	SUPPORT	2		


YOKE AND TENSION (continued)

Ref.	Part number	Description	Qty	Code	Group page
24	096-9940	SPRING	2		
	086-1865	SPRING	2		
25	099-2312	PIPE	2		
26	093-0412	SUPPORT	2		
	086-1863	SUPPORT	2		
27	096-9941	ROD	2		
	086-1873	ROD	2		

ADJUSTER CYLINDER

ADJUSTER CYLINDER -Part 1 of 2

Drawing 1 of 1

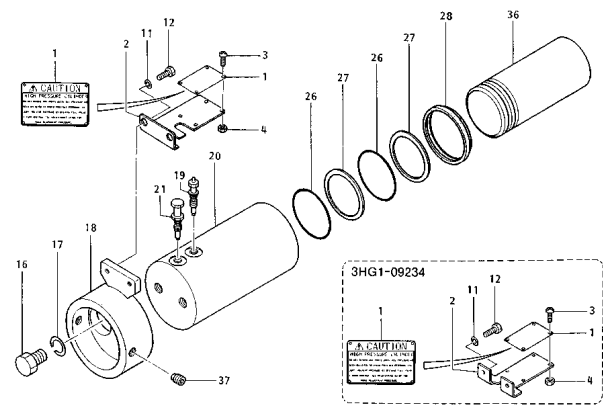 

Key No.	Part No.	Part Name-Description	Qty	Serial No.
				E450-3HG
1-4	096-6768	STOPPER PLATE ASSY., L. H.	1	1-09206
	096-7946	STOPPER PLATE ASSY., L. H.	1	09207-09234
	086-0667	STOPPER PLATE ASSY., L. H.	1	09235-
1-3	51-6628	STOPPER PLATE ASSY., L. H.	1	1-09206
1-4	096-6769	STOPPER PLATE ASSY., R. H.	1	09207-09234
	096-7947	STOPPER PLATE ASSY., R. H.	1	09235-
	086-3079	STOPPER PLATE ASSY., R. H.	1	1-09206
1-3	51-6629	STOPPER PLATE ASSY., R. H.	1	09207-09234
1	096-6770	PLATE, CAUTION	2	1-09206
	096-7948	PLATE, CAUTION	2	09207-
2	096-6762	PLATE	2	1-09234
	1R-5783	PLATE	2	09235-09272
	51-6627	PLATE	2	09273-
3	6V-9669	SCREW	8	
	085-5705	SCREW	8	
4	095-0760	NUT	8	1-09272
11	095-0817	WASHER, SPRING	4	
12	095-0502	BOLT	4	
16-37	099-1981	ADJUSTER CYLINDER ASSY.	2	1-09234
	085-5063	ADJUSTER CYLINDER ASSY.	2	09235-09271
	086-0666	ADJUSTER CYLINDER ASSY.	2	09272-
	1R-7410	ADJUSTER CYLINDER ASSY.	2	

Ref.	Part number	Description	Qty	Code	Group page
1-4	096-6768	STOPPER PLATE ASSY., L. H.	1		
	096-7946	STOPPER PLATE ASSY., L. H.	1		
	086-0667	STOPPER PLATE ASSY., L. H.	1		
1-3	51-6628	STOPPER PLATE ASSY., L. H.	1		
1-4	096-6769	STOPPER PLATE ASSY., R. H.	1		
	096-7947	STOPPER PLATE ASSY., R. H.	1		
	086-3079	STOPPER PLATE ASSY., R. H.	1		
1-3	51-6629	STOPPER PLATE ASSY., R. H.	1		
1	096-6770	PLATE, CAUTION	2		
	096-7948	PLATE, CAUTION	2		
2	096-6762	PLATE	2		
	1R-5783	PLATE	2		
	51-6627	PLATE	2		
3	6V-9669	SCREW	8		
	085-5705	SCREW	8		

ADJUSTER CYLINDER (continued)

Ref.	Part number	Description	Qty	Code	Group page
4	095-0760	NUT	8		
11	095-0817	WASHER, SPRING	4		
12	095-0502	BOLT	4		
16-3 7	099-1981	ADJUSTER CYLINDER ASSY.	2		
	085-5063	ADJUSTER CYLINDER ASSY.	2		
	086-0666	ADJUSTER CYLINDER ASSY.	2		
	1R-7410	ADJUSTER CYLINDER ASSY.	2		

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

3HG-XEBP9896

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99