

CATERPILLAR 561H

6NL / SEBP0758


Contents

Section	Page
Basic engine	2
Lubrication system	
Hydraulic system	
Air inlet and exhaust	
Basic engine	
Basic engine	

106-9158 CONTROL GROUP-STEERING

1069158 CONTROL GROUP-STEERING

Drawing 1 of 1

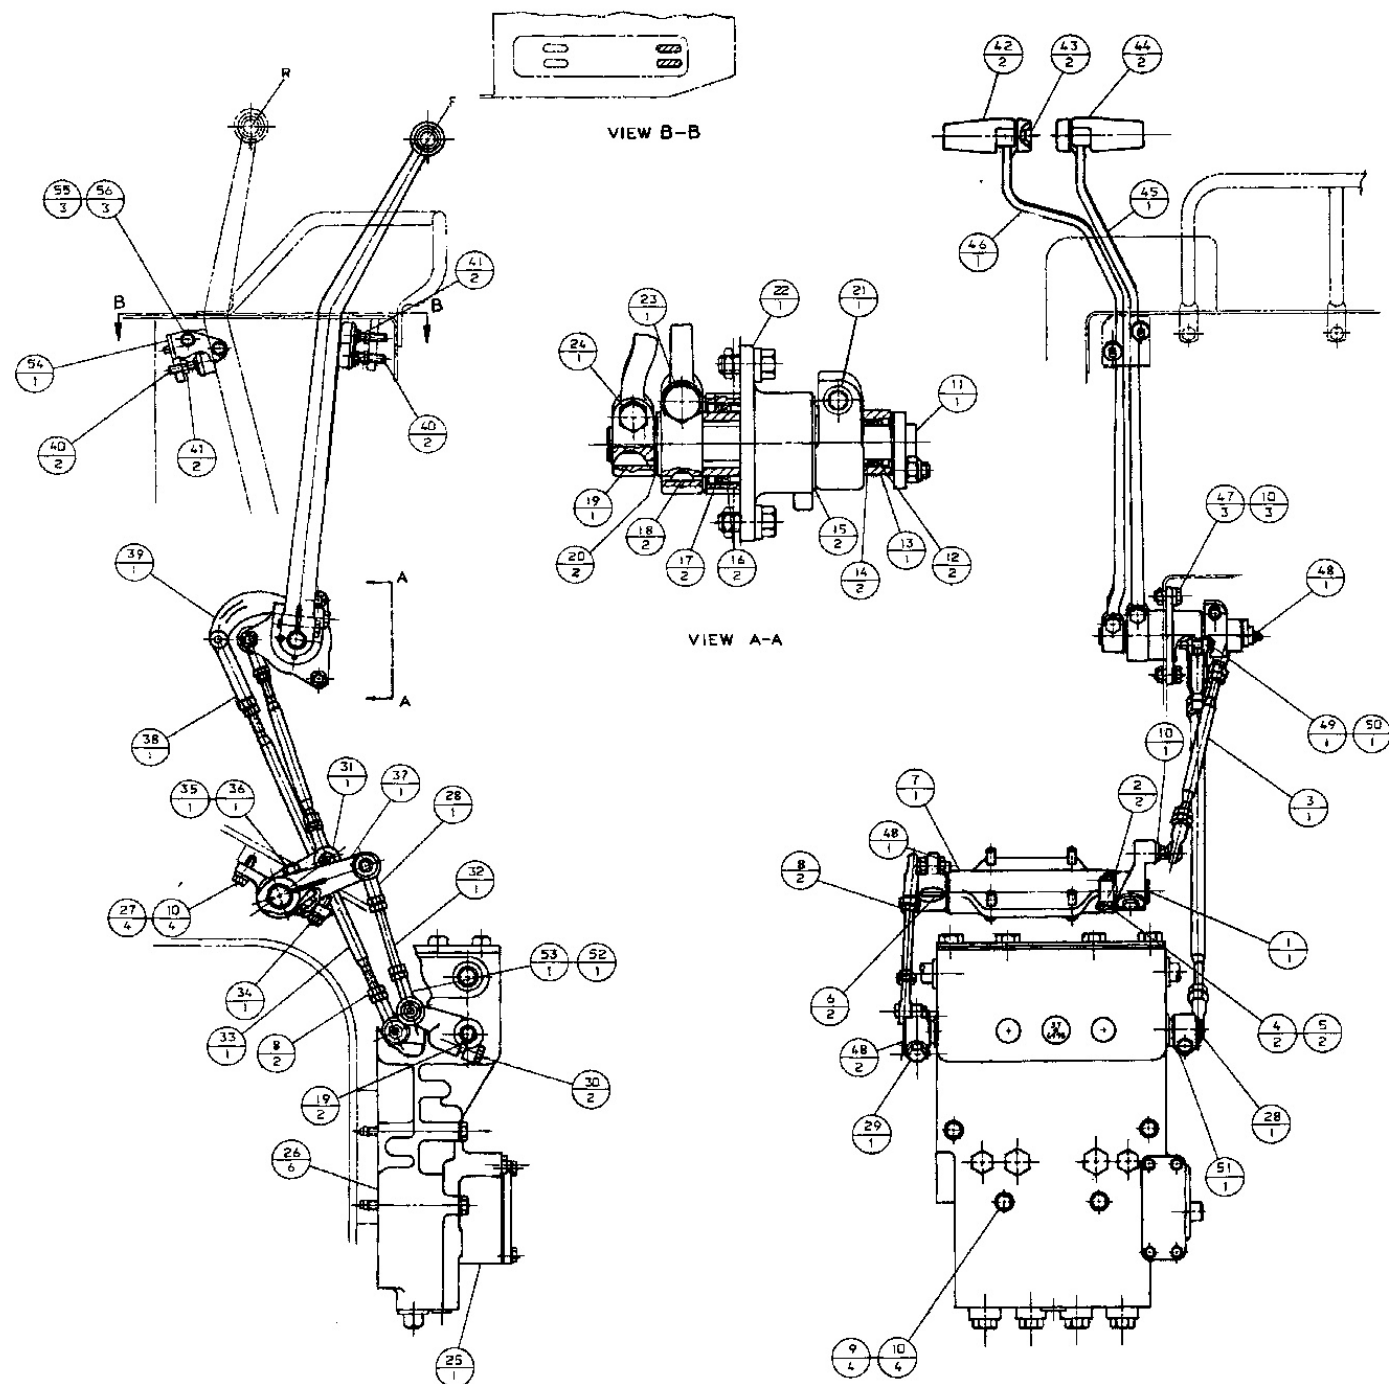

Ref.	Part number	Description	Qty	Code	Group page
1	3W-1448	SHAFT	1		
2	9S-1328	WASHER	2		
3	3W-2884	ROD ASSEMBLY	1		
4	8T-1178	BEARING	2		
5	8T-1174	SEAL	2		

106-9158 CONTROL GROUP-STEERING (continued)

Ref.	Part number	Description	Qty	Code	Group page
6	1B-8714	KEY	2		
7	3W-1449	SUPPORT	1		
8	3S-2713	NUT	4		
9	7X-0291	BOLT	4		
10	8T-4896	WASHER	12		
11	8G-5190	SHAFT ASSEMBLY	1		
12	8T-1173	SEAL	2		
13	8G-5193	SHAFT	1		
14	8T-1177	BEARING	2		
15	1K-4705	WASHER	2		
16	090-3178	BEARING	2		
17	8T-1175	SEAL	2		
18	1B-8702	KEY	2		
19	1B-8706	KEY	3		
20	2Y-5671	WASHER	2		
21	1T-0720	BOLT	1		
22	8G-5189	SUPPORT	1		
23	8T-4835	BOLT	1		
24	4L-9337	BOLT	1		
25	3T-6497	VALVE GROUP	1	Y	
26	8M-5254	SEAL	6		
27	4L-6454	BOLT	4		
28	5J-5315	ROD END	2		
29	3W-8483	LEVER	1		
30	5S-7382	BOLT	2		
31	3W-1447	LEVER	1		
32	9M-4707	ROD	1		
33	3W-8482	ROD	1		
34	5P-2566	BOLT	1		
35	2K-4973	LOCKNUT	1		
36	8T-2501	BOLT	1		
37	3W-8484	LEVER	1		
38	9M-4461	END	1		
39	3W-1446	LEVER	1		
40	8G-5317	BUMPER	4		
41	6V-8189	NUT	4		

106-9158 CONTROL GROUP-STEERING (continued)


Ref.	Part number	Description	Qty	Code	Group page
42	8P-7824	KNOB	2		
43	030-7573	BOLT	2		
44	8P-7826	KNOB	2		
45	3W-8485	LEVER	1		
46	3W-8486	LEVER	1		
47	5S-7379	BOLT	3		
48	2L-6267	LOCKNUT	4		
49	1B-0676	PIN	1		
50	3B-4617	COTTER	1		
51	3W-8487	LEVER	1		
52	2A-4996	BOLT	1		
53	4D-4064	ROD END	1		
54	107-1248	PLATE ASSEMBLY	1		
55	8T-9364	BOLT	3		
56	8T-4205	WASHER	3		

CAT codes: Y.

3T-6497 VALVE GROUP-CONTROL


3T6497 VALVE GROUP-CONTROL PART OF 1069158 CONTROL GROUP-STEERING

Drawing 1 of 2

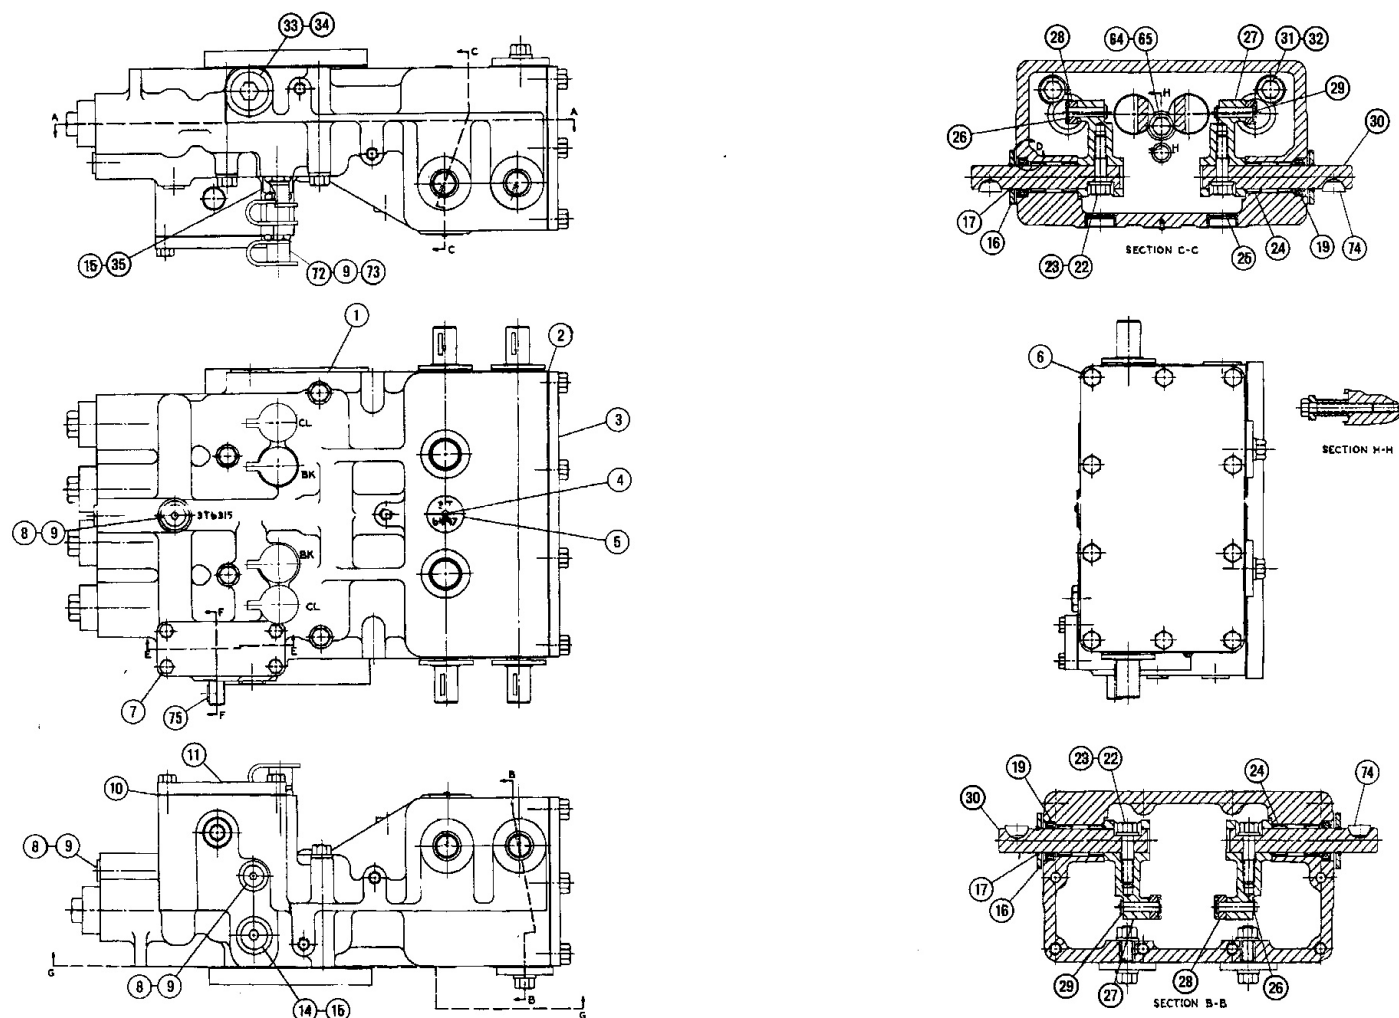

3T-6497 VALVE GROUP-CONTROL (continued)

Drawing 2 of 2

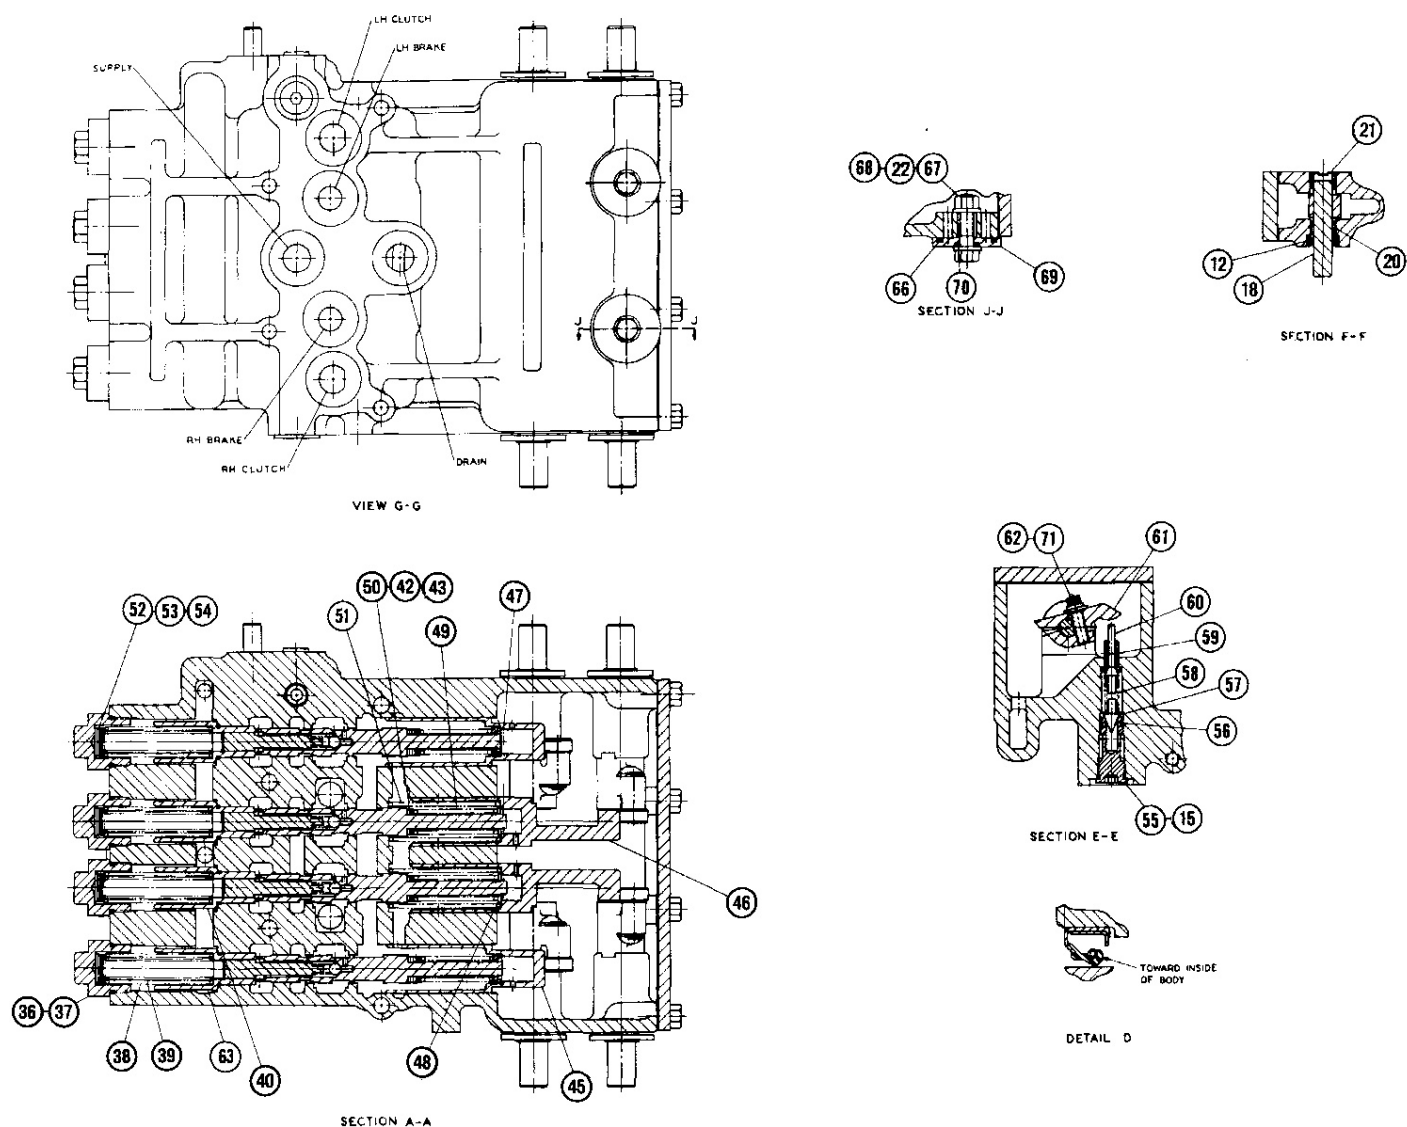

Ref.	Part number	Description	Qty	Code	Group page
1	3T-6315	BODY	1		
2	3T-6466	GASKET	1		
3	3T-6465	COVER	1		
4	7B-3028	SCREW	1		
5	6T-6521	PLATE	1		
6	0L-1351	BOLT	10		
7	2B-2695	BOLT	4		
8	9S-8004	PLUG	3		
9	3J-1907	SEAL	7		
10	3T-5821	GASKET	1		
11	3T-5819	COVER	1		

3T-6497 VALVE GROUP-CONTROL (continued)

Ref.	Part number	Description	Qty	Code	Group page
12	2M-2489	SEAL	1		
14	9S-8005	PLUG	1		
15	3K-0360	SEAL	4		
16	9M-8186	WASHER	4		
17	3S-7005	RING	4		
18	6T-7130	SHAFT	1		
19	9H-0223	SEAL	4		
20	2M-1672	BEARING	1		
21	5M-6228	BEARING	1		
22	5M-2894	WASHER	8		
23	2A-4639	BOLT	4		
24	8B-4132	BEARING	8		
25	3B-0623	PLUG	2		
26	3P-3547	RING	4		
27	3T-6523	LEVER	4		
28	3T-6519	ROLLER	4		
29	3T-6522	PIN	4		
30	7G-3036	SHAFT	4		
31	1A-9579	BOLT	2		
32	1Y-0462	WASHER	2		
33	9S-8008	PLUG	1		
34	3D-2824	SEAL	1		
35	5P-6944	ADAPTER	2		
36	7T-1111	PLUG	4		
37	7M-8485	SEAL	4		
38	7T-1112	SPRING	4		
39	7T-1113	SPRING	4		
40	7T-1114	SPOOL AS.	2		
42	7G-3177	SPACER	2	A	
43	7G-3046	SPACER	8	A	
45	6T-0442	PLUNGER	2		
46	3T-0646	PLUNGER	2		
47	6L-8598	RING	2		
48	6T-8248	WASHER	2		
49	7T-7970	SPRING	2		
50	3T-6822	SPACER	2	A	

3T-6497 VALVE GROUP-CONTROL (continued)


Ref.	Part number	Description	Qty	Code	Group page
51	9G-2068	SPRING	2		
52	5M-9624	SPACER	12	A	
53	5M-9623	SPACER	12	A	
54	5M-9622	SPACER	16	A	
55	3T-5681	SEAT	1		
56	8M-5127	SEAL	1		
57	1J-8497	VALVE	1		
58	4J-6555	SPRING	1		
59	6T-7067	SEAT	1		
60	6T-7066	VALVE	1		
61	3T-6687	LEVER	1		
62	9M-1974	WASHER	1		
63	107-3735	SPOOL AS.	2		
64	5B-5620	BOLT	1		
65	6T-0861	RETAINER	1		
66	8M-5249	SEAL	2		
67	0S-1591	BOLT	2		
68	1D-4717	NUT	2		
69	7T-7120	PLATE	2		
70	8M-8157	SEAL	2		
71	1T-0414	BOLT	1		
72	6V-0852	CAP	4		
73	6V-3965	NIPPLE AS.	4		
74	1B-8706	KEY	4		
75	1B-8701	KEY	1		

CAT codes: A.

106-9159 CONTROL GROUP-BRAKE

1069159 CONTROL GROUP-BRAKE

Drawing 1 of 1

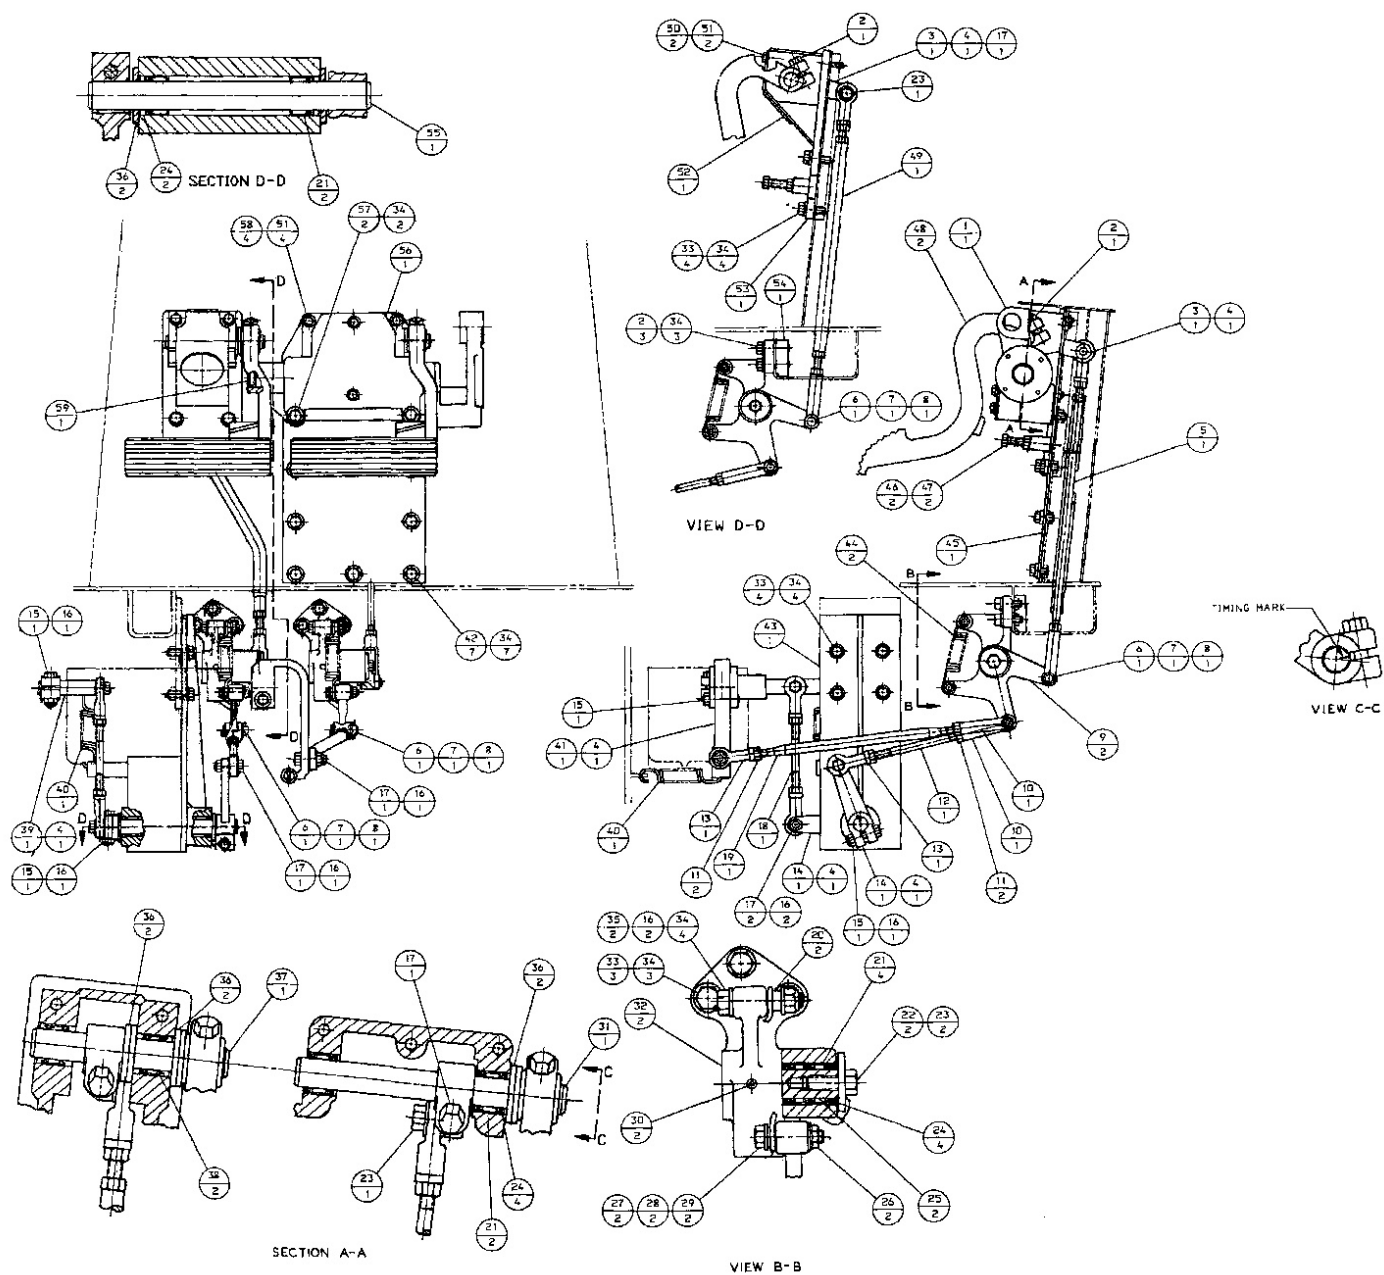

Ref.	Part number	Description	Qty	Code	Group page
1	9G-2332	SUPPORT	1		
2	9B-7237	BOLT	5		
3	3W-4474	LEVER	2		
4	1B-8706	KEY	6		
5	3W-1887	ROD ASSEMBLY	1		
6	1J-4384	PIN	4		
7	7X-0608	WASHER	4		
8	3B-4615	PIN	4		

106-9159 CONTROL GROUP-BRAKE (continued)

Ref.	Part number	Description	Qty	Code	Group page
9	9G-2336	LEVER	2		
10	1A-9252	END	2		
11	6V-8138	BOLT	4		
12	107-1267	ROD	1		
13	4D-4064	ROD END	2		
14	107-1268	LEVER ASSEMBLY	2		
15	4L-9337	BOLT	4		
16	2K-4973	LOCKNUT	9		
17	5S-7382	BOLT	6		
18	107-1262	ROD ASSEMBLY	1		
	4D-4064	ROD END	2		
	6V-8183	NUT	2		
	107-1263	ROD	1		
19	8G-5126	ROD	1		
20	4Y-3911	COLLAR	2		
21	8T-1177	BEARING	8		
22	9L-8781	WASHER	2		
23	5D-0353	BOLT	4		
24	8T-1173	LIP SEAL	10		
25	8G-5123	SHAFT	2		
26	9L-9814	NUT	2		
27	8C-3121	BOLT	2		
28	4B-4277	WASHER	2		
29	4H-2804	SPACER	2		
30	4H-4737	PIN	2		
31	5G-5127	BOSS	1		
32	9G-2335	SUPPORT	2		
33	8T-2502	BOLT	11		
34	8T-4896	WASHER	27		
35	7X-0289	BOLT	2		
36	8T-4994	WASHER	8		
37	107-1260	SHAFT	1		
38	7P-4190	BEARING	2		
39	107-1276	LEVER ASSEMBLY	1		
40	7G-1251	SPRING	2		
41	107-1278	LEVER ASSEMBLY	1		

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

6NL-SEBP0758

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99