

CATERPILLAR CX31

E2R / SEBP4927

Contents

Section	Page
Power train	2
Cooling system	
Power train	
Power train	
Power train	
Power train	

289-9547 FASTENER GP-COUPLING -TRANSMISSION

289-9547 FASTENER GP-COUPLING -TRANSMISSION S/N E2R1-UP; B3X1-UP PART OF 320-3066 PLATE GP-DRIVE, 324-8938 TRANSMISSION AR, 270-4380, 287-5736, 287-5737, 288-0926, 288-0927, 299-8029, 307-1996, 308-1341, 308-2974, 308-6243, 311-3033, 312-6001, 312-6002, 312-6003, 312-6004, 312-6005, 312-6009, 312-6010, 312-6011, 312-8637, 314-9518, 315-0496, 316-6072, 316-8770, 317-9519, 321-1465, 325-5822 TRANSMISSION AR-COMPLETE ALSO AN ATTACHMENT

Kit / parts list. The current source card does not provide a separate drawing.

Ref.	Part number	Description	Qty	Code	Group page
	8T-0271	BOLT-SOCKET HEAD (M10X1.5X35-MM)	12	M	

CAT codes: M.

289-9549 FASTENER GP-COUPLING -TRANSMISSION

289-9549 FASTENER GP-COUPLING -TRANSMISSION S/N E2R1-UP; B3X1-UP PART OF 290-0600 TRANSMISSION AR, 287-5732, 287-5734, 287-5735, 299-8031, 311-4668, 312-6006, 312-6007, 316-0710, 317-2114, 323-5192, 324-9079, 375-8066 TRANSMISSION AR-COMPLETE

Kit / parts list. The current source card does not provide a separate drawing.


Ref.	Part number	Description	Qty	Code	Group page
	095-0670	BOLT (M12X1.75X45-MM)	12	M	

CAT codes: M.

375-2451 HOUSING AS-TORQUE CONVERTER

375-2451 HOUSING AS-TORQUE CONVERTER S/N E2R1-UP; B3X668-UP PART OF 277-6890, 418-7978 HOUSING GP-TORQUE CONVERTER

Drawing 1 of 1

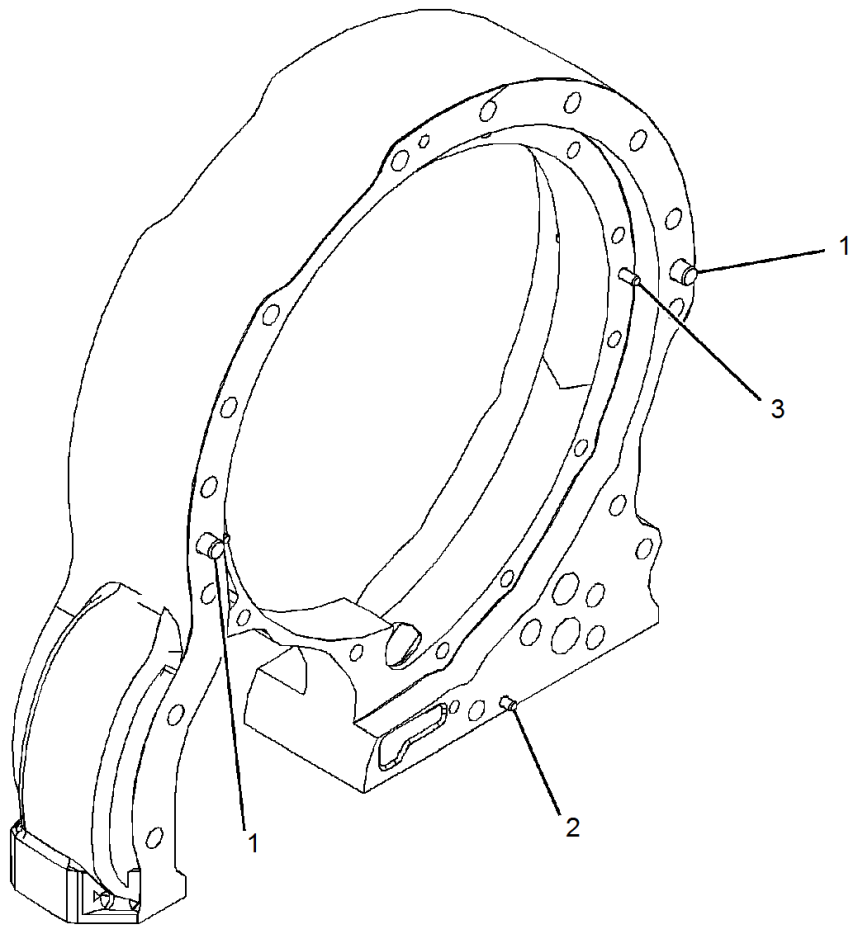 


Ref.	Part number	Description	Qty	Code	Group page
1	1A-2223	DOWEL	2		
2	2H-1190	PIN-DOWEL	1		
3	3H-0703	DOWEL	4		

277-6890 HOUSING GP-TORQUE CONVERTER -RETARDER

277-6890 HOUSING GP-TORQUE CONVERTER -RETARDER S/N E2R1-315; B3X668-693 PART OF 282-9536 TRANSMISSION AR-CORE


Drawing 1 of 2

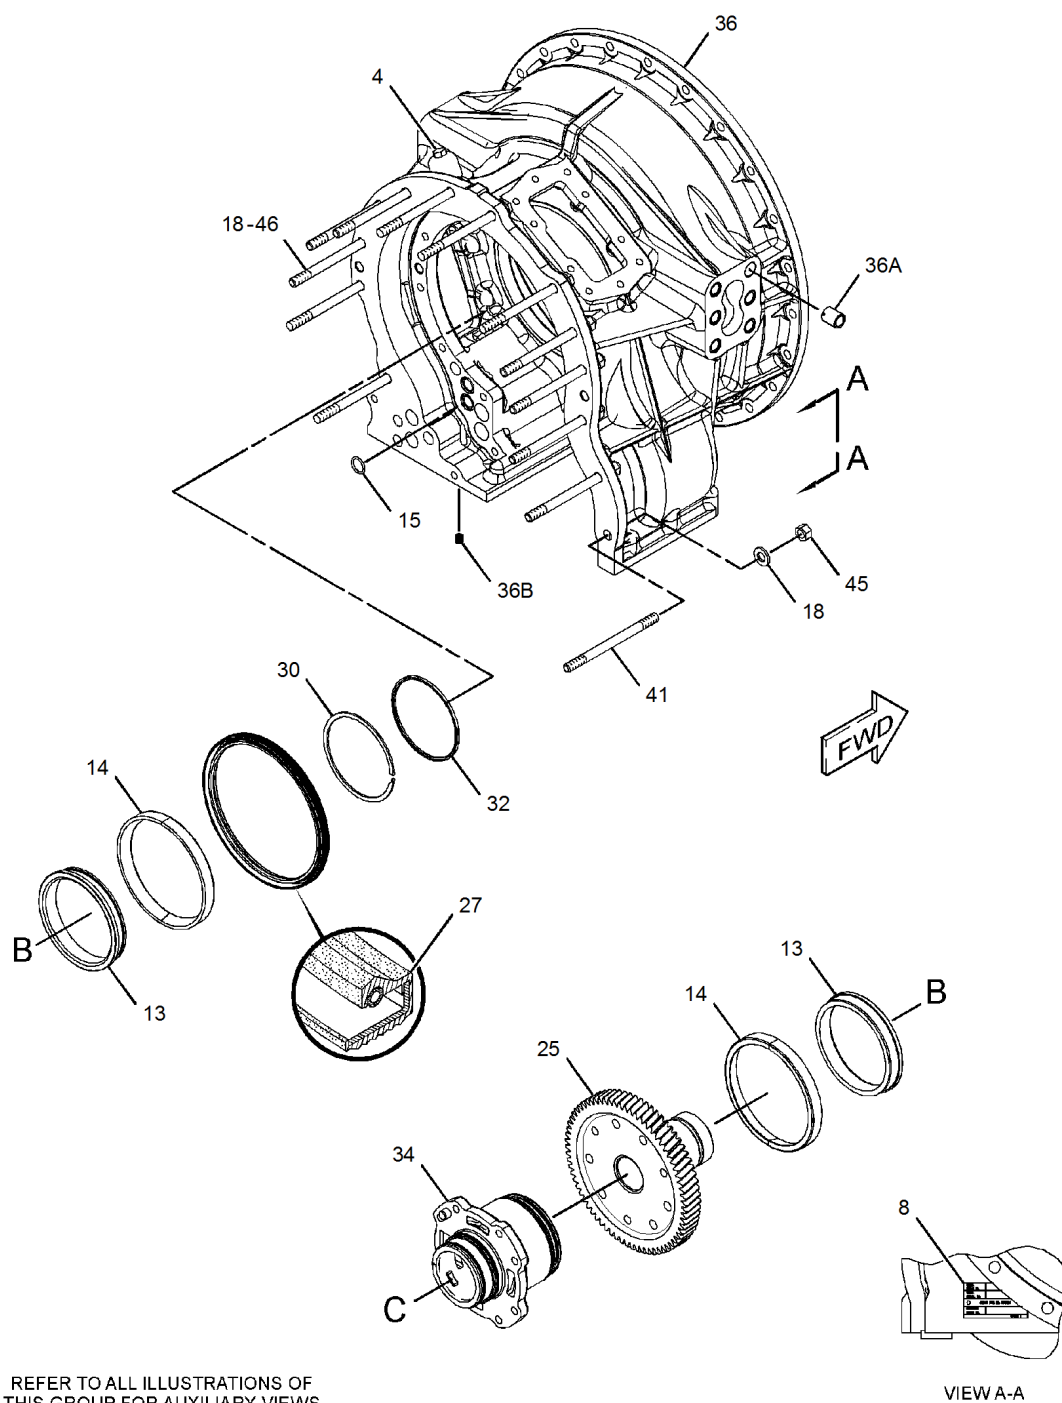 

277-6890 HOUSING GP-TORQUE CONVERTER -RETARDER
(continued)

Drawing 2 of 2

REFER TO ALL ILLUSTRATIONS OF
THIS GROUP FOR AUXILIARY VIEWS

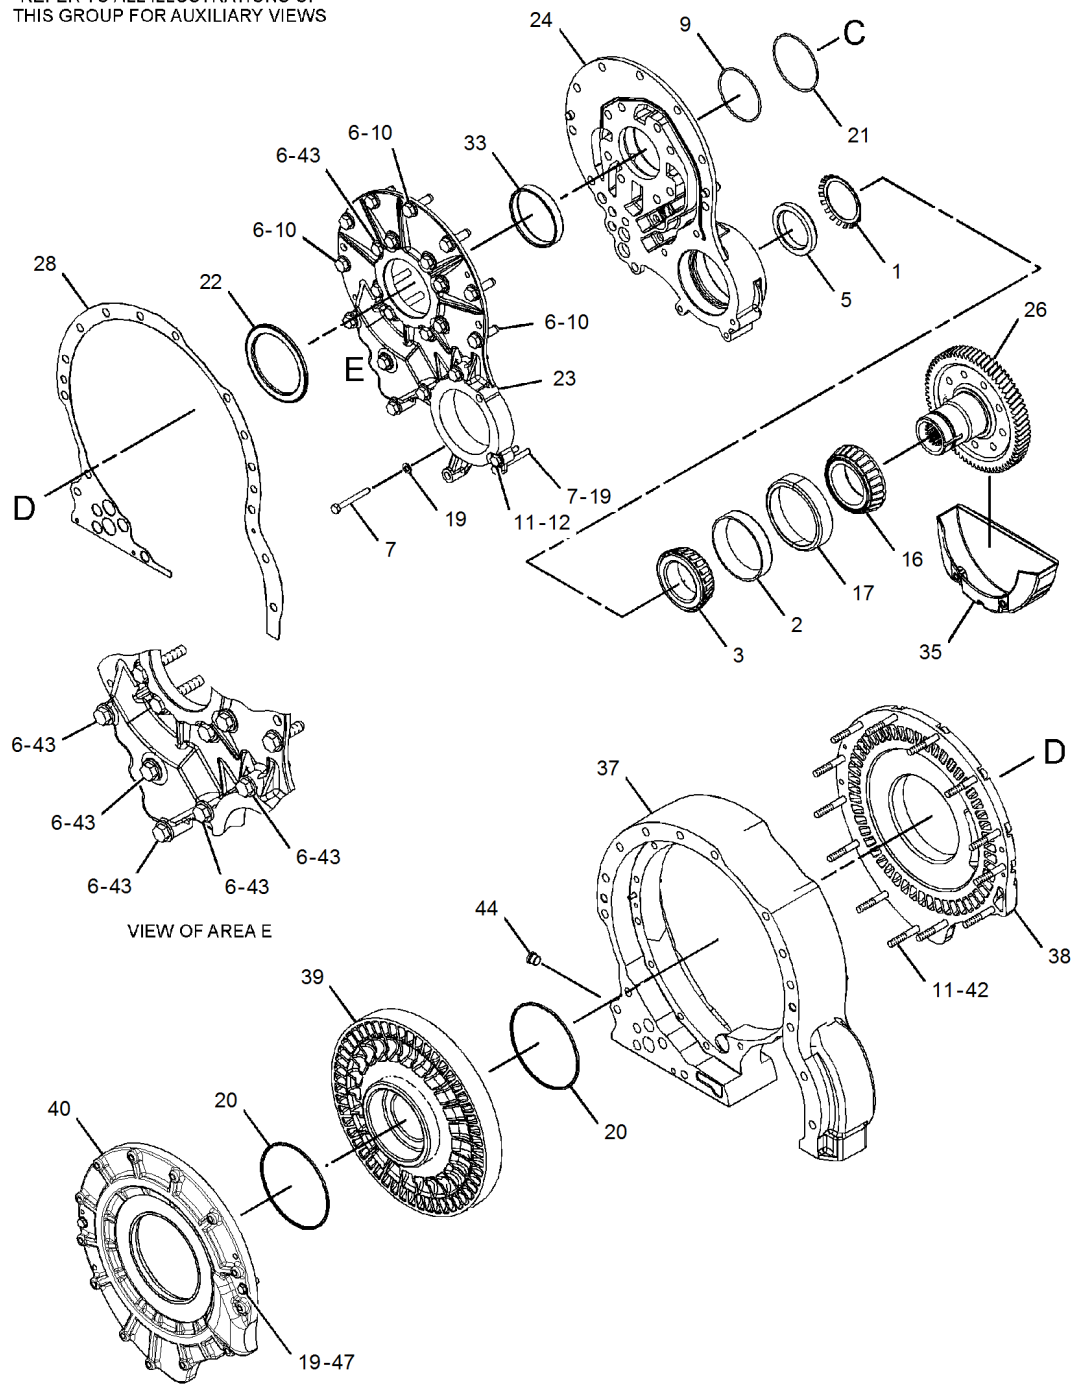 

Ref.	Part number	Description	Qty	Code	Group page
1	1B-6161	LOCK	1		
2	2P-8986	CUP-BEARING	1		
3	2P-8987	CONE-BEARING	1		
4	4H-6112	BREATHER (TORQUE CONVERTER)	1		
5	4H-7859	LOCKNUT-BEARING	1		

277-6890 HOUSING GP-TORQUE CONVERTER -RETARDER

(continued)

Ref.	Part number	Description	Qty	Code	Group page
6	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	20		
7	5P-8347	BOLT (M8X1.25X70-MM)	2	M	
8	338-0891	PLATE-INFORMATION (TRANSMISSION)	1		
9	6V-3551	SEAL-O-RING	1		
10	6V-5684	BOLT (M12X1.75X45-MM)	7	M	
11	6V-5839	WASHER (11X21X2.5-MM THK)	14		
12	6V-5843	BOLT (M10X1.5X45-MM)	1	M	
13	6V-7421	CONE-SPECIAL TAPERED	2		
14	6V-7422	CUP-SPECIAL TAPERED	2		
15	7L-9061	SEAL-O-RING	2		
16	8H-7801	CONE-BEARING	1		
17	8H-7803	CUP-BEARING	1		
18	8T-4223	WASHER-HARD (13.5X25.5X3-MM THK)	13		
19	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	4		
20	128-1663	RING-SEAL	2		
21	136-3378	SEAL-O-RING	1		
22	257-8660	BEARING-THRUST	1		
23	265-5834	MANIFOLD	1		
24	366-0683	MANIFOLD	1		
25	295-8261	GEAR (55-TEETH)	1		
26	265-5840	GEAR (70-TEETH)	1		
27	363-2112	SEAL-LIP TYPE	1		
28	352-1944	GASKET	1		
30	274-4252	RING-RETAINING	1		
32	274-4254	RING-SEAL	1		
33	274-6111	RACE-BEARING	1		
34	274-9319	CARRIER AS-RING	1		
	1A-2223	DOWEL	1		
35	380-2810	SHIELD AS	1		
36	277-6892	HOUSING AS-TORQUE CONVERTER	1		
	5M-7937	DOWEL	2		
36A	265-6991	INSERT-THREADED (M16X2-THD)	12	M	
36B	266-4188	INSERT-THREADED (M8X1.25-THD)	9	M	
37	375-2451	HOUSING AS-TORQUE CONVERTER (INTERMEDIATE)	1	Y	
38	304-5103	STATOR-RETARDER	1		

277-6890 HOUSING GP-TORQUE CONVERTER -RETARDER

(continued)


Ref.	Part number	Description	Qty	Code	Group page
39	277-6901	ROTOR-RETARDER	1		
40	304-5104	STATOR-RETARDER	1		
41	287-3144	STUD (M12X1.75X165-MM)	8	CM	
42	095-0658	BOLT-SOCKET HEAD (M10X1.5X70-MM)	13	M	
43	172-9966	BOLT (M12X1.75X65-MM)	13	M	
44	183-3407	PLUG AS	1		
	9S-8004	PLUG (9/16-18-THD)	1		
	214-7568	SEAL-O-RING	1		
45	8T-4244	NUT (M12X1.75-THD)	8	CM	
46	8T-5092	BOLT (M12X1.75X150-MM)	5	CM	
47	6V-2317	BOLT (M8X1.25X30-MM)	2	M	

CAT codes: C, M, Y.

418-7978 HOUSING GP-TORQUE CONVERTER -RETARDER

418-7978 HOUSING GP-TORQUE CONVERTER -RETARDER S/N E2R316-UP; B3X694-UP PART OF 282-9536 TRANSMISSION AR-CORE

Drawing 1 of 1

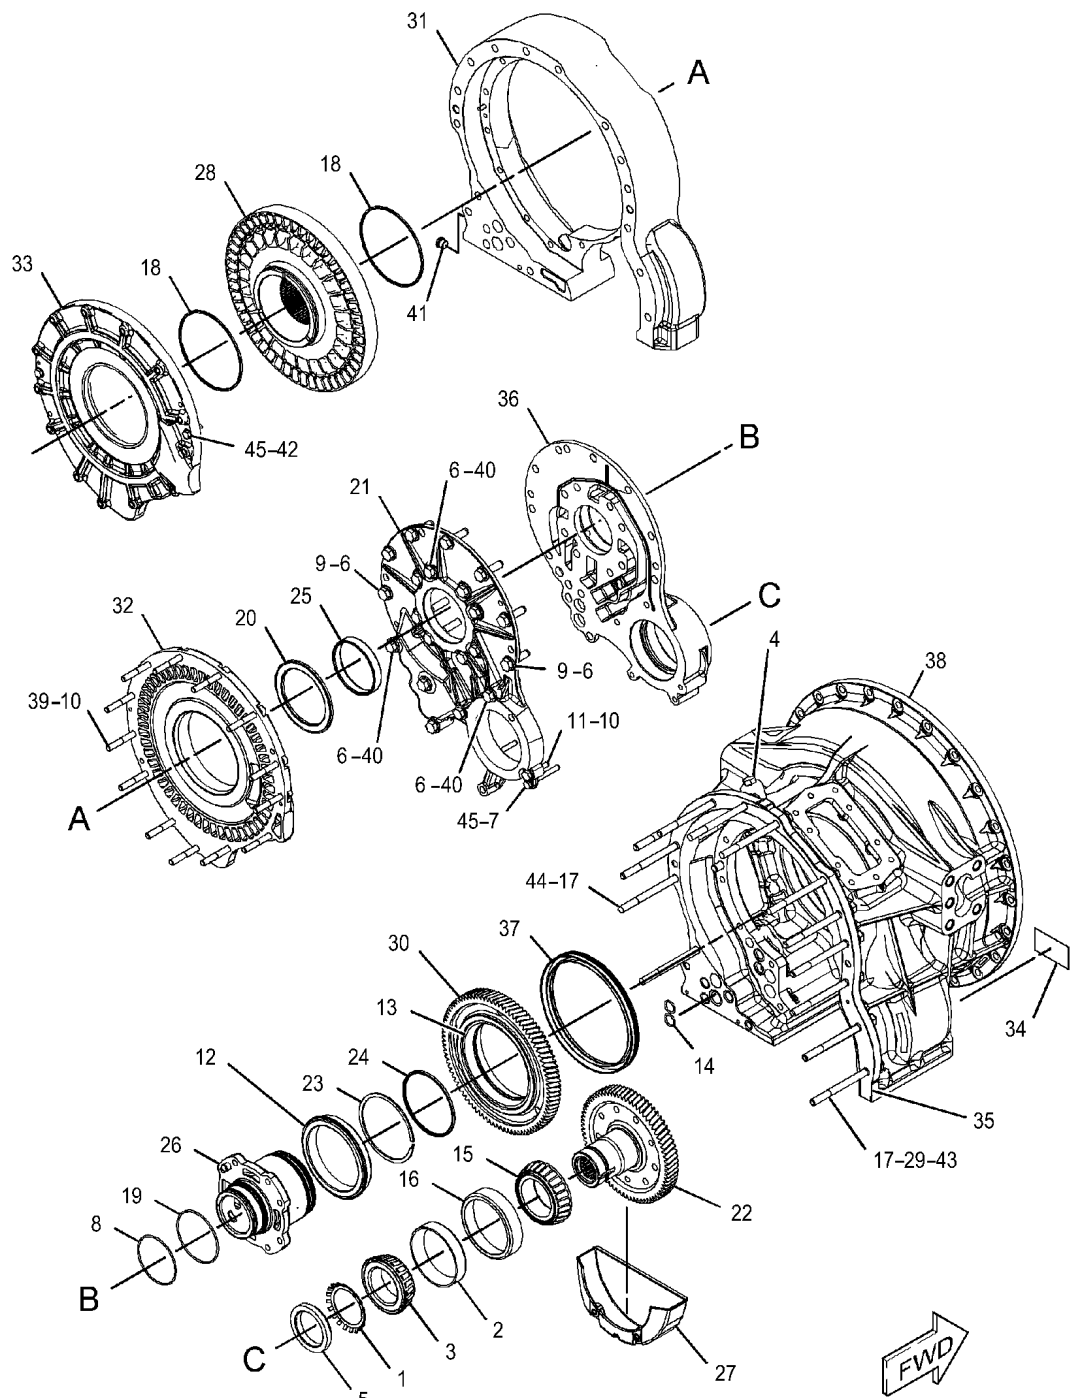 

Ref.	Part number	Description	Qty	Code	Group page
1	1B-6161	LOCK	1		
2	2P-8986	CUP-BEARING	1		
3	2P-8987	CONE-BEARING	1		
4	4H-6112	BREATHER (TORQUE CONVERTER)	1		

418-7978 HOUSING GP-TORQUE CONVERTER -RETARDER

(continued)

Ref.	Part number	Description	Qty	Code	Group page
5	4H-7859	LOCKNUT-BEARING	1		
6	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	20		
7	5P-8347	BOLT (M8X1.25X70-MM)	2	M	
8	6V-3551	SEAL-O-RING	1		
9	6V-5684	BOLT (M12X1.75X45-MM)	7	M	
10	6V-5839	WASHER (11X21X2.5-MM THK)	14		
11	6V-5843	BOLT (M10X1.5X45-MM)	1	M	
12	416-6337	BEARING	2		
13	416-6338	BEARING-CUP	2		
14	7L-9061	SEAL-O-RING	2		
15	8H-7801	CONE-BEARING	1		
16	8H-7803	CUP-BEARING	1		
17	8T-4223	WASHER-HARD (13.5X25.5X3-MM THK)	13		
18	128-1663	RING-SEAL	2		
19	136-3378	SEAL-O-RING	1		
20	459-1195	BEARING-THRUST	1		
21	265-5834	MANIFOLD	1		
22	265-5840	GEAR (70-TEETH)	1		
23	274-4252	RING-RETAINING	1		
24	274-4254	RING-SEAL	1		
25	274-6111	RACE-BEARING	1		
26	419-0034	CARRIER AS	1		
	1A-2223	DOWEL	1		
27	380-2810	SHIELD AS	1		
28	277-6901	ROTOR-RETARDER	1		
29	287-3144	STUD (M12X1.75X165-MM)	8	M	
30	295-8261	GEAR (55-TEETH)	1		
31	375-2451	HOUSING AS-TORQUE CONVERTER (INTERMEDIATE)	1	Y	
32	304-5103	STATOR-RETARDER	1		
33	304-5104	STATOR-RETARDER	1		
34	338-0891	PLATE-INFORMATION (TRANSMISSION)	1		
35	352-1944	GASKET	1		
36	366-0683	MANIFOLD	1		
37	363-2112	SEAL-LIP TYPE	1		
38	371-0888	HOUSING AS-TORQUE CONVERTER	1		

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

E2R-SEBP4927

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99