

CATERPILLAR CX35-P800

TRJ / SEBP5022

Contents

Section	Page
Lubrication system	2
Cooling system	
Air inlet and exhaust	
Fuel system	
Electrical and electronics	
Basic engine	
Basic engine	
Hydraulic system	

289-9548 FASTENER GP-COUPLING -ENGINE

289-9548 FASTENER GP-COUPLING -ENGINE S/N TRJ1-UP FLEXPLATE PART OF 347-1825, 347-1826, 347-1827, 347-1828, 347-1832, 347-1833, 347-1834, 351-0253, 365-5176, 390-6993 OPTION AR-POWER TRAIN

Kit / parts list. The current source card does not provide a separate drawing.

Ref.	Part number	Description	Qty	Code	Group
	0S-1576	BOLT (5/8-18X2-IN)	12		page

289-9549 FASTENER GP-COUPLING -TRANSMISSION

289-9549 FASTENER GP-COUPLING -TRANSMISSION S/N TRJ1-UP PART OF 299-2484, 304-9050, 334-8602, 334-8603, 334-8604, 344-6286, 344-6287, 346-9511, 346-9512, 346-9513, 347-5402, 347-5403, 348-4154, 348-4155, 365-5175, 391-3948, 420-0638 TRANSMISSION AR-COMPLETE

Kit / parts list. The current source card does not provide a separate drawing.


Ref.	Part number	Description	Qty	Code	Group page
	095-0670	BOLT (M12X1.75X45-MM)	12	M	

CAT codes: M.

294-2722 HOUSING GP-TORQUE CONVERTER

294-2722 HOUSING GP-TORQUE CONVERTER S/N TRJ1-UP PART OF 335-6629 TRANSMISSION AR-CORE

Drawing 1 of 1

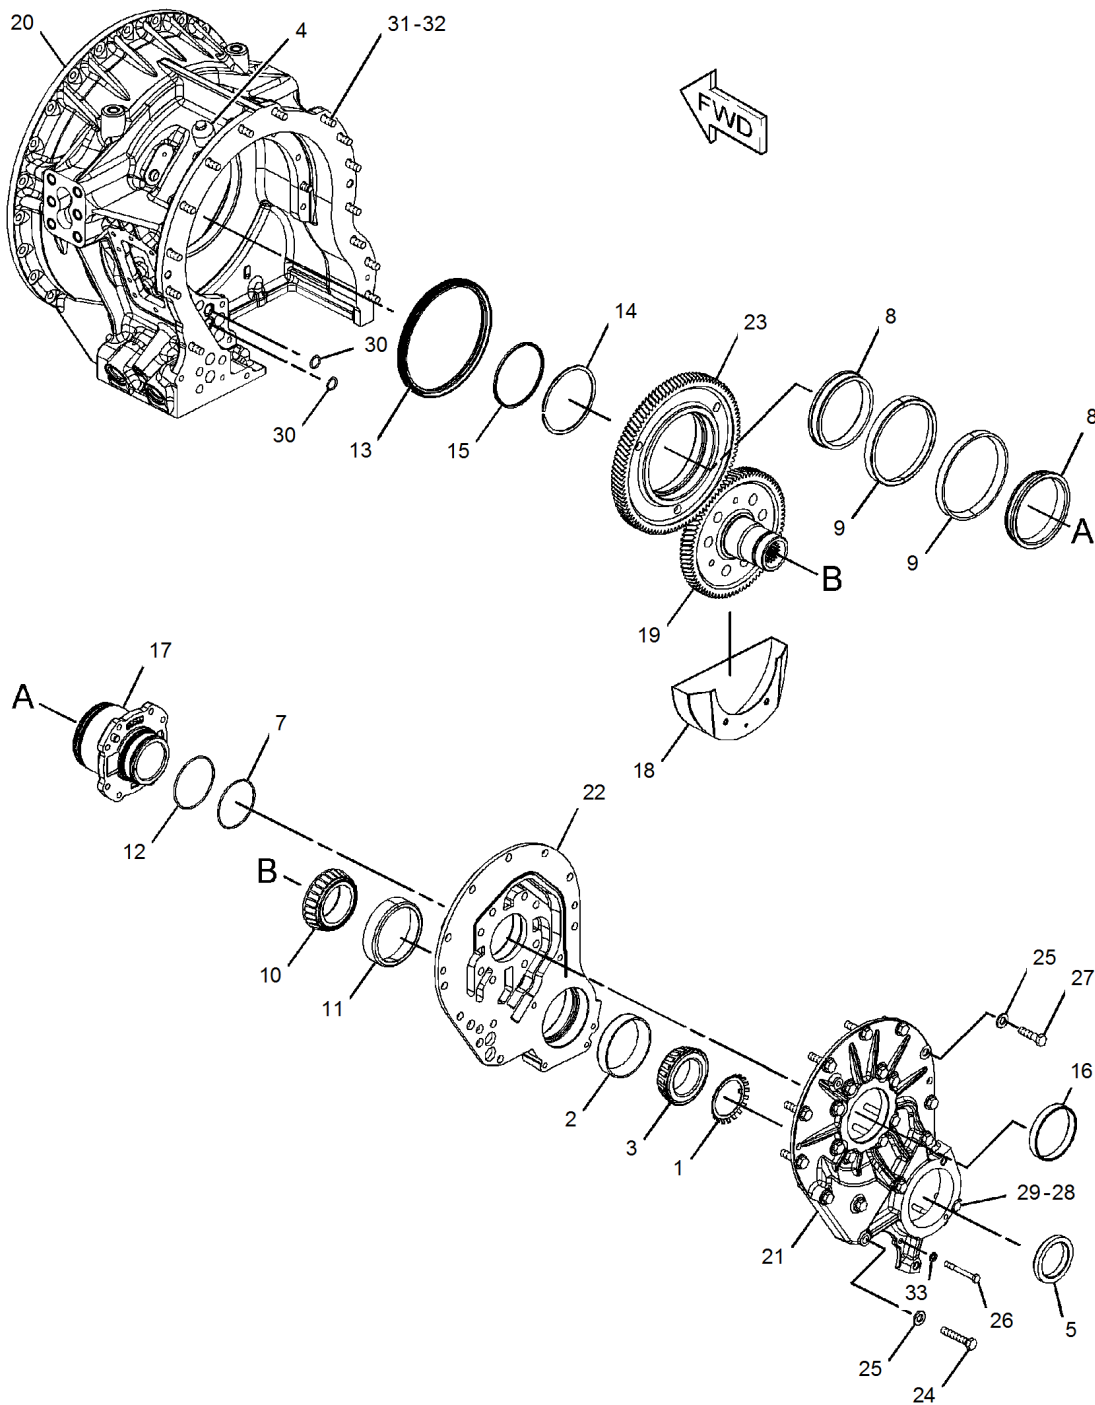 

Ref.	Part number	Description	Qty	Code	Group page
1	1B-6161	LOCK	1		
2	2P-8986	CUP-BEARING	1		
3	2P-8987	CONE-BEARING	1		
4	4H-6112	BREATHER (TORQUE CONVERTER)	1		
5	4H-7859	LOCKNUT-BEARING	1		

294-2722 HOUSING GP-TORQUE CONVERTER (continued)


Ref.	Part number	Description	Qty	Code	Group page
7	6V-3551	SEAL-O-RING	1		
8	6V-7421	CONE-SPECIAL TAPERED	2		
9	6V-7422	CUP-SPECIAL TAPERED	2		
10	8H-7801	CONE-BEARING	1		
11	8H-7803	CUP-BEARING	1		
12	136-3378	SEAL-O-RING	1		
13	363-2112	SEAL-LIP TYPE	1		
14	274-4252	RING-RETAINING	1		
15	274-4254	RING-SEAL	1		
16	274-6111	RACE-BEARING	1		
17	274-9319	CARRIER AS-RING	1		
	1A-2223	DOWEL	1		
18	277-0356	SHIELD AS	1		
	8T-3612	NUT-WELD (M8X1.25-THD)	2	M	
19	277-0425	GEAR (80-TEETH)	1		
20	292-4351	HOUSING AS-TORQUE CONVERTER	1		
	5M-7937	DOWEL	2		
	265-6991	INSERT-THREADED (M16X2-THD)	12	M	
21	292-4352	MANIFOLD	1		
22	292-4353	MANIFOLD	1		
23	294-2702	GEAR (100-TEETH)	1		
24	172-9966	BOLT (M12X1.75X65-MM)	13	M	
25	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	20		
26	5P-8347	BOLT (M8X1.25X70-MM)	2	M	
27	6V-5684	BOLT (M12X1.75X45-MM)	7	M	
28	6V-5839	WASHER (11X21X2.5-MM THK)	1		
29	6V-5843	BOLT (M10X1.5X45-MM)	1	M	
30	7L-9061	SEAL-O-RING	2		
31	8T-4184	BOLT (M12X1.75X45-MM)	14	M	
32	8T-4223	WASHER-HARD (13.5X25.5X3-MM THK)	14		
33	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	2		

CAT codes: M.

299-2464 HOUSING GP-TORQUE CONVERTER

299-2464 HOUSING GP-TORQUE CONVERTER S/N TRJ1-UP PART OF 335-6630 TRANSMISSION AR-CORE

Drawing 1 of 1

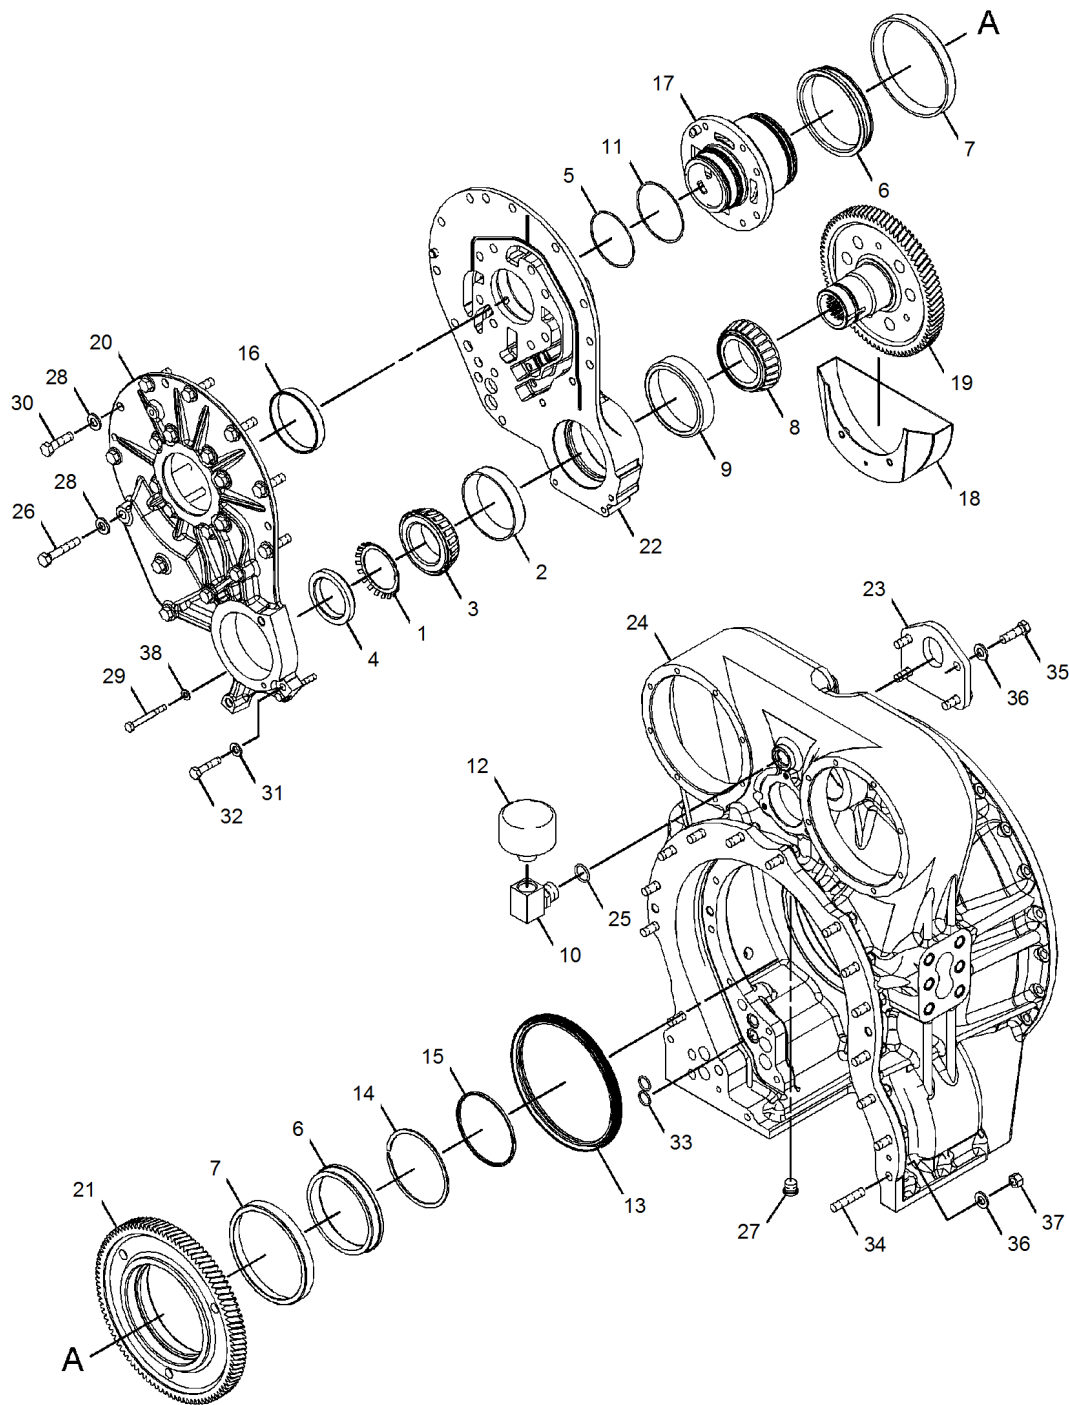 

Ref.	Part number	Description	Qty	Code	Group page
1	1B-6161	LOCK	1		
2	2P-8986	CUP-BEARING	1		
3	2P-8987	CONE-BEARING	1		
4	4H-7859	LOCKNUT-BEARING	1		
5	6V-3551	SEAL-O-RING	1		

299-2464 HOUSING GP-TORQUE CONVERTER (continued)

Ref.	Part number	Description	Qty	Code	Group page
6	6V-7421	CONE-SPECIAL TAPERED	2		
7	6V-7422	CUP-SPECIAL TAPERED	2		
8	8H-7801	CONE-BEARING	1		
9	8H-7803	CUP-BEARING	1		
10	8T-3491	ELBOW	1		
11	136-3378	SEAL-O-RING	1		
12	258-2829	BREATHER (TORQUE CONVERTER)	1		
13	363-2112	SEAL-LIP TYPE	1		
14	274-4252	RING-RETAINING	1		
15	274-4254	RING-SEAL	1		
16	274-6111	RACE-BEARING	1		
17	274-9319	CARRIER AS-RING	1		
	1A-2223	DOWEL	1		
18	277-0356	SHIELD AS	1		
	8T-3612	NUT-WELD (M8X1.25-THD)	2	M	
19	277-0425	GEAR (80-TEETH)	1		
20	292-4352	MANIFOLD	1		
21	294-2702	GEAR (100-TEETH)	1		
22	304-8978	MANIFOLD	1		
23	304-8981	PLATE-LIFTING	1		
24	304-9044	HOUSING AS-TORQUE CONVERTER	1		
	5M-7937	DOWEL	2		
	265-6991	INSERT-THREADED (M16X2-THD)	12	M	
	266-4188	INSERT-THREADED (M8X1.25-THD)	3	M	
25	033-6036	SEAL-O-RING	1		
26	172-9966	BOLT (M12X1.75X65-MM)	13	M	
27	183-3409	PLUG AS	1		
	9S-8002	PLUG (7/16-20-THD)	1		
	033-5853	SEAL-O-RING	1		
28	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	21		
29	5P-8347	BOLT (M8X1.25X70-MM)	2	M	
30	6V-5684	BOLT (M12X1.75X45-MM)	8	M	
31	6V-5839	WASHER (11X21X2.5-MM THK)	1		
32	6V-5843	BOLT (M10X1.5X45-MM)	1	M	
33	7L-9061	SEAL-O-RING	2		
34	246-5451	STUD-TAPERLOCK (M12X1.75X65-MM)	14	M	

299-2464 HOUSING GP-TORQUE CONVERTER (continued)


Ref.	Part number	Description	Qty	Code	Group page
35	8T-4183	BOLT (M12X1.75X40-MM)	4	M	
36	8T-4223	WASHER-HARD (13.5X25.5X3-MM THK)	18		
37	8T-4244	NUT (M12X1.75-THD)	14	M	
38	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	2		

CAT codes: M.

284-3606 PLATE GP-DRIVE

284-3606 PLATE GP-DRIVE S/N TRJ1-UP PART OF 299-2484, 304-9050, 334-8602, 334-8603, 344-6286, 344-6287, 346-9511, 346-9512, 347-5402, 365-5175, 391-3948 TRANSMISSION AR-COMplete FOR USE WITH C15, C18

Drawing 1 of 1

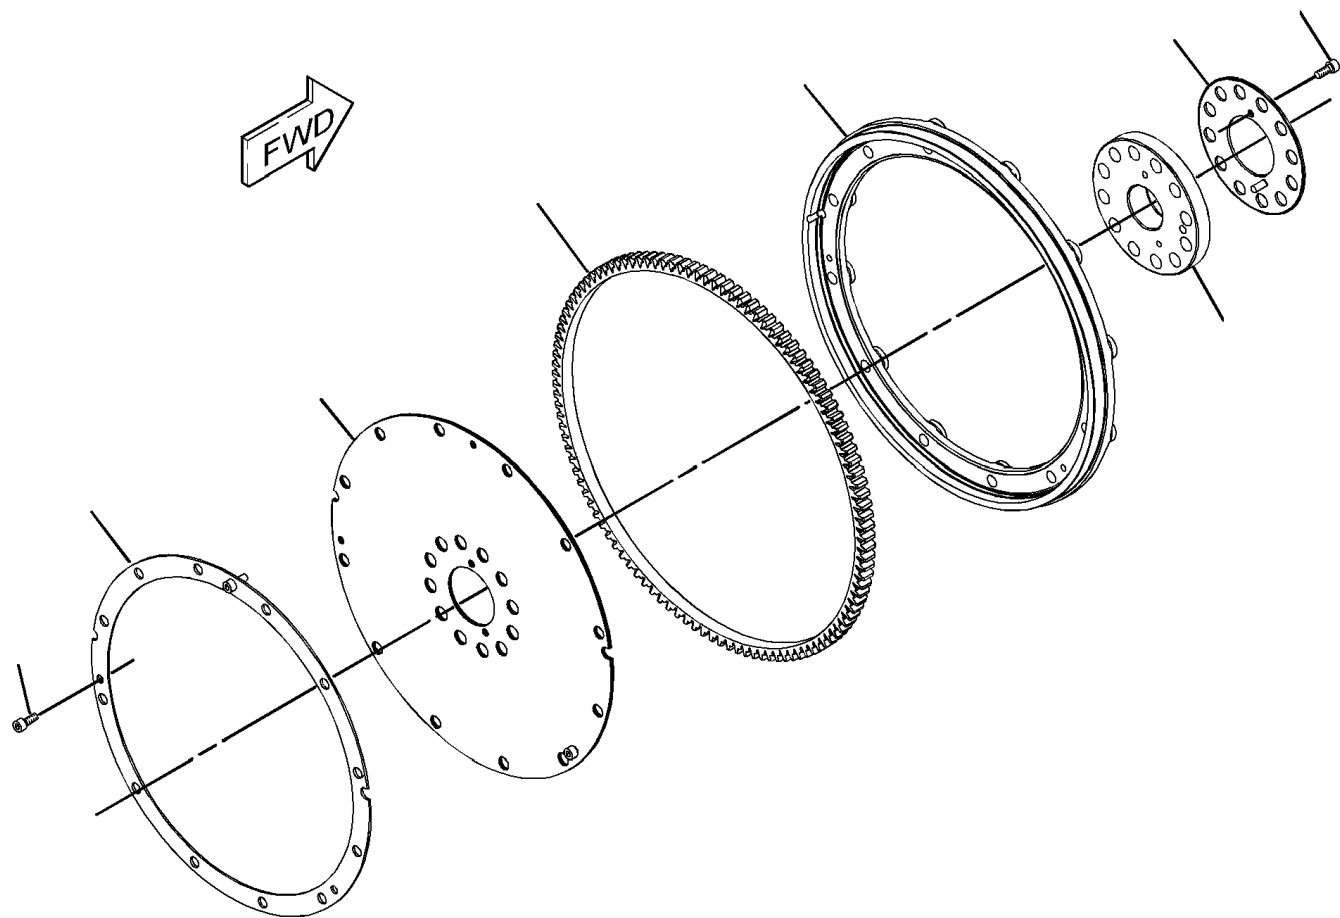 


Ref.	Part number	Description	Qty	Code	Group
1	256-9651	GEAR-FLYWHEEL (113-TEETH)	1		page
2	284-3597	PLATE-WASHER	1		
3	284-3598	PLATE-FLEXIBLE	5		
4	284-3601	ADAPTER-CRANKSHAFT	1		
5	284-3605	ADAPTER-DRIVE	1		
6	284-3607	PLATE	1		
7	8T-1158	BOLT-SOCKET HEAD (M8X1.25X20-MM)	5	M	

CAT codes: M.

333-1741 PLATE GP-DRIVE

333-1741 PLATE GP-DRIVE S/N TRJ1-UP PART OF 334-8604, 346-9513, 347-5403, 348-4154, 348-4155, 420-0638
TRANSMISSION AR-COMPLETE FOR USE WITH C27, C32

Drawing 1 of 1

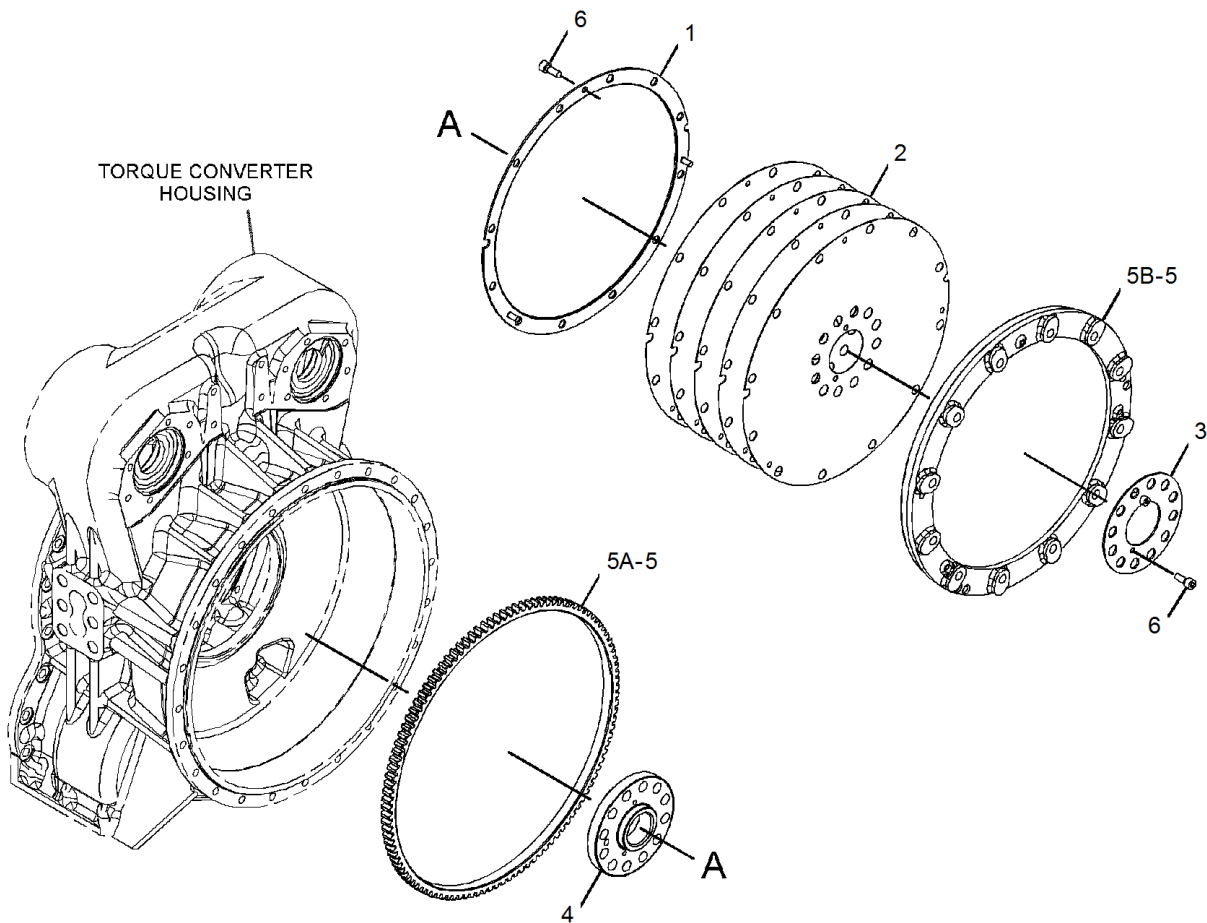 

Ref.	Part number	Description	Qty	Code	Group
1	284-3597	PLATE-WASHER	1		page
2	284-3598	PLATE-FLEXIBLE	5		
3	284-3607	PLATE	1		
4	333-1742	ADAPTER	1		
5	419-9435	ADAPTER AS	1		
5A	256-9651	GEAR-FLYWHEEL (113-TEETH)	1		
5B	284-3605	ADAPTER-DRIVE	1		
6	8T-1158	BOLT-SOCKET HEAD (M8X1.25X20-MM)	5	M	

CAT codes: M.

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

TRJ-SEBP5022

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99