


シリンダヘッド
FIG. 1101 CYLINDER HEAD

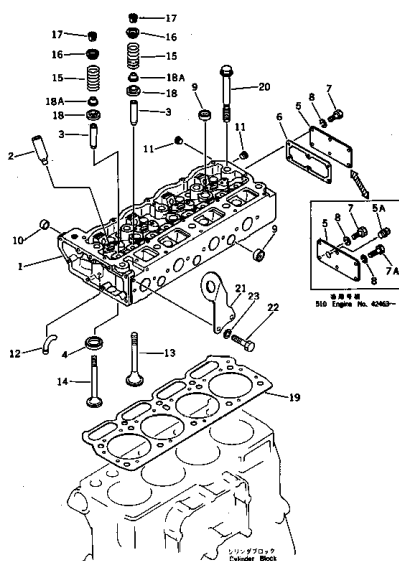

Reference: 1101


030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6130-12-1101	CYLINDER HEAD ASSEMBLY, WITH VALVE	1	SN: 40001-UP
	6130-11-1200	• CYLINDER HEAD ASSEMBLY, WITHOUT VALVE	1	SN: 40001-UP
1		• ☆ HEAD, CYLINDER	1	SN: 40001-UP
2	6130-11-1131	• SLEEVE	4	SN: 40001-UP
3	6130-19-1310	• Δ GUIDE, VALVE	8	SN: 40001-UP
4	6130-11-1323	• SEAT, EXHAUST VALVE (STD)	4	SN: 40001-UP
4	6130-19-1323	• SEAT, 0.25MM, EXHAUST VALVE (OS)	4	SN: 40001-UP
4	6130-18-1323	• SEAT, 0.50MM, EXHAUST VALVE (OS)	4	SN: 40001-UP
4	6130-17-1323	• SEAT, 0.75MM, EXHAUST VALVE (OS)	4	SN: 40001-UP
4	6130-16-1323	• SEAT, 1.00MM, EXHAUST VALVE (OS)	4	SN: 40001-UP
5	6130-11-1931	• PLATE	1	SN: 40001-UP
6	6130-11-1940	• GASKET (K1)	1	SN: 40001-UP
7	01010-30816	• BOLT	6	SN: 40001-UP
8	01602-00825	• WASHER, SPRING	6	SN: 40001-UP
9	6130-11-1410	• PLUG	9	SN: 40001-UP
10	6130-11-1420	• PLUG	4	SN: 40001-UP
11	6100-21-1130	• PLUG	2	SN: 40001-UP
12	6130-11-1451	• NOZZLE	8	SN: 40001-UP
13	6130-41-4131	• VALVE, INTAKE	4	SN: 40001-UP
14	6130-41-4210	• VALVE, EXHAUST	4	SN: 40001-UP
15	6130-41-4410	• SPRING, VALVE	8	SN: 40001-UP
16	6130-41-4511	• GUIDE, SPRING	8	SN: 40001-UP
17	6130-41-4520	• COTTER	16	SN: 40001-UP
18	6130-41-4620	• SEAT, SPRING	8	SN: 40001-UP
19	6131-11-1811	GASKET (K1)	1	SN: .-UP
19	6131-11-1810	□ GASKET (K1)	1	SN: 40001-.
20	6130-12-1610	BOLT	10	SN: 40001-UP
21	6130-11-1913	HANGA	1	SN: 40001-UP
22	01010-31025	BOLT	2	SN: 40001-UP
23	01602-01030	WASHER, SPRING	2	SN: 40001-UP

Catalog signs: ☆ not supplied separately: assembly only Δ semi-finished: additional work required □ part above may be used instead

Reference: 1101

ロ ッ カ ア ー ム
FIG. 1103 ROCKER ARM

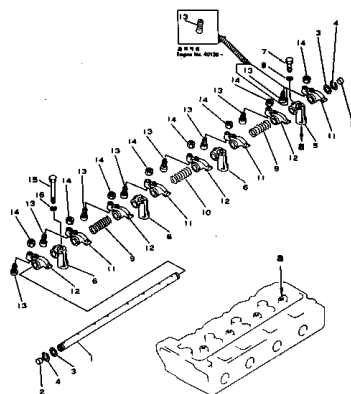


Reference: 1103

030020 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
	6130-42-5100	ROCKER ARM SHAFT ASSEMBLY	1	SN: 40001-UP
1	6130-41-5211	• SHAFT	1	SN: 40001-UP
2	6130-41-5550	• PLUG	2	SN: 40001-UP
3	6130-41-5540	• PLATE	2	SN: 40001-UP
4	04066-00020	• RING, SNAP	2	SN: 40001-UP
5	6130-41-5110	• BRACKET	1	SN: 40001-UP
6	6130-41-5120	• BRACKET	3	SN: 40001-UP
7	01010-30612	• BOLT	1	SN: 40001-UP
8	01602-00619	• WASHER, SPRING	1	SN: 40001-UP
9	6130-41-5320	• SPRING	2	SN: 40001-UP
10	6130-41-5330	• SPRING	1	SN: 40001-UP
11	6130-41-5511	• ARM, ROCKER, INTAKE	4	SN: 40001-UP
12	6130-41-5411	• ARM, ROCKER, EXHAUST	4	SN: 40001-UP
13	6130-42-5440	• SCREW	8	SN: 40138-UP
13	6130-41-5442	• SCREW	8	SN: 40001-40137
14	6130-41-5430	• NAT	8	SN: 40001-UP
15	01010-31280	BOLT	4	SN: 40001-UP
16	01602-01236	WASHER, SPRING	4	SN: 40001-UP

Reference: 1103

シリンダヘッドカバー 適用年表
FIG. 1106 CYLINDER HEAD COVER (ENGINE NO. 40001 - 63872)

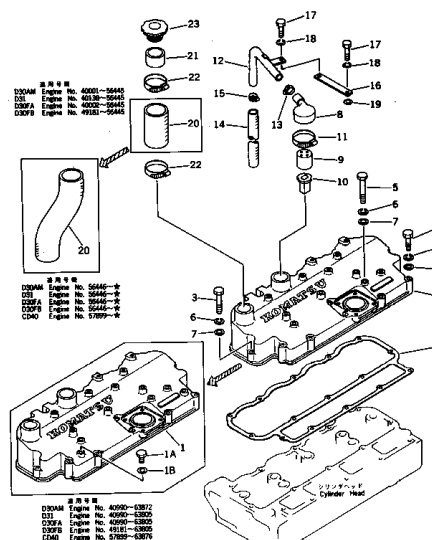

Reference: 1105


030030 CYLINDER HEAD COVER (#40001-63872)

Item	Part No.	Part Name	Qty	Options
1	6130-12-8115	COVER, HEAD	1	SN: 40990-@
1	6130-12-8114	■ COVER, HEAD (6130-12-8115,6114-11-8910(2))	1	SN: 40001-40989
1A	6114-11-8910	PLUG	2	SN: 40990-63872
1B	07005-02216	GASKET	2	SN: 40990-63872
2	6130-11-7820	GASKET (K1)	1	SN: 40001-@
3	01010-30850	BOLT	8	SN: 40001-@
4	01010-30870	BOLT	4	SN: 40001-@
5	01010-30890	BOLT	3	SN: 40001-@
6	01602-00825	WASHER, SPRING	15	SN: 40001-@
7	01640-20816	WASHER	15	SN: 40001-@
8	6130-12-8931	COVER	1	SN: 43863-@
8	6130-12-8930	□ COVER	1	SN: 40001-43862
9	6130-12-8910	BREATHER	1	SN: 40001-@
10	6130-12-8920	BAFFLE	1	SN: 40001-@
11	07281-00709	CLAMP	1	SN: 40001-@
12	6130-12-8850	PIPE	1	SN: 40001-@
13	07281-00359	CLAMP	1	SN: 40001-@
14	6131-11-8851	HOSE	1	SN: .-@
14	6131-11-8850	□ HOSE	1	SN: 40001-.
15	07280-02523	CLAMP	1	SN: 40001-@
16	6130-12-8860	BRACKET	1	SN: 40001-@
17	01010-30820	BOLT	2	SN: 40001-@
18	01602-00825	WASHER, SPRING	2	SN: 40001-@
19	01643-31032	WASHER	1	SN: 40001-@
20	6131-12-8620	HOSE	1	SN: 56446-@
20	6130-12-8620	□ HOSE	1	SN: 40001-56445
21	6130-12-8630	PIPE	1	SN: 40001-@
22	07281-00709	CLAMP	2	SN: 40001-@
23	6130-12-8610	CAP	1	SN: 40001-@

Catalog signs: ■ may be used instead of described part □ part above may be used instead

Reference: 1105

シリンダヘッドカバー 適用号機
FIG. 1105A CYLINDER HEAD COVER (ENGINE NO. 63873 -)

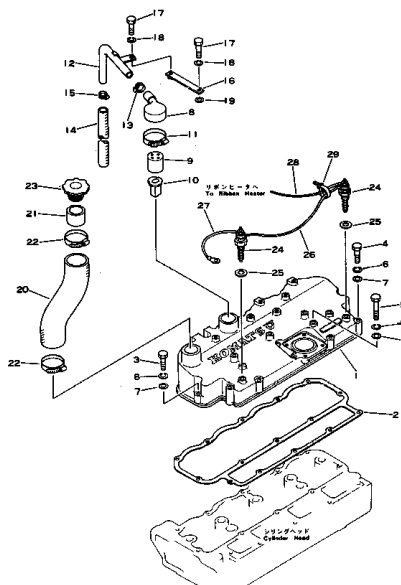


Reference: 1105A

030040 CYLINDER HEAD COVER(#63873-)

Item	Part No.	Part Name	Qty	Options
1	6130-12-8115	COVER, HEAD	1	SN: 63873-UP
2	6130-11-7820	GASKET (K1)	1	SN: 40001-UP
3	01010-30850	BOLT	8	SN: 40001-UP
4	01010-30870	BOLT	4	SN: 40001-UP
5	01010-30890	BOLT	3	SN: 40001-UP
6	01602-00825	WASHER, SPRING	15	SN: 40001-UP
7	01640-20816	WASHER	15	SN: 40001-UP
8	6130-12-8931	COVER	1	SN: 43863-UP
9	6130-12-8910	BREATHER	1	SN: 40001-UP
10	6130-12-8920	BAFFLE	1	SN: 40001-UP
11	07281-00709	CLAMP	1	SN: 40001-UP
12	6130-12-8850	PIPE	1	SN: 40001-UP
13	07281-00359	CLAMP	1	SN: 40001-UP
14	6131-11-8851	HOSE	1	SN: .-UP
15	07280-02523	CLAMP	1	SN: 40001-UP
16	6130-12-8860	BRACKET	1	SN: 40001-UP
17	01010-30820	BOLT	2	SN: 40001-UP
18	01602-00825	WASHER, SPRING	2	SN: 40001-UP
19	01643-31032	WASHER	1	SN: 40001-UP
20	6131-12-8620	HOSE	1	SN: 56446-UP
21	6130-12-8630	PIPE	1	SN: 40001-UP
22	07281-00709	CLAMP	2	SN: 40001-UP
23	6130-12-8610	CAP	1	SN: 40001-UP
24	600-815-2350	HEATER, COIL	2	SN: 63806-UP
25	07003-02228	GASKET (K1)	2	SN: 63806-UP
26	6131-82-4810	WOW	1	SN: 63806-UP
27	6131-82-4820	WOW	1	SN: 63806-UP
28	6131-82-4860	WOW	1	SN: 63806-UP
29	08034-00310	BAND	1	SN: 63806-UP

Reference: 1105A

エアインテークコネクشنおよびエアークリーナ 適用号機
FIG. 1111 AIR INTAKE CONNECTION AND AIR CLEANER (ENGINE NO. 40001 - 56494)

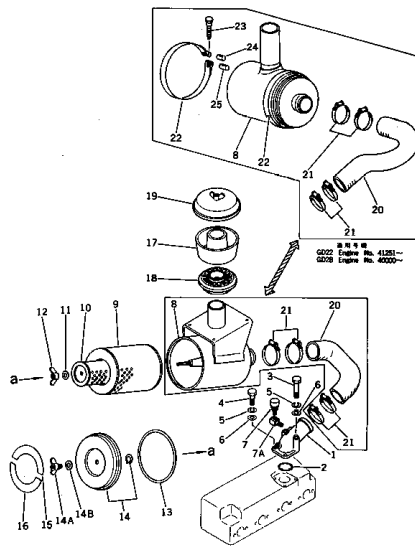

Reference: 1111


030050 AIR INTAKE CONNECTION AND AIR CLEANER (#40001-56494)

Item	Part No.	Part Name	Qty	Options
1	6130-12-4211	CONNECTOR	1	SN: 40001-@
2	07000-02070	O RING (K2)	1	SN: 40001-@
3	01010-31080	BOLT	2	SN: 40001-@
4	01010-31025	BOLT	2	SN: 40001-@
5	01602-01030	WASHER, SPRING	4	SN: 40001-@
6	01640-21016	WASHER	4	SN: 40001-@
8	6130-82-7201	AIR CLEANER ASSEMBLY	1	SN: 52605-56494
	6130-82-7200	□ AIR CLEANER ASSEMBLY	1	SN: 40001-52604
	6130-82-7210	• BODY	1	SN: 40001-56494
	600-181-9301	• ELEMENT ASSEMBLY	1	SN: 52605-56494
9	600-181-9300	• □ ELEMENT ASSEMBLY	1	SN: 40001-52604
	600-181-9220	•• ELEMENT, OUTER	1	SN: 40001-56494
10	600-181-9320	•• ELEMENT, INNER	1	SN: 40001-56494
11	600-181-7511	•• WASHER, SEAL	1	SN: 52605-@
11	600-181-7511	• WASHER, SEAL	1	SN: 40001-52604
12	600-181-7620	•• NAT	1	SN: 52605-56494
12	600-181-7620	• NAT	1	SN: 40001-52604
13	600-181-9410	• PACKING	1	SN: 40001-56494
14	600-181-9130	• COVER	1	SN: 40001-56494
14A	600-181-7610	•• NUT,WING	1	SN: 40001-56494
14B	600-181-7511	•• WASHER, SEAL	1	SN: 40001-56494
15	600-181-7710	PLATE, CAUTION	1	SN: 40001-56494
16	600-181-7720	PLATE, CAUTION	1	SN: 40001-56494
	600-181-9140	PULLEY CLEANER ASSEMBLY	1	SN: 40001-56494
17	6110-83-9110	• BODY	1	SN: 40001-56494
18	600-181-9150	• SLEEVE	1	SN: 40001-56494
19	6110-83-9130	• COVER	1	SN: 40001-56494
20	113-01-21130	HOSE	1	SN: 40001-56494
21	07281-00909	CLAMP	4	SN: 40001-56494
21	07281-00909	CLAMP	2	SN: 40001-@

Catalog signs: □ part above may be used instead

Reference: 1111

エアークリーナ コネクション および エアークリーナ 適用 車種
FIG. 1111A AIR INTAKE CONNECTION AND AIR CLEANER (ENGINE NO. 56495 - 63872)

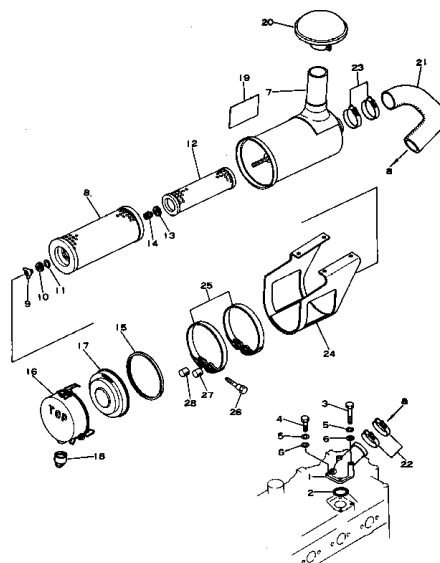

Reference: 1111A

030060 AIR INTAKE CONNECTION AND AIR CLEANER (#56495-63872)


Item	Part No.	Part Name	Qty	Options
1	6130-12-4211	CONNECTOR	1	SN: 40001-63872
2	07000-62070	O RING (K1)	1	SN: .-@
2	07000-02070	□ O RING (K1)	1	SN: 56495-.
3	01010-31080	BOLT	2	SN: 40001-63872
4	01010-31025	BOLT	2	SN: 40001-63872
5	01602-01030	WASHER, SPRING	4	SN: 40001-@
6	01640-21016	WASHER	4	SN: 40001-@
7	6130-82-7500	AIR CLEANER ASSEMBLY	1	SN: 56495-@
	6130-82-7510	• BODY	1	SN: 56495-@
	600-181-9500	• ELEMENT ASSEMBLY	1	SN: 56495-@
	600-181-9200	•• ELEMENT ASSEMBLY, OUTER	1	SN: 56495-@
8		••• ☆ ELEMENT, OUTER	1	SN: 56495-@
9	600-181-8640	••• NAT	1	SN: 56495-@
10	600-181-7511	••• WASHER, SEAL	1	SN: 56495-@
11	04064-01510	••• RING, SNAP	1	SN: 56495-@
12		•• ☆ ELEMENT, INNER	1	SN: 56495-@
13	600-181-7511	• WASHER, SEAL	1	SN: 56495-@
14	600-181-9631	• NAT	1	SN: 56495-@
15	600-181-9430	• GASKET	1	SN: 56495-@
16	600-181-9541	• PAN, DUST	1	SN: 56495-@
17	600-181-9551	• DIVIDER	1	SN: 56495-@
18	600-181-7680	• VALVE	1	SN: 56495-@
19	09637-00160	PLATE, INSTRUCTION	1	SN: 56495-@
19	09637-70160	PLATE, INSTRUCTION, (SPANISH)	1	SN: 56495-@
19	09637-81160	PLATE, INSTRUCTION, (GERMAN)	1	SN: 56495-@
19	09637-30260	PLATE, INSTRUCTION, (FRENCH)	1	SN: 56495-@
19	09637-50260	PLATE, INSTRUCTION, (PORTUGUESE)	1	SN: 56495-@
19	09637-90261	PLATE, INSTRUCTION, (CHINESE)	1	SN: 56495-@
20	600-181-9171	CAP	1	SN: 56495-@
21	6130-12-4410	HOSE	1	SN: 56495-63872
22	07281-00909	CLAMP	2	SN: 40001-@
23	07281-01029	CLAMP	2	SN: 56495-@
24	6130-12-4432	BRACKET	1	SN: 56495-@
25	6130-12-4490	BAND ASSEMBLY	2	SN: .-@

Item	Part No.	Part Name	Qty	Options
25	6131-11-4510	☐ BAND	2	SN: 56495-.
26	6110-23-6520	BOLT	2	SN: 56495-@
27	6110-21-6530	PIN	2	SN: 56495-@
28	6110-21-6540	PIN, WITH THREAD	2	SN: 56495-@

Catalog signs: ☐ part above may be used instead ☆ not supplied separately: assembly only

Reference: 1111A

エア・インテーク コネクション および エアークリーナ 適用 車 種
FIG. 1111B AIR INTAKE CONNECTION AND AIR CLEANER (ENGINE NO. 63873 -)

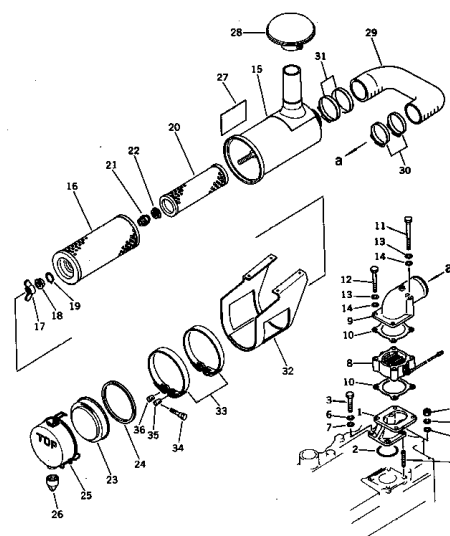

Reference: 1111B

030070 AIR INTAKE CONNECTION AND AIR CLEANER (#63873-)


Item	Part No.	Part Name	Qty	Options
1	6131-12-4380	CONNECTOR	1	SN: 63873-UP
2	07000-62070	O RING (K1)	1	SN: .-UP
3	01010-31025	BOLT	2	SN: 63873-UP
4	01224-31025	SCREW	2	SN: 63873-UP
5	01580-01008	NAT	2	SN: 63873-UP
6	01602-01030	WASHER, SPRING	4	SN: 56495-UP
7	01640-21016	WASHER	4	SN: 56495-UP
8	600-815-2341	HEATER, RIBBON	1	SN: 63873-UP
9	6130-12-4230	CONNECTOR	1	SN: 63873-UP
10	6136-11-4820	GASKET (K1)	2	SN: 63873-UP
11	01011-31030	BOLT	2	SN: 63873-UP
12	01010-31070	BOLT	2	SN: 63873-UP
13	01602-01030	WASHER, SPRING	4	SN: 40001-UP
14	01640-21016	WASHER	4	SN: 40001-UP
	6130-82-7500	AIR CLEANER ASSEMBLY	1	SN: 56495-UP
15	6130-82-7510	• BODY	1	SN: 56495-UP
	600-181-9500	• ELEMENT ASSEMBLY	1	SN: 56495-UP
	600-181-9200	•• ELEMENT ASSEMBLY, OUTER	1	SN: 56495-UP
16		••• ☆ ELEMENT, OUTER	1	SN: 56495-UP
17	600-181-8640	••• NAT	1	SN: 56495-UP
18	600-181-7511	••• WASHER, SEAL	1	SN: 56495-UP
19	04064-01510	••• RING, SNAP	1	SN: 56495-UP
20		•• ☆ ELEMENT, INNER	1	SN: 56495-UP
21	600-181-9631	• NAT	1	SN: 56495-UP
22	600-181-7511	• WASHER, SEAL	1	SN: 56495-UP
23	600-181-9551	• DIVIDER	1	SN: 56495-UP
24	600-181-9430	• GASKET	1	SN: 56495-UP
25	600-181-9541	• PAN, DUST	1	SN: 56495-UP
26	600-181-7680	• VALVE	1	SN: 56495-UP
27	09637-00160	PLATE, INSTRUCTION, (JAPANESE-ENGLISH)	1	SN: 56495-UP
27	09637-70160	PLATE, INSTRUCTION, (SPANISH)	1	SN: 56495-UP
27	09637-81160	PLATE, INSTRUCTION, (GERMAN)	1	SN: 56495-UP
27	09637-30260	PLATE, INSTRUCTION, (FRENCH)	1	SN: 56495-UP
27	09637-50260	PLATE, INSTRUCTION, (PORTUGUESE)	1	SN: 56495-UP

Item	Part No.	Part Name	Qty	Options
27	09637-90261	PLATE, INSTRUCTION, (CHINESE)	1	SN: 56495-UP
28	600-181-9171	CAP	1	SN: 56495-UP
29	6130-12-4440	HOSE	1	SN: 68606-UP
30	07281-00909	CLAMP	2	SN: 40001-UP
31	07281-01029	CLAMP	2	SN: 56495-UP
32	6130-12-4432	BRACKET	1	SN: 56495-UP
33	6130-12-4490	BAND ASSEMBLY	2	SN: .-UP
34	6110-23-6520	BOLT	2	SN: 56495-UP
35	6110-21-6530	PIN	2	SN: 56495-UP
36	6110-21-6540	PIN, WITH THREAD	2	SN: 56495-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 1111B

エキゾーストマニホールドおよびマフラー
FIG. 1121 EXHAUST MANIFOLD AND MUFFLER

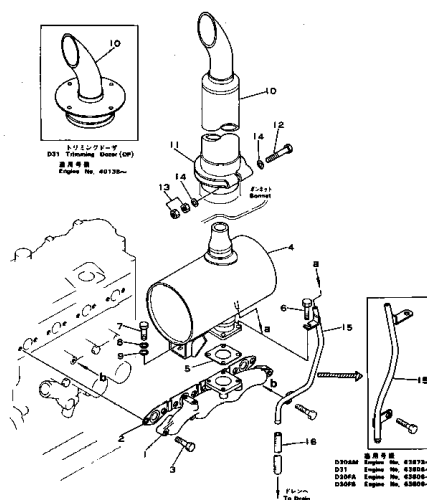

Reference: 1121

030080 EXHAUST MANIFOLD AND MUFFLER

Item	Part No.	Part Name	Qty	Options
1	6130-11-5110	MANIFOLD, EXHAUST	1	SN: 40001-UP
2	6132-11-5810	GASKET (K1)	1	SN: 40718-UP
2	6131-12-5810	☐ GASKET	1	SN: 40001-40717
3	01010-61040	BOLT	8	SN: 40001-UP
4	6130-12-5540	MUFFLER	1	SN: 63806-UP
4	6130-12-5510	MUFFLER	1	SN: 40001-63805
5	6130-12-5580	GASKET (K1)	1	SN: 40001-UP
6	01010-61025	BOLT	4	SN: 40001-UP
7	01010-61020	BOLT	2	SN: 40001-UP
8	01602-01030	WASHER, SPRING	2	SN: 40001-UP
9	01640-21016	WASHER	2	SN: 40001-UP
10	6114-11-5411	PIPE, EXHAUST	1	SN: 40001-UP
11	6114-11-5910	CLAMP	1	SN: 40001-UP
12	6114-11-5920	BOLT	1	SN: 40001-UP
13	01582-01411	NAT	2	SN: 40001-UP
14	01640-21426	WASHER	2	SN: 40001-UP
15	6130-12-5570	PIPE	1	SN: 63806-UP
15	6130-12-5550	PIPE	1	SN: 40001-63805
16	07260-20945	HOSE	1	SN: 42412-UP
16	07260-20963	☐ HOSE	1	SN: 40001-42411

Catalog signs: ☐ part above may be used instead

Reference: 1121

Get the complete PDF catalogue

Komatsu 4D105-3A (JPN) S/N 40001-UP (Japanese)

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.