


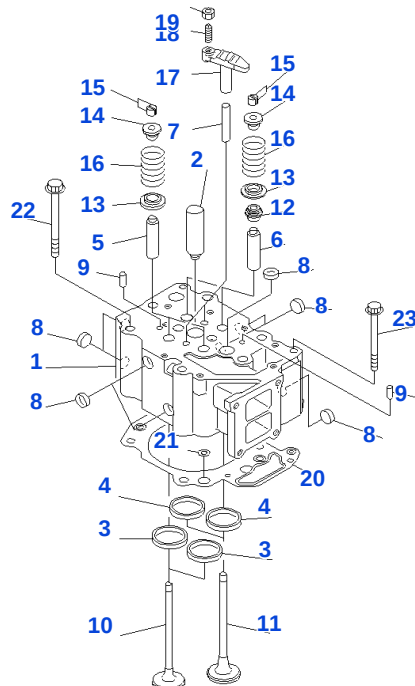

PD37433

Reference: 0101


030010 CYLINDER HEAD(#10001-26915)

Item	Part No.	Part Name	Qty	Options
	6150-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-@
	6150-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-@
1		• ☆ HEAD,CYLINDER	1	SN: 10001-@
2	6136-11-1130	• SLEEVE	1	SN: 10001-@
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-@
	6150-19-1331	• INSERT□ 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-18-1331	• INSERT□ 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-17-1331	• INSERT□ 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-16-1331	• INSERT□ 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-@
	6150-19-1320	• INSERT□ 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-18-1320	• INSERT□ 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-17-1320	• INSERT□ 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-16-1320	• INSERT□ 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-@
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-@
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-@
7	6150-11-1140	• GUIDE	2	SN: 10001-@
8	6162-13-1150	• PLUG,EXPANSION	8	SN: 10001-@
9	04020-00820	• PIN,DOWEL	2	SN: 10001-@
10	6150-41-4120	• VALVE,INTAKE	2	SN: 20075-@
	6150-41-4111	• □ VALVE,INTAKE	2	SN: 10001-20074
11	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-@
12	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-@
13	6150-41-4430	• SEAT,LOWER	4	SN: 10001-@
14	6150-41-4510	• SEAT,UPPER	4	SN: 10001-@
15	6136-42-4520	• COTTER	8	SN: 10001-@
16	6150-41-4411	• SPRING,VALVE	4	SN: 10001-@
	6150-41-5601	CROSSHEAD ASS'Y	12	SN: 10296-@
	6150-41-5600	□ CROSSHEAD ASS'Y	12	SN: 10001-10295
17	6150-41-5611	• CROSSHEAD	1	SN: 10296-@
	6150-41-5610	• CROSSHEAD	1	SN: 10001-10295
18	6150-41-5620	• SCREW	1	SN: 10296-@
	6610-41-5620	• SCREW	1	SN: 10001-10295
19	6150-41-5630	• NUT	1	SN: 10296-@

Item	Part No.	Part Name	Qty	Options
20	6710-41-5630	• NUT	1	SN: 10001-10295
	6150-11-1812	GASKET (K1)	6	SN: 23500-26915
	6150-11-1811	☐ GASKET (K1)	6	SN: 23499-23499
	6150-11-1810	☐ GASKET (K1)	6	SN: 10001-23498
21	6610-11-1821	• GROMMET	4	SN: 10001-23498
22	6150-11-1610	BOLT	36	SN: 10001-@
23	6150-81-9160	BOLT	6	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 0101

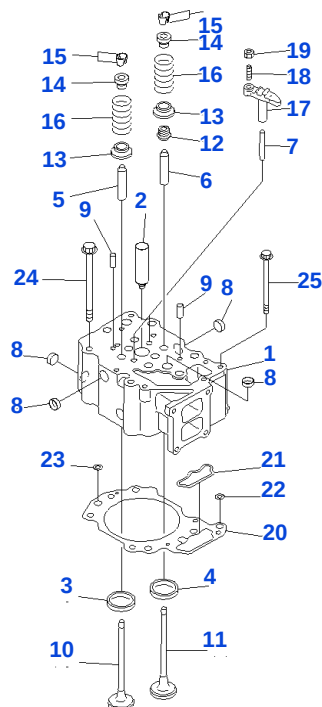

P034918

Reference: 0101A


030020 CYLINDER HEAD(#26916-)

Item	Part No.	Part Name	Qty	Options
	6150-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-UP
	6150-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 10001-UP
2	6136-11-1130	• SLEEVE	1	SN: 10001-UP
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-UP
	6150-19-1331	• INSERT□ 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-18-1331	• INSERT□ 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-17-1331	• INSERT□ 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-16-1331	• INSERT□ 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-UP
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-UP
	6150-19-1320	• INSERT□ 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-18-1320	• INSERT□ 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-17-1320	• INSERT□ 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-16-1320	• INSERT□ 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-UP
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-UP
7	6150-11-1140	• GUIDE	2	SN: 10001-UP
8	6162-13-1150	• PLUG,EXPANSION	8	SN: 10001-UP
9	04020-00820	• PIN,DOWEL	2	SN: 10001-UP
10	6150-41-4120	• VALVE,INTAKE	2	SN: 20075-UP
11	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-UP
12	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-UP
13	6150-41-4430	• SEAT,LOWER	4	SN: 10001-UP
14	6150-41-4510	• SEAT,UPPER	4	SN: 10001-UP
15	6136-42-4520	• COTTER	8	SN: 10001-UP
16	6150-41-4411	• SPRING,VALVE	4	SN: 10001-UP
	6150-41-5601	CROSSHEAD ASS'Y	12	SN: 10296-UP
17	6150-41-5611	• CROSSHEAD	1	SN: 10296-UP
18	6150-41-5620	• SCREW	1	SN: 10296-UP
19	6150-41-5630	• NUT	1	SN: 10296-UP
20	6150-17-1812	GASKET (K1)	6	SN: 26916-UP
21	6150-11-1920	• GROMMET,OIL	1	SN: 26916-UP
22	6150-11-1930	• GROMMET,OIL	1	SN: 26916-UP
23	6150-11-1940	• GROMMET,WATER	4	SN: 26916-UP

Item	Part No.	Part Name	Qty	Options
24	6150-11-1610	BOLT	36	SN: 10001-UP
25	6150-81-9160	BOLT	6	SN: 10001-UP

Catalog signs: ☆ not supplied separately; assembly only

Reference: 0101A

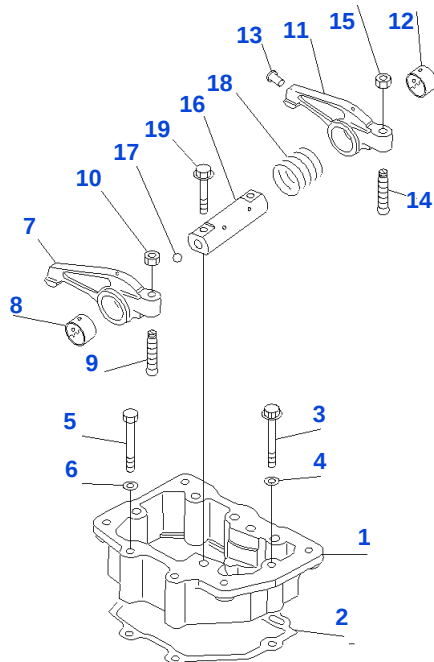

PD31208


Reference: 0111

030030 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING,ROCKER ARM	6	SN: 10001-UP
2	6150-11-7810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9140	BOLT	40	SN: 10001-UP
4	01643-31032	WASHER	40	SN: 30748-UP
	01640-21016	□ WASHER	40	SN: 10001-30747
5	01011-51000	BOLT	2	SN: 10001-UP
6	01643-31032	WASHER	2	SN: 30748-UP
	01640-21016	□ WASHER	2	SN: 10001-30747
	6150-41-5400	ARM ASS'Y	6	SN: 10001-UP
7		• ☆ ARM,INTAKE	1	SN: 10001-UP
8	6150-41-5420	• BUSHING	1	SN: 10001-UP
9	6150-41-5540	SCREW	6	SN: 10001-UP
10	01580-01008	NUT	6	SN: 10001-UP
	6150-41-5500	ARM ASS'Y	6	SN: 10001-UP
11		• ☆ ARM,EXHAUST	1	SN: 10001-UP
12	6150-41-5420	• BUSHING	1	SN: 10001-UP
13	6162-43-5340	• RIVET	1	SN: 10001-UP
14	6150-41-5540	SCREW	6	SN: 10001-UP
15	01582-01008	NUT	6	SN: 10001-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 10001-UP
16		• ☆ SHAFT	1	SN: 10001-UP
17	6150-81-8420	• BALL	1	SN: 10001-UP
18	6150-41-5320	SPRING	6	SN: 10001-UP
19	6150-81-9370	BOLT	12	SN: 10001-UP

Catalog signs: □ part above may be used instead ☆ not supplied separately: assembly only

Reference: 0111

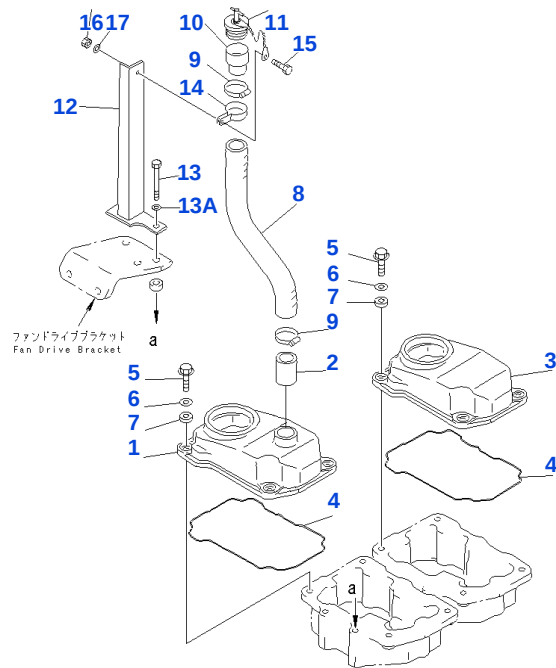

PE30883


Reference: 0115

030040 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8141	HEAD COVER ASS'Y,NO.1	1	SN: 11479-UP
	6150-11-8140	☐ HEAD COVER ASS'Y,NO.1	1	SN: 10001-11478
	6150-11-8151	• COVER,HEAD	1	SN: 11479-UP
	6150-11-8150	• ☐ COVER,HEAD	1	SN: 10001-11478
2	6151-11-8210	• TUBE	1	SN: 10001-UP
3	6150-11-8111	COVER,HEAD□ NO.2□3□4□5□6	5	SN: 13142-UP
	6150-11-8110	☐ COVER,HEAD□ NO.2□3□4□5□6	5	SN: 10001-13141
4	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
5	6150-81-9370	BOLT	24	SN: 21370-UP
	6150-81-9170	☐ BOLT	24	SN: 11479-21369
	6150-81-9230	☐ BOLT	24	SN: 10001-11478
6	01640-21016	WASHER	24	SN: 10001-UP
7	6150-11-8820	RUBBER (K1)	24	SN: 23499-UP
	6150-11-8820	RUBBER	24	SN: 10001-23498
8	6150-11-8220	HOSE	2	SN: 10885-UP
	6151-11-8220	HOSE	1	SN: 10001-10884
9	07281-00549	CLAMP	2	SN: 10001-UP
10	6150-21-6520	TUBE	1	SN: 10001-UP
11	07025-00050	CAP,FILLER	1	SN: 10001-UP
12	6150-11-8231	BRACKET	1	SN: 10001-UP
13	01011-51000	BOLT	2	SN: 10001-UP
13A	01643-31032	WASHER	2	SN: 30748-UP
	01640-21016	☐ WASHER	2	SN: 10001-30747
14	6151-11-8240	CLAMP	1	SN: 10001-UP
15	01010-51025	BOLT	1	SN: 10001-UP
16	01580-11008	NUT	1	SN: 10001-UP
17	01640-21016	WASHER	1	SN: 10001-UP

Catalog signs: ☐ part above may be used instead

Reference: 0115

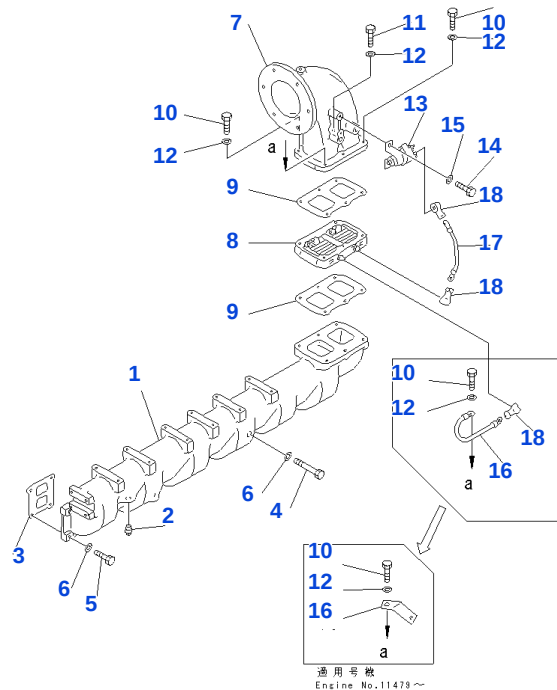

PE36851


Reference: 0131

030050 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
	6150-11-4910	INTAKE MANIFOLD A.	1	SN: 10001-UP
1		• ☆ MANIFOLD,AIR INTAKE	1	SN: 10001-UP
2	07042-00415	• PLUG	1	SN: 10001-UP
3	6150-11-4810	GASKET (K1)	6	SN: 10001-UP
4	01011-51010	BOLT	8	SN: 10001-UP
5	01010-51030	BOLT	15	SN: 10001-UP
6	01640-21016	WASHER	23	SN: 10001-UP
7	6150-11-4210	CONNECTOR,AIR	1	SN: 10001-UP
8	600-815-3810	HEATER,RIBBON	1	SN: 10001-UP
9	6150-11-4820	GASKET (K1)	2	SN: 10001-UP
10	01010-51055	BOLT	5	SN: 10001-UP
11	01010-51060	BOLT	1	SN: 11755-UP
	01010-51055	BOLT	1	SN: 10001-11754
12	01640-21016	WASHER	6	SN: 10001-UP
13	600-815-2170	SWITCH,HEATER	1	SN: 10001-UP
14	01010-50616	BOLT	2	SN: 10001-UP
15	01640-20610	WASHER	2	SN: 10001-UP
16	6150-81-4330	PLATE	1	SN: 11479-UP
	6678-81-4340	□ WIRE□ 170MM	1	SN: 10001-11478
17	6151-81-4470	WIRE□ 200MM	1	SN: 10001-UP
18	08038-00519	CAP	2	SN: 11479-UP
	08038-00519	CAP	3	SN: 10001-11478

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 0131

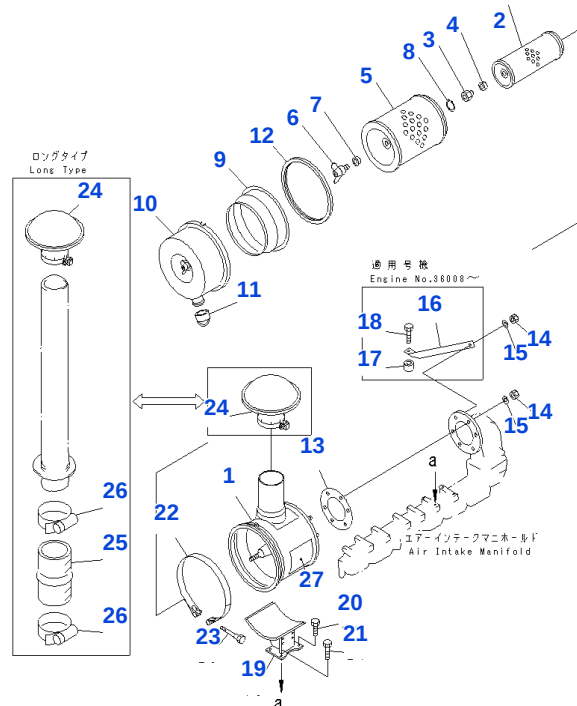


PJ38853

Reference: 0141

030060 AIR CLEANER AND MOUNTING

Item	Part No.	Part Name	Qty	Options
	6114-81-7202	AIR CLEANER ASS'Y	1	SN: 10001-UP
1	6114-81-7211	• BODY	1	SN: 10001-UP
	6114-80-7101	• ELEMENT ASS'Y	1	SN: 10001-UP
2		• ☆ ELEMENT, INNER	1	SN: 10001-UP
3	600-181-9631	• • NUT	1	SN: 10001-UP
4	600-181-7511	• • WASHER, SEAL	1	SN: 10001-UP
	600-181-2500	• • ELEMENT ASS'Y, OUTER	1	SN: 10001-UP
5		• • • ☆ ELEMENT, OUTER	1	SN: 10001-UP
6	600-181-2471	• • • NUT, WING	1	SN: 10001-UP
7	600-181-7511	• • • WASHER, SEAL	1	SN: 10001-UP
8	04064-01510	• • • RING, SNAP	1	SN: 10001-UP
9	600-181-2510	• GUIDE	1	SN: 10001-UP
10	600-181-2520	• DUST PAN ASS'Y	1	SN: 10001-UP
11	600-181-2480	• VALVE	1	SN: 10001-UP
12	600-181-2490	• GASKET	1	SN: 10001-UP
13	6136-11-4840	GASKET (K1)	1	SN: 11126-UP
	6631-11-4381	□ GASKET	1	SN: 10001-11125
14	01582-11008	NUT	6	SN: 10001-UP
15	01640-21016	WASHER	6	SN: 10001-UP
16	6150-11-4541	PLATE	1	SN: 36008-UP
17	6631-11-5630	SPACER	1	SN: 36008-UP
18	01010-51040	BOLT	1	SN: 36008-UP
19	6150-11-4510	BRACKET	1	SN: 10001-UP
20	01010-51025	BOLT	2	SN: 10001-UP
21	01010-51030	BOLT	2	SN: 10001-UP
22	6691-11-4610	BAND ASS'Y	1	SN: 10001-UP
23	6643-11-4641	BOLT	1	SN: 10001-UP
24	600-181-2750	CAP	1	SN: 10001-UP
	600-181-2440	CAP, (LONG TYPE)	1	SN: 10001-UP
25	600-181-0650	HOSE, (LONG TYPE)	1	SN: 10001-UP
26	07281-01469	CLAMP, (LONG TYPE)	2	SN: 10001-UP
27	09637-00161	PLATE [□] INSTRUCTION, (JAPANESE-ENGLISH)	1	SN: 10001-UP
	09637-02161	PLATE [□] INSTRUCTION, (ARABIC-ENGLISH)	1	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

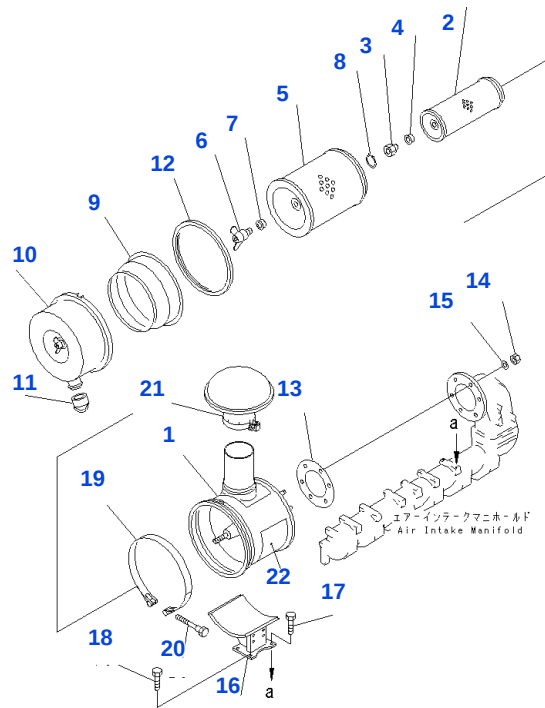

PJ36955

Reference: 0143

030070 AIR CLEANER AND MOUNTING (FOR TRIMMING DOZER)

Item	Part No.	Part Name	Qty	Options
1	6114-81-7401	AIR CLEANER ASS'Y	1	SN: 10001-UP
	6114-81-7211	• BODY	1	SN: 10001-UP
	600-181-2680	• ELEMENT ASS'Y	1	SN: 10001-UP
2		• ☆ ELEMENT, INNER	1	SN: 10001-UP
3	600-181-9631	• NUT	1	SN: 10001-UP
4	600-181-7511	• WASHER, SEAL	1	SN: 10001-UP
	600-181-2500	• ELEMENT ASS'Y, OUTER	1	SN: 10001-UP
5		• ☆ ELEMENT, OUTER	1	SN: 10001-UP
6	600-181-2471	• NUT, WING	1	SN: 10001-UP
7	600-181-7511	• WASHER, SEAL	1	SN: 10001-UP
8	04064-01510	• RING, SNAP	1	SN: 10001-UP
9	600-181-2510	• GUIDE	1	SN: 10001-UP
10	600-181-2520	• DUST PAN ASS'Y	1	SN: 10001-UP
11	600-181-2480	• VALVE	1	SN: 10001-UP
12	600-181-2490	• GASKET	1	SN: 10001-UP
13	6136-11-4840	GASKET (K1)	1	SN: 11126-UP
	6631-11-4381	□ GASKET	1	SN: 10001-11125
14	01582-11008	NUT	6	SN: 10001-UP
15	01640-21016	WASHER	6	SN: 10001-UP
16	6150-11-4510	BRACKET	1	SN: 10001-UP
17	01010-51025	BOLT	2	SN: 10001-UP
18	01010-51030	BOLT	2	SN: 10001-UP
19	6691-11-4610	BAND ASS'Y	1	SN: 10001-UP
20	6643-11-4641	BOLT	1	SN: 10001-UP
21	600-181-2750	CAP	1	SN: 10001-UP
22	09637-00161	PLATE▯ INSTRUCTION, (JAPANESE-ENGLISH)	1	SN: 10001-UP
	09637-70161	PLATE▯ INSTRUCTION, (SPANISH-ENGLISH)	1	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 0143

Get the complete PDF catalogue

Komatsu 6D125-1B-PL S/N 10001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.