


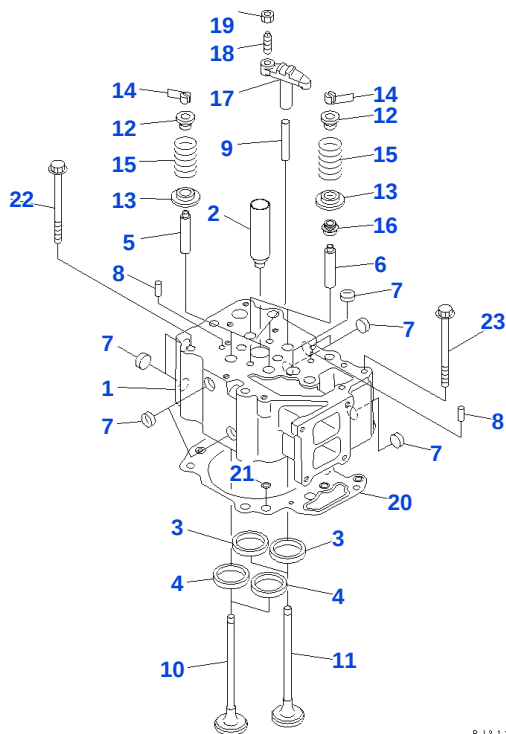

Reference: 0101


030010 CYLINDER HEAD(#10001-26915)

Item	Part No.	Part Name	Qty	Options
	6150-11-1100	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 10001-@
1		• ☆ HEAD,CYLINDER	1	SN: 10001-@
2	6136-11-1130	• SLEEVE	1	SN: 10001-@
3	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-@
3	6150-19-1320	• INSERT, 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-@
3	6150-18-1320	• INSERT, 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-@
3	6150-17-1320	• INSERT, 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-@
3	6150-16-1320	• INSERT, 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-@
4	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-@
4	6150-19-1331	• INSERT, 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-18-1331	• INSERT, 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-17-1331	• INSERT, 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-16-1331	• INSERT, 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-@
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-@
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-@
7	6162-13-1150	• PLUG	8	SN: 10001-@
8	04020-00820	• PIN,DOWEL	2	SN: 10001-@
9	6150-11-1140	• GUIDE	2	SN: 10001-@
10	6150-41-4120	VALVE,INTAKE	12	SN: 20075-@
10	6150-41-4111	□ VALVE,INTAKE	12	SN: 10001-20074
11	6150-41-4210	VALVE,EXHAUST	12	SN: 10001-@
12	6150-41-4510	SEAT,UPPER	24	SN: 10001-@
13	6150-41-4430	SEAT,LOWER	24	SN: 10001-@
14	6136-42-4520	COTTER	48	SN: 10001-@
15	6150-41-4411	SPRING,VALVE	24	SN: 10001-@
16	6140-41-4540	SEAL,EXHAUST VALVE (K1)	12	SN: 10001-@
17	6150-41-5611	CROSSHEAD	12	SN: 10296-@
17	6150-41-5610	CROSSHEAD	12	SN: 10001-10295
18	6150-41-5620	SCREW	12	SN: 10296-@
18	6610-41-5620	SCREW	12	SN: 10001-10295
19	6150-41-5630	NUT	12	SN: 10296-@
19	6710-41-5630	NUT	12	SN: 10001-10295
20	6150-11-1812	GASKET,HEAD (K1)	6	SN: 23500-26915
20	6150-11-1811	□ GASKET,HEAD (K1)	6	SN: 23499-23499

Item	Part No.	Part Name	Qty	Options
20	6150-11-1810	GASKET,HEAD (K1)	6	SN: 10001-23948
21	6610-11-1821	• GROMMET	4	SN: 23949-26915
21	6150-11-1820	• GROMMET	4	SN: 10001-23948
22	6150-11-1610	BOLT	36	SN: 10001-@
23	6150-81-9160	BOLT	6	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 0101

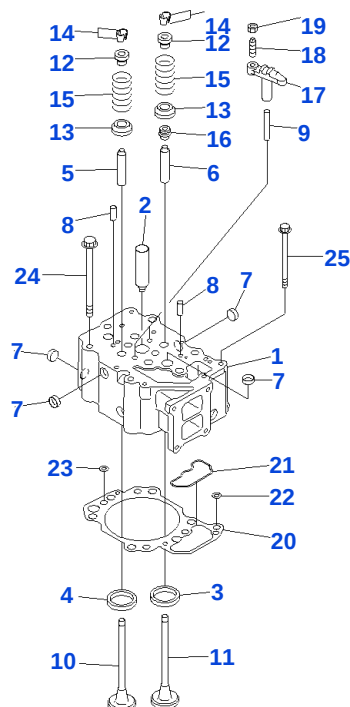

PJ38847


Reference: 0101A

030020 CYLINDER HEAD(#26916-)

Item	Part No.	Part Name	Qty	Options
	6150-11-1100	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 10001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 10001-UP
2	6136-11-1130	• SLEEVE	1	SN: 10001-UP
3	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-UP
3	6150-19-1320	• INSERT, 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
3	6150-18-1320	• INSERT, 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
3	6150-17-1320	• INSERT, 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
3	6150-16-1320	• INSERT, 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-UP
4	6150-19-1331	• INSERT, 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-UP
4	6150-18-1331	• INSERT, 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-UP
4	6150-17-1331	• INSERT, 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-UP
4	6150-16-1331	• INSERT, 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-UP
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-UP
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-UP
7	6162-13-1150	• PLUG,EXPANSION	8	SN: 10001-UP
8	04020-00820	• PIN,DOWEL	2	SN: 10001-UP
9	6150-11-1140	• GUIDE	2	SN: 10001-UP
10	6150-41-4120	VALVE,INTAKE	12	SN: 20075-UP
11	6150-41-4210	VALVE,EXHAUST	12	SN: 10001-UP
12	6150-41-4510	SEAT,UPPER	24	SN: 10001-UP
13	6150-41-4430	SEAT,LOWER	24	SN: 10001-UP
14	6136-42-4520	COTTER,VALVE	48	SN: 10001-UP
15	6150-41-4411	SPRING,VALVE	24	SN: 10001-UP
16	6140-41-4540	SEAL,EXHAUST VALVE (K1)	12	SN: 10001-UP
17	6150-41-5611	CROSSHEAD	12	SN: 10296-UP
18	6150-41-5620	SCREW	12	SN: 10296-UP
19	6150-41-5630	NUT	12	SN: 10296-UP
20	6150-17-1812	GASKET (K1)	6	SN: 26916-UP
21	6150-11-1920	• GROMMET,OIL	1	SN: 26916-UP
22	6150-11-1930	• GROMMET,OIL	1	SN: 26916-UP
23	6150-11-1940	• GROMMET,WATER	4	SN: 26916-UP
24	6150-11-1610	BOLT	36	SN: 10001-UP
25	6150-81-9160	BOLT	6	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0101A

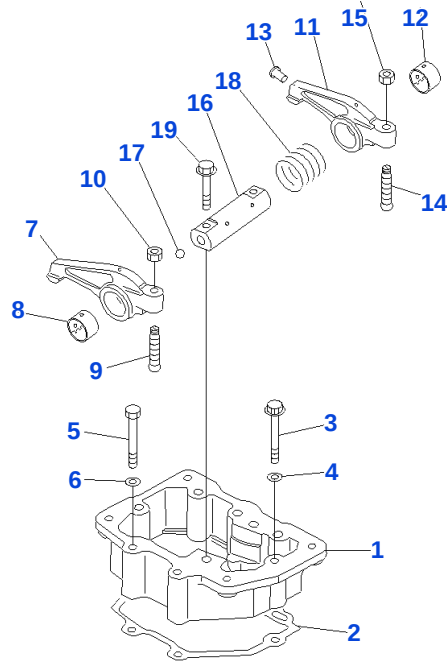

PD31208


Reference: 0111

030030 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING,ROCKER ARM	6	SN: 10001-UP
2	6150-11-7810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9140	BOLT	40	SN: 10001-UP
4	01643-31032	WASHER	40	SN: 30748-UP
4	01640-21016	□ WASHER	40	SN: 10001-30747
5	01010-51095	BOLT,(SEE FIG.0511)	2	SN: 10001-UP
6	01643-31032	WASHER,(SEE FIG.0511)	2	SN: 30748-UP
6	01640-21016	□ WASHER,(SEE FIG.0511)	2	SN: 10001-30747
	6150-41-5400	ARM ASS'Y,INTAKE	6	SN: 10001-UP
7		• ☆ ARM,ROCKER	1	SN: 10001-UP
8	6150-41-5420	• BUSHING	1	SN: 10001-UP
9	6150-41-5540	SCREW	6	SN: 10001-UP
10	01582-01008	NUT	6	SN: 10001-UP
	6150-41-5500	ARM ASS'Y,EXHAUST	6	SN: 10001-UP
11		• ☆ ARM,ROCKER	1	SN: 10001-UP
12	6150-41-5420	• BUSHING	1	SN: 10001-UP
13	6162-43-5340	• RIVET	1	SN: 10001-UP
14	6150-41-5540	SCREW	6	SN: 10001-UP
15	01582-01008	NUT	6	SN: 10001-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 10001-UP
16		• ☆ SHAFT	1	SN: 10001-UP
17	6150-81-8420	• BALL	1	SN: 10001-UP
18	6150-41-5320	SPRING	6	SN: 10001-UP
19	6150-81-9370	BOLT	12	SN: 10001-UP

Catalog signs: □ part above may be used instead ☆ not supplied separately: assembly only

Reference: 0111

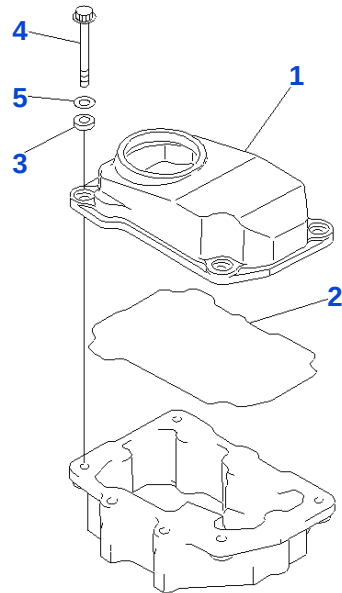

PG30209


Reference: 0115

030040 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8111	COVER,HEAD	6	SN: 11037-UP
1	6150-11-8110	■ COVER,HEAD (6150-11-8111,6150-81-9370(4))	6	SN: 10001-11036
2	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
3	6150-11-8820	RUBBER	24	SN: 10001-UP
4	6150-81-9370	BOLT	24	SN: 21370-UP
4	6150-81-9170	□ BOLT	24	SN: 11126-21369
4	6150-81-9230	BOLT	24	SN: 10001-11125
5	01640-21016	WASHER	24	SN: 10001-UP

Catalog signs: ■ may be used instead of described part □ part above may be used instead

Reference: 0115

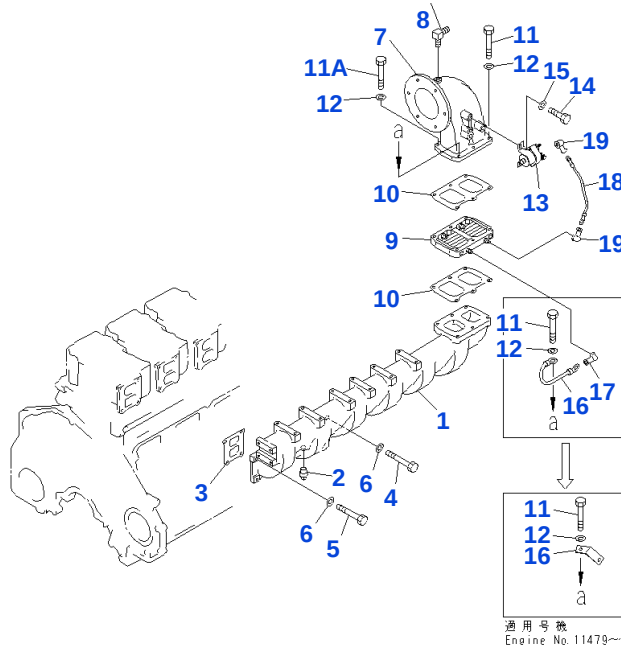

PJ88848


Reference: 0131

030050 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
	6150-11-4910	INTAKE MANIFOLD A.	1	SN: 10001-UP
1		• ☆ MANIFOLD,INTAKE	1	SN: 10001-UP
2	07042-00415	• PLUG	1	SN: 10001-UP
3	6150-11-4810	GASKET (K1)	6	SN: 10001-UP
4	01011-51010	BOLT	8	SN: 10001-UP
5	01010-51030	BOLT	11	SN: 10001-UP
6	01640-21016	WASHER	19	SN: 10001-UP
7	6150-11-4210	CONNECTOR	1	SN: 10001-UP
8	08671-50721	ELBOW	1	SN: 10001-UP
9	600-815-3810	HEATER,RIBBON	1	SN: 10001-UP
10	6150-11-4820	GASKET (K1)	2	SN: 10001-UP
11	01010-51055	BOLT	5	SN: 10001-UP
11A	01010-51060	BOLT	1	SN: 16095-UP
11A	01010-51055	BOLT	1	SN: 10001-16094
12	01641-21016	WASHER	6	SN: 10001-UP
13	600-815-2170	SWITCH	1	SN: 10001-UP
14	01010-50616	BOLT	2	SN: 10001-UP
15	01640-20610	WASHER	2	SN: 10001-UP
16	6150-81-4330	PLATE	1	SN: 11479-UP
16	6678-81-4340	□ WIRE, 170MM	1	SN: 10001-11478
17	08038-00519	CAP	1	SN: 10001-11478
18	6151-81-4420	WIRE, 160MM	1	SN: 10001-UP
19	08038-00519	CAP	2	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 0131

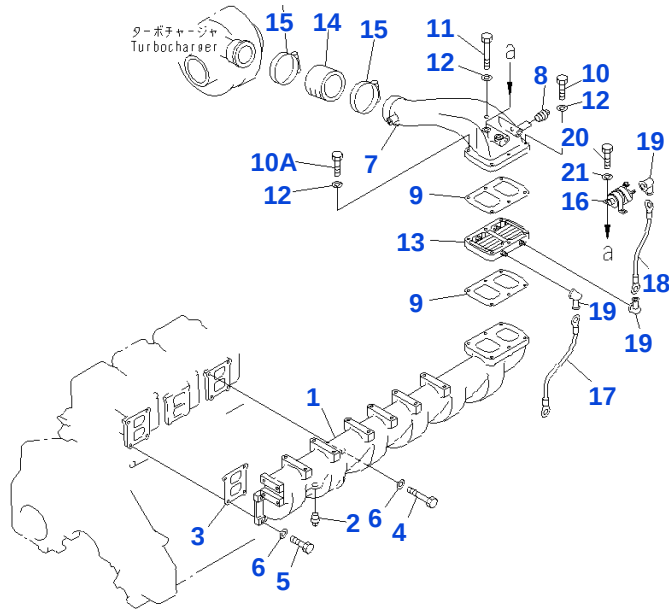

PJ38849


Reference: 0132

030060 AIR INTAKE MANIFOLD AND CONNECTION (WITH TURBOCHARGER)

Item	Part No.	Part Name	Qty	Options
	6150-11-4910	INTAKE MANIFOLD A.	1	SN: 10001-UP
1		• ☆ MANIFOLD,INTAKE	1	SN: 10001-UP
2	07042-00415	• PLUG	1	SN: 10001-UP
3	6150-11-4810	GASKET (K1)	6	SN: 10001-UP
4	01011-51010	BOLT	8	SN: 10001-UP
5	01010-51030	BOLT	11	SN: 10001-UP
6	01640-21016	WASHER	19	SN: 10001-UP
7	6150-11-4340	CONNECTOR	1	SN: 10001-UP
8	07042-00108	PLUG	2	SN: 10001-UP
9	6150-11-4820	GASKET (K1)	2	SN: 10001-UP
10	01010-51055	BOLT	4	SN: 10001-UP
10A	01010-51060	BOLT	1	SN: 16095-UP
10A	01010-51055	BOLT	1	SN: 10001-16094
11	01011-51045	BOLT	1	SN: 10001-UP
12	01640-21016	WASHER	6	SN: 10001-UP
13	600-815-3810	HEATER,RIBBON	1	SN: 10001-UP
14	6151-11-4410	HOSE	1	SN: 10001-UP
15	07281-00909	CLAMP	2	SN: 10001-UP
16	600-815-2170	SWITCH	1	SN: 10001-UP
17	6678-81-4340	WIRE, 170MM	1	SN: 10001-UP
18	6151-81-4410	WIRE, 265MM	1	SN: 10001-UP
19	08038-00519	CAP	3	SN: 10001-UP
20	01010-50610	BOLT	2	SN: 10001-UP
21	01640-20610	WASHER	2	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0132

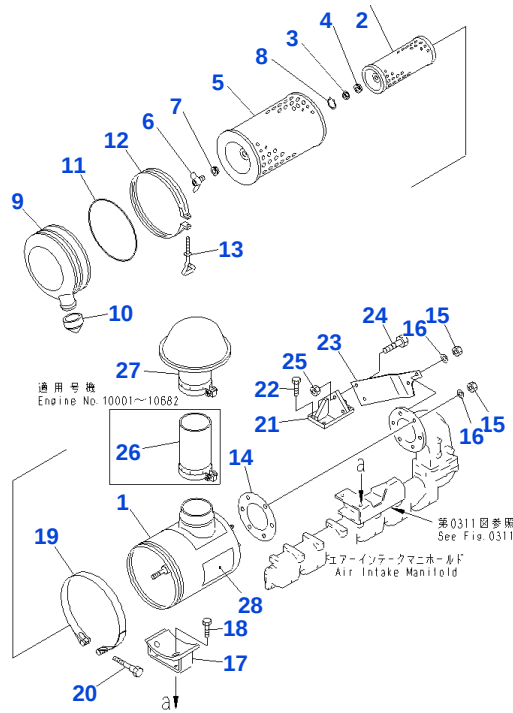

PJ83194

Reference: 0141

030070 AIR CLEANER AND MOUNTING(#10001-14199)

Item	Part No.	Part Name	Qty	Options
	6150-81-7100	AIR CLEANER ASS'Y	1	SN: 10683-@
	6631-81-7603	□ AIR CLEANER ASS'Y	1	SN: 10001-10682
1	6150-81-7110	• BODY	1	SN: 10683-@
1	6631-81-7610	• □ BODY	1	SN: 10001-10682
	6115-81-7602	• ELEMENT ASS'Y	1	SN: 10001-@
2		• • ☆ ELEMENT, INNER	1	SN: 10001-@
3	600-181-7910	• • NUT	1	SN: 10001-@
4	600-181-7511	• • WASHER, SEAL	1	SN: 10001-@
	600-181-2300	• • ELEMENT ASS'Y, OUTER	1	SN: 10001-@
5		• • • ☆ ELEMENT, OUTER	1	SN: 10001-@
6	600-181-2990	• • • NUT, WING	1	SN: 10001-@
7	600-181-4591	• • • WASHER, SEAL	1	SN: 10001-@
8	04064-01510	• • • RING, SNAP	1	SN: 10001-@
9	600-181-2540	• PAN	1	SN: 10683-@
9	600-181-3280	• □ PAN	1	SN: 10001-10682
10	600-181-2550	• VALVE	1	SN: 10001-@
11	6692-81-7130	• O-RING	1	SN: 10001-@
12	600-181-3260	• BAND	1	SN: 10001-@
13	6692-81-7180	• BOLT	1	SN: 10001-@
14	6136-11-4840	GASKET (K1)	1	SN: 11126-@
14	6631-11-4381	□ GASKET (K1)	1	SN: 10001-11125
15	01582-11008	NUT	6	SN: 10001-@
16	01640-21016	WASHER	6	SN: 10001-@
17	6631-11-4522	BRACKET	1	SN: 10001-@
18	01010-51025	BOLT	2	SN: 10001-@
19	6691-11-4610	BAND ASS'Y	1	SN: 10001-@
19	6110-11-4520	• PIN	1	SN: 10001-@
19	6110-11-4530	• PIN, WITH THREAD	1	SN: 10001-@
20	6643-11-4641	BOLT	1	SN: 10001-@
21	6150-11-4540	BRACKET	1	SN: 10001-14199
22	01010-51020	BOLT	4	SN: 10001-14199
23	6150-11-4550	PLATE	1	SN: 10001-14199
24	01010-51025	BOLT	2	SN: 10001-14199
25	01580-11008	NUT	2	SN: 10001-14199

Item	Part No.	Part Name	Qty	Options
26	6150-81-7910	PIPE	1	SN: 10001-10682
27	600-181-2690	CAP	1	SN: 10001-@
28	09637-00161	PLATE, INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 10001-@

Catalog signs: ☐ part above may be used instead ☆ not supplied separately: assembly only

Reference: 0141

Get the complete PDF catalogue

Komatsu 6D125-1E S/N 10001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.