


シリンダヘッド 適用機種
FIG. 101 CYLINDER HEAD (ENGINE NO. 10001-26915)

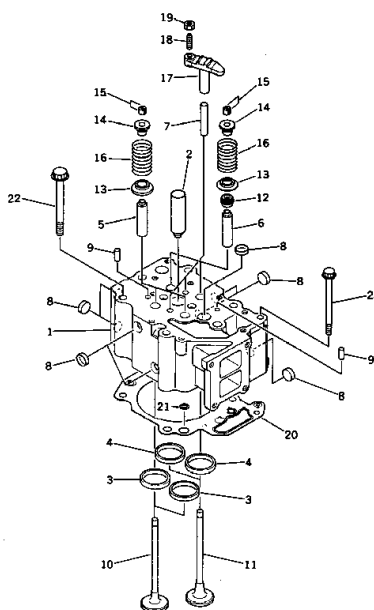

Reference: 101

030010 CYLINDER HEAD(#10001-26915)


Item	Part No.	Part Name	Qty	Options
	6150-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-@
	6150-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-@
1		• ☆ HEAD,CYLINDER	1	SN: 10001-@
2	6136-11-1130	• SLEEVE	1	SN: 10001-@
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-@
	6150-19-1331	• INSERT ? 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-18-1331	• INSERT ? 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-17-1331	• INSERT ? 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-16-1331	• INSERT ? 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-@
	6150-19-1320	• INSERT ? 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-18-1320	• INSERT ? 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-17-1320	• INSERT ? 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-16-1320	• INSERT ? 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-@
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-@
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-@
7	6150-11-1140	• GUIDE	2	SN: 10001-@
8	6162-13-1150	• PLUG,EXPANSION	8	SN: 10001-@
9	04020-00820	• PIN,DOWEL	2	SN: 10001-@
10	6150-41-4120	• VALVE,INTAKE	2	SN: 20075-@
	6150-41-4111	• □ VALVE,INTAKE	2	SN: 10001-20074
11	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-@
12	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-@
13	6150-41-4430	• SEAT,LOWER	4	SN: 10001-@
14	6150-41-4510	• SEAT,UPPER	4	SN: 10001-@
15	6136-42-4520	• COTTER,VALVE	8	SN: 10001-@
16	6150-41-4411	• SPRING,VALVE	4	SN: 10001-@
	6150-41-5601	CROSSHEAD ASS'Y	12	SN: 10296-@
	6150-41-5600	□ CROSSHEAD ASS'Y	12	SN: 10001-10295
17	6150-41-5611	• CROSSHEAD	1	SN: 10296-@
	6150-41-5610	• CROSSHEAD	1	SN: 10001-10295
18	6150-41-5620	• SCREW	1	SN: 10296-@
	6610-41-5620	• SCREW	1	SN: 10001-10295
19	6150-41-5630	• NUT	1	SN: 10296-@

Item	Part No.	Part Name	Qty	Options
20	6710-41-5630	• NUT	1	SN: 10001-10295
	6150-17-1812	GASKET (K1)	6	SN: 10001-@
	6150-11-1812	☐ GASKET (K1)	6	SN: 23500-26915
	6150-11-1811	☐ GASKET (K1)	6	SN: 23499-23499
	6150-11-1810	☐ GASKET (K1)	6	SN: 10001-23498
21	6150-11-1820	• GROMMET	4	SN: 10001-23498
22	6150-11-1610	BOLT	36	SN: 10001-@
23	6150-81-9160	BOLT	6	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 101

FIG. 101A CYLINDER HEAD (ENGINE NO. 26916-)

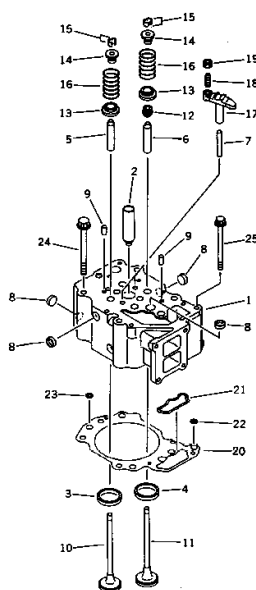

Reference: 101A

030020 CYLINDER HEAD(#26916-)


Item	Part No.	Part Name	Qty	Options
1	6150-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-UP
	6150-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-UP
		• ☆ HEAD,CYLINDER	1	SN: 10001-UP
	6136-11-1130	• SLEEVE	1	SN: 10001-UP
	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-UP
	6150-19-1331	• INSERT ? 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-18-1331	• INSERT ? 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-17-1331	• INSERT ? 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-16-1331	• INSERT ? 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-UP
	6150-19-1320	• INSERT ? 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-18-1320	• INSERT ? 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-17-1320	• INSERT ? 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-16-1320	• INSERT ? 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-UP
	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-UP
	6150-11-1140	• GUIDE	2	SN: 10001-UP
	6162-13-1150	• PLUG,EXPANSION	8	SN: 10001-UP
	04020-00820	• PIN,DOWEL	2	SN: 10001-UP
	6150-41-4120	• VALVE,INTAKE	2	SN: 20075-UP
	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-UP
	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-UP
	6150-41-4430	• SEAT,LOWER	4	SN: 10001-UP
	6150-41-4510	• SEAT,UPPER	4	SN: 10001-UP
	6136-42-4520	• COTTER,VALVE	8	SN: 10001-UP
	6150-41-4411	• SPRING,VALVE	4	SN: 10001-UP
	6150-41-5601	CROSSHEAD ASS'Y	12	SN: 10296-UP
	6150-41-5611	• CROSSHEAD	1	SN: 10296-UP
	6150-41-5620	• SCREW	1	SN: 10296-UP
	6150-41-5630	• NUT	1	SN: 10296-UP
	6150-17-1812	GASKET (K1)	6	SN: 26916-UP
	6150-11-1920	• GROMMET,OIL	1	SN: 26916-UP
	6150-11-1930	• GROMMET,OIL	1	SN: 26916-UP
	6150-11-1940	• GROMMET,WATER	4	SN: 26916-UP

Item	Part No.	Part Name	Qty	Options
24	6150-11-1610	BOLT	36	SN: 10001-UP
25	6150-81-9160	BOLT	6	SN: 10001-UP

Catalog signs: ☆ not supplied separately; assembly only

Reference: 101A

FIG. 103 ROCKER ARM AND HOUSING

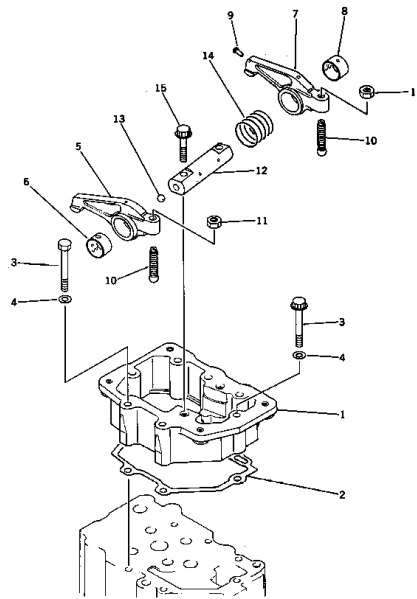

Reference: 103


030030 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING,ROCKER ARM	6	SN: 10001-UP
2	6150-11-7810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9140	BOLT	40	SN: 10001-UP
4	01643-31032	WASHER	40	SN: 30748-UP
	01640-21016	□ WASHER	40	SN: 10001-30747
	6150-41-5400	ARM ASS'Y,INTAKE	6	SN: 10001-UP
5		• ☆ ARM,ROCKER	1	SN: 10001-UP
6	6150-41-5420	• BUSHING	1	SN: 10001-UP
	6150-41-5500	ARM ASS'Y,EXHAUST	6	SN: 10001-UP
7		• ☆ ARM,ROCKER	1	SN: 10001-UP
8	6150-41-5420	• BUSHING	1	SN: 10001-UP
9	6162-43-5340	• RIVET	1	SN: 10001-UP
10	6150-41-5540	SCREW	12	SN: 10001-UP
11	01582-01008	NUT	12	SN: 10001-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 10001-UP
12		• ☆ SHAFT	1	SN: 10001-UP
13	6150-81-8420	• BALL	1	SN: 10001-UP
14	6150-41-5320	SPRING	6	SN: 10001-UP
15	6150-81-9370	BOLT	12	SN: 10001-UP

Catalog signs: □ part above may be used instead ☆ not supplied separately: assembly only

Reference: 103

ロッカーアームハウジングカバー
FIG. 106 ROCKER ARM HOUSING COVER

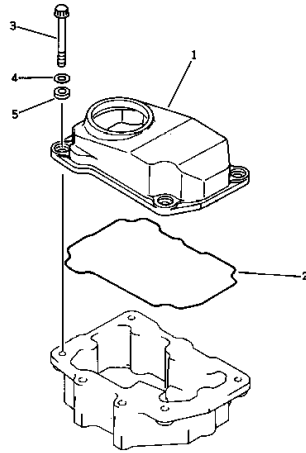

Reference: 106


030040 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8111	COVER,HEAD	6	SN: 11037-UP
	6150-11-8110	☐ COVER,HEAD	6	SN: 10001-11036
2	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9370	BOLT	24	SN: 21370-UP
	6150-81-9170	☐ BOLT	24	SN: 11126-21369
	6150-81-9230	☐ BOLT	24	SN: 10001-11125
4	01640-21016	WASHER	24	SN: 10001-UP
5	6150-11-8820	RUBBER (K1)	24	SN: 10001-UP

Catalog signs: ☐ part above may be used instead

Reference: 106

エキゾースト マニホールド
FIG. 121 EXHAUST MANIFOLD

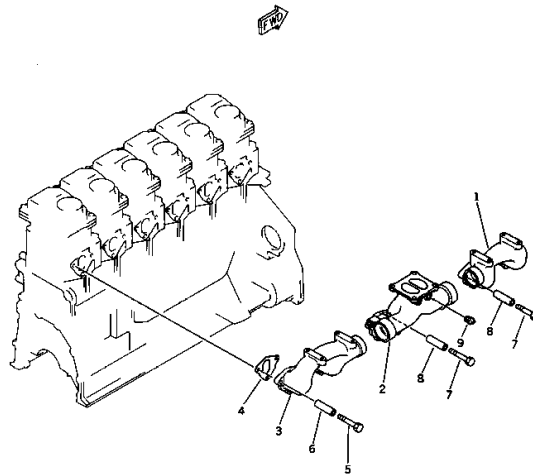


Reference: 121

030060 EXHAUST MANIFOLD

Item	Part No.	Part Name	Qty	Options
1	6151-11-5110	MANIFOLD,EXHAUST ? FRONT	1	SN: 10001-UP
2	6150-11-5120	MANIFOLD,EXHAUST ? CENTER	1	SN: 10001-UP
3	6151-11-5130	MANIFOLD,EXHAUST ? REAR	1	SN: 10001-UP
4	6150-11-5810	GASKET (K1)	6	SN: 10001-UP
5	01011-31000	BOLT	16	SN: 10001-10063
6	6136-11-5120	SPACER	16	SN: 10001-10063
7	01010-31080	BOLT	18	SN: 10064-UP
	01010-31080	BOLT	2	SN: 10001-10063
8	6134-11-5120	SPACER	18	SN: 10064-UP
	6134-11-5120	SPACER	2	SN: 10001-10063
9	07042-00108	PLUG	2	SN: 10001-UP

Reference: 121

FIG. 131 WATER MANIFOLD

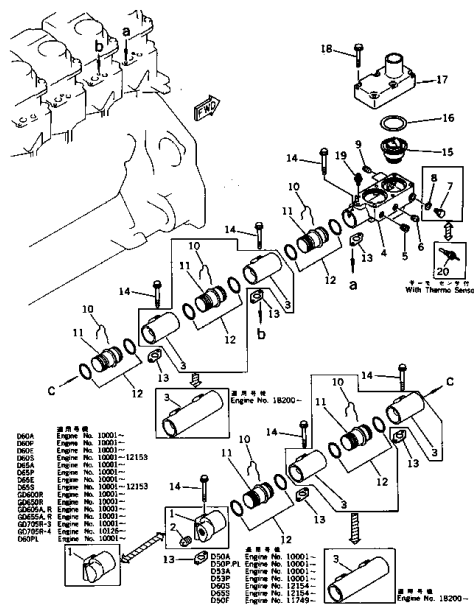


Reference: 131

030070 WATER MANIFOLD

Item	Part No.	Part Name	Qty	Options
1	6150-11-6130	MANIFOLD,WATER	1	SN: 12154-UP
	6150-11-6120	MANIFOLD,WATER	1	SN: 10001-12153
2	07042-00415	PLUG	1	SN: 12154-UP
3	6150-11-6111	MANIFOLD,WATER	2	SN: 18200-UP
	6150-11-6110	MANIFOLD,WATER	4	SN: 10001-18199
4	6150-11-6410	HOUSING	1	SN: 10001-UP
6	07042-00415	PLUG	1	SN: 10001-UP
7	6672-12-6290	PLUG	1	SN: 10001-UP
8	07005-01612	GASKET (K1)	1	SN: 10001-UP
9	07042-00312	PLUG,(WITHOUT CORROSION RESISTOR)	2	SN: 10001-UP
10	6150-11-6280	SPRING	3	SN: 18200-UP
	6150-11-6280	SPRING	5	SN: 10001-18199
11	6150-11-6210	TUBE	3	SN: 18200-UP
	6150-11-6210	TUBE	5	SN: 10001-18199
12	02893-05043	O-RING (K1)	6	SN: 18200-UP
	02893-05043	O-RING (K1)	10	SN: 10001-18199
13	6150-11-6310	GASKET (K1)	6	SN: 10001-UP
14	6150-81-9190	BOLT	12	SN: 10001-UP
15	600-421-6310	THERMOSTAT	2	SN: 10001-UP
16	6138-11-6810	GASKET (K1)	2	SN: 10001-UP
17	6150-11-6510	COVER	1	SN: 10001-UP
18	6150-81-9180	BOLT	6	SN: 10001-UP
19	6136-61-8640	NIPPLE	1	SN: 10001-UP
20	08620-00000	SENSOR,THERMO (WITH THERMO SENSOR)	1	SN: 10001-UP

Reference: 131

FIG. 163 AIR CLEANER

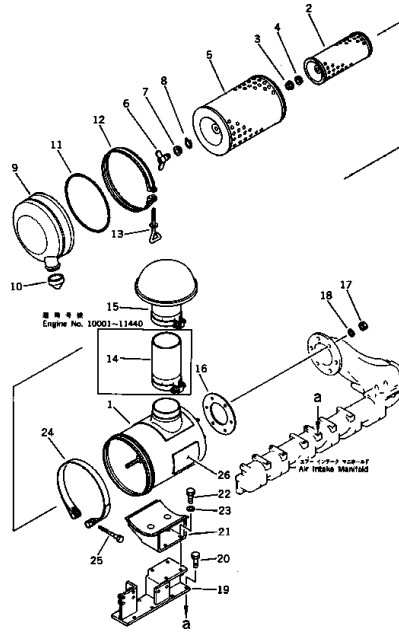

Reference: 163

030080 AIR CLEANER

Item	Part No.	Part Name	Qty	Options
1	6150-81-7200	AIR CLEANER ASS'Y	1	SN: 11441-UP
	6631-81-7603	□ AIR CLEANER ASS'Y	1	SN: 10001-11440
	6150-81-7110	• BODY	1	SN: 11441-UP
	6631-81-7610	• □ BODY	1	SN: 10001-11440
	6115-81-7602	• ELEMENT ASS'Y	1	SN: 10001-UP
2		• • ☆ ELEMENT, INNER	1	SN: 10001-UP
3	600-181-7910	• • NUT	1	SN: 10001-UP
4	600-181-7511	• • WASHER, SEAL	1	SN: 10001-UP
	600-181-2300	• • ELEMENT ASS'Y, OUTER	1	SN: 10001-UP
5		• • • ☆ ELEMENT, OUTER	1	SN: 10001-UP
6	600-181-2990	• • • NUT, WING	1	SN: 10001-UP
7	600-181-4591	• • • WASHER, SEAL	1	SN: 10001-UP
8	04064-01510	• • • RING, SNAP	1	SN: 10001-UP
9	600-181-2540	• PAN, DUST	1	SN: 11441-UP
	600-181-3280	• □ PAN	1	SN: 10001-11440
10	600-181-2550	• VALVE	1	SN: 10001-UP
11	6692-81-7130	• O-RING	1	SN: 10001-UP
12	600-181-3260	• BAND	1	SN: 10001-UP
13	6692-81-7180	• BOLT	1	SN: 10001-UP
14	6150-81-7910	PIPE	1	SN: 10001-11440
15	600-181-2690	CAP	1	SN: 10001-UP
16	6136-11-4840	GASKET (K1)	1	SN: 11126-UP
	6631-11-4381	□ GASKET (K1)	1	SN: 10001-11125
17	01582-11008	NUT	6	SN: 10001-UP
18	01640-21016	WASHER	6	SN: 10001-UP
19	6150-51-5350	BRACKET	1	SN: 10001-UP
20	01010-51025	BOLT	7	SN: 10001-UP
21	6150-11-4531	BRACKET	1	SN: 10289-UP
	6150-11-4530	BRACKET	1	SN: 10001-10288
22	01010-51025	BOLT	4	SN: 10001-UP
23	01640-21016	WASHER	4	SN: 10001-UP
24	6691-11-4610	BAND ASS'Y	1	SN: 10001-UP
	6110-11-4520	• PIN	1	SN: 10001-UP
	6110-11-4530	• PIN ? WITH THREAD	1	SN: 10001-UP

Get the complete PDF catalogue

Komatsu 6D125-1M S/N 10001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.