


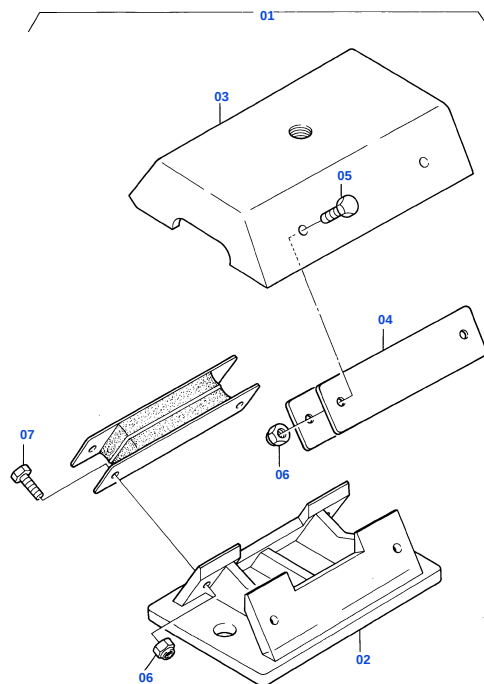


Reference: 023-1225c

023-1225c Engine Mounting

Item	Part No.	Part Name	Qty	Options
01	901 854 40	Engine mounting assy.	1	
02	487 631 40	Stand of the bearing	1	
03	487 633 40	Bearing cover	1	
04	896 672 40	Rubber metal bar	2	
05	307 780 99	Bolt	4	
06	507 037 98	Nut	8	
07	307 779 99	Bolt	4	

Reference: 023-1225c

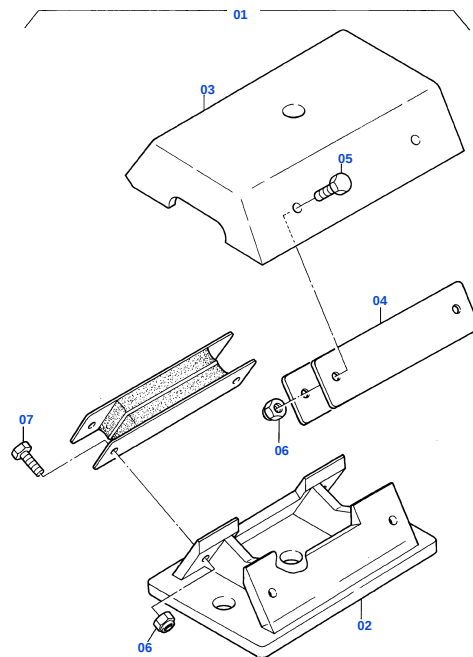


Reference: 023-1227c

023-1227c Engine Mounting

Item	Part No.	Part Name	Qty	Options
01	901 853 40	Engine mounting assy.	1	
02	462 994 40	Stand of the bearing	1	
03	462 995 40	Bearing cover	1	
04	896 672 40	Rubber metal bar	2	
05	307 780 99	Bolt	4	
06	507 037 98	Nut	8	
07	307 779 99	Bolt	4	

Reference: 023-1227c

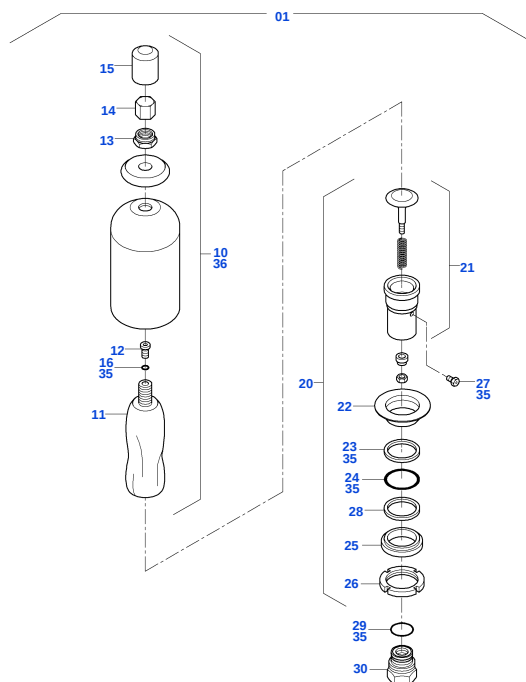


Reference: 090-0270b

090-0270b Pressure Accumulator

Item	Part No.	Part Name	Qty	Options
01	959 329 40	Accumulator	-2	
01	239 441 40	Accumulator	-2	
01	979 485 40	Accumulator	-2	
01	959 328 40	Accumulator	-2	
01	979 486 40	Accumulator	-2	
01	979 487 40	Accumulator	-2	
01	979 488 40	Accumulator	-2	
01	940 922 40	Accumulator	-2	
10	799 944 73	Bladder assy. (fig.11-16)	1	
11		Bladder	1	
12		Gas valve insert	1	
13		Lock nut	1	
14		Seal cap	1	
15		Valve protection cap	1	
16		O-ring	1	
20	799 945 73	Oil valve assy. (fig.21-28)	1	
21		Valve	1	
22		Anti-extrusionsring	1	
23		Washer	1	
24		O-ring	1	
25		Spacer	1	
26		Lock nut	1	
27		Vent screw	1	
28		Support ring	1	
29		O-ring	1	
30	999 544	Adapter	1	
35	799 946 73	Seal kit (fig.16; 23; 24 a. 27-29)	-2	
36	799 947 73	Repair kit (Pos.10 a. seal kit)	-2	

Reference: 090-0270b

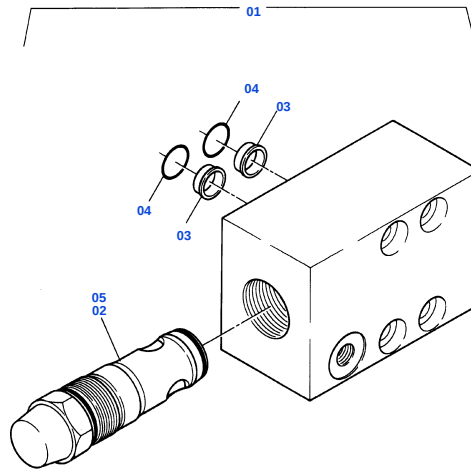


Reference: 090-0359a

090-0359a Bleed-Off Valve, Pre-controlled

Item	Part No.	Part Name	Qty	Options
01	906 861 40	Bleed-off valve, pre-controlled assy. without pressure adjustment Fial resetting after mounting required	-2	
	356 197 40	Valve, pre-controlled assy. 150bar	-2	
	356 198 40	Valve, pre-controlled assy. 350bar	-2	
	324 559 40	Valve, pre-controlled assy. 125bar	-2	
	414 238 40	Valve, pre-controlled assy. 180bar	-2	
	414 239 40	Valve, pre-controlled assy. 190bar	-2	
	655 571 40	Valve, pre-controlled assy. 310bar	-2	
	906 711 40	Valve, pre-controlled assy. 280bar	-2	
	414 967 40	Valve, pre-controlled assy. 330bar	-2	
	621 732 40	Valve, pre-controlled assy. 320bar	-2	
02		Pressure relief valve	1	
03	368 097 40	Support ring	2	
04	519 254 98	O-ring	2	
05	799 756 73	Seal kit to fig-no: 02	1	

Reference: 090-0359a

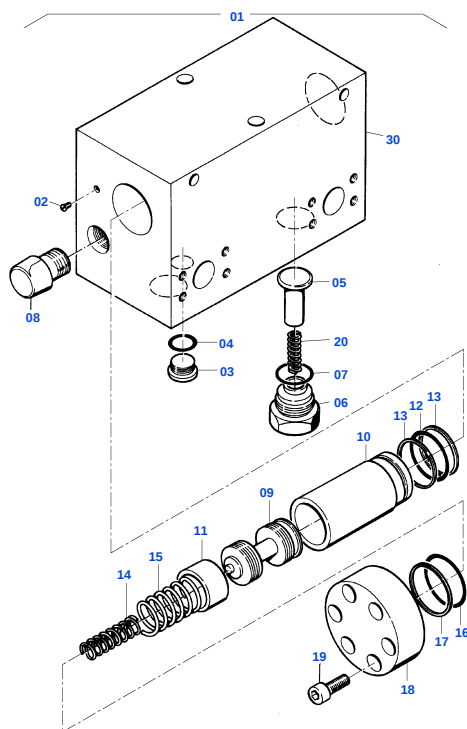


Reference: 090-0392a

090-0392a Travelling Gear Brake Valve

Item	Part No.	Part Name	Qty	Options
01	358 617 40	Brake valve assy. 310 bar	1	
02	754 587 00	Safety plug	6	
03	519 252 98	Plug	2	
04	501 275 98	O-ring	2	
05	255 011 40	Valve Disc	2	
06	754 591 00	Plug	2	
07	519 255 98	O-ring	2	
08		Pressure relief valve	2	
09		Piston	2	
10		Bush	2	
11	754 588 00	Distance piece	2	
12	912 829 00	O-ring	2	
13	997 791 00	Support ring	4	
14	994 838 00	Spring	2	
15	994 837 00	Spring	2	
16	101 537 64	O-ring	2	
17	997 792 00	Support ring	2	
18	694 134 00	Cover	2	
19	509 814 98	Bolt	12	
20	255 012 40	Spring	2	
30		Housing	1	
	797 697 73	Set out of pos. 09+10, piston and bush	-2	
	994 836 00	Seal kit, assy. fig-nos: 04,07,12,13,16,17	-2	

Reference: 090-0392a

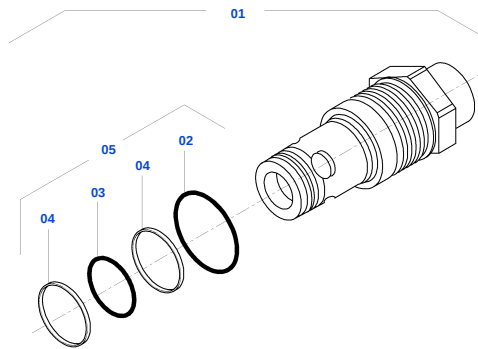


Reference: 090-0404a

090-0404a Pressure Relief Valve, Pre-controlled

Item	Part No.	Part Name	Qty	Options
01	461 498 40	Valve, assy. (w/o pressure adjustment)	1	
02		O-ring	1	
03		O-ring	1	
04		Support ring	2	
05	799 756 73	Seal kit	1	

Reference: 090-0404a

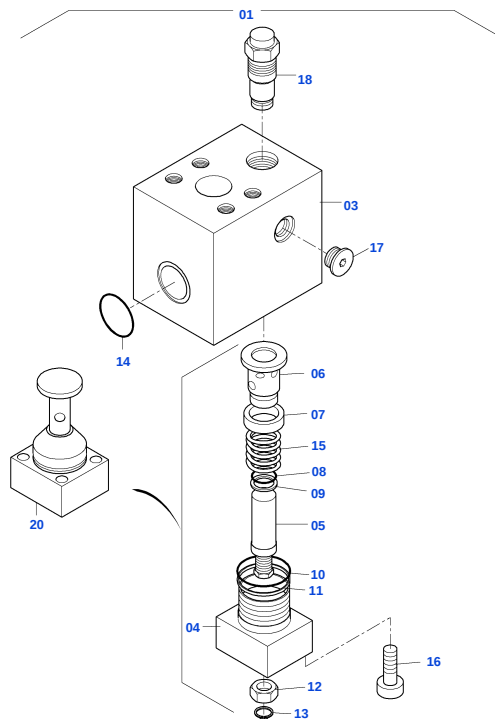


Reference: 090-0695b

090-0695b Throttle Check Valve

Item	Part No.	Part Name	Qty	Options
01	461 640 40	Throttle check valve assy.	1	
03		Housing	1	
04		Flange	1	
05		Spindle	1	
06		Taper	1	
07		Spring plate	1	
08		O-ring	1	
09		Support ring	1	
10		O-ring	1	
11		Support ring	1	
12		Nut	1	
13		Snap ring	1	
14	006 729 98	O-ring	1	
15		Spring	1	
16	319 484 99	Bolt	4	
17	757 181 73	Plug	2	
18		Pressure relief valve	1	
	790 378 73	Seal kit	-2	
20	790 376 73	Mounting kit	1	

Reference: 090-0695b

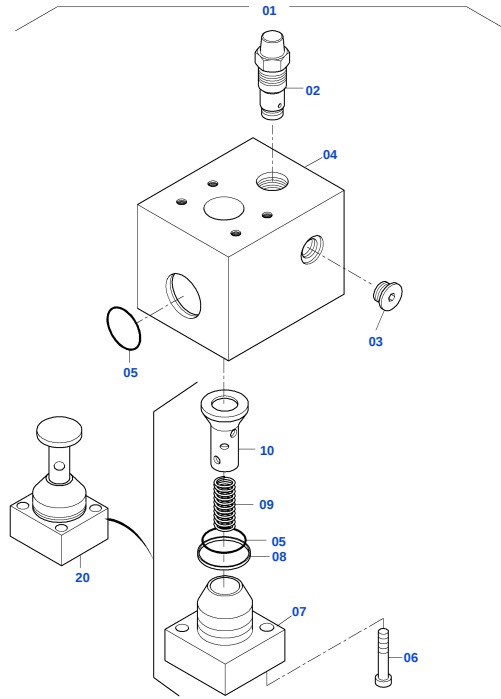


Reference: 090-0696b

090-0696b Throttle Check Valve

Item	Part No.	Part Name	Qty	Options
01	461 641 40	Throttle check valve	1	
02		Pressure relief valve	1	
03	757 181 73	Plug	2	
04		Housing	1	
05	006 729 98	O-ring	2	
06	319 483 99	Bolt	2	
07	757 758 73	Flange	1	
08	757 183 73	Support ring	1	
09	255 012 40	Spring	1	
10	255 011 40	Taper	1	
	790 379 73	Seal kit	1	
20	790 377 73	Mounting kit	1	

Reference: 090-0696b

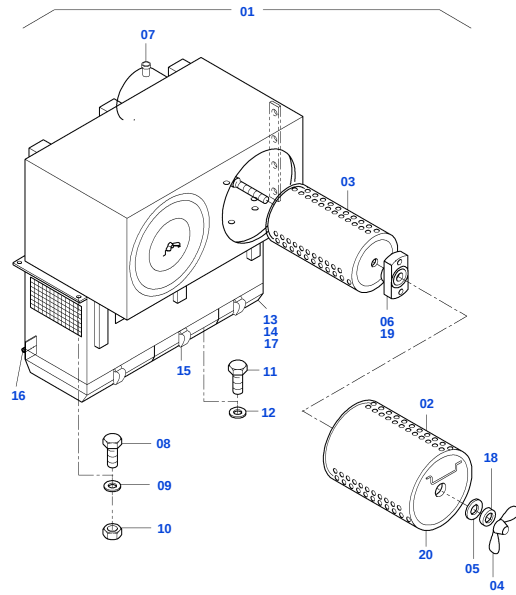


Reference: 090-5581a

090-5581a Air Cleaner

Item	Part No.	Part Name	Qty	Options
01	414 984 40	Air cleaner assy.	1	
02	694 488 00	Main element	2	
03	988 636 00	Safety element	2	
04	988 759	Wing nut	2	
05	988 750	Gasket	2	
06	988 748	Maintenance indicator	2	
07	761 418 73	Cap	2	
08	307 775 99	Bolt	22	
09	343 110 99	Lock washer	22	
10	332 333 99	Nut	22	
11	307 730 99	Bolt	20	
12	346 499 99	Lock washer	20	
13	765 198 73	Gasket	-2	
14	697 709 73	Cover	3	
15	765 199 73	Latch	3	
16	765 165 73	Hinge	3	
17	765 200 73	Dust cup assy. incl. fig-nos. 13-16	1	
18	988 758	Safety clip	2	
19	988 749	Pin	2	
20	794 462 73	Seal	-2	

Reference: 090-5581a

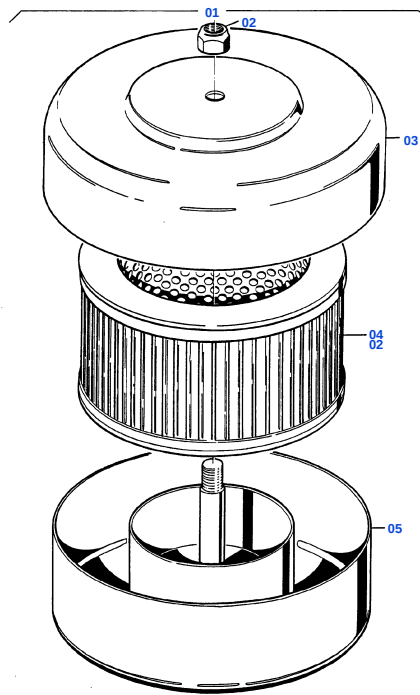

Reference: 090-5586

090-5586 Aeration Filter

Item	Part No.	Part Name	Qty	Options
01	440 479 40	Aeration filter, assy.	1	
02	334 627 99	Nut	1	
03	694 490	Cover	1	
04	696 257 73	Element with nut fig-no: 02	1	
05	694 489	Socket housing	1	

Reference: 090-5586

Get the complete PDF catalogue

Komatsu PC4000-11 S/N 08267

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.