


FIG. 0101 シリンダヘッド 適用機種
CYLINDER HEAD (ENGINE NO. 10001-26750)

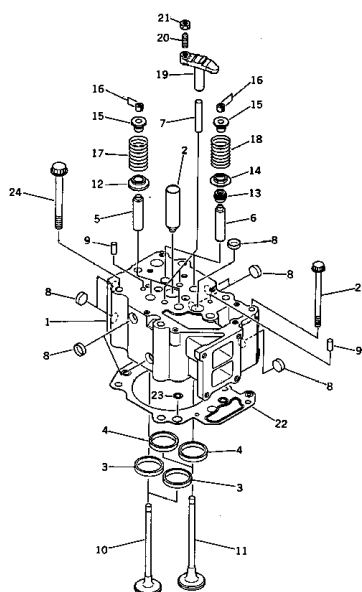

Reference: 0101

030010 CYLINDER HEAD(#10001-26750)


Item	Part No.	Part Name	Qty	Options
	6151-11-1100	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 10001-@
1		• ☆ HEAD,CYLINDER	1	SN: 10001-@
2	6136-11-1130	• SLEEVE	1	SN: 10001-@
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-@
3	6150-19-1331	• INSERT, 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-@
3	6150-18-1331	• INSERT, 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-@
3	6150-17-1331	• INSERT, 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-@
3	6150-16-1331	• INSERT, 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-@
4	6150-19-1320	• INSERT, 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-@
4	6150-18-1320	• INSERT, 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-@
4	6150-17-1320	• INSERT, 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-@
4	6150-16-1320	• INSERT, 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-@
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10104-@
5	6150-11-1340	• □ GUIDE,INTAKE VALVE	2	SN: 10001-10103
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10104-@
6	6150-11-1350	• □ GUIDE,EXHAUST VALVE	2	SN: 10001-10103
7	6150-11-1140	• GUIDE	2	SN: 10001-@
8	6162-13-1150	• PLUG	8	SN: 13377-@
8	6720-11-1150	• PLUG	8	SN: 10001-13376
9	04020-00820	• PIN,DOWEL	2	SN: 10001-@
10	6150-41-4111	VALVE,INTAKE	12	SN: 10001-@
11	6150-41-4210	VALVE,EXHAUST	12	SN: 10001-@
12	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 10001-@
13	6140-41-4540	SEAL,EXHAUST VALVE (K1)	12	SN: 10001-@
14	6150-41-4430	SEAT,LOWER	12	SN: 10001-@
15	6150-41-4510	SEAT,UPPER	24	SN: 10001-@
16	6136-42-4520	COTTER	48	SN: 10001-@
17	6150-41-4420	SPRING,INTAKE	12	SN: 10001-@
18	6150-41-4411	SPRING,EXHAUST	12	SN: 10001-@
19	6150-41-5611	CROSSHEAD	12	SN: 10296-@
19	6150-41-5610	CROSSHEAD	12	SN: 10001-10295
20	6150-41-5620	SCREW	12	SN: 10296-@
20	6610-41-5620	SCREW	12	SN: 10001-10295

Item	Part No.	Part Name	Qty	Options
21	6150-41-5630	NUT	12	SN: 10296-@
21	6710-41-5630	NUT	12	SN: 10001-10295
22	6150-17-1812	GASKET,HEAD (K1)	6	SN: 10001-@
22	6150-11-1812	□ GASKET,HEAD (K1)	6	SN: 25657-26750
22	6150-11-1811	□ GASKET,HEAD (K1)	6	SN: 25656-25656
22	6150-11-1810	◆ GASKET,HEAD (K1)	6	SN: 10001-25655
23	6150-11-1820	• GROMMET	4	SN: 10001-25655
24	6150-11-1610	BOLT	36	SN: 10001-@
25	6150-81-9160	BOLT	6	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead ◆ interchangeable with part above

Reference: 0101

FIG. 0101A CYLINDER HEAD (ENGINE NO. 26751-)

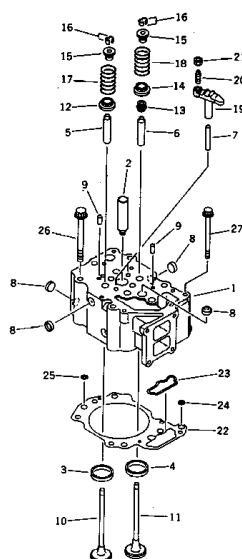

Reference: 0101A

030020 CYLINDER HEAD(#26751-)


Item	Part No.	Part Name	Qty	Options
	6151-11-1100	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 10001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 10001-UP
2	6136-11-1130	• SLEEVE	1	SN: 10001-UP
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-UP
3	6150-19-1331	• INSERT, 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-UP
3	6150-18-1331	• INSERT, 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-UP
3	6150-17-1331	• INSERT, 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-UP
3	6150-16-1331	• INSERT, 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-UP
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-UP
4	6150-19-1320	• INSERT, 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6150-18-1320	• INSERT, 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6150-17-1320	• INSERT, 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6150-16-1320	• INSERT, 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10104-UP
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10104-UP
7	6150-11-1140	• GUIDE	2	SN: 10001-UP
8	6162-13-1150	• PLUG	8	SN: 13377-UP
9	04020-00820	• PIN,DOWEL	2	SN: 10001-UP
10	6150-41-4111	VALVE,INTAKE	12	SN: 10001-UP
11	6150-41-4210	VALVE,EXHAUST	12	SN: 10001-UP
12	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 10001-UP
13	6140-41-4540	SEAL,EXHAUST VALVE (K1)	12	SN: 10001-UP
14	6150-41-4430	SEAT,LOWER	12	SN: 10001-UP
15	6150-41-4510	SEAT,UPPER	24	SN: 10001-UP
16	6136-42-4520	COTTER	48	SN: 10001-UP
17	6150-41-4420	SPRING,INTAKE	12	SN: 10001-UP
18	6150-41-4411	SPRING,EXHAUST	12	SN: 10001-UP
19	6150-41-5611	CROSSHEAD	12	SN: 10296-UP
20	6150-41-5620	SCREW	12	SN: 10296-UP
21	6150-41-5630	NUT	12	SN: 10296-UP
22	6150-17-1812	GASKET,HEAD (K1)	6	SN: 26751-UP
23	6150-11-1920	• GROMMET,OIL	1	SN: 26751-UP
24	6150-11-1930	• GROMMET,OIL	1	SN: 26751-UP
25	6150-11-1940	• GROMMET,WATER	4	SN: 26751-UP

Item	Part No.	Part Name	Qty	Options
26	6150-11-1610	BOLT	36	SN: 10001-UP
27	6150-81-9160	BOLT	6	SN: 10001-UP

Catalog signs: ☆ not supplied separately; assembly only

Reference: 0101A

FIG. 0111 ロッカー アーム および ハウジング
ROCKER ARM AND HOUSING

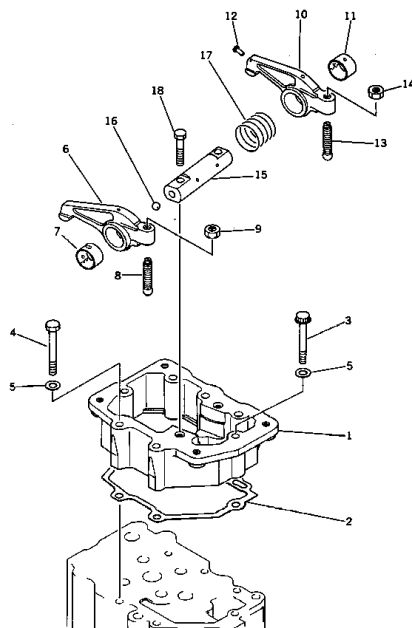

Reference: 0111


030030 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING,ROCKER ARM	6	SN: 10001-UP
2	6150-11-7810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9140	BOLT	40	SN: 10001-UP
4	01010-51095	BOLT	2	SN: 10001-UP
5	01640-21016	WASHER	42	SN: 10001-UP
	6150-41-5400	ARM ASS'Y,INTAKE	6	SN: 10001-UP
6		• ☆ ARM,ROCKER	1	SN: 10001-UP
7	6150-41-5420	• BUSHING	1	SN: 10001-UP
8	6150-41-5540	SCREW	6	SN: 10001-UP
9	01582-01008	NUT	6	SN: 10001-UP
	6150-41-5500	ARM ASS'Y,EXHAUST	6	SN: 10001-UP
10		• ☆ ARM,ROCKER	1	SN: 10001-UP
11	6150-41-5420	• BUSHING	1	SN: 10001-UP
12	6162-43-5340	• RIVET	1	SN: 10001-UP
13	6150-41-5540	SCREW	6	SN: 10001-UP
14	01582-01008	NUT	6	SN: 10001-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 10001-UP
15		• ☆ SHAFT	1	SN: 10001-UP
16	6150-81-8420	• BALL	1	SN: 10001-UP
17	6150-41-5320	SPRING	6	SN: 10001-UP
18	6150-81-9370	BOLT	12	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0111

ロッカ アーム ハウジング カバー
FIG. 0115 ROCKER ARM HOUSING COVER

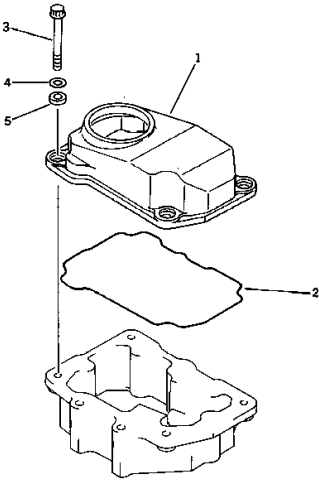

Reference: 0115


030040 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8111	COVER,HEAD	6	SN: 12436-UP
1	6150-11-8110	☐ COVER,HEAD	6	SN: 10001-12435
2	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9370	BOLT	24	SN: 21204-UP
3	6150-81-9170	☐ BOLT	24	SN: 13131-21203
3	6150-81-9230	☐ BOLT	24	SN: 10001-13130
4	01640-21016	WASHER	24	SN: 10001-UP
5	6150-11-8820	RUBBER (K1)	24	SN: 10001-UP

Catalog signs: ☐ part above may be used instead

Reference: 0115

エア インテーク マニホールド
FIG. 0131 AIR INTAKE MANIFOLD

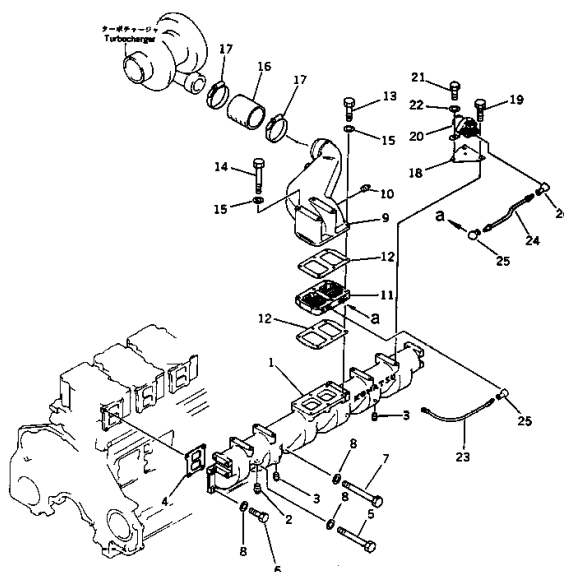

Reference: 0131


030050 AIR INTAKE MANIFOLD

Item	Part No.	Part Name	Qty	Options
	6151-11-4910	INTAKE MANIFOLD A.	1	SN: 10001-UP
1		• ☆ MANIFOLD,INTAKE	1	SN: 10001-UP
2	07042-00415	• PLUG	1	SN: 10001-UP
3	07042-00108	• PLUG	2	SN: 10001-UP
4	6150-11-4810	GASKET (K1)	6	SN: 10001-UP
5	01011-51010	BOLT	8	SN: 10001-UP
6	01010-51030	BOLT	14	SN: 10001-UP
7	01011-51000	BOLT	2	SN: 10001-UP
8	01640-21016	WASHER	24	SN: 10001-UP
9	6151-11-4311	CONNECTOR	1	SN: 10001-UP
10	07042-00108	PLUG	1	SN: 19320-UP
10	07042-00108	PLUG	2	SN: 10001-19319
11	600-815-3810	HEATER,RIBBON	1	SN: 10001-UP
12	6150-11-4820	GASKET (K1)	2	SN: 10001-UP
13	01010-51055	BOLT	2	SN: 10001-UP
14	01011-51065	BOLT	4	SN: 10001-UP
15	01641-21016	WASHER	6	SN: 10001-UP
16	6151-11-4410	HOSE	1	SN: 10001-UP
17	07281-01029	CLAMP	2	SN: .-UP
17	07281-00909	□ CLAMP	2	SN: 10001-.
18	6151-81-4510	BRACKET	1	SN: 10001-UP
19	01010-51025	BOLT	2	SN: 10001-UP
20	600-815-2170	SWITCH	1	SN: 10001-UP
21	01010-50610	BOLT	2	SN: 10001-UP
22	01640-20610	WASHER	2	SN: 10001-UP
23	6678-81-4340	WIRE, 170MM	1	SN: 10001-UP
24	6151-81-4410	WIRE, 265MM	1	SN: 10001-UP
25	08038-00519	CAP	2	SN: 10001-UP
26	6134-81-4910	CAP	1	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 0131

エアークリーナ
FIG. 0141 AIR CLEANER

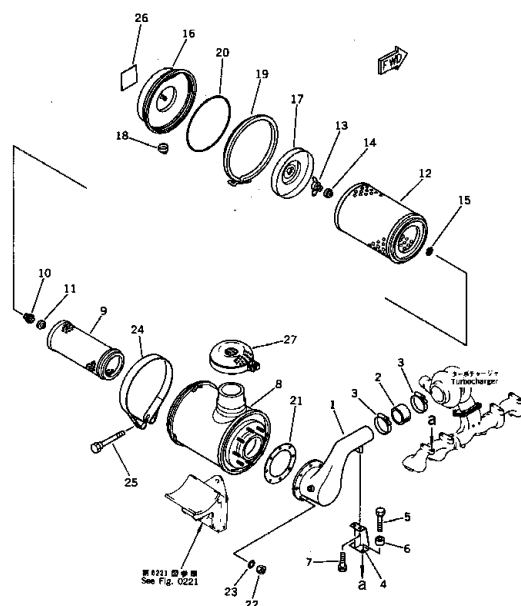


Reference: 0141

030060 AIR CLEANER

Item	Part No.	Part Name	Qty	Options
1	6151-11-4250	CONNECTOR	1	SN: 10001-UP
2	6151-11-4450	HOSE	1	SN: 10001-UP
3	07281-01159	CLAMP	2	SN: 10001-UP
4	6151-11-4620	BRACKET	1	SN: 10001-UP
5	01010-31040	BOLT	2	SN: 10001-UP
6	6631-11-5630	SPACER	2	SN: 10001-UP
7	01010-51025	BOLT	2	SN: 10001-UP
	6151-81-7100	AIR CLEANER ASS'Y	1	SN: .-UP
	6711-81-7100	□ AIR CLEANER ASS'Y	1	SN: 10001-.
8	6711-81-7110	• BODY	1	SN: 10001-UP
	6125-81-7032	• ELEMENT ASS'Y	1	SN: 10001-UP
9		• ☆ ELEMENT, INNER	1	SN: 10001-UP
10	600-181-9671	• NUT, WING	1	SN: 10001-UP
11	600-181-7511	• WASHER, SEAL	1	SN: 10001-UP
	600-181-4300	• ELEMENT ASS'Y, OUTER	1	SN: 10001-UP
12		• ☆ ELEMENT, OUTER	1	SN: 10001-UP
13	600-181-1990	• NUT, WING	1	SN: 10001-UP
14	600-181-4591	• WASHER, SEAL	1	SN: 10001-UP
15	04064-01510	• RING, SNAP	1	SN: 10001-UP
16	6710-82-7121	• CUP	1	SN: 19320-UP
16	6710-62-7121	• CUP	1	SN: 10001-19319
17	6710-82-7130	• BAFFLE	1	SN: 10001-UP
18	600-181-1590	• VALVE	1	SN: 10001-UP
19	600-181-1480	• CLAMP	1	SN: 10001-UP
20	6127-81-7190	• O-RING	1	SN: 10001-UP
21	6127-81-4821	GASKET (K1)	1	SN: 10001-UP
22	01580-11008	NUT	8	SN: 10001-UP
23	01640-21016	WASHER	8	SN: 10001-UP
24	6691-13-4610	BAND ASS'Y	1	SN: 10001-UP
25	6643-11-4641	BOLT	1	SN: 10001-UP
26	09637-00161	PLATE, INSTRUCTION	1	SN: 10001-UP
27	6710-82-7140	CAP, SCREEN	1	SN: 10001-UP

Catalog signs: □ part above may be used instead ☆ not supplied separately: assembly only

エキゾースト マニホールド および ターボチャージャー
FIG. 0151 EXHAUST MANIFOLD AND TURBOCHARGER

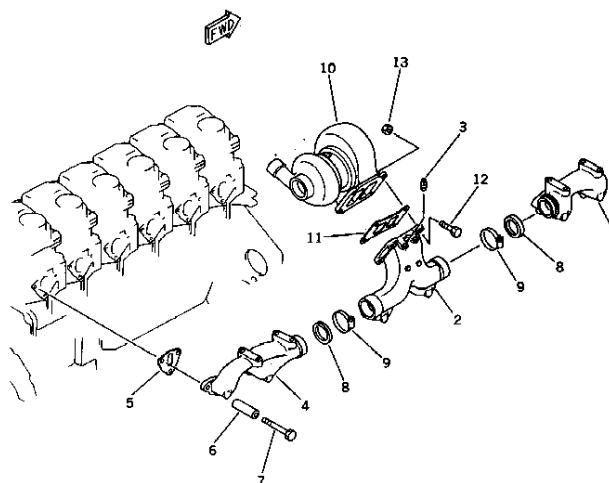

Reference: 0151

030070 EXHAUST MANIFOLD AND TURBOCHARGER

Item	Part No.	Part Name	Qty	Options
1	6151-11-5171	MANIFOLD,EXHAUST, FRONT	1	SN: 10001-UP
2	6151-11-5140	MANIFOLD,EXHAUST, CENTER	1	SN: 10001-UP
3	07042-20108	PLUG	1	SN: 14786-UP
3	07042-20108	PLUG	2	SN: 10001-14785
4	6151-11-5191	MANIFOLD,EXHAUST, REAR	1	SN: 10001-UP
5	6150-11-5810	GASKET (K1)	6	SN: 10001-UP
6	6136-11-5120	SPACER	18	SN: 10001-UP
7	01011-31000	BOLT	18	SN: 10001-UP
8	6152-11-5250	RING,SEAL (K1)	2	SN: 19320-UP
8	6151-11-5291	□ RING,SEAL (K1)	2	SN: 10001-19319
9	07281-10909	CLAMP	2	SN: 10001-UP
10	6152-81-8300	TURBOCHARGER ASS'Y,(SEE FIG.0155)	1	SN: 10001-UP
11	6151-11-5710	GASKET (K1)	1	SN: 10001-UP
12	01050-61045	BOLT	4	SN: 10001-UP
13	6114-11-5590	NUT	4	SN: 10001-UP

Catalog signs: ☐ part above may be used instead

Reference: 0151

Get the complete PDF catalogue

Komatsu S6D125-1K S/N 10001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.