


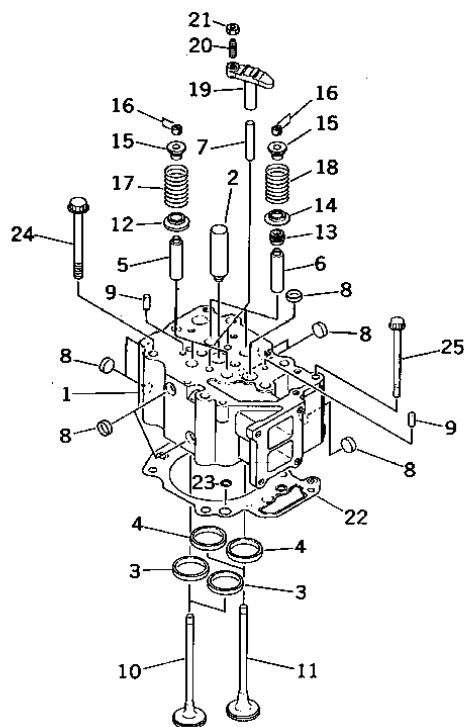

Reference: 0101


030010 CYLINDER HEAD(#10001-26750)

Item	Part No.	Part Name	Qty	Options
	6151-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-@
	6151-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-@
1		• ☆ HEAD,CYLINDER	1	SN: 10001-@
2	6136-11-1130	• SLEEVE	1	SN: 10001-@
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-@
	6150-19-1331	• INSERT ? 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-18-1331	• INSERT ? 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-17-1331	• INSERT ? 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-@
	6150-16-1331	• INSERT ? 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-@
	6150-19-1320	• INSERT ? 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-18-1320	• INSERT ? 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-17-1320	• INSERT ? 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-@
	6150-16-1320	• INSERT ? 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-@
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-@
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-@
7	6150-11-1140	• GUIDE	2	SN: 10001-@
8	6162-13-1150	• PLUG	8	SN: 10001-@
9	04020-00820	• PIN,DOWEL	2	SN: 10001-@
10	6150-41-4111	• VALVE,INTAKE	2	SN: 10001-@
11	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-@
12	6150-41-4540	• ROTATOR,INTAKE VALVE	2	SN: 10001-@
13	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-@
14	6150-41-4430	• SEAT,LOWER	2	SN: 10001-@
15	6150-41-4510	• SEAT,UPPER	4	SN: 10001-@
16	6136-42-4520	• COTTER	8	SN: 10001-@
17	6150-41-4420	• SPRING,INTAKE	2	SN: 10001-@
18	6150-41-4411	• SPRING,EXHAUST	2	SN: 10001-@
	6150-41-5600	CROSSHEAD ASS'Y	12	SN: 10001-@
19	6150-41-5611	• CROSSHEAD	1	SN: 10001-@
20	6150-41-5620	• SCREW	1	SN: 10001-@
21	6150-41-5630	• NUT	1	SN: 10001-@
22	6150-11-1812	☐ GASKET,HEAD (K1)	6	SN: 25657-26750
	6150-11-1811	☐ GASKET,HEAD	6	SN: 25656-25656

Item	Part No.	Part Name	Qty	Options
23	6150-11-1810	☐ GASKET,HEAD	6	SN: 25588-25655
	6150-11-1810	GASKET,HEAD (K1)	6	SN: 10001-25587
	6610-11-1821	• GROMMET	4	SN: 10001-25655
	6150-11-1610	BOLT	36	SN: 10001-@
	6150-81-9160	BOLT	6	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 0101

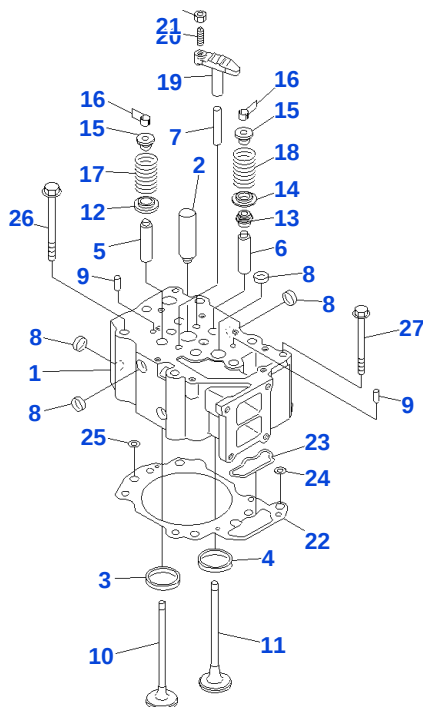

PJ35048

Reference: 0101A


030020 CYLINDER HEAD(#26751-)

Item	Part No.	Part Name	Qty	Options
	6151-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-UP
	6151-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 10001-UP
2	6136-11-1130	• SLEEVE	1	SN: 10001-UP
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-UP
	6150-19-1331	• INSERT ? 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-18-1331	• INSERT ? 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-17-1331	• INSERT ? 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-UP
	6150-16-1331	• INSERT ? 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-UP
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-UP
	6150-19-1320	• INSERT ? 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-18-1320	• INSERT ? 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-17-1320	• INSERT ? 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
	6150-16-1320	• INSERT ? 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-UP
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-UP
7	6150-11-1140	• GUIDE	2	SN: 10001-UP
8	6162-13-1150	• PLUG	8	SN: 10001-UP
9	04020-00820	• PIN,DOWEL	2	SN: 10001-UP
10	6150-41-4111	• VALVE,INTAKE	2	SN: 10001-UP
11	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-UP
12	6150-41-4540	• ROTATOR,INTAKE VALVE	2	SN: 10001-UP
13	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-UP
14	6150-41-4430	• SEAT,LOWER	2	SN: 10001-UP
15	6150-41-4510	• SEAT,UPPER	4	SN: 10001-UP
16	6136-42-4520	• COTTER	8	SN: 10001-UP
17	6150-41-4420	• SPRING,INTAKE	2	SN: 10001-UP
18	6150-41-4411	• SPRING,EXHAUST	2	SN: 10001-UP
	6150-41-5600	CROSSHEAD ASS'Y	12	SN: 10001-UP
19	6150-41-5611	• CROSSHEAD	1	SN: 10001-UP
20	6150-41-5620	• SCREW	1	SN: 10001-UP
21	6150-41-5630	• NUT	1	SN: 10001-UP
22	6150-17-1812	GASKET,HEAD (K1)	6	SN: 26974-UP
	6150-17-1812	GASKET,HEAD	6	SN: 26751-26973

Item	Part No.	Part Name	Qty	Options
23	6150-11-1920	• GROMMET,OIL	1	SN: 26751-UP
24	6150-11-1930	• GROMMET,OIL	1	SN: 26751-UP
25	6150-11-1940	• GROMMET,WATER	4	SN: 26751-UP
26	6150-11-1610	BOLT	36	SN: 10001-UP
27	6150-81-9160	BOLT	6	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0101A

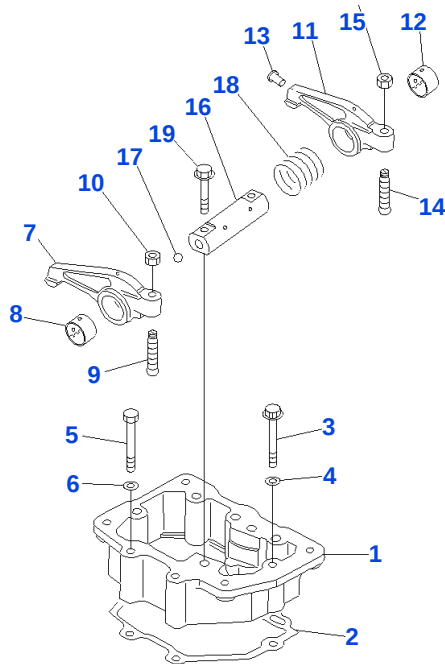

PD31208


Reference: 0111

030030 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING,ROCKER ARM	6	SN: 10001-UP
2	6150-11-7810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9140	BOLT	40	SN: 10001-UP
4	01640-21016	WASHER	40	SN: 10001-UP
5	01010-51095	BOLT	2	SN: 10001-UP
6	01640-21016	WASHER	2	SN: 10001-UP
	6150-41-5450	ROCKER ARM ASS'Y,INTAKE	6	SN: 10001-UP
	6150-41-5400	• ARM ASS'Y	1	SN: 10001-UP
7		• ☆ ARM,ROCKER	1	SN: 10001-UP
8	6150-41-5420	• BUSHING	1	SN: 10001-UP
9	6150-41-5540	• SCREW	1	SN: 10001-UP
10	01582-01008	• NUT	1	SN: 10001-UP
	6150-41-5550	ROCKER ARM ASS'Y,EXHAUST	6	SN: 10001-UP
	6150-41-5500	• ARM ASS'Y	1	SN: 10001-UP
11		• ☆ ARM,ROCKER	1	SN: 10001-UP
12	6150-41-5420	• BUSHING	1	SN: 10001-UP
13	6162-43-5340	• RIVET	1	SN: 10001-UP
14	6150-41-5540	• SCREW	1	SN: 10001-UP
15	01582-01008	• NUT	1	SN: 10001-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 10001-UP
16		• ☆ SHAFT	1	SN: 10001-UP
17	6150-81-8420	• BALL	1	SN: 10001-UP
18	6150-41-5320	SPRING	6	SN: 10001-UP
19	6150-81-9370	BOLT	12	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0111

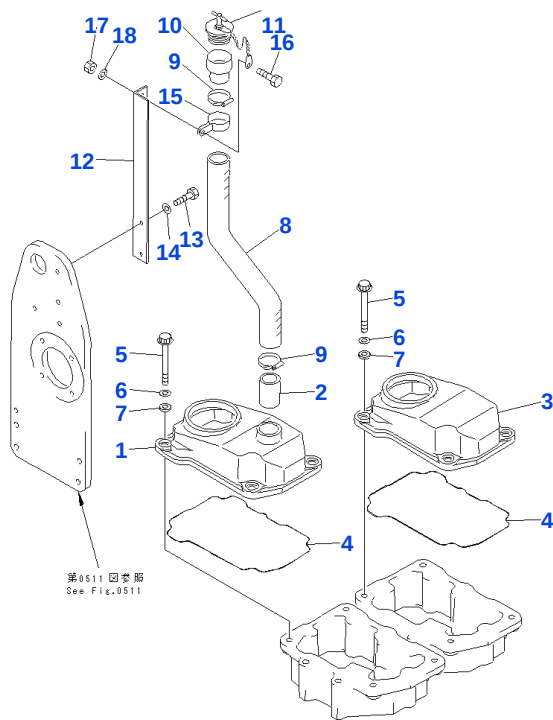


Reference: 0115

030040 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8141	HEAD COVER ASS'Y,NO.1	1	SN: 13648-UP
	6150-11-8140	□ HEAD COVER ASS'Y,NO.1	1	SN: 10001-13647
	6150-11-8151	• COVER,HEAD	1	SN: 13648-UP
	6150-11-8150	• ■ COVER,HEAD (6150-11-8151{6150-81-9370(4)})	1	SN: 10001-13647
2	6151-11-8210	• TUBE	1	SN: 10001-UP
3	6150-11-8111	COVER,NO.2 ?3 ?4 ?5 ?6	5	SN: 13367-UP
	6150-11-8110	COVER,NO.2 ?3 ?4 ?5 ?6	5	SN: 10001-13366
4	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
5	6150-81-9370	BOLT	24	SN: 20989-UP
	6150-81-9170	□ BOLT	24	SN: 13104-20988
	6150-81-9230	□ BOLT	24	SN: 10001-13103
6	01640-21016	WASHER	24	SN: 10001-UP
7	6150-11-8820	RUBBER (K1)	24	SN: 10001-UP
8	6151-11-8220	HOSE	1	SN: 10001-UP
9	07281-00549	CLAMP	2	SN: 10001-UP
10	6150-21-6520	TUBE	1	SN: 10001-UP
11	07025-00050	CAP,FILLER	1	SN: 10001-UP
12	6150-11-8230	BRACKET	1	SN: 10001-UP
13	01011-51025	BOLT	2	SN: 10001-UP
14	01640-21016	WASHER	2	SN: .-UP
	01643-31032	WASHER	2	SN: 10001-.
15	6151-11-8240	CLAMP	1	SN: 10001-UP
16	01010-51025	BOLT	1	SN: 10001-UP
17	01580-11008	NUT	1	SN: 10001-UP
18	01640-21016	WASHER	1	SN: 10001-UP

Catalog signs: □ part above may be used instead ■ may be used instead of described part

Reference: 0115

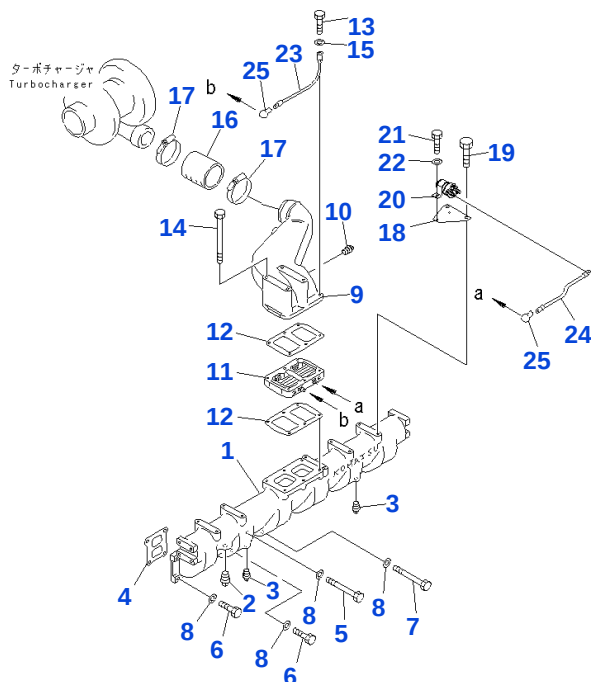

PE87582


Reference: 0131

030050 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
	6151-11-4910	INTAKE MANIFOLD A.	1	SN: 10001-UP
1		• ☆ MANIFOLD,AIR INTAKE	1	SN: 10001-UP
2	07042-00415	• PLUG	1	SN: 10001-UP
3	07042-00108	• PLUG	2	SN: 10001-UP
4	6150-11-4810	GASKET (K1)	6	SN: 10001-UP
5	01011-51010	BOLT	8	SN: 10001-UP
6	01010-51030	BOLT	13	SN: 10001-UP
7	01011-51020	BOLT	3	SN: 10001-UP
8	01640-21016	WASHER	24	SN: 10001-UP
9	6151-11-4311	CONNECTOR,AIR	1	SN: 10001-UP
10	07042-00108	PLUG	1	SN: 21445-UP
	07042-00108	PLUG	2	SN: 10001-21444
11	600-815-3810	HEATER,RIBBON	1	SN: 10001-UP
12	6150-11-4820	GASKET (K1)	2	SN: 10001-UP
13	01010-51055	BOLT	2	SN: 10001-UP
14	01011-51065	BOLT	4	SN: 10001-UP
15	01640-21016	WASHER	2	SN: 10001-UP
16	6151-11-4410	HOSE	1	SN: 10001-UP
17	07281-01029	CLAMP	2	SN: .-UP
	07281-00909	□ CLAMP	2	SN: 10001-.
18	6151-81-4510	BRACKET	1	SN: 10001-UP
19	01010-51025	BOLT	2	SN: 10001-UP
20	600-815-2170	SWITCH	1	SN: 10001-UP
21	01010-50610	BOLT	2	SN: 10001-UP
22	01640-20610	WASHER	2	SN: 10001-UP
23	6678-81-4340	WIRE ? 170MM	1	SN: 10001-UP
24	6151-81-4410	WIRE ? 265MM	1	SN: 10001-UP
25	08038-10519	CAP	3	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 0131

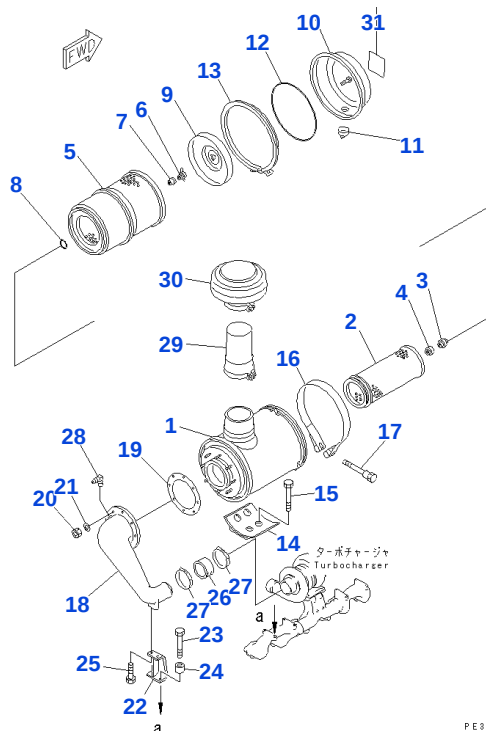

Reference: 0141


030060 AIR CLEANER AND MOUNTING

Item	Part No.	Part Name	Qty	Options
	6151-81-7100	AIR CLEANER ASS'Y	1	SN: 13788-UP
	6711-81-7100	□ AIR CLEANER ASS'Y	1	SN: 10001-13787
1	6711-81-7110	• BODY	1	SN: 10001-UP
	6125-81-7032	• ELEMENT ASS'Y	1	SN: 10001-UP
2		• ☆ ELEMENT, INNER	1	SN: 10001-UP
3	600-181-9671	• NUT	1	SN: 10001-UP
4	600-181-7511	• WASHER, SEAL	1	SN: 10001-UP
	600-181-4300	• ELEMENT ASS'Y, OUTER	1	SN: 10001-UP
5		• ☆ ELEMENT, OUTER	1	SN: 10001-UP
6	600-181-1990	• NUT	1	SN: 10001-UP
7	600-181-4591	• WASHER, SEAL	1	SN: 10001-UP
8	04064-01510	• RING, SNAP	1	SN: 10001-UP
9	6710-82-7130	• BAFFLE	1	SN: 10001-UP
10	6710-82-7121	• CUP	1	SN: 10001-UP
11	600-181-1590	• VALVE	1	SN: 10001-UP
12	6127-81-7190	• O-RING	1	SN: 10001-UP
13	600-181-1480	• CLAMP	1	SN: 10001-UP
14	6151-11-4530	BRACKET	1	SN: 10001-UP
15	01011-51065	BOLT	4	SN: 10001-UP
16	6691-13-4610	BAND ASS'Y	1	SN: 10001-UP
	6691-21-6550	• PIN	1	SN: 10001-UP
	6691-21-6560	• PIN ? WITH THREAD	1	SN: 10001-UP
17	6643-11-4641	BOLT	1	SN: 10001-UP
18	6151-11-4230	CONNECTOR	1	SN: 10001-UP
19	6127-81-4821	GASKET (K1)	1	SN: 10001-UP
20	01580-11008	NUT	8	SN: 10001-UP
21	01640-21016	WASHER	8	SN: 10001-UP
22	6151-11-4610	BRACKET	1	SN: 10001-UP
23	01010-31040	BOLT	2	SN: 10001-UP
24	6631-11-5630	SPACER	2	SN: 10001-UP
25	01010-51025	BOLT	2	SN: 10001-UP
26	6151-11-4450	HOSE	1	SN: 10001-UP
27	07281-01159	CLAMP	2	SN: 10001-UP
28	08671-50721	ELBOW	1	SN: 10001-UP

Item	Part No.	Part Name	Qty	Options
29	6711-81-7910	CONNECTOR	1	SN: 10001-UP
30	600-181-1511	CAP	1	SN: 10001-UP
	600-181-1510	☐ CAP	1	SN: 10001-31274
31	09637-00161	PLATE ? INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 10001-UP
	09637-90261	PLATE ? INSTRUCTION,(CHINESE)	1	SN: 10001-UP

Catalog signs: ☐ part above may be used instead ☆ not supplied separately: assembly only

Reference: 0141

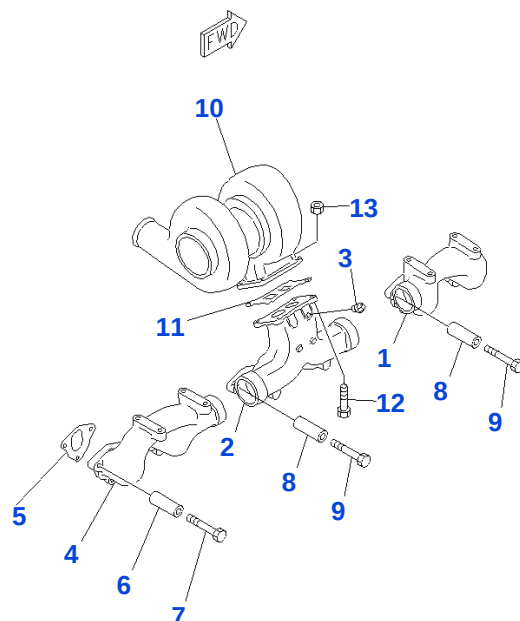

PE33488

Reference: 0151

030070 EXHAUST MANIFOLD AND TURBOCHARGER

Item	Part No.	Part Name	Qty	Options
1	6151-11-5110	MANIFOLD,EXHAUST ? FRONT	1	SN: 10001-UP
2	6151-11-5150	MANIFOLD,EXHAUST ? CENTER	1	SN: 10001-UP
3	07042-00108	PLUG	1	SN: 10001-UP
4	6151-11-5130	MANIFOLD,EXHAUST ? REAR	1	SN: 10001-UP
5	6150-11-5810	GASKET (K1)	6	SN: 10001-UP
6	6136-11-5120	SPACER	16	SN: 10001-UP
7	01011-31000	BOLT	16	SN: 10001-UP
8	6134-11-5120	SPACER	2	SN: 10001-UP
9	01010-31080	BOLT	2	SN: 10001-UP
10	6152-81-8310	TURBOCHARGER ASS'Y	1	SN: 23193-UP
	6152-81-8300	TURBOCHARGER ASS'Y	1	SN: 10001-23192
11	6151-11-5710	GASKET (K1)	1	SN: 10001-UP
12	01050-61045	BOLT	4	SN: 10001-UP
13	6114-11-5590	NUT	4	SN: 10001-UP

Reference: 0151

Get the complete PDF catalogue

Komatsu S6D125-1E S/N 10001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.