


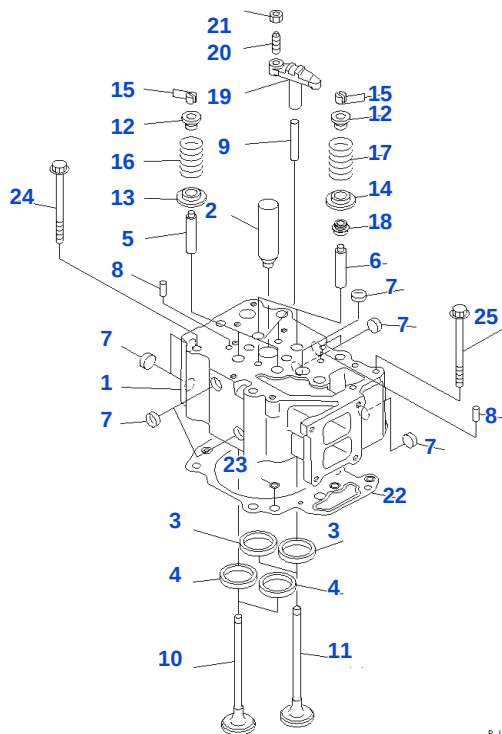

PJ80207

Reference: 0101


030010 CYLINDER HEAD(#13137-26690)

Item	Part No.	Part Name	Qty	Options
	6151-11-1100	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 13137-@
1		• ☆ HEAD	1	SN: 13137-@
2	6136-11-1130	• SLEEVE	1	SN: 13137-@
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 13137-@
	6150-19-1331	• INSERT□ 0.25MM,INTAKE VALVE (OS)	2	SN: 13137-@
	6150-18-1331	• INSERT□ 0.50MM,INTAKE VALVE (OS)	2	SN: 13137-@
	6150-17-1331	• INSERT□ 0.75MM,INTAKE VALVE (OS)	2	SN: 13137-@
	6150-16-1331	• INSERT□ 1.00MM,INTAKE VALVE (OS)	2	SN: 13137-@
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 13137-@
	6150-19-1320	• INSERT□ 0.25MM,EXHAUST VALVE (OS)	2	SN: 13137-@
	6150-18-1320	• INSERT□ 0.50MM,EXHAUST VALVE (OS)	2	SN: 13137-@
	6150-17-1320	• INSERT□ 0.75MM,EXHAUST VALVE (OS)	2	SN: 13137-@
	6150-16-1320	• INSERT□ 1.00MM,EXHAUST VALVE (OS)	2	SN: 13137-@
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 13137-@
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 13137-@
7	6150-11-1140	• GUIDE	2	SN: 13137-@
8	6162-13-1150	• PLUG	8	SN: 13137-@
9	04020-00820	• PIN,DOWEL	2	SN: 13137-@
10	6150-41-4111	VALVE,INTAKE	12	SN: 13137-@
11	6150-41-4210	VALVE,EXHAUST	12	SN: 13137-@
12	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 13137-@
13	6140-41-4540	SEAL,EXHAUST VALVE (K1)	12	SN: 13137-@
14	6150-41-4430	SEAT,LOWER	12	SN: 13137-@
15	6150-41-4510	SEAT,UPPER	24	SN: 13137-@
16	6136-42-4520	COTTER	48	SN: 13137-@
17	6150-41-4420	SPRING,INTAKE	12	SN: 13137-@
18	6150-41-4411	SPRING,EXHAUST	12	SN: 13137-@
19	6150-41-5611	CROSSHEAD	12	SN: 13137-@
20	6150-41-5620	SCREW	12	SN: 13137-@
21	6150-41-5630	NUT	12	SN: 13137-@
22	6150-11-1812	GASKET (K1)	6	SN: 25721-26690
	6150-11-1811	□ GASKET	6	SN: 25720-25720
	6150-11-1810	□ GASKET (K1)	6	SN: 13137-25719
23	6610-11-1821	• GROMMET	4	SN: 25720-26690

Item	Part No.	Part Name	Qty	Options
	6150-11-1820	• GROMMET	4	SN: 13137-25719
24	6150-11-1610	BOLT	36	SN: 13137-@
25	6150-81-9160	BOLT	6	SN: 13137-@

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 0101

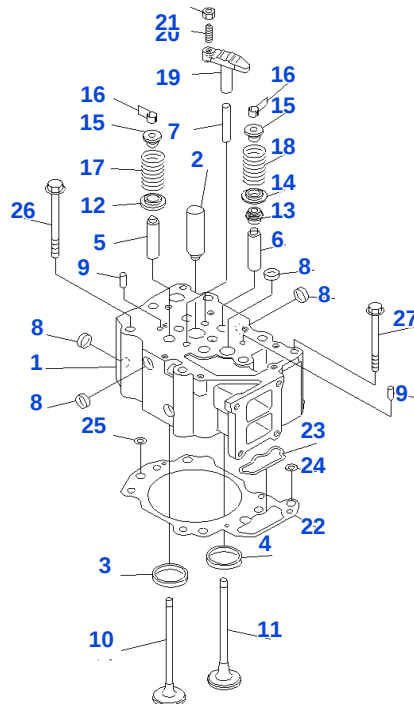

PJ35048

Reference: 0101A


030020 CYLINDER HEAD(#26691-)

Item	Part No.	Part Name	Qty	Options
1	6151-11-1300	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 27090-UP
	6151-11-1100	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 13137-27089
	• ☆ HEAD		1	SN: 27090-UP
	• ☆ HEAD		1	SN: 13137-27089
2	6136-11-1130	• SLEEVE	1	SN: 13137-UP
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 13137-UP
	6150-19-1331	• INSERT□ 0.25MM,INTAKE VALVE (OS)	2	SN: 13137-UP
	6150-18-1331	• INSERT□ 0.50MM,INTAKE VALVE (OS)	2	SN: 13137-UP
	6150-17-1331	• INSERT□ 0.75MM,INTAKE VALVE (OS)	2	SN: 13137-UP
	6150-16-1331	• INSERT□ 1.00MM,INTAKE VALVE (OS)	2	SN: 13137-UP
	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 13137-UP
4	6150-19-1320	• INSERT□ 0.25MM,EXHAUST VALVE (OS)	2	SN: 13137-UP
	6150-18-1320	• INSERT□ 0.50MM,EXHAUST VALVE (OS)	2	SN: 13137-UP
	6150-17-1320	• INSERT□ 0.75MM,EXHAUST VALVE (OS)	2	SN: 13137-UP
	6150-16-1320	• INSERT□ 1.00MM,EXHAUST VALVE (OS)	2	SN: 13137-UP
	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 13137-UP
5	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 13137-UP
6	6150-11-1140	• GUIDE	2	SN: 13137-UP
7	6162-13-1150	• PLUG	8	SN: 13137-UP
8	04020-00820	• PIN,DOWEL	2	SN: 13137-UP
9	6150-41-4111	VALVE,INTAKE	12	SN: 13137-UP
10	6150-41-4210	VALVE,EXHAUST	12	SN: 13137-UP
11	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 13137-UP
12	6140-41-4540	SEAL,EXHAUST VALVE (K1)	12	SN: 13137-UP
13	6150-41-4430	SEAT,LOWER	12	SN: 13137-UP
14	6150-41-4510	SEAT,UPPER	24	SN: 13137-UP
15	6136-42-4520	COTTER	48	SN: 13137-UP
16	6150-41-4420	SPRING,INTAKE	12	SN: 13137-UP
17	6150-41-4411	SPRING,EXHAUST	12	SN: 13137-UP
18	6150-41-5611	CROSSHEAD	12	SN: 13137-UP
19	6150-41-5620	SCREW	12	SN: 13137-UP
20	6150-41-5630	NUT	12	SN: 13137-UP
21	6150-17-1812	GASKET (K1)	6	SN: 26691-UP
22	6150-11-1920	• GROMMET,OIL	1	SN: 26691-UP
23				

Item	Part No.	Part Name	Qty	Options
24	6150-11-1930	• GROMMET,OIL	1	SN: 26691-UP
25	6150-11-1940	• GROMMET,WATER	4	SN: 26691-UP
26	6150-11-1610	BOLT	36	SN: 13137-UP
27	6150-81-9160	BOLT	6	SN: 13137-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0101A

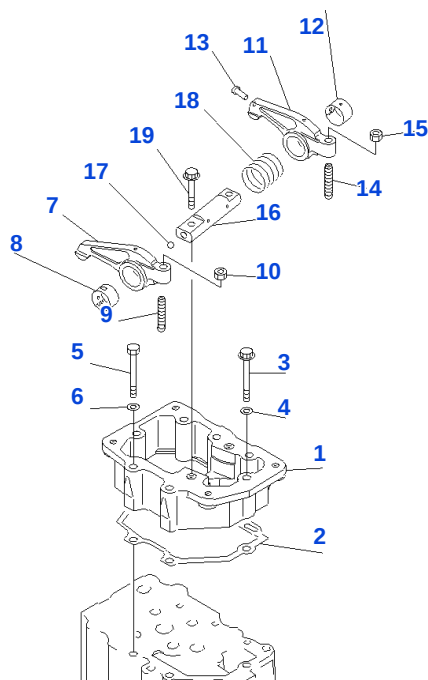

PJ37127


Reference: 0111

030030 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING	6	SN: 13137-UP
2	6150-11-7810	GASKET (K1)	6	SN: 13137-UP
3	6150-81-9140	BOLT	40	SN: 13137-UP
4	01643-31032	WASHER	40	SN: 30127-UP
	01640-21016	□ WASHER	40	SN: 13137-30126
5	01010-51095	BOLT	2	SN: 13137-UP
6	01640-21016	WASHER	2	SN: 13137-UP
	6150-41-5400	ARM ASS'Y,INTAKE	6	SN: 13137-UP
7		• ☆ ARM,ROCKER	1	SN: 13137-UP
8	6150-41-5420	• BUSHING	1	SN: 13137-UP
9	6150-41-5540	SCREW	6	SN: 13137-UP
10	01582-01008	NUT	6	SN: 13137-UP
11	6150-41-5500	ARM ASS'Y,EXHAUST	6	SN: 13137-UP
		• ☆ ARM,ROCKER	1	SN: 13137-UP
12	6150-41-5420	• BUSHING	1	SN: 13137-UP
13	6162-43-5340	• RIVET	1	SN: 13137-UP
14	6150-41-5540	SCREW	6	SN: 13137-UP
15	01582-01008	NUT	6	SN: 13137-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 13137-UP
16		• ☆ SHAFT	1	SN: 13137-UP
17	6150-81-8420	• BALL	1	SN: 13137-UP
18	6150-41-5320	SPRING	6	SN: 13137-UP
19	6150-81-9370	BOLT	12	SN: 13137-UP

Catalog signs: □ part above may be used instead ☆ not supplied separately: assembly only

Reference: 0111

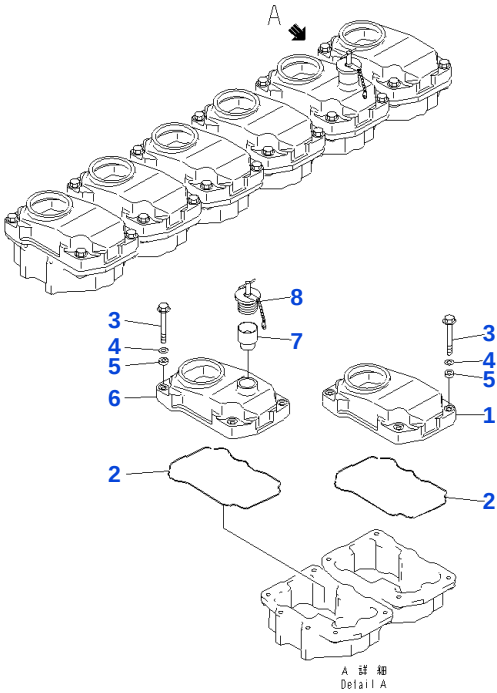

PJ30389


Reference: 0115

030040 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8111	COVER,HEAD□ NO.1□2□3□4□6	5	SN: 13137-UP
2	6150-11-8810	GASKET (K1)	6	SN: 13137-UP
3	6150-81-9370	BOLT	24	SN: 21389-UP
	6150-81-9170	□ BOLT	24	SN: 13137-21388
4	01640-21016	WASHER	24	SN: 13137-UP
5	6150-11-8820	RUBBER (K1)	24	SN: 13137-UP
	6151-11-8820	RUBBER,(B)	24	SN: 26689-UP
6	6150-11-8151	COVER,HEAD□ NO.5	1	SN: 13137-UP
7	6150-21-6520	TUBE	1	SN: 13137-UP
8	07025-00050	CAP	1	SN: 13137-UP
	07025-10050	CAP,(B)	1	SN: 26689-UP

Catalog signs: □ part above may be used instead

Reference: 0115

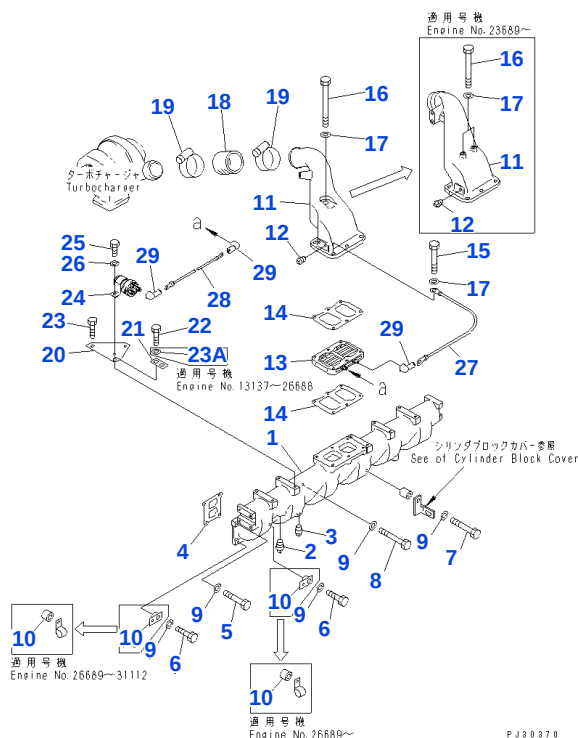

Reference: 0131


030050 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
	6151-11-4910	INTAKE MANIFOLD A.	1	SN: 13137-UP
1		• ☆ MANIFOLD	1	SN: 13137-UP
2	07042-00415	• PLUG	1	SN: 13137-UP
3	07042-00108	• PLUG	2	SN: 13137-UP
4	6150-11-4810	GASKET (K1)	6	SN: 13137-UP
5	01010-51030	BOLT	13	SN: 31113-UP
	01010-51030	BOLT	12	SN: 13137-31112
6	01010-51045	BOLT	2	SN: 31113-UP
	01010-51045	BOLT	3	SN: 13137-31112
7	01010-51060	BOLT	1	SN: 13137-UP
8	01011-51010	BOLT	8	SN: 13137-UP
9	01640-21016	WASHER	24	SN: 13137-UP
10	6631-11-6390	SPACER	2	SN: 31113-UP
	6631-11-6390	SPACER	3	SN: 26689-31112
	6151-81-4120	BRACKET	3	SN: 13137-26688
11	6151-11-4361	CONNECTOR	1	SN: 23689-UP
	6151-11-4360	CONNECTOR	1	SN: 13137-23688
12	07042-00108	PLUG	1	SN: 13137-UP
13	600-815-3810	HEATER,RIBBON	1	SN: 13137-UP
14	6150-11-4820	GASKET (K1)	2	SN: 13137-UP
15	01010-51055	BOLT	4	SN: 23689-UP
	01010-51055	BOLT	5	SN: 13137-23688
16	01011-51075	BOLT	2	SN: 23689-UP
	01011-51080	BOLT	1	SN: 13137-23688
17	01640-21016	WASHER	6	SN: 13137-UP
18	6151-11-4410	HOSE	1	SN: 23689-UP
	6151-11-4420	HOSE	1	SN: 13137-23688
19	07281-00909	CLAMP	2	SN: 13137-UP
20	6151-81-4510	BRACKET	1	SN: 13137-UP
21	6136-81-4540	PLATE	1	SN: 13137-26688
	6136-81-4540	PLATE,(WITH WATER SEPARATOR)	1	SN: 13137-UP
22	01010-51020	BOLT	1	SN: 26689-UP
	01010-51025	BOLT	1	SN: 13137-26688
	01010-51035	BOLT,(WITH WATER SEPARATOR)	1	SN: 13137-UP

Item	Part No.	Part Name	Qty	Options
23	01010-51020	BOLT	1	SN: 13137-UP
	01010-51030	BOLT,(WITH WATER SEPARATOR)	1	SN: 13137-UP
23A	01640-21016	WASHER	1	SN: 13137-26688
24	600-815-2170	SWITCH,HEATER	1	SN: 13137-UP
25	01010-50610	BOLT	2	SN: 13137-UP
26	01640-20610	WASHER	2	SN: 13137-UP
27	6678-81-4340	WIRE▯ 170MM	1	SN: 13137-UP
28	6151-81-4420	WIRE▯ 160MM	1	SN: 13137-UP
29	08038-00519	CAP	3	SN: 13137-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0131

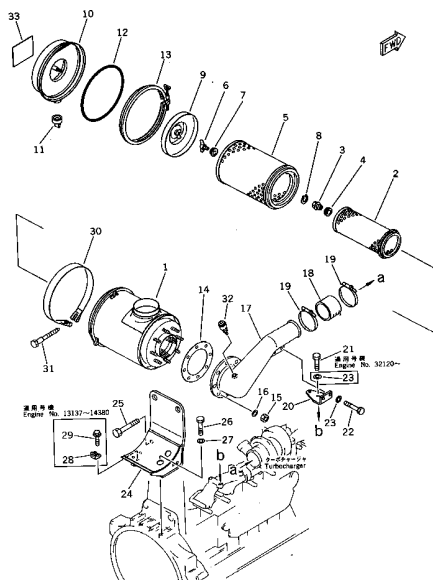

Reference: 0141

030060 AIR CLEANER AND MOUNTING

Item	Part No.	Part Name	Qty	Options
1	6151-81-7700	AIR CLEANER ASS'Y	1	SN: 13820-UP
	6692-81-7302	AIR CLEANER ASS'Y	1	SN: 13137-13819
	6692-81-7311	• BODY	1	SN: 13137-UP
	6125-81-7032	• ELEMENT ASS'Y	1	SN: 13137-UP
2		• ☆ ELEMENT, INNER	1	SN: 13137-UP
3	600-181-9671	• NUT	1	SN: 13137-UP
4	600-181-7511	• WASHER, SEAL	1	SN: 13137-UP
	600-181-4300	• ELEMENT ASS'Y, OUTER	1	SN: 13137-UP
5		• ☆ ELEMENT, OUTER	1	SN: 13137-UP
6	600-181-1990	• NUT, WING	1	SN: 13137-UP
7	600-181-4591	• WASHER, SEAL	1	SN: 13137-UP
8	04064-01510	• RING, SNAP	1	SN: 13137-UP
9	6710-82-7130	• BAFFLE	1	SN: 13137-UP
10	6710-82-7121	• CUP	1	SN: 13137-UP
11	600-181-1590	• VALVE	1	SN: 13137-UP
12	6127-81-7190	• O-RING	1	SN: 13137-UP
13	600-181-1490	• CLAMP	1	SN: 13820-UP
	600-181-1480	• CLAMP	1	SN: 13137-13819
14	6127-81-4821	GASKET (K1)	1	SN: 13137-UP
15	01582-11008	NUT	8	SN: 13137-UP
16	01640-21016	WASHER	8	SN: 13137-UP
17	6151-11-4270	CONNECTOR	1	SN: 23689-UP
	6151-11-4260	CONNECTOR	1	SN: 13137-23688
18	6151-11-4450	HOSE	1	SN: 23689-UP
	6151-11-4460	HOSE	1	SN: 13137-23688
19	07281-01159	CLAMP	2	SN: 13137-UP
20	6151-11-4650	BRACKET	1	SN: 13137-UP
21	01010-51025	BOLT	2	SN: 13137-UP
22	01010-51030	BOLT	2	SN: 13137-UP
23	01640-21016	WASHER	4	SN: 32120-UP
	01640-21016	WASHER	2	SN: 13137-32119
24	6151-11-4560	BRACKET	1	SN: 13137-UP
25	01010-51660	BOLT	2	SN: 13137-UP
26	01010-51025	BOLT	2	SN: 13137-UP
27	01640-21016	WASHER	2	SN: 13137-UP
28	6144-11-8951	STAY	2	SN: 13137-14380
29	01435-20812	BOLT	2	SN: 13137-14380
30	6127-11-4360	BAND ASS'Y	1	SN: 13137-UP
	6691-21-6550	• PIN	1	SN: 13137-UP
	6691-21-6560	• PIN WITH THREAD	1	SN: 13137-UP
31	6643-11-4641	BOLT	1	SN: 13137-UP
32	08670-02001	INDICATOR, DUST (JAPANESE-ENGLISH)	1	SN: 15114-UP
	08670-01635	□ INDICATOR, DUST (JAPANESE-ENGLISH)	1	SN: 13137-15113
	08670-01641	INDICATOR, DUST (ENGLISH-FRENCH)	1	SN: 13137-UP
	08670-11635	INDICATOR, DUST (ENGLISH-SPANISH)	1	SN: 13137-UP
	08670-11645	INDICATOR, DUST (ENGLISH-INDONESIAN)	1	SN: 13137-UP
	08670-21635	INDICATOR, DUST (ENGLISH-GERMAN)	1	SN: 13137-UP

Item	Part No.	Part Name	Qty	Options
33	08670-21640	INDICATOR,DUST (ENGLISH-ITALIAN)	1	SN: 13137-UP
	08670-31640	INDICATOR,DUST (CHINESE)	1	SN: 13137-UP
	08670-31645	INDICATOR,DUST (ENGLISH-PERSIAN)	1	SN: 13137-UP
	08670-41635	INDICATOR,DUST (ENGLISH-GREEK)	1	SN: 13137-UP
	08670-41640	INDICATOR,DUST (ENGLISH-ARABIC)	1	SN: 13137-UP
	09637-00161	PLATE▣ INSTRUCTION,(ENGLISH-JAPANESE)	1	SN: 13137-UP
	09637-02161	PLATE▣ INSTRUCTION,(ARABIC-ENGLISH)	1	SN: 13137-UP
	09637-04161	PLATE▣ INSTRUCTION,(PERSIAN-ENGLISH)	1	SN: 13137-UP
	09637-05161	PLATE▣ INSTRUCTION,(INDONESIAN-ENGLISH)	1	SN: 13137-UP
	09637-30161	PLATE▣ INSTRUCTION,(ENGLISH)	1	SN: 13137-UP
	09637-30262	PLATE▣ INSTRUCTION,(FRENCH-ENGLISH)	1	SN: 13137-UP
	09637-40261	PLATE▣ INSTRUCTION,(ITALIAN-ENGLISH)	1	SN: 13137-UP
	09637-60161	PLATE▣ INSTRUCTION,(GREEK-ENGLISH)	1	SN: 13137-UP
	09637-70161	PLATE▣ INSTRUCTION,(SPANISH-ENGLISH)	1	SN: 13137-UP
	09637-81161	PLATE▣ INSTRUCTION,(GERMAN-ENGLISH)	1	SN: 13137-UP
	09637-90261	PLATE▣ INSTRUCTION,(CHINESE)	1	SN: 13137-UP

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 0141

Get the complete PDF catalogue

Komatsu S6D125-1S S/N 13137-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.