


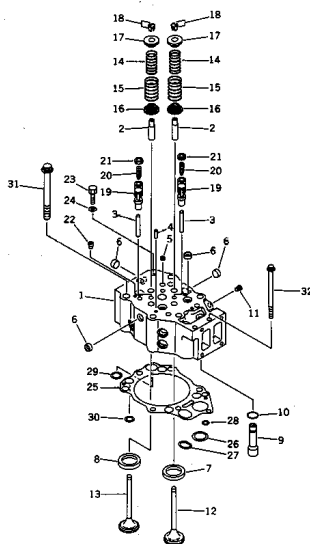

Reference: 0101


030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6211-11-1101	CYLINDER HEAD ASS'Y, VALVE LESS	6	SN: 18682-UP
1		• ☆ HEAD, CYLINDER	1	SN: 18682-UP
2	6210-16-1340	• GUIDE, VALVE	4	SN: 18682-UP
3	6210-11-1140	• GUIDE, CROSSHEAD	2	SN: 18682-UP
4	04020-00820	• PIN, DOWEL	2	SN: 18682-UP
5	07046-41810	• PLUG	1	SN: 18682-UP
6	6162-13-1150	• PLUG, EXPANSION	12	SN: 18682-UP
7	6210-11-1330	• INSERT, INTAKE VALVE (STD)	2	SN: 18682-UP
	6210-19-1330	• INSERT ? 0.25MM, INTAKE VALVE (OS)	2	SN: 18682-UP
	6210-18-1330	• INSERT ? 0.50MM, INTAKE VALVE (OS)	2	SN: 18682-UP
	6210-17-1330	• INSERT ? 0.75MM, INTAKE VALVE (OS)	2	SN: 18682-UP
	6210-16-1330	• INSERT ? 1.00MM, INTAKE VALVE (OS)	2	SN: 18682-UP
8	6210-11-1321	• INSERT, EXHAUST VALVE (STD)	2	SN: 18682-UP
	6210-19-1321	• INSERT ? 0.25MM, EXHAUST VALVE (OS)	2	SN: 18682-UP
	6210-18-1321	• INSERT ? 0.50MM, EXHAUST VALVE (OS)	2	SN: 18682-UP
	6210-17-1321	• INSERT ? 0.75MM, EXHAUST VALVE (OS)	2	SN: 18682-UP
	6210-16-1321	• INSERT ? 1.00MM, EXHAUST VALVE (OS)	2	SN: 18682-UP
9	6210-11-1150	• PIPE	1	SN: 18682-UP
10	07000-63025	• O-RING (K1)	1	SN: 18682-UP
11	07043-50108	• PLUG	1	SN: 18682-UP
12	6215-41-4110	VALVE, INTAKE	12	SN: 18682-UP
13	6215-41-4212	VALVE, EXHAUST	12	SN: 18682-UP
14	6210-41-4440	SPRING, INNER	24	SN: 18682-UP
15	6210-41-4430	SPRING, OUTER	24	SN: 18682-UP
16	6210-41-4530	SEAT, LOWER	24	SN: 18682-UP
17	6210-41-4510	SEAT, UPPER	24	SN: 18682-UP
18	6136-41-4520	COTTER	48	SN: 18682-UP
19	6210-41-5620	CROSSHEAD	12	SN: 18682-UP
20	6210-41-5640	SCREW	12	SN: 18682-UP
21	6127-41-5630	NUT	12	SN: 18682-UP
22	02720-40104	PLUG	6	SN: 18682-UP
23	01010-51016	BOLT	6	SN: 18682-UP
24	07003-01015	GASKET STANDARD	6	SN: 18682-UP
25	6210-17-1813	GASKET, HEAD (K1)	6	SN: 18682-UP
26	6210-11-1820	• GROMMET, OIL	1	SN: 18682-UP
27	6210-11-1830	• GROMMET, OIL	1	SN: 18682-UP
28	6210-11-1840	• GROMMET, OIL	1	SN: 18682-UP
29	6210-11-1962	• GROMMET, WATER	1	SN: 18682-UP
30	6210-11-1952	• GROMMET, WATER OVERSIZE 0.40MM	4	SN: 18682-UP
25	6210-19-1813	GASKET, HEAD	6	SN: 18682-UP
26	6210-19-1820	• GROMMET, OIL	1	SN: 18682-UP
27	6210-19-1830	• GROMMET, OIL	1	SN: 18682-UP
28	6210-19-1840	• GROMMET, OIL	1	SN: 18682-UP
29	6210-19-1962	• GROMMET, WATER	1	SN: 18682-UP
30	6210-19-1952	• GROMMET, WATER	4	SN: 18682-UP

Item	Part No.	Part Name	Qty	Options
31	6210-11-1610	BOLT	36	SN: 18682-UP
32	6150-81-9160	BOLT	6	SN: 18682-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0101

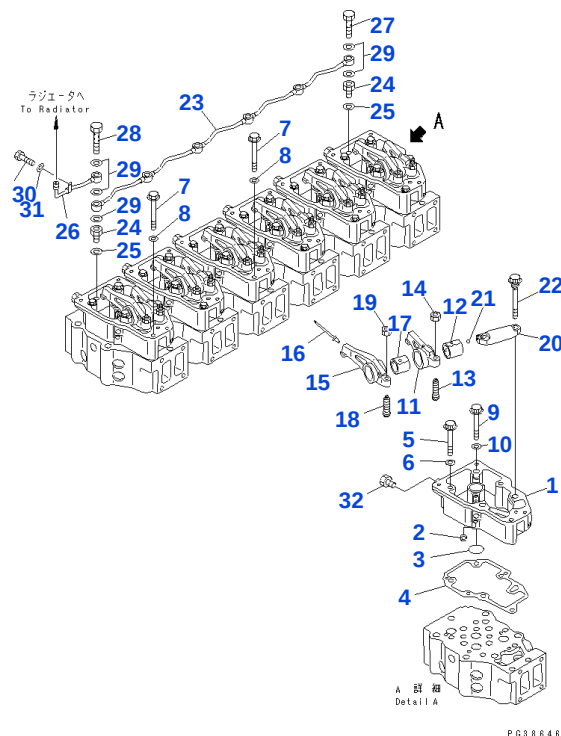

Reference: 0111


030020 ROCKER ARM AND HOUSING(#18682-19971)

Item	Part No.	Part Name	Qty	Options
	6210-11-7100	HOUSING ASS'Y	6	SN: 18682-19971
1		• ☆ HOUSING,ROCKER ARM	1	SN: 18682-19971
2	07046-41008	• PLUG	3	SN: 18682-19971
3	6210-11-7131	O-RING (K1)	6	SN: 18682-19971
4	6210-11-7811	GASKET (K1)	6	SN: 18682-19971
5	6210-81-8140	BOLT	16	SN: 18682-19971
6	01643-51032	WASHER	16	SN: 18682-19971
7	01437-01090	BOLT	2	SN: 18682-19971
8	01643-51032	WASHER	2	SN: 18682-19971
9	6210-81-8330	BOLT	6	SN: 18682-19971
10	01643-51232	WASHER	6	SN: 18682-19971
	6210-41-5400	ROCKER ARM ASS'Y,INTAKE	6	SN: 18682-19971
11		• ☆ ARM,ROCKER	1	SN: 18682-19971
12	6210-41-5420	• BUSHING	1	SN: 18682-19971
13	6150-41-5540	SCREW	6	SN: 18682-19971
14	01582-01008	NUT	6	SN: 18682-19971
	6210-41-5500	ROCKER ARM ASS'Y,EXHAUST	6	SN: 18682-19971
15		• ☆ ARM,ROCKER	1	SN: 18682-19971
16	6162-43-5340	• RIVET	1	SN: 18682-19971
17	6210-41-5420	• BUSHING	1	SN: 18682-19971
18	6150-41-5540	SCREW	12	SN: 18682-19971
19	01582-01008	NUT	12	SN: 18682-19971
	6210-41-5302	ROCKER ARM SHAFT A.	6	SN: 18682-19971
20		• ☆ SHAFT	1	SN: 18682-19971
21	6150-81-8420	• BALL	1	SN: 18682-19971
22	6210-81-8310	BOLT	12	SN: 18682-19971
23	6210-11-6520	TUBE,AIR	1	SN: 18682-19971
24	6210-11-6560	JOINT	6	SN: 18682-19971
25	07003-01015	GASKET (K1)	6	SN: 18682-19971
26	6210-11-6610	TUBE	1	SN: 18682-19971
27	07206-30710	BOLT,JOINT	5	SN: 18682-19971
28	6215-11-6560	BOLT,JOINT	1	SN: 18682-19971
29	07005-01012	GASKET (K1)	13	SN: 18682-19971
30	01050-31020	BOLT	1	SN: 18682-19971

Item	Part No.	Part Name	Qty	Options
31	01640-21016	WASHER	1	SN: 18682-19971
32	07040-11007	PLUG	5	SN: 18682-19971

Catalog signs: ☆ not supplied separately; assembly only

Reference: 0111

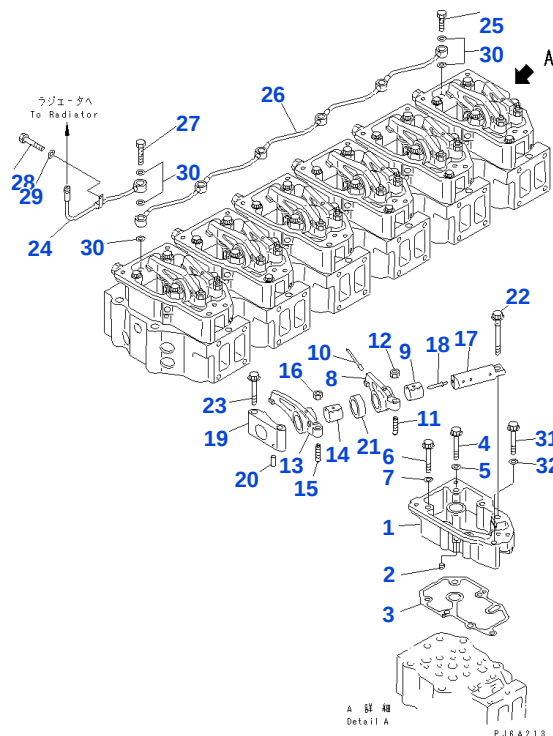

Reference: 0111A


030030 ROCKER ARM AND HOUSING(#19972-)

Item	Part No.	Part Name	Qty	Options
	6210-11-7101	HOUSING ASS'Y	6	SN: 19972-UP
1		• ☆ HOUSING,ROCKER ARM	1	SN: 19972-UP
2	07046-41008	• PLUG,EXPANSION	3	SN: 19972-UP
3	6210-11-7830	GASKET (K1)	6	SN: 19972-UP
4	01437-01280	BOLT	6	SN: 19972-UP
5	01643-51232	WASHER	6	SN: 19972-UP
6	01437-11080	BOLT	16	SN: 20240-UP
	6210-81-8120	◆ BOLT	16	SN: 19972-20239
7	01643-51032	WASHER	16	SN: 19972-UP
	6210-41-5041	ROCKER ARM ASS'Y	6	SN: 19972-UP
	6210-41-5401	• ROCKER ARM ASS'Y	1	SN: 19972-UP
8		• • ☆ ARM,INTAKE	1	SN: 19972-UP
9	6210-41-5421	• • BUSHING	1	SN: 19972-UP
10	6162-43-5340	• • RIVET	1	SN: 19972-UP
11	6150-41-5540	• SCREW	1	SN: 19972-UP
12	01582-01008	• NUT	1	SN: 19972-UP
	6210-41-5051	ROCKER ARM ASS'Y	6	SN: 19972-UP
	6210-41-5501	• ROCKER ARM ASS'Y	1	SN: 19972-UP
13		• • ☆ ARM,EXHAUST	1	SN: 19972-UP
14	6210-41-5520	• • BUSHING	1	SN: 19972-UP
15	6150-41-5540	• SCREW	1	SN: 19972-UP
16	01582-01008	• NUT	1	SN: 19972-UP
	6210-41-5303	ROCKER ARM SHAFT A.	6	SN: 19972-UP
17		• ☆ SHAFT	1	SN: 19972-UP
18	6162-43-5340	• RIVET	1	SN: 19972-UP
19	6210-41-5530	BRACKET	6	SN: 19972-UP
20	04020-00514	PIN,DOWEL	6	SN: 19972-UP
21	6210-41-5440	COLLAR	6	SN: 19972-UP
22	6210-81-8310	BOLT	6	SN: 19972-UP
23	01438-01220	BOLT	12	SN: 19972-UP
24	6210-11-6611	TUBE	1	SN: 19972-UP
25	07206-30710	BOLT,JOINT	5	SN: 19972-UP
26	6210-11-6521	TUBE	1	SN: 19972-UP
27	6215-11-6560	BOLT,JOINT	1	SN: 19972-UP

Item	Part No.	Part Name	Qty	Options
28	01050-31020	BOLT	1	SN: 19972-UP
29	01640-21016	WASHER	1	SN: 19972-UP
30	07003-01015	GASKET (K1)	13	SN: 19972-UP
31	01437-01090	BOLT,(FOR NO ?1 AND NO ?3 HOUSING)	2	SN: 19972-UP
32	01643-51032	WASHER	2	SN: 19972-UP

Catalog signs: ☆ not supplied separately: assembly only ◆ interchangeable with part above

Reference: 0111A

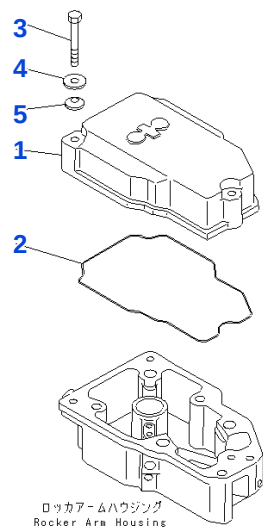


P G 3 0 4 0 2

Reference: 0115

030040 ROCKER ARM HOUSING COVER(#18682-19971)

Item	Part No.	Part Name	Qty	Options
1	6210-11-8110	COVER,ROCKER ARM HOUSING	6	SN: 18682-19971
2	6210-11-8811	GASKET (K1)	6	SN: 18682-19971
3	01010-50865	BOLT	18	SN: 18682-19971
4	6210-11-8120	WASHER	18	SN: 18682-19971
5	6210-11-8141	RUBBER (K1)	18	SN: 18682-19971

Reference: 0115

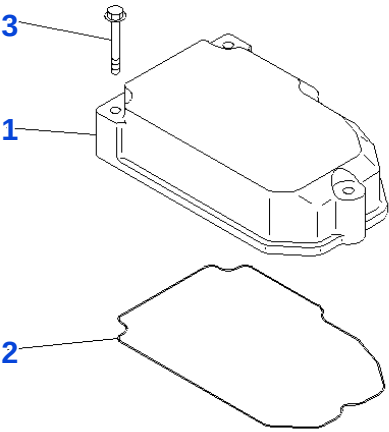


PD30137

Reference: 0115A

030050 ROCKER ARM HOUSING COVER(#19972-)

Item	Part No.	Part Name	Qty	Options
1	6210-11-8111	COVER,ROCKER ARM HOUSING	6	SN: 19972-UP
2	6210-11-8820	GASKET (K1)	6	SN: 19972-UP
3	01435-00855	BOLT	18	SN: 19972-UP

Reference: 0115A

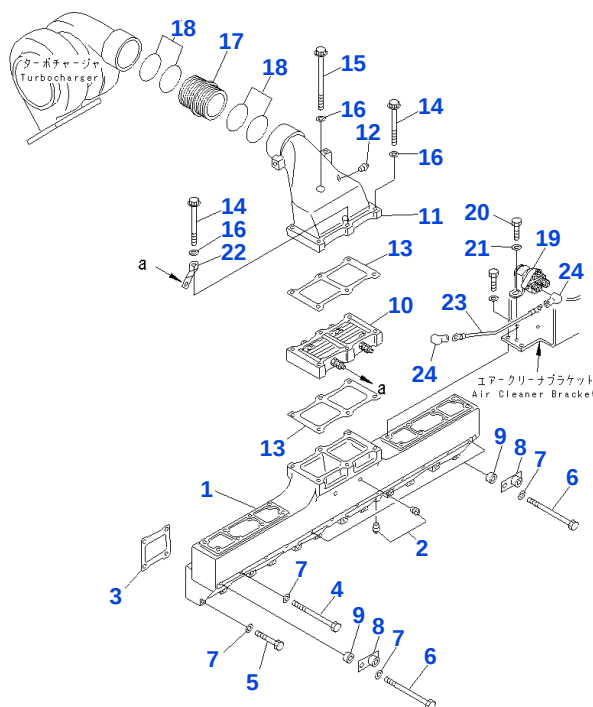


P 65 7 15 7

Reference: 0131

030060 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
1	6211-11-4110	MANIFOLD,INTAKE	1	SN: 18682-UP
2	07042-00108	PLUG	2	SN: 18682-UP
3	6210-11-4810	GASKET (K1)	6	SN: 18682-UP
4	01011-51035	BOLT	8	SN: 18682-UP
5	01010-51075	BOLT	12	SN: 18682-UP
6	01011-51050	BOLT	4	SN: 18682-UP
7	01640-21016	WASHER	24	SN: 18682-UP
8	426-06-11570	BRACKET	4	SN: 18682-UP
9	6131-12-5920	SPACER	4	SN: 18682-UP
10	600-815-4280	HEATER,RIBBON	1	SN: 18682-UP
11	6211-11-4321	CONNECTOR,AIR	1	SN: 18682-UP
12	07042-00108	PLUG	1	SN: 18682-UP
13	6211-11-4820	GASKET (K1)	2	SN: 18682-UP
14	6150-81-9140	BOLT	5	SN: 18682-UP
15	6210-81-8170	BOLT	1	SN: 18682-UP
16	01641-21016	WASHER	6	SN: 18682-UP
17	6211-11-4410	CONNECTOR,AIR	1	SN: 18682-UP
18	02895-67075	O-RING (K1)	4	SN: 18682-UP
19	600-815-2170	SWITCH,HEATER	1	SN: 18682-UP
20	01010-50610	BOLT	2	SN: 18682-UP
21	01640-20610	WASHER	2	SN: 18682-UP
22	6211-81-4330	PLATE	1	SN: 18682-UP
23	6211-81-4240	WIRE ? 230MM	1	SN: 18682-UP
24	08038-00519	CAP	2	SN: 18682-UP

Reference: 0131

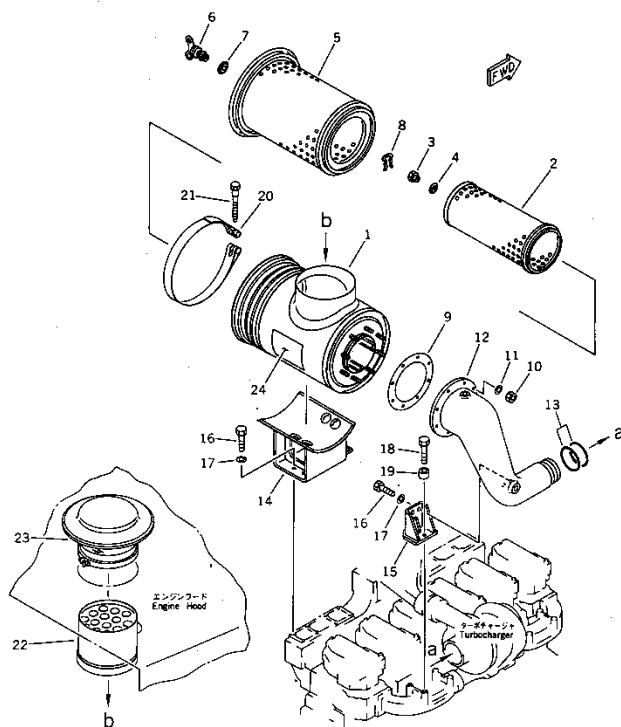

Reference: 0141

030070 AIR CLEANER AND MOUNTING

Item	Part No.	Part Name	Qty	Options
1	6127-82-7115	BODY,AIR CLEANER	1	SN: 18682-UP
	6128-81-7042	ELEMENT ASS'Y	1	SN: 18682-UP
2		• ☆ ELEMENT,INNER	1	SN: 18682-UP
3	600-181-4370	• NUT	1	SN: 18682-UP
4	600-181-7511	• WASHER,SEAL	1	SN: 18682-UP
	600-181-4400	• ELEMENT ASS'Y,OUTER	1	SN: 18682-UP
5		• • ☆ ELEMENT,OUTER	1	SN: 18682-UP
6	600-181-4420	• • NUT,WING	1	SN: 18682-UP
7	600-181-4440	• • GASKET	1	SN: 18682-UP
8	600-181-4430	• • CLIP	1	SN: 18682-UP
9	6127-81-4821	GASKET (K1)	1	SN: 18682-UP
10	01580-11008	NUT	8	SN: 18682-UP
11	01640-21016	WASHER	8	SN: 18682-UP
12	6211-11-4340	CONNECTOR,AIR	1	SN: 18682-UP
13	02895-67081	O-RING (K1)	2	SN: 18682-UP
14	6211-11-4730	BRACKET	1	SN: 18682-UP
15	6211-11-4710	BRACKET	1	SN: 18682-UP
16	01010-51025	BOLT	8	SN: 18682-UP
17	01642-21016	WASHER	8	SN: 18682-UP
18	01010-31040	BOLT	2	SN: 18682-UP
19	6631-11-5630	SPACER	2	SN: 18682-UP
20	6127-11-4360	BAND ASS'Y	1	SN: 18682-UP
	6691-21-6550	• PIN	1	SN: 18682-UP
	6691-21-6560	• PIN ? WITH THREAD	1	SN: 18682-UP
21	6643-11-4641	BOLT	1	SN: 18682-UP
22	600-181-5710	PRE-CLEANER ASS'Y	1	SN: 18682-UP
23	600-181-4740	HOOD	1	SN: 18682-UP
24	09637-00161	PLATE ? INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 18682-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0141

Get the complete PDF catalogue

Komatsu S6D140-1X S/N 18682-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.