


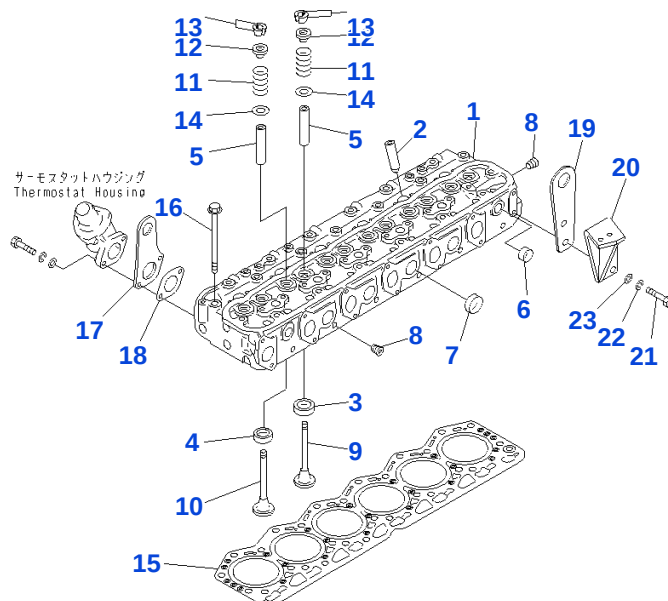


PJ30086

Reference: 0101

030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6138-12-1010	CYLINDER HEAD ASS'Y,WITH VALVE	1	SN: 50001-UP
	6138-12-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 50001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 50001-UP
2	6136-11-1130	• SLEEVE,HOLDER	6	SN: 50001-UP
3	6138-12-1310	• SEAT,INTAKE VALVE (STD)	6	SN: 50001-UP
3	6138-19-1310	• SEAT, 0.25MM,INTAKE VALVE (OS)	6	SN: 50001-UP
3	6138-18-1310	• SEAT, 0.50MM,INTAKE VALVE (OS)	6	SN: 50001-UP
3	6138-17-1310	• SEAT, 0.75MM,INTAKE VALVE (OS)	6	SN: 50001-UP
3	6138-16-1310	• SEAT, 1.00MM,INTAKE VALVE (OS)	6	SN: 50001-UP
4	6136-12-1320	• SEAT,EXHAUST VALVE (STD)	6	SN: 50001-UP
4	6136-19-1420	• SEAT, 0.25MM,EXHAUST VALVE (OS)	6	SN: 50001-UP
4	6136-18-1420	• SEAT, 0.50MM,EXHAUST VALVE (OS)	6	SN: 50001-UP
4	6136-17-1420	• SEAT, 0.75MM,EXHAUST VALVE (OS)	6	SN: 50001-UP
4	6136-16-1420	• SEAT, 1.00MM,EXHAUST VALVE (OS)	6	SN: 50001-UP
5	6136-19-1430	• △ GUIDE,VALVE	12	SN: 50001-UP
6	07046-42816	• PLUG	13	SN: 50001-UP
7	07046-44016	• PLUG	4	SN: 50001-UP
8	07043-50108	• PLUG	7	SN: 50001-UP
9	6138-42-4110	• VALVE,INTAKE	6	SN: 50001-UP
10	6136-42-4210	• VALVE,EXHAUST	6	SN: 50001-UP
11	6136-42-4410	• SPRING,VALVE	12	SN: 50001-UP
12	6136-42-4510	• GUIDE,SPRING	12	SN: 50001-UP
13	6136-42-4520	• COTTER,VALVE	24	SN: 50001-UP
14	6136-41-4530	• SEAT,SPRING	12	SN: 50001-UP
15	6138-19-1810	GASKET,HEAD (K1)	1	SN: 50001-UP
16	6136-12-1610	BOLT,HEAD	26	SN: 50001-UP
17	6136-11-1910	HANGER,FRONT	1	SN: 50001-UP
18	6136-11-1821	GASKET (K1)	1	SN: 50001-UP
19	6136-11-1920	HANGER,REAR	1	SN: 50001-UP
20	6138-11-4290	BRACKET	1	SN: 50001-UP
21	01010-31030	BOLT	2	SN: 50001-UP
22	01602-01030	WASHER,SPRING	2	SN: 50001-UP
23	01640-21016	WASHER	2	SN: 50001-UP

Catalog signs: ☆ not supplied separately: assembly only △ semi-finished: additional work required

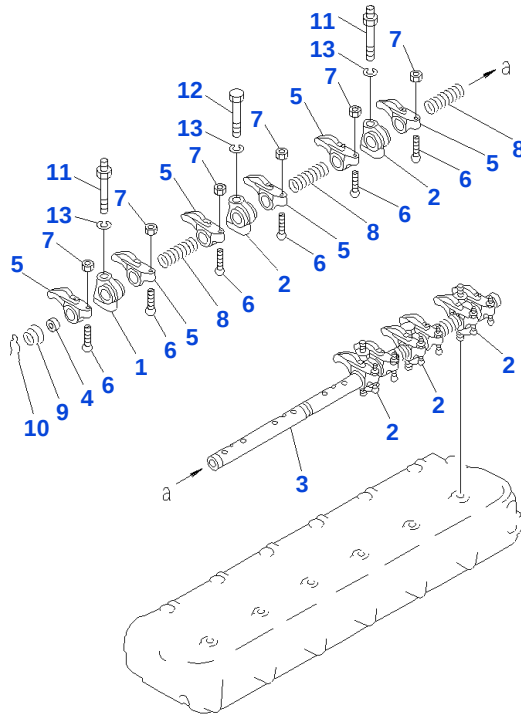

P W 2 6 7 7


Reference: 0111

030020 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
	6138-42-5100	ROCKER ARM ASS'Y	1	SN: 50001-UP
1	6138-42-5110	• BRACKET	1	SN: 50001-UP
2	6138-42-5120	• BRACKET	5	SN: 50001-UP
	6138-42-5020	• ROCKER ARM SHAFT A.	1	SN: 50001-UP
3		• ☆ SHAFT	1	SN: 50001-UP
4	6142-42-5550	• • PLUG	2	SN: 50001-UP
5	6136-42-5130	• ARM,ROCKER	12	SN: 50001-UP
6	6136-42-5140	• SCREW,ADJUST	12	SN: 50001-UP
7	01580-00806	• NUT,LOCK	12	SN: 50001-UP
8	6136-41-5310	• SPRING,ROCKER	5	SN: 50001-UP
9	6136-41-5320	• SPRING,CONICAL	2	SN: 50001-UP
10	6136-41-5330	• CLIP	2	SN: 50001-UP
11	6136-41-5131	STUD	4	SN: 50001-UP
12	01010-31280	BOLT	2	SN: 50001-UP
13	01602-01236	WASHER,SPRING	6	SN: 50001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0111

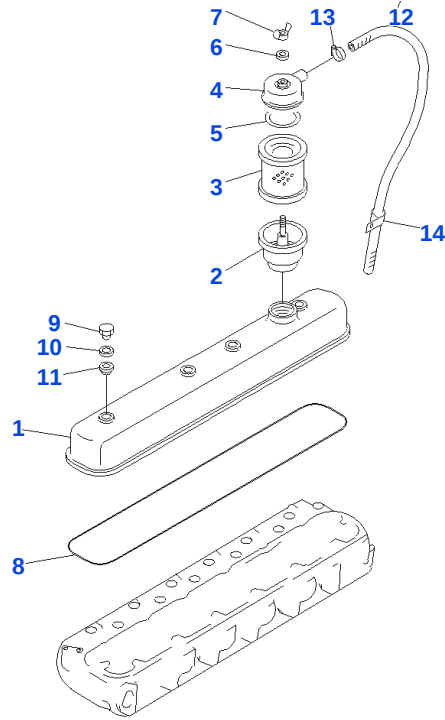


PJ30036

Reference: 0115

030030 CYLINDER HEAD COVER(#50001-53183)

Item	Part No.	Part Name	Qty	Options
	6138-11-8300	HEAD COVER ASS'Y	1	SN: 50001-53183
1	6136-11-8150	• COVER,HEAD	1	SN: 50001-53183
	6138-11-8401	• BREATHER ASS'Y	1	SN: 50001-53183
2	6138-11-8412	•• BODY	1	SN: 50001-53183
3	6138-11-8431	•• ELEMENT	1	SN: 50001-53183
4	6138-11-8420	•• COVER	1	SN: 50001-53183
5	6620-21-7530	••• GASKET	1	SN: 50001-53183
6	600-181-6510	•• SEAL (K1)	1	SN: 50001-53183
7	6138-11-8450	•• NUT,WING	1	SN: 50001-53183
8	6136-11-8812	O-RING (K1)	1	SN: 50001-53183
9	6136-11-8120	NUT	4	SN: 50001-@
10	6136-11-8130	WASHER	4	SN: 50001-@
11	6136-11-8142	PACKING (K1)	4	SN: 50001-@
12	6138-11-8851	HOSE	1	SN: 50001-@
13	07280-02523	CLAMP	1	SN: 50001-@
14	6600-01-5950	CLIP	1	SN: 50001-@

Reference: 0115

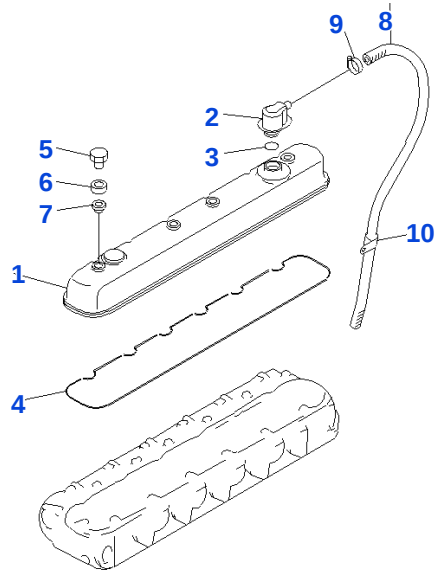


PJ32885

Reference: 0115A

030040 CYLINDER HEAD COVER(#53184-)

Item	Part No.	Part Name	Qty	Options
1	6136-11-8151	COVER,HEAD	1	SN: 53184-UP
2	6150-21-6750	BREATHER	1	SN: 53184-UP
3	6114-21-5190	O-RING (K1)	1	SN: 53184-UP
4	6136-11-8814	O-RING (K1)	1	SN: 53184-UP
5	6136-11-8120	NUT	4	SN: 50001-UP
6	6136-11-8130	WASHER	4	SN: 50001-UP
7	6136-11-8142	PACKING (K1)	4	SN: 50001-UP
8	6138-11-8851	HOSE	1	SN: 50001-UP
9	07280-02523	CLAMP	1	SN: 50001-UP
10	6600-01-5950	CLIP	1	SN: 50001-UP

Reference: 0115A

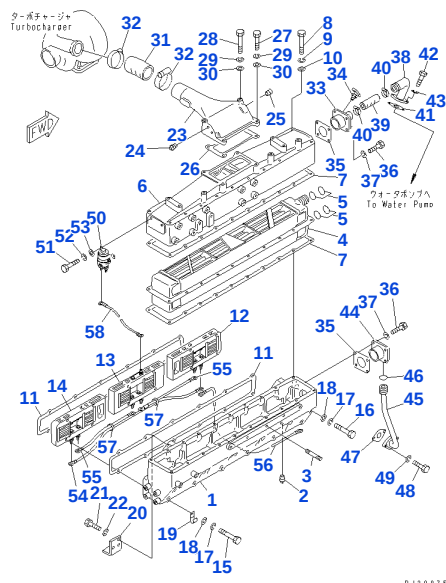


Reference: 0131

030050 AIR INTAKE MANIFOLD AND AFTER COOLER

Item	Part No.	Part Name	Qty	Options
	6138-11-4104	AFTER COOLER ASS'Y	1	SN: 50001-UP
1	6138-11-4113	• MANIFOLD,AIR INTAKE	1	SN: 50001-UP
2	07042-00108	• PLUG	2	SN: 50001-UP
3	01160-50825	• STUD	5	SN: 50001-UP
4	6138-11-4630	• CORE ASS'Y	1	SN: 50001-UP
5	6162-63-6240	• O-RING (K1)	4	SN: 50001-UP
6	6138-11-4611	• COVER	1	SN: 50001-UP
7	6138-11-4620	• GASKET (K1)	2	SN: 50001-UP
8	6140-11-8160	• BOLT	20	SN: 50001-UP
9	01602-00825	• WASHER,SPRING	20	SN: 50001-UP
10	01640-00816	• WASHER	20	SN: 50001-UP
11	6138-11-4810	GASKET (K1)	2	SN: 50001-UP
12	600-815-2620	HEATER,RIBBON	1	SN: 50001-UP
13	600-815-2630	HEATER,RIBBON	1	SN: 50001-UP
14	600-815-2640	HEATER,RIBBON	1	SN: 50001-UP
15	6138-11-4870	BOLT	6	SN: 50001-UP
16	6138-11-4880	BOLT	6	SN: 50001-UP
17	01602-00825	WASHER,SPRING	12	SN: 50001-UP
18	01640-20816	WASHER	11	SN: 50001-UP
19	08036-10810	CLIP	3	SN: 50001-UP
20	6138-11-4670	BRACKET	2	SN: 50001-UP
21	01010-31025	BOLT	10	SN: 50001-UP
22	01602-01030	WASHER,SPRING	10	SN: 50001-UP
23	6138-11-4310	CONNECTOR,AIR	1	SN: 50001-UP
24	07042-00108	PLUG	2	SN: 50001-UP
25	07043-00415	PLUG	1	SN: 50001-UP
26	6138-11-4820	GASKET (K1)	1	SN: 50001-UP
27	01010-30835	BOLT	2	SN: 50001-UP
28	01010-30880	BOLT	2	SN: 50001-UP
29	01602-00825	WASHER,SPRING	4	SN: 50001-UP
30	01640-20816	WASHER	2	SN: 50001-UP
31	6137-11-4371	HOSE,AIR	1	SN: 50001-UP
32	07281-00709	CLAMP	2	SN: 50001-UP
33	6138-61-6440	JOINT	1	SN: 50001-UP
34	07062-00000	VALVE	1	SN: 50001-UP
35	6128-61-6830	GASKET (K1)	2	SN: 50001-UP
36	01010-30825	BOLT	8	SN: 50001-UP
37	01602-00825	WASHER,SPRING	8	SN: 50001-UP
38	6138-61-6430	PIPE	1	SN: 50001-UP
39	6162-83-6290	HOSE,WATER	1	SN: 50001-UP
40	07281-00419	CLAMP	2	SN: 50001-UP
41	6138-61-6461	GASKET (K1)	1	SN: 50001-UP
42	01010-30825	BOLT	2	SN: 50001-UP
43	01602-00825	WASHER,SPRING	2	SN: 50001-UP
44	6138-61-6420	JOINT	1	SN: 50001-UP
45	6138-61-6411	PIPE	1	SN: 50001-UP
46	07000-02021	O-RING (K1)	1	SN: 50001-UP

Item	Part No.	Part Name	Qty	Options
47	6138-61-6451	GASKET (K1)	1	SN: 50001-UP
48	01010-30825	BOLT	2	SN: 50001-UP
49	01602-00825	WASHER,SPRING	2	SN: 50001-UP
50	600-815-2170	SWITCH, HEATER	1	SN: 50001-UP
51	01010-30620	BOLT	2	SN: 50001-UP
52	01602-00619	WASHER,SPRING	2	SN: 50001-UP
53	01640-20610	WASHER	2	SN: 50001-UP
54	6138-81-4240	WIRE, 600MM	1	SN: 50001-UP
55	6138-81-4230	WIRE, 250MM	2	SN: 50001-UP
56	6138-61-4250	WIRE	1	SN: 50001-UP
57	08034-00310	BAND	2	SN: 50001-UP
58	6138-81-4260	WIRE, 550MM	1	SN: 50001-UP

Reference: 0131

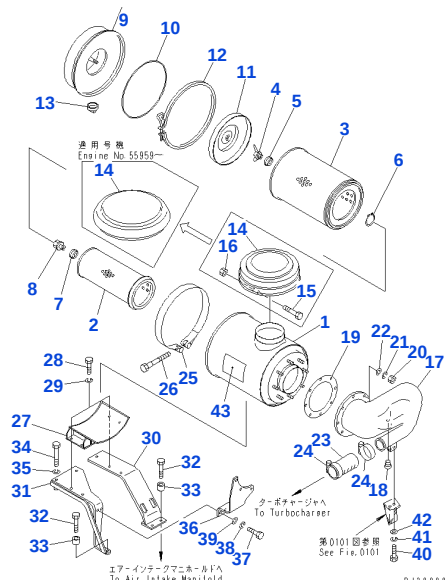

Reference: 0141


030060 AIR CLEANER AND MOUNTING

Item	Part No.	Part Name	Qty	Options
1	6692-81-7302	AIR CLEANER ASS'Y	1	SN: 50001-UP
	6692-81-7311	• BODY	1	SN: 50001-UP
	6125-81-7032	• ELEMENT ASS'Y	1	SN: 50001-UP
2	600-181-4300	•• ☆ ELEMENT, INNER	1	SN: 50001-UP
		•• ELEMENT ASS'Y, OUTER	1	SN: 50001-UP
3		••• ☆ ELEMENT, OUTER	1	SN: 50001-UP
4	600-181-1990	••• NUT, WING	1	SN: 50001-UP
5	600-181-4591	••• WASHER, SEAL	1	SN: 50001-UP
6	04064-01510	••• RING, SNAP	1	SN: 50001-UP
7	600-181-7511	•• WASHER, SEAL	1	SN: 50001-UP
8	600-181-9671	•• NUT	1	SN: 50001-UP
9	6710-82-7121	• CUP	1	SN: 50001-UP
10	6127-81-7190	• O-RING	1	SN: 50001-UP
11	6710-82-7130	• BAFFLE	1	SN: 50001-UP
12	600-181-1480	• CLAMP	1	SN: 50001-UP
13	600-181-1590	• VALVE	1	SN: 50001-UP
14	600-181-3950	CAP	1	SN: 55959-UP
14	600-181-1520	□ CAP	1	SN: 50007-55958
14	600-181-1510	□ CAP	1	SN: 50001-50006
15	01016-51045	• BOLT	1	SN: 50001-55958
16	01580-11008	• NUT	1	SN: 50001-55958
17	6138-11-4230	CONNECTOR	1	SN: 50001-UP
18	02720-10204	PLUG	1	SN: 50001-UP
19	6127-81-4821	GASKET (K1)	1	SN: 50001-UP
20	01580-01008	NUT	8	SN: 50001-UP
21	01602-01030	WASHER, SPRING	8	SN: 50001-UP
22	01640-21016	WASHER	8	SN: 50001-UP
23	6138-11-4280	HOSE	1	SN: 50001-UP
24	07281-00909	CLAMP	2	SN: 50001-UP
25	6127-11-4360	BAND ASS'Y	1	SN: 50001-UP
25		• ☆ PIN	1	SN: 50001-UP
25		• ☆ PIN, WITH THREAD	1	SN: 50001-UP
26	6643-11-4641	BOLT	1	SN: 50001-UP
27	6138-81-8750	BRACKET	1	SN: 50001-UP
28	01010-31020	BOLT	4	SN: 50001-UP
29	01602-01030	WASHER, SPRING	4	SN: 50001-UP
30	6138-81-8730	BRACKET	1	SN: 50001-UP
31	6138-81-8740	BRACKET	1	SN: 50001-UP
32	01010-31045	BOLT	4	SN: 50001-UP
33	6631-11-5630	SPACER	4	SN: 50001-UP
34	01010-30880	BOLT	1	SN: 50001-UP
35	01602-00825	WASHER, SPRING	1	SN: 50001-UP
36	6138-81-8760	BRACKET	1	SN: 50001-UP
37	01010-31035	BOLT	2	SN: 50001-UP
38	01602-01030	WASHER, SPRING	2	SN: 50001-UP
39	01643-31032	WASHER	2	SN: 50001-UP
40	01010-31025	BOLT	2	SN: 50001-UP

Item	Part No.	Part Name	Qty	Options
41	01602-01030	WASHER,SPRING	2	SN: 50001-UP
42	01640-21016	WASHER	2	SN: 50001-UP
43	09637-00161	PLATE, INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 50001-UP
43	09637-81161	PLATE, INSTRUCTION,(GERMAN-ENGLISH)	1	SN: 50001-UP
43	09637-30161	PLATE, INSTRUCTION,(ENGLISH)	1	SN: 50001-UP
43	09637-30261	PLATE, INSTRUCTION,(FRENCH)	1	SN: 50001-UP

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 0141

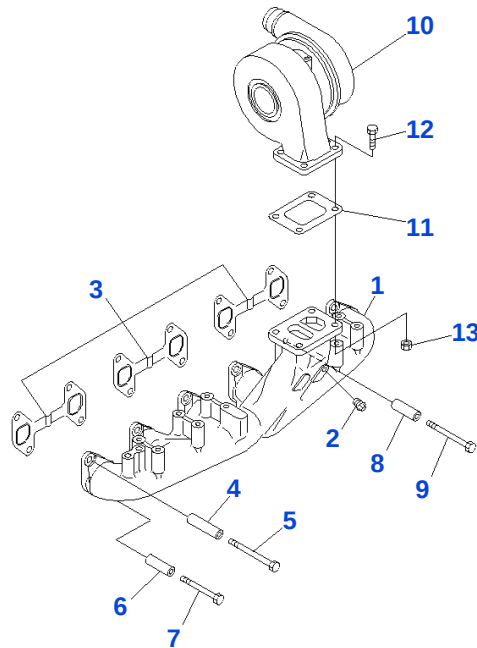

PJ82988

Reference: 0151

030070 EXHAUST MANIFOLD AND TURBOCHARGER

Item	Part No.	Part Name	Qty	Options
1	6137-11-5110	MANIFOLD,EXHAUST	1	SN: 50001-UP
2	07042-20108	PLUG	1	SN: 50001-UP
3	6136-11-5810	GASKET (K1)	3	SN: 50001-UP
4	6136-11-5120	SPACER	9	SN: 50001-UP
5	01011-31000	BOLT	9	SN: 50001-UP
6	6112-21-6960	SPACER	1	SN: 50001-UP
7	01011-31060	BOLT	1	SN: 50001-UP
8	6137-11-5120	SPACER	2	SN: 50001-UP
9	01011-31015	BOLT	2	SN: 50001-UP
10	6138-82-8200	TURBOCHARGER ASS'Y	1	SN: 50001-UP
11	6131-11-5170	GASKET (K1)	1	SN: 50001-UP
12	02030-40638	BOLT	4	SN: 50001-UP
13	6131-11-1290	NUT	4	SN: 50001-UP

Reference: 0151

Get the complete PDF catalogue

Komatsu SA6D110-1F S/N 50001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.