

CATERPILLAR D7G

65V / SEBP2747


Contents

Section	Page
Basic engine	2

MOUNTING GROUP

Mounting Group

Drawing 1 of 1

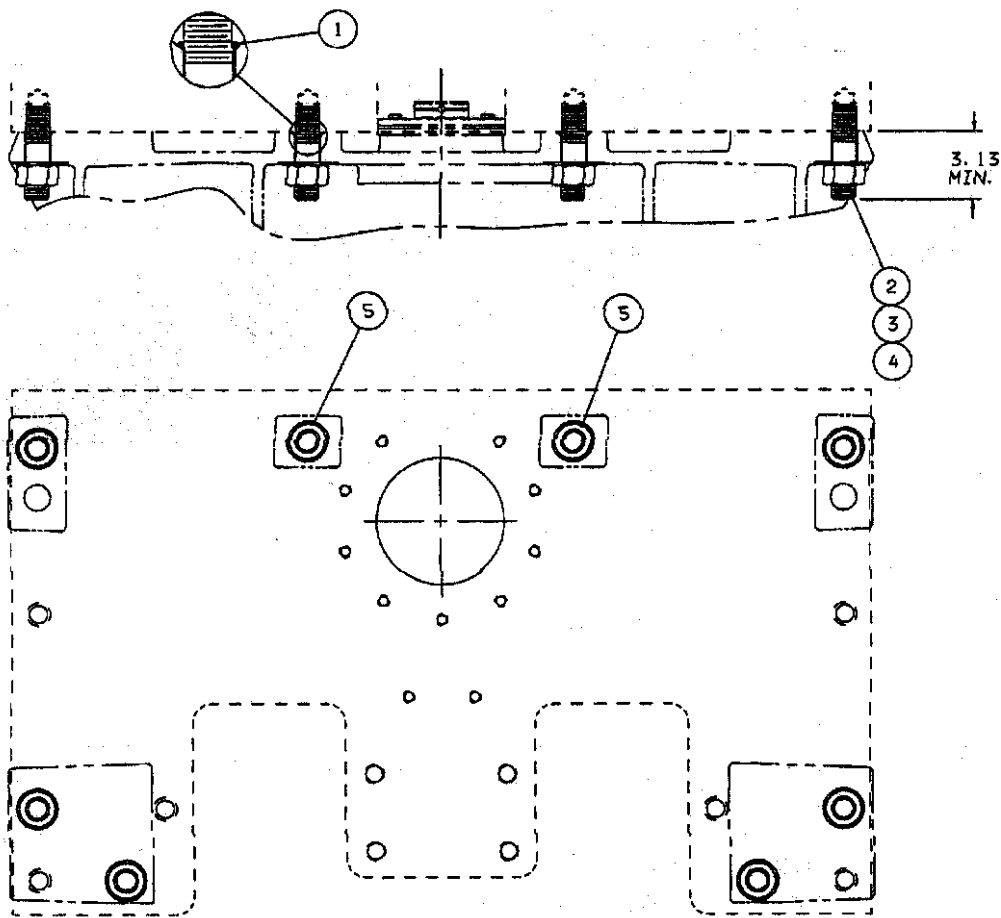


Ref.	Part number	Description	Qty	Code	Group page
1	5M-7423	O-RING	2		
2	135-1934	STUD (1 1/4-7-3A GRD8)	8		
3	7X-0451	NUT, HEX (1 1/4 - 7 NC GD8)	6		
4	4K-0684	WASHER, HARDENED (1 1/4)	8		
5	2J-5997	LOCKNUT	2		

DRIVE GROUP

Drive Group

Drawing 1 of 1

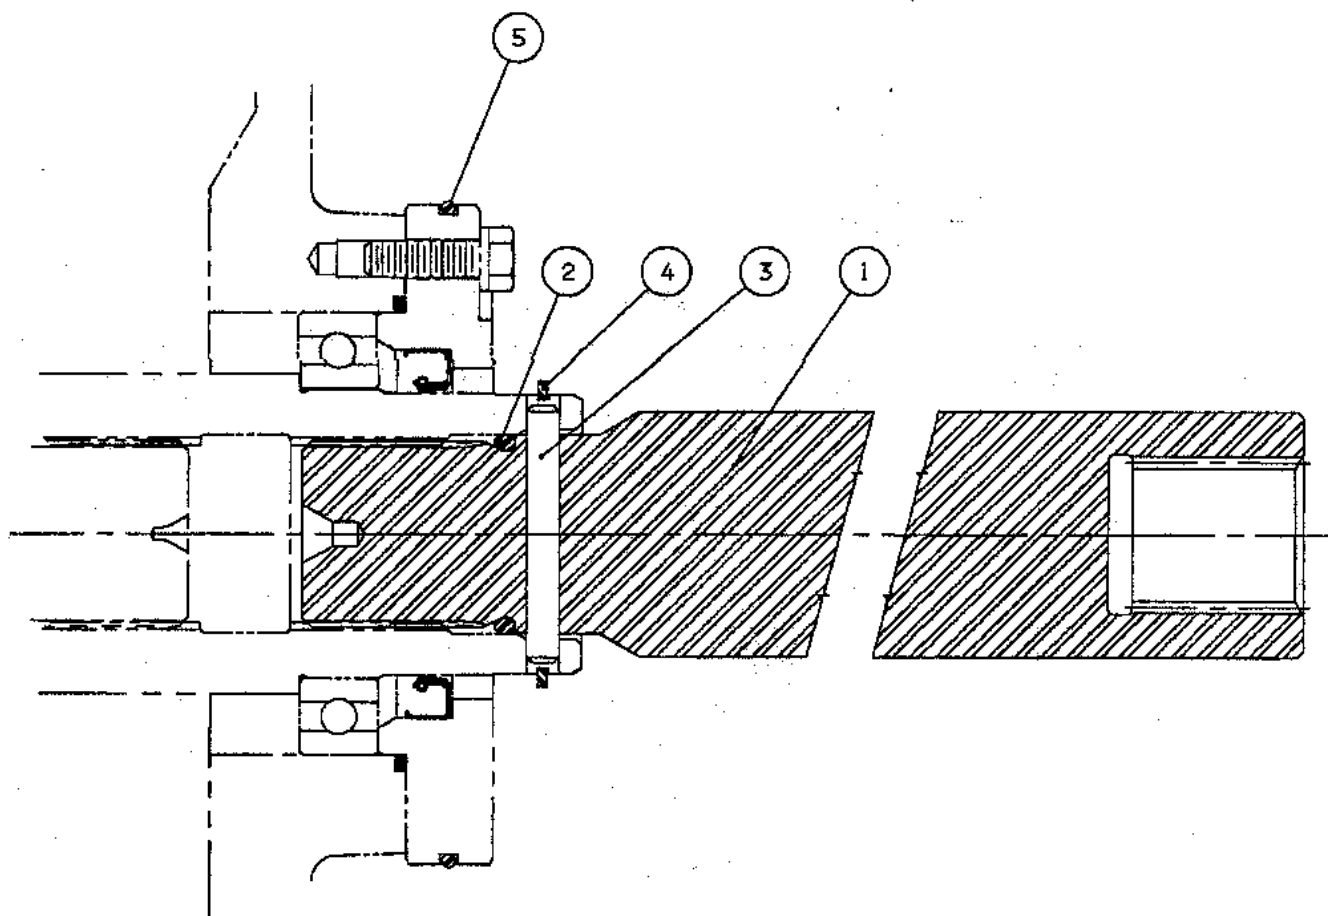


Ref.	Part number	Description	Qty	Code	Group page
1	135-1959	INPUT SHAFT	1		
2	119-1549	O-RING	1		
3	1D-4078	PIN	1		
4	1T-0649	RING, RETAINING	1		
5	1S-4974	O-RING	1		

PUMP GROUP

Pump Group

Drawing 1 of 1

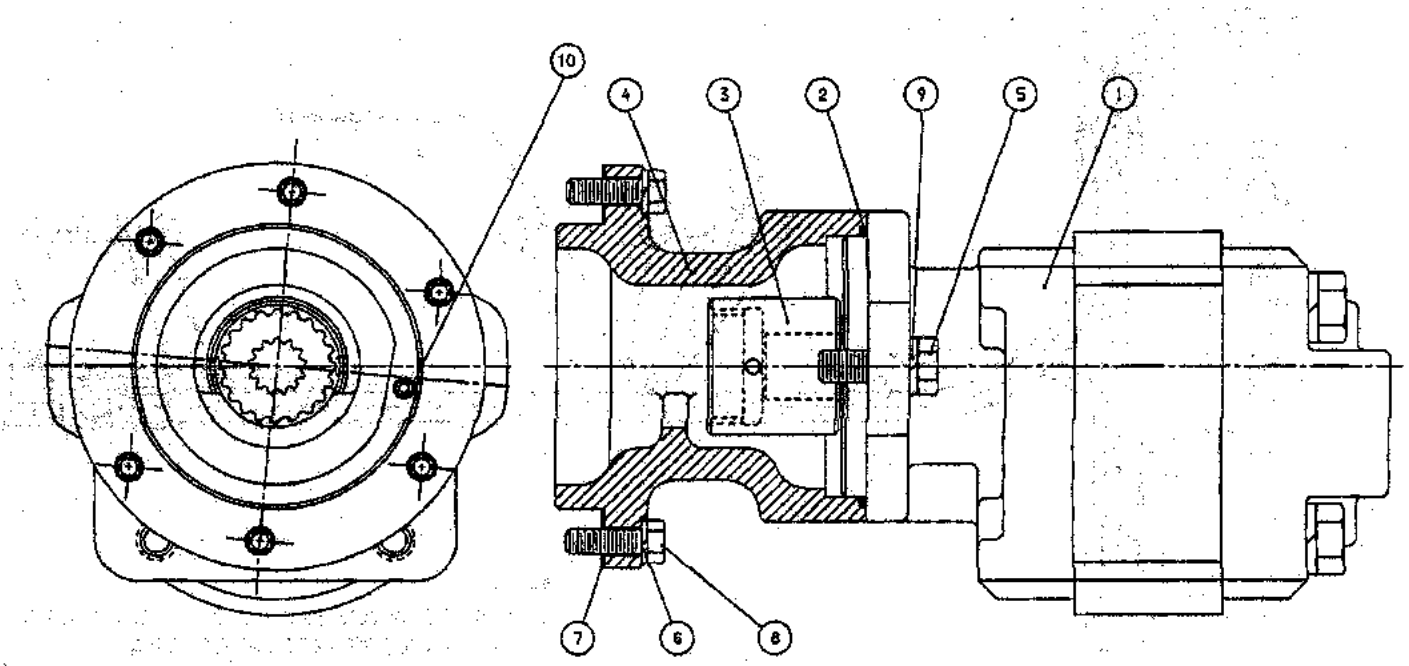


Ref.	Part number	Description	Qty	Code	Group page
1	135-3179	PUMP, HYDRAULIC (SHAFT SEAL 102-165)	1		
2	1H-6227	O-RING	1		
3	135-1961	COUPLING	1		
4	135-1960	HOUSING, ADAPTER	1		
5	5P-2566	CAPSCREW (1/2-13 X 1 1/2, GD8Z, HEX)	2		
6	8T-4896	WASHER, HARDENED (3/8Z)	6		
7	9M-0673	GASKET	1		
8	9B-7237	CAPSCREW (3/8-16 X 1 1/4, GD8Z, HEX)	6		
9	8T-4223	WASHER, HARDENED (1/2Z)	2		
10	135-7361	PIPE PLUG (1/16-27)	1		

PUMP LINES GROUP

Pump Lines Group

Drawing 1 of 1

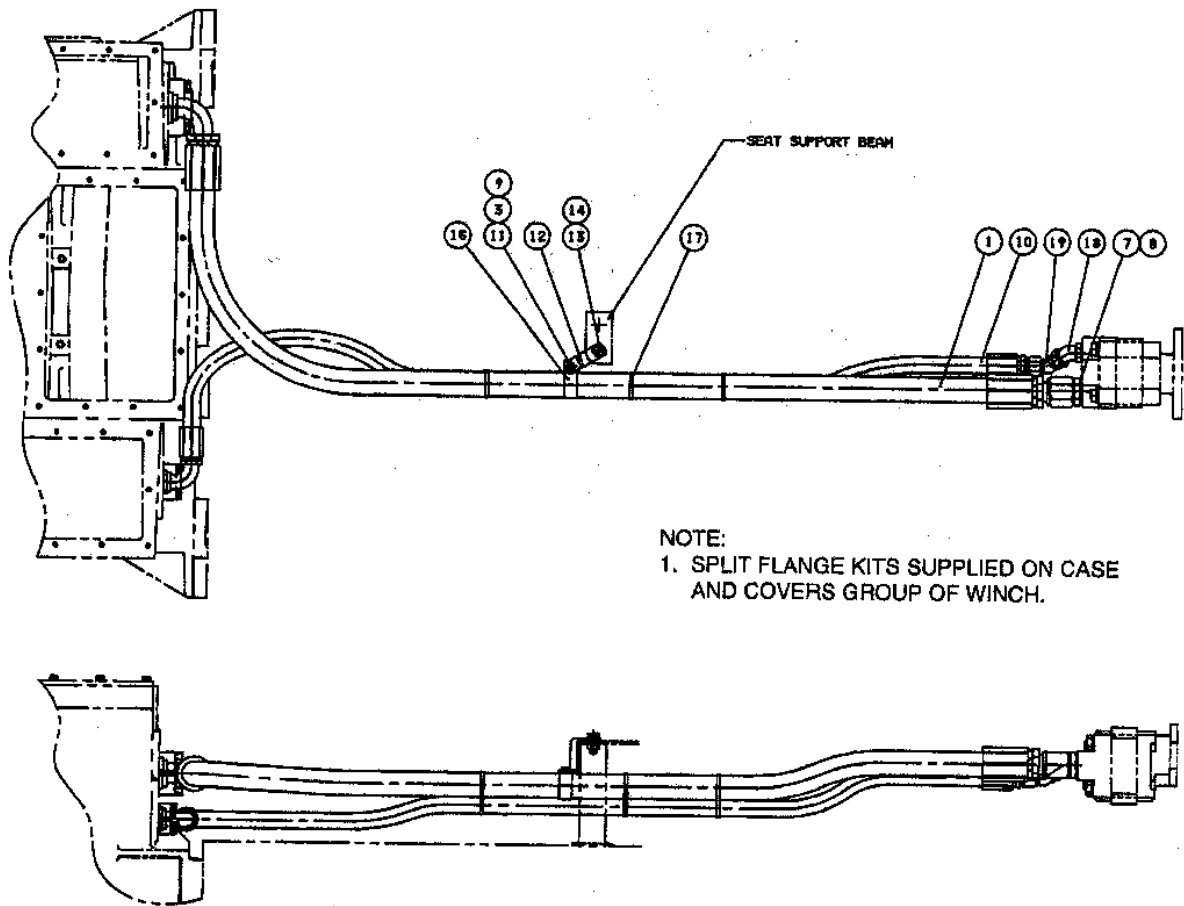

Ref.	Part number	Description	Qty	Code	Group page
1	135-3180	HOSE ASSEMBLY	1		
3	8T-4896	WASHER-HARDENED (3/8Z)	1		
7	031-8759	CONNECTOR	1		
8	2S-4078	O-RING	1		
9	9S-8752	NUT, HEX (3/8 - 16)	1		
10	135-3178	HOSE ASSEMBLY	1		
11	5S-7379	CAPSCREW (3/8-16 X 7/8, GD8Z, HEX)	1		
12	3P-7108	BRACKET	1		
13	8T-8917	CAPSCREW (1/2-13 X 1 1/4, GD8Z, HEX)	1		
14	8T-4223	WASHER-HARDENED (1/2Z)	1		
16	7L-6326	CLIP	1		
17	7K-1181	STRAP	3		
18	030-7944	ELBOW, 45 (-12 JIC)	1		
19	030-7965	ELBOW, 45 (-12 JIC)	1		

MOUNTING GROUP

Mounting Group

Drawing 1 of 1

INSTRUCTIONS:

Note: Remove operators seat and floor panels (Refer to appropriate tractor service manual).

- 1. PTO rotation is counterclockwise (CCW) as viewed from rear of tractor.
- 2. Remove tractor PTO cover.
- 3. Remove paint, rust, dirt and grease from mounting surfaces of tractor and winch.
- 4. Apply Loc-tite 271, or equivalent, to studs, item 2, and install to elevation shown.
- 5. Install input shaft, item 5, on winch utilizing o-ring, pin and retaining ring, items 6, 7 and 8. Coat o-ring with oil prior to installation. Coat splines with molybdenum disulfide grease prior to installation.

⚠ WARNING ⚠

Winch weighs approximately 3,650 lbs. (1,706 kg) without oil or wire rope. Make certain that lifting equipment has adequate capacity. Failure to use adequate lifting equipment may result in property damage, personal injury, or death.

- 6. Install o-rings, item 1, page 2, on upper inboard studs as shown.
- 7. Install winch onto studs, item 2, page 2. Install nuts and washers utilizing Loc-tite 242. Torque nuts to 1200 lb-ft (1610 N-m).
- 8. Remove cover and gasket, P/Ns 9M672 and 9M673, from tractor accessory drive (Refer to appropriate tractor service manual).

- 9. Refer to page 4 for steps 9 thru 11. Install adapter, item 4, onto tractor accessory drive with gasket, item 7, and fasteners, items 6 and 8. Install plug, item 10, into adapter housing.
- 10. Install coupling, item 3, onto accessory drive shaft.
- 11. Install o-ring, item 2, onto pilot of hydraulic pump, item 1. Install pump onto adapter and attach with fasteners, items 5 and 9. Coat o-ring with oil prior to installation.
- 12. Install suction hose, item 1, page 5 between winch and pump. Attach suction hose to pump end utilizing connection and o-ring, item 7 and 8, page 5. Attach suction hose to winch utilizing split flange kit, item 9, page 9. Coat o-rings with oil prior to installation. Install hose loosely at pump end.
- 13. Install pressure hose, item 10, page 5, between winch and pump. Attach pressure hose to pump end utilizing elbows, items 18 and 19, page 5. Attach pressure hose to winch utilizing elbows, items 18 and 19, page 5. Attach pressure hose to winch utilizing split flange kit, item 6, page 9. Coat o-rings with oil prior to installation. Install hose loosely at pump end.
- 14. Secure hoses with straps, clamps and hardware, items 3, 9, 11, 12, 13, 14, 16 and 17, as shown.

⚠ CAUTION ⚠


Fill winch to proper level with recommended oil **BEFORE** operating. Component damage may occur if winch is operated without oil.

Ref.	Part number	Description	Qty	Code	Group page
Parts list rows are not synced on this VPS for SEBP2747/SEBP27470005 yet.					

CONTROL GROUP

Control Group

Drawing 1 of 1

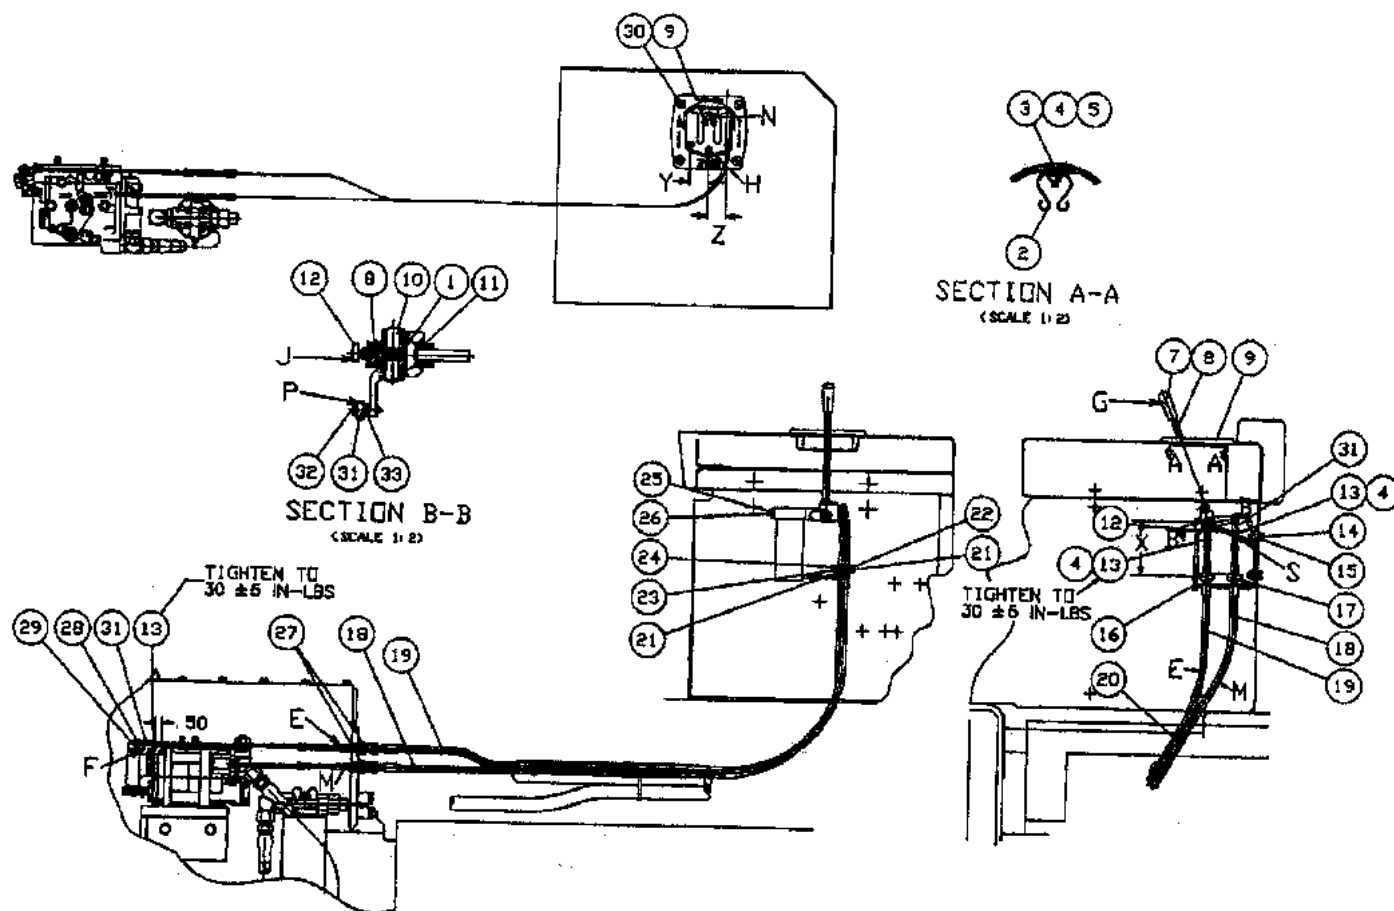

Ref.	Part number	Description	Qty	Code	Group page
1	2H-2525	PIN, SPRING	1		
2	3P-5938	SPRING	1		
3	4B-1284	SCREW, MACHINE	1		
4	3B-4504	LOCKWASHER (1/4 SPLIT SPRING)	3		
5	6V-8185	NUT, HEX	1		
7	7M-0706	KNOB	1		
8	6P-6033	LEVER ASSEMBLY	1		
	6P-6034	LEVER ASSEMBLY	1		
	9B-8855	BLOCK	1		
9	6P-5661	GUIDE	1		
10	2P-6008	SHAFT	1		
11	2P-6001	BELLCRANK ASSEMBLY	1		
	2P-6000	SLEEVE, BEARING	1		
	9H-2400	SHAFT	2		
	2P-6009	ROD END	1		

CONTROL GROUP (continued)

Ref.	Part number	Description	Qty	Code	Group page
12	8S-7048	ROD END	1		
13	6F-0612	NUT, JAM	3		
14	4L-6454	CAPSCREW (3/8-16X1, GD8Z)	4		
15	5M-2894	WASHER, HARDENED (3/8)	4		
16	6P-5204	BRACKET ASSEMBLY	1		
	9H-2400	SLEEVE, BEARING	2		
	6P-6028	BRACKET ASSEMBLY	1		
	6P-6030	PLATE	1		
	1F-0750	NUT	4		
	2P-6006	BAR	1		
	2P-8360	PLATE	1		
	2P-6029	BRACKET	1		
17	9G-9979	CLAMP	2		
18	135-1957	CABLE ASSEMBLY	1		
19	135-1958	CABLE ASSEMBLY	1		
20	8L-8413	STRAP	3		
21	1A-9579	CAPSCREW (5/16 - 18 NC X 1 1/2 GD5, HEX)	2		
22	4B-4277	WASHER (5/16)	2		
23	3B-4505	LOCKWASHER (5/16, SPLIT SPRING)	2		
24	5S-0003	NUT, HEX (5/16 - 18)	2		
25	4B-4278	WASHER (3/8)	1		
26	3K-6060	NUT, HEX (3/8 - 16, PLASTIC INSERT)	1		
CABLE ASSEMBLY GROUP (PACCAR PART # 62656)					
CONSISTING OF FOLLOWING:					
	119-2209	ADJUSTER	1		
	1D-5120	NUT	1		
	5H-8853	O-RING	1		
	3K-9042	RETAINING RING	2		
WASHER, SEALING (PACCAR PART # 25114)					
28	8T-8908	CAPSCREW (1/2 - 20 X 1, GD8)	1		
29	6D-8554	NUT, ELASTIC STOP	1		
30	0S-4594	CAPSCREW, FLAT SOCKET HEAD (3/8 - 16 X 1, GD5)	4		
31	6L-7751	ROD END	2		
32	0S-1597	CAPSCREW (1/4 - 28 NF X 1, GD8, HEX)	1		
33	9S-8748	NUT, HEX (1/4 - 28)	1		

CONTROL GROUP

Control Group

Drawing 1 of 2

INSTRUCTIONS:

1. Remove RH tractor front and top console covers (refer to appropriate tractor service manual).
2. Preassemble bracket assembly, item 16, and lever assembly, item 8, with washer and nut, items 25 and 26.
3. Install preassembled control stand to tractor with fasteners, items 14 and 15.
4. Install RH tractor console cover (refer to appropriate tractor service manual).
5. Install control stand guide, item 9, to console cover with fasteners, item 30. Install control stand knob, item 7.
6. Remove RH winch top cover.
7. Preassemble end "F" of cable "E", item 19, with rod-end, item 31, and nut, item 13. Leave 0.5 in. (12.7 mm) of thread exposed. Ensure that jam nut, item 27, is installed on cable.
8. Insert cable through inboard threaded hole in winch. Attach rod-end to winch with fasteners, items 28 and 29. Secure jam nut, item 27, against winch case.
9. Assemble rod-end, item 12, onto cable end "J".
10. Attach cable sheath to control stand with clamp, item 17, and fasteners 21, 23 and 24.
11. Position control lever "G" at position "H". Assemble cable end "J" onto control stand as shown.
12. Adjust "X" dimension of cable "E" such that "Y" and "Z" dimensions are equal.
13. Insert cable "M", item 18, through outboard threaded hole in winch. Insert cable into valve.
14. Preassemble control end of cable M with rod-end, jam nut, and lockwasher, items 31, 13 and 4.
15. Attach control cable sheath to control stand with clamp, item 17.



Fill winch to proper level with recommended oil **BEFORE** starting tractor. Bearing and gear damage may result if tractor or winch is run without oil.

16. Remove hoses from winch hydraulic pump and fill with hydraulic oil. Reattach hoses.
17. Start tractor and operator at idle. Following a short warm-up, operate tractor at half-throttle.
18. Install 0-500 psi (0-3445 kPa) gauge in control valve brake pressure tap.

Drawing 2 of 2

19. With lever "G" in position "N" and locknut "S" loose, adjust cable "M" to obtain 200 psi (1378 kPa). If lever will not stay in spring, reduce pressure until it will. Minimum acceptable pressure at position "N" is 160 psi (1102 kPa) in brake tap.
20. Install 0-500 psi (0-3445 kPa) gauge in control valve clutch pressure tap.
21. Clutch pressure should be between 265 and 315 psi (1825 - 2170 kPa) with lever "G" in position "N".
22. While operating lever, inspect both cables to see if thread on end of cable is contacting rubber seal. If contact is present, readjust cable.
23. With control lever in "reel in", drum rotation should be clockwise when viewed from RH side of tractor.


Ref.	Part number	Description	Qty	Code	Group page
------	-------------	-------------	-----	------	------------

Parts list rows are not synced on this VPS for SEBP2747/SEBP27470007 yet.

CASE & COVERS GROUP

Case & Covers Group

Drawing 1 of 1

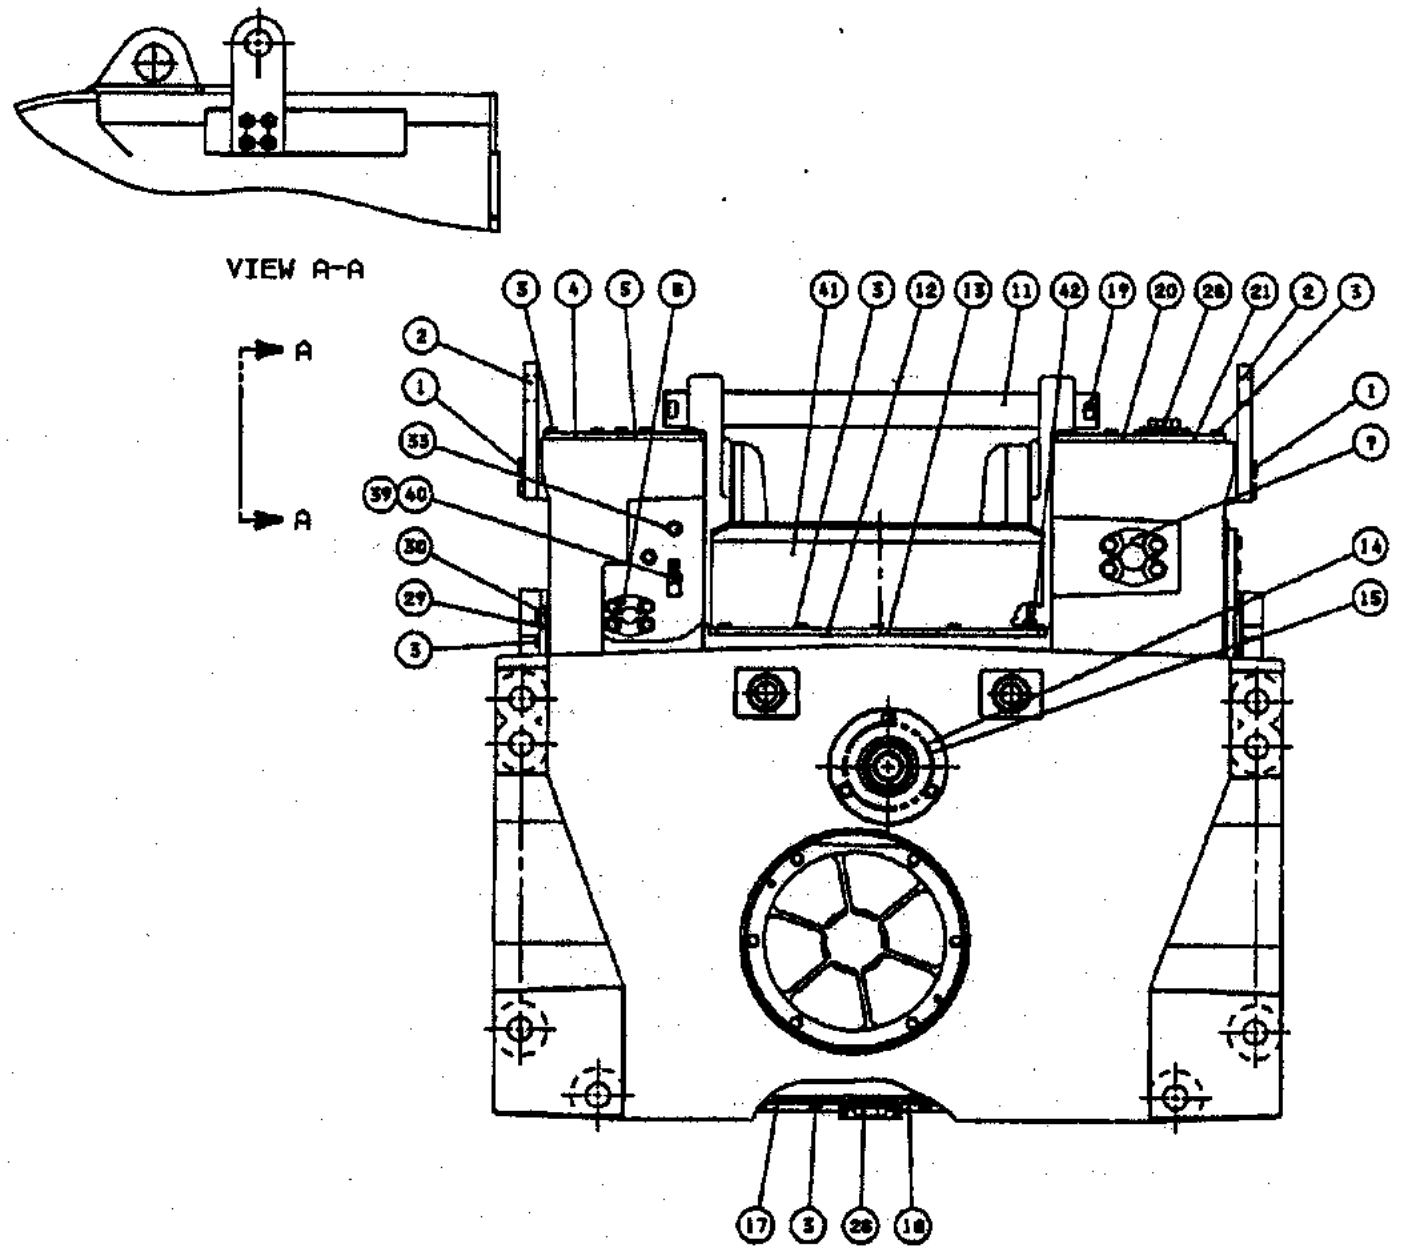

Ref.	Part number	Description	Qty	Code	Group page
1	5P-2566	CAPSCREW (1/2 - 13 X 1 1/2, GD8Z, HEX)	8		
2	7G-9998	PLATE	2		
3	4L-6454	CAPSCREW (3/8 - 16 X 1, GD8Z)	4		
4	135-1962	COVER, TOP RH	1		
5	135-1963	GASKET, TOP RH COVER	1		
SPLIT FLANGE KIT					
	1P-4577	FLANGE	2		
	4J-0520	O-RING	1		

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

65V-SEBP2747

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99