

CATERPILLAR 789C

2BW / SEBP2790


Contents

Section	Page
Basic engine	2
Cooling system	
Cooling system	
Air inlet and exhaust	
Fuel system	
Basic engine	
Basic engine	
Electrical and electronics	
Power train	
Hydraulic system	
Power train	
Hydraulic system	
Hydraulic system	
Air inlet and exhaust	
Hydraulic system	

123-6904 ADAPTER GP-FLYWHEEL HOUSING

123-6904 ADAPTER GP-FLYWHEEL HOUSING S/N 7TR1-3562 PART OF 100-8089, 175-5289, 188-4789, 365-9315 ENGINE AR, 365-9314 ENGINE AR-COMPLETE ALSO AN ATTACHMENT

Drawing 1 of 1

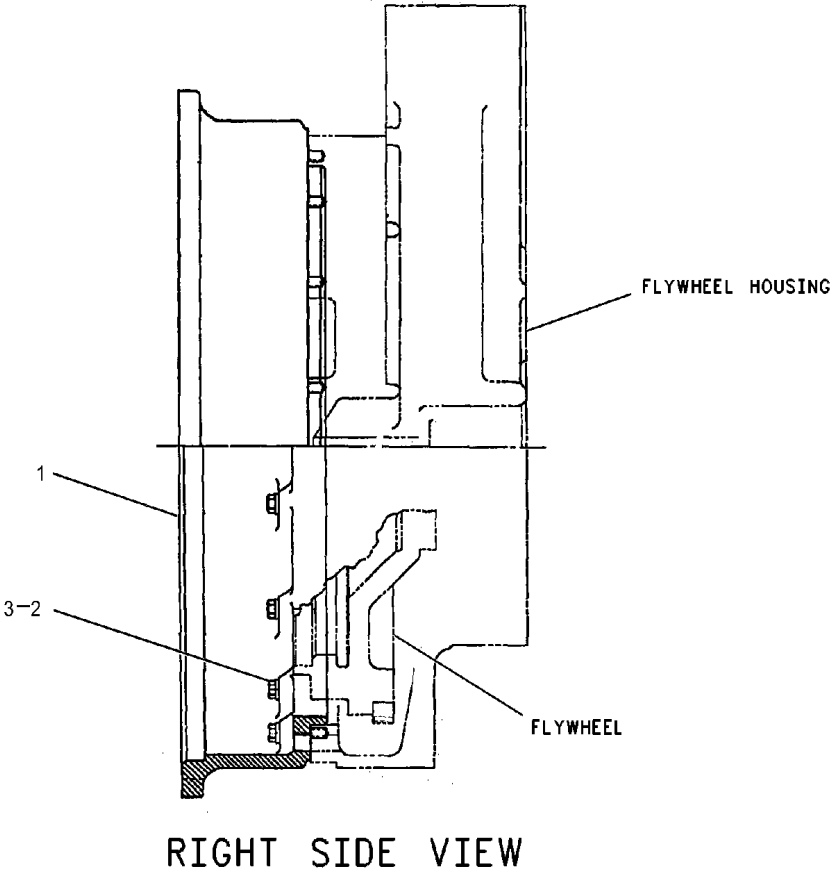


Ref.	Part number	Description	Qty	Code	Group page
1	434-3759	ADAPTER	1		
2	2B-0947	BOLT (1/2-13X2.25-IN)	16		
3	2M-0849	WASHER-HARD (13.5X25.5X5-MM THK)	16		

384-3632 ADAPTER GP-FLYWHEEL HOUSING

384-3632 ADAPTER GP-FLYWHEEL HOUSING S/N 7TR3563-UP PART OF 100-8089, 175-5289, 365-9315 ENGINE AR, 365-9314 ENGINE AR-COMPLETE ALSO AN ATTACHMENT

Drawing 1 of 1

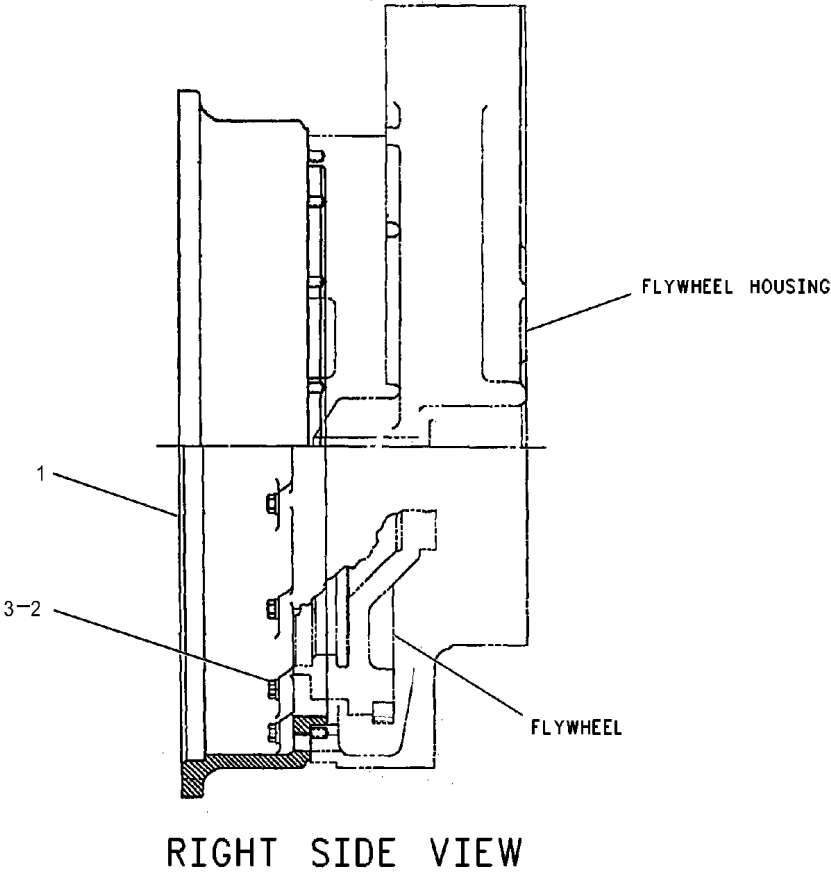


Ref.	Part number	Description	Qty	Code	Group page
1	434-3759	ADAPTER	1		
2	2B-0947	BOLT (1/2-13X2.25-IN)	16		
3	2M-0849	WASHER-HARD (13.5X25.5X5-MM THK)	16		

113-8193 AIR COMPRESSOR GP

113-8193 AIR COMPRESSOR GP S/N 7TR1-UP PART OF 175-5289, 365-9315 ENGINE AR, 365-9314 ENGINE AR-COMPLETE ALSO AN ATTACHMENT

Drawing 1 of 1

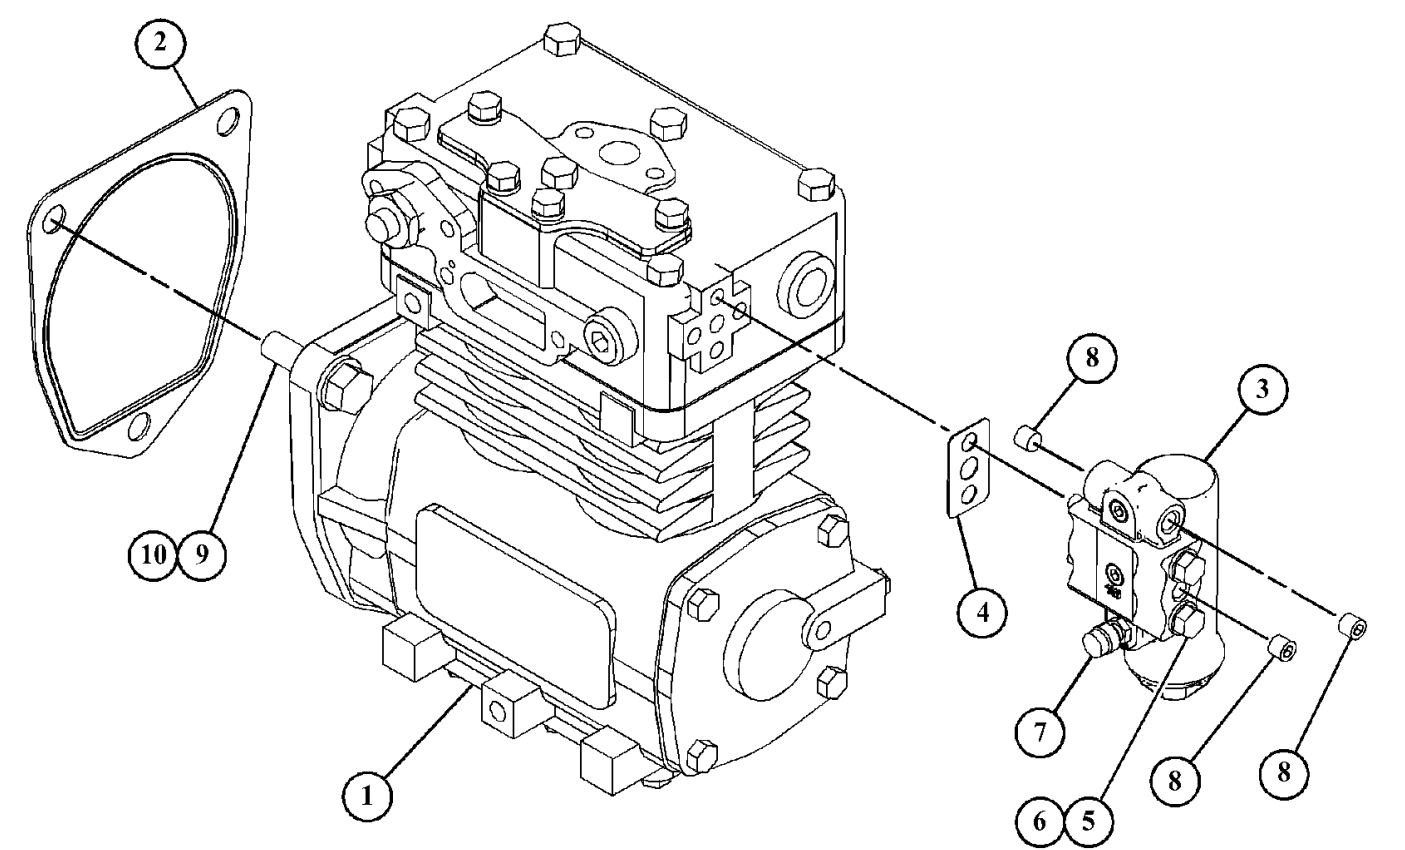


Ref.	Part number	Description	Qty	Code	Group page
1	160-9845	AIR COMPRESSOR GP	1	CY	
2	129-3948	SEAL-INTEGRAL	1		
3	4N-9680	GOVERNOR GP-AIR COMPRESSOR	1	Y	
4	6L-1883	GASKET (GOVERNOR)	1		
5	1D-4540	BOLT (5/16-18X2.75-IN)	2		
6	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	2		
7	5F-5434	VALVE AS-VENT (AIR COMPRESSOR)	1		
8	8T-6757	PLUG-PIPE	3		
9	0S-1587	BOLT (1/2-13X1.75-IN)	3		
10	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	3		

CAT codes: C, R, Y.

157-2812 AIR COMPRESSOR GP

157-2812 AIR COMPRESSOR GP S/N 7TR1-UP PART OF 100-8089, 175-5289, 188-4789 ENGINE AR ALSO AN ATTACHMENT

Drawing 1 of 1

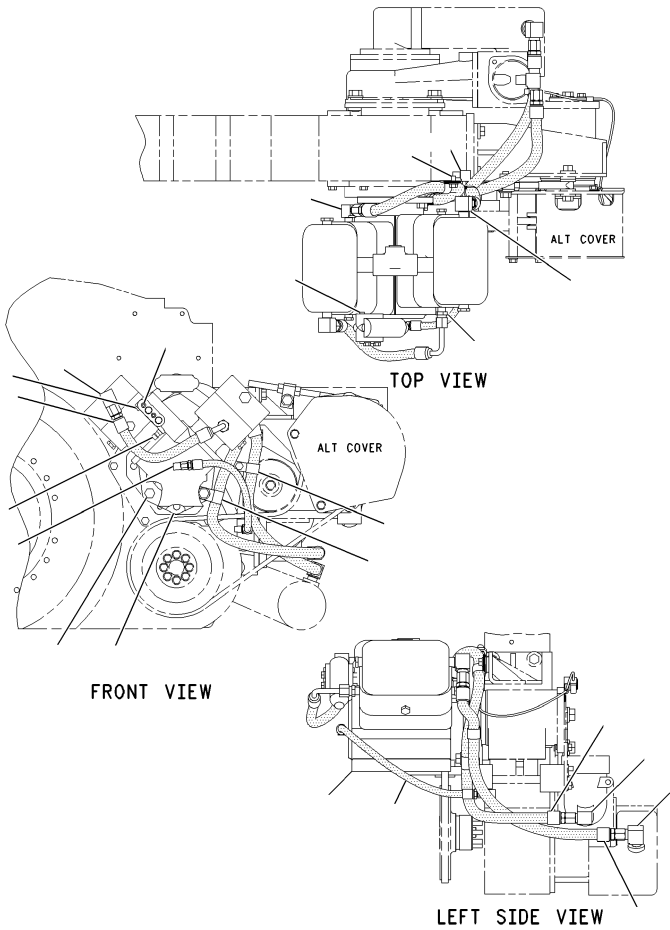

Ref.	Part number	Description	Qty	Code	Group page
1	5F-5434	VALVE AS-VENT (AIR COMPRESSOR)	1		
2	7C-8402	HOSE AS	1	I	
3	7V-0916	HOSE AS	1	I	
4	8N-2811	GASKET	1		
5	9N-5221	HOSE AS	1	I	
6	152-1005	HOSE AS	1	I	
7	160-9820	AIR COMPRESSOR GP	1	Y	
8	032-1269	ELBOW	2		
9	0S-1595	BOLT (1/2-13X1.25-IN)	4		
10	0T-0102	BOLT (3/8-16X0.625-IN)	1		
11	2N-1287	ELBOW-FLARED	1		
12	2N-3378	ELBOW-FLARED	2		
13	5M-2894	WASHER-HARD (10.2X18.5X2.5-MM THK)	1		
14	5P-4295	CLIP	1		

157-2812 AIR COMPRESSOR GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
15	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	1		
16	6D-4244	CLIP (LOOP)	2		
17	6K-1972	ELBOW-FLARED	1		
18	7L-7262	ELBOW-FLARED	1		
19	8M-0755	ADAPTER	1		
20	8T-6757	PLUG-PIPE	4		

CAT codes: I, R, Y.

160-9820 AIR COMPRESSOR GP

160-9820 AIR COMPRESSOR GP S/N 7TR1-1435 PART OF 157-2812 AIR COMPRESSOR GP ALSO AN ATTACHMENT

Drawing 1 of 1

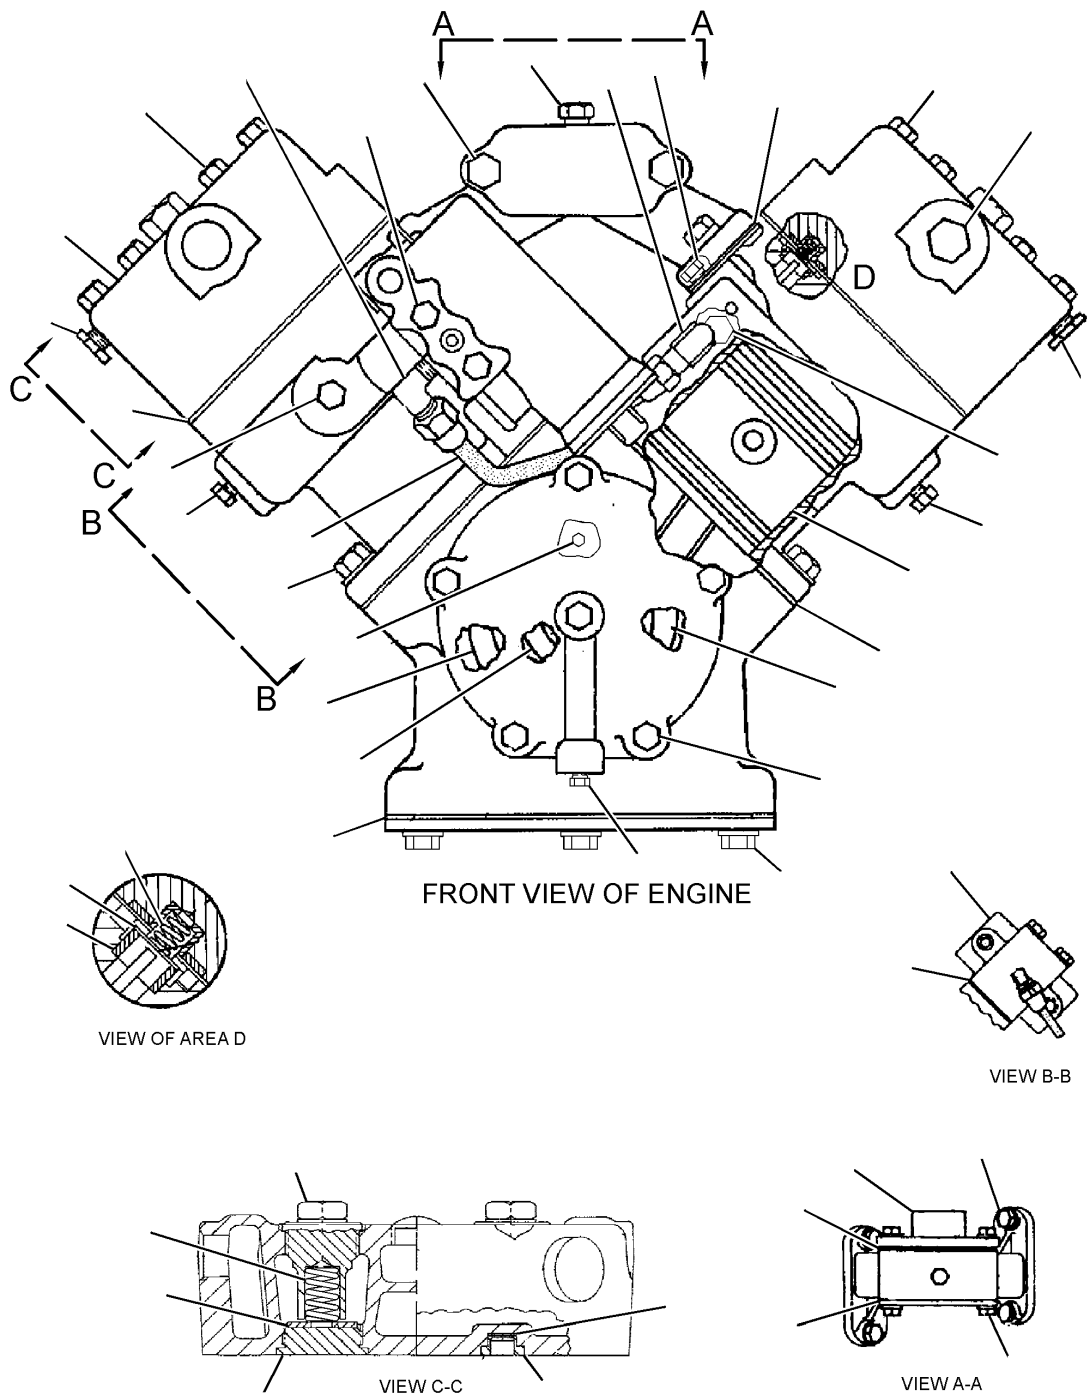

Ref.	Part number	Description	Qty	Code	Group page
1	9M-0379	BOLT	20		
2	8N-4727	PISTON AS-COMPRESSOR	4		
(EACH INCLUDES)					
	1W-2803	PLUG	2		
3	7W-6492	PLUG-PIPE (1/2-14-THD)	4		

160-9820 AIR COMPRESSOR GP (continued)

Ref.	Part number	Description	Qty	Code	Group page
4	3H-7311	GASKET-CYLINDER BLOCK	2		
5	9M-0378	BOLT (5/16-18X2.87-IN)	2		
6	3B-4505	LOCKWASHER	10		
7	2B-2695	BOLT (5/16-18X0.875-IN)	5		
8	8T-6764	PLUG-PIPE (1/8-27-THD)	2		
9	7F-2742	BALL BEARING	1		
10	8T-9364	BOLT (1/4-20X0.625-IN)	8		
11	0S-1594	BOLT (3/8-16X1-IN)	12		
12	3B-4506	LOCKWASHER	12		
13	3H-5162	RETAINER	1		
14	8H-9789	BALL BEARING	1		
15	5M-6213	PLUG-PIPE (1/4-18-THD)	2		
16	2S-1218	GASKET-CYLINDER HEAD	2		
17	2W-5189	CYLINDER HEAD AS	2		
(EACH INCLUDES)					
17A	3F-4987	SPRING-VALVE	2		
17B	3H-5181	VALVE	2		
17C	9M-0394	SEAT-VALVE	2		
17D	9M-0386	CAP	2		
17E	9M-0387	SEAT-VALVE SPRING	2		
17F	1W-6388	INSERT-VALVE SPRING	2		
18	8M-7065	GASKET (AIR INLET)	4		
19	0S-1617	BOLT (5/16-18X0.75-IN)	6		
20	2H-3755	BOLT (5/16-18X0.43-IN)	2		
21	6L-1883	GASKET	1		
22	9L-2276	GUIDE-VALVE	4		
23	9L-2277	VALVE-INLET	4		
24	9L-2278	SPRING-VALVE	4		
25	4N-9680	GOVERNOR GP-AIR COMPRESSOR	1	Y	
26	4B-1273	SCREW-MACHINE (10-24X0.5-IN)	3		
27	8T-4205	WASHER-HARD (7.2X14.5X2-MM THK)	8		
28	8T-6767	PLUG-PIPE (3/8-18-THD)	8		
29	7W-9827	ADAPTER	1		
30	219-2350	GASKET	1		
31	5P-4479	ELBOW (FLARED-LONG)	1		
32	117-0068	HOSE AS	1	I	

160-9820 AIR COMPRESSOR GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
33	6K-1972	ELBOW-FLARED	1		
AVAILABLE REPAIR KIT(S):					
	371-8029	KIT-HEAD	1		
(INCLUDES COVER & GASKET)					
	228-6581	KIT-PISTON RING (AIR COMPRESSOR)			
(INCLUDES PISTON RINGS)					
	9M-0402	KIT-GOVERNOR OVERHAUL (AIR COMPRESSOR)			
(INCLUDES GROMMETS, FILTERS, SPRING, VALVE, COVER, RING & GASKET)					
	209-5258	KIT-BEARING (AIR COMPRESSOR)			
(INCLUDES 2 HALF-SHELL BEARINGS)					
	209-5242	KIT-ROD (AIR COMPRESSOR)			
(INCLUDES CONNECTING ROD, END CAP, CONNECTING ROD BOLTS, LOCKING STRAP & WRIST PIN BUSHING)					

CAT codes: I, Y.

160-9845 AIR COMPRESSOR GP

160-9845 AIR COMPRESSOR GP S/N 7TR1-UP PART OF 113-8193 AIR COMPRESSOR GP ALSO AN ATTACHMENT

Drawing 1 of 1

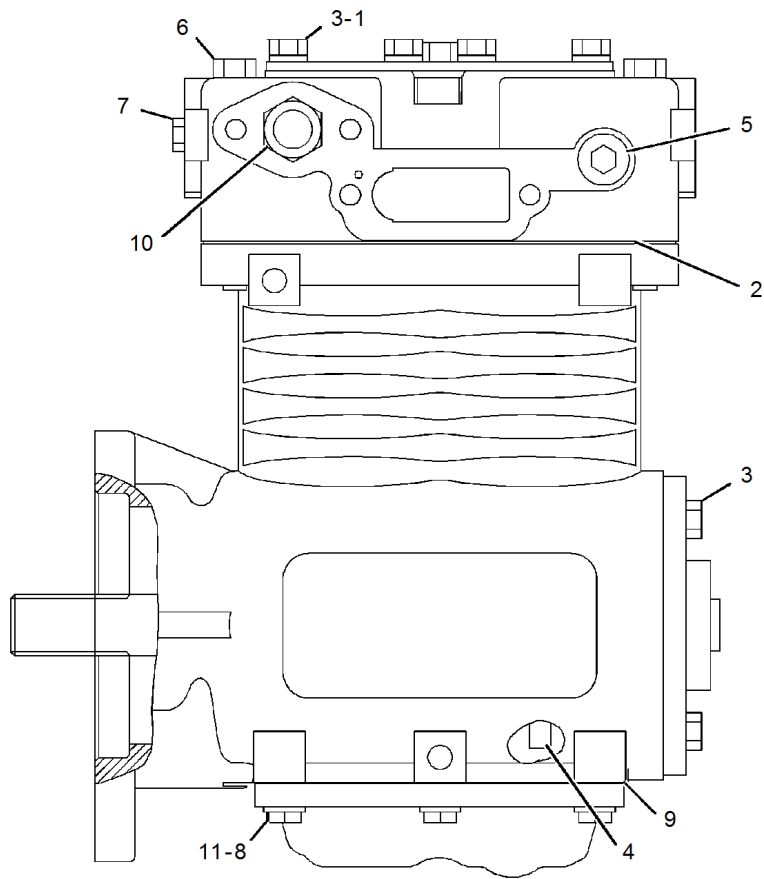

Ref.	Part number	Description	Qty	Code	Group page
1	3B-4505	LOCKWASHER	4		
2	4P-3977	GASKET-CYLINDER HEAD	1		
3	0S-1617	BOLT (5/16-18X0.75-IN)	8		
4	7E-8924	PISTON & ROD AS	1		
5	6V-0387	PLUG-PIPE	1		
6	0L-1352	BOLT (3/8-16X3.25-IN)	6		
7	8T-6764	PLUG-PIPE (1/8-27-THD)	2		
8	0S-1618	BOLT (5/16-18X1-IN)	6		
9	6N-0634	GASKET-COVER	1		
10	124-5572	VALVE AS-RELIEF (AIR COMPRESSOR)	1		
11	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	6		
AVAILABLE REPAIR KIT(S):					
	7E-8923	KIT-CRANKSHAFT BEARING (AIR COMPRESSOR)	1		
(INCLUDES SEALS, BEARINGS, WASHERS, INSERTS & GASKETS)					
	7E-8926	KIT-CYLINDER HEAD (AIR COMPRESSOR)	1		

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

2BW-SEBP2790

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99