

CATERPILLAR D6C

69J / XMBP9763


Contents

Section	Page
Power train	2
Cooling system	
Electrical and electronics	
Basic engine	

TORQUE DIVIDER

TORQUE DIVIDER--Part 1 of 2 Effective with Serial No. 69J1~69J532 1T300 Converter Assembly, 5M7864 Pump Group and 5M7882 Joint Assembly parts are shown on Pages 52 and 52B

Drawing 1 of 1

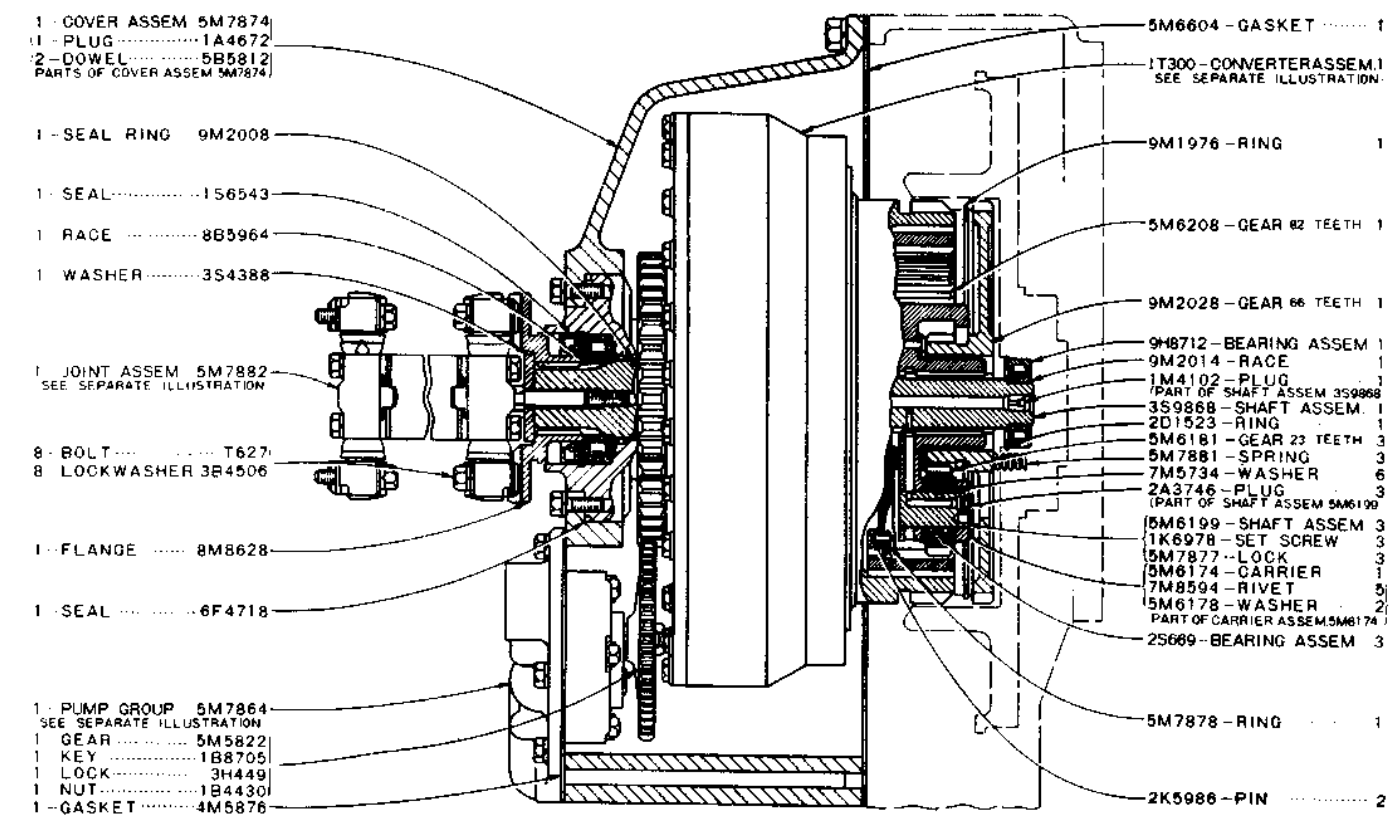

J2267E

Ref.	Part number	Description	Qty	Code	Group page
	5M-7874	COVER ASSEM.	1		
	1A-4672	PLUG	1		
	5B-5812	DOWEL	2		
PARTS OF COVER ASSEM. 5M7874					
	9M-2008	SEAL RING	1		
	1S-6543	SEAL	1		
	8B-5964	RACE	1		
	3S-4388	WASHER	1		
	5M-7882	JOINT ASSEM.	1	Y	
SEE SEPARATE ILLUSTRATION					
	0T-0627	BOLT	8		
	3B-4506	LOCKWASHER	8		
	8M-8628	FLANGE	1		
	6F-4718	SEAL	1		
	5M-7864	PUMP GROUP	1	Y	
SEE SEPARATE ILLUSTRATION					

TORQUE DIVIDER (continued)


Ref.	Part number	Description	Qty	Code	Group page
	5M-5822	GEAR	1		
	1B-8705	KEY	1		
	3H-0449	LOCK	1		
	1B-4430	NUT	1		
	4M-5876	GASKET	1		
	5M-6604	GASKET	1		
	1T-0300	CONVERTER ASSEM.	1	Y	
SEE SEPARATE ILLUSTRATION					
	9M-1976	RING	1		
	5M-6208	GEAR (82 TEETH)	1		
	9M-2028	GEAR (66 TEETH)	1		
	9H-8712	BEARING ASSEM.	1		
	9M-2014	RACE	1		
	1M-4102	PLUG	1		
(PART OF SHAFT ASSEM. 3S9868)					
	3S-9868	SHAFT ASSEM.	1		
	2D-1523	RING	1		
	5M-6181	GEAR (23 TEETH)	3		
	5M-7881	SPRING	3		
	7M-5734	WASHER	6		
	2A-3746	PLUG	3		
(PART OF SHAFT ASSEM. 5M6199)					
	5M-6199	SHAFT ASSEM.	3		
	1K-6978	SET SCREW	3		
	5M-7877	LOCK	3		
	5M-6174	CARRIER	1		
	7M-8594	RIVET	5		
	5M-6178	WASHER	2		
(PART OF CARRIER ASSEM. 5M6174)					
	2S-0669	BEARING ASSEM.	3		
	5M-7878	RING	1		
	2K-5986	PIN	2		

CAT codes: Y.

TORQUE DIVIDER

TORQUE DIVIDER--Part 2 of 2 Effective with Serial No. 69J1~69J532 2S1386 Valve Group and 2S625 Valve Group parts are shown on Page 53

Drawing 1 of 1

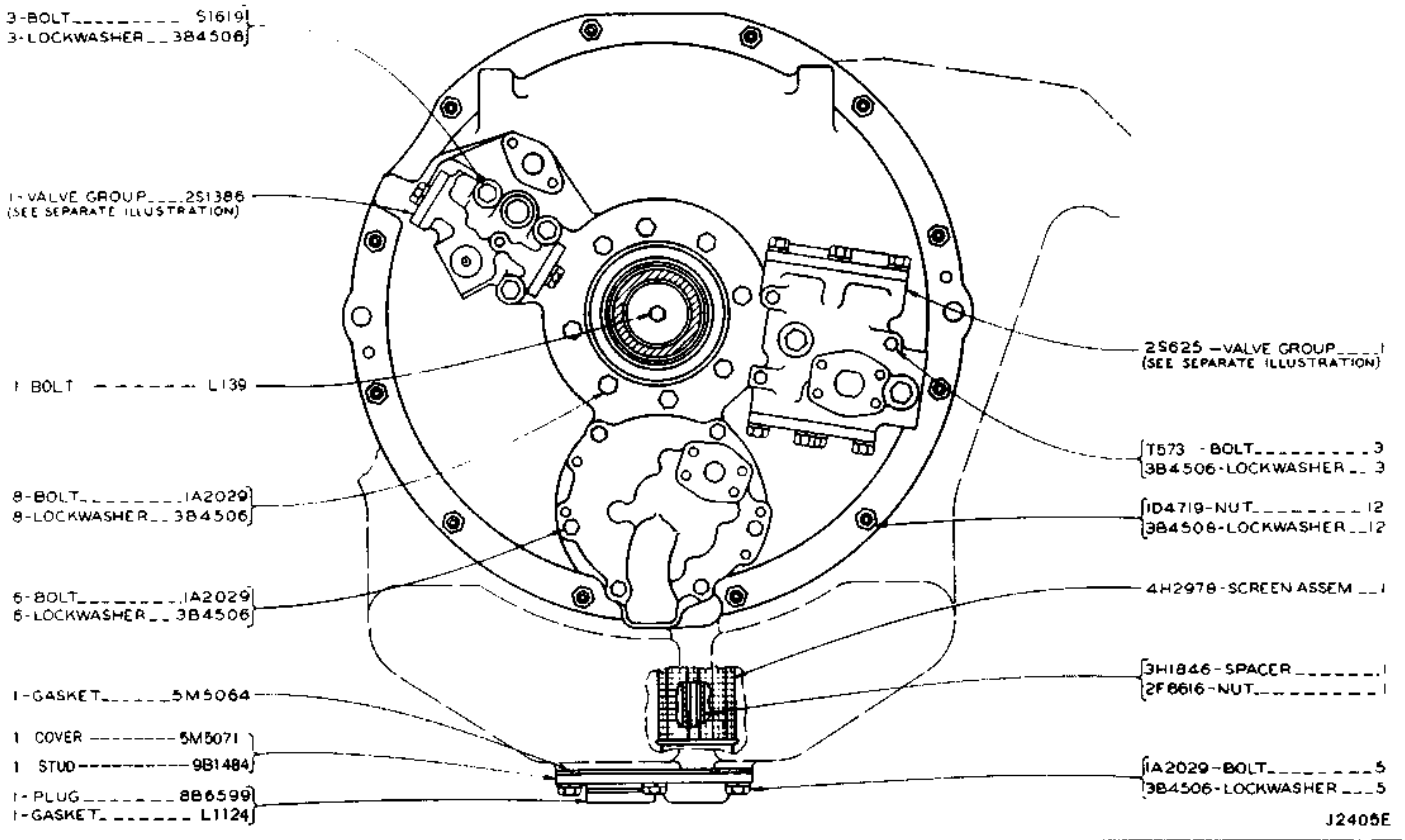

Ref.	Part number	Description	Qty	Code	Group page
	0S-1619	BOLT	3		
	3B-4506	LOCKWASHER	3		
	2S-1386	VALVE GROUP	1	Y	
(SEE SEPARATE ILLUSTRATION)					
	0L-0139	BOLT	1		
	1A-2029	BOLT	8		
	3B-4506	LOCKWASHER	8		
	1A-2029	BOLT	6		
	3B-4506	LOCKWASHER	6		
	5M-5064	GASKET	1		
	5M-5071	COVER	1		
	9B-1484	STUD	1		
	8B-6599	PLUG	1		
	0L-1124	GASKET	1		
	2S-0625	VALVE GROUP	1	Y	
(SEE SEPARATE ILLUSTRATION)					

TORQUE DIVIDER (continued)


Ref.	Part number	Description	Qty	Code	Group page
	0T-0573	BOLT	3		
	3B-4506	LOCKWASHER	3		
	1D-4719	NUT	12		
	3B-4508	LOCKWASHER	12		
	4H-2978	SCREEN ASSEM.	1		
	3H-1846	SPACER	1		
	2F-8616	NUT	1		
	1A-2029	BOLT	5		
	3B-4506	LOCKWASHER	5		

CAT codes: Y.

TORQUE DIVIDER

TORQUE DIVIDER--Part 1 of 2 Effective with Serial No. 69J533~69J637 5M7882 Joint Assem. 5M7864 Pump Group and 1T300 Converter Assem. parts are shown on Pages 52B and 52

Drawing 1 of 1

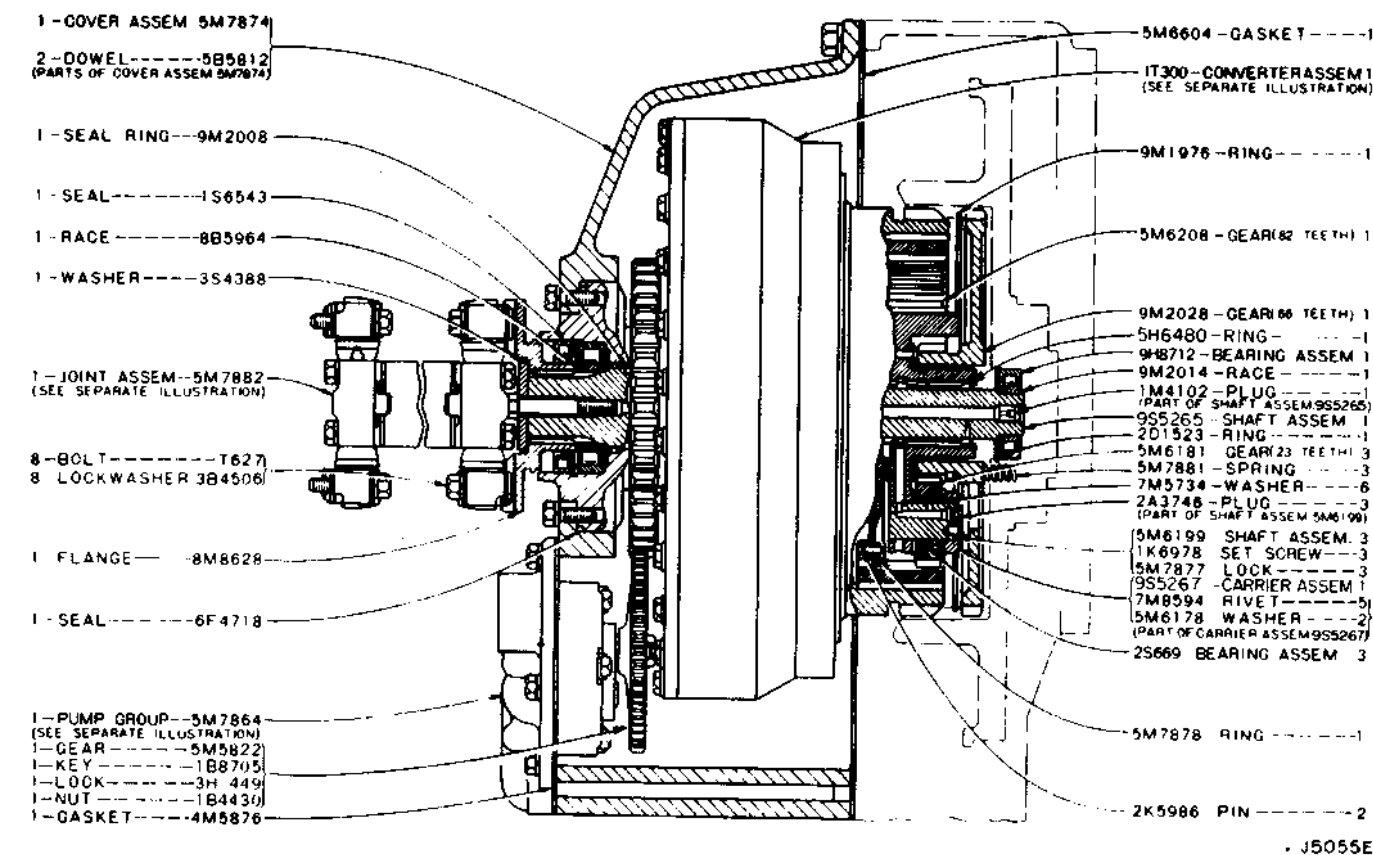

Ref.	Part number	Description	Qty	Code	Group page
	5M-7874	COVER ASSEM	1		
	5B-5812	DOWEL	2		
(PARTS OF COVER ASSEM 5M7874)					
	9M-2008	SEAL RING	1		
	1S-6543	SEAL	1		
	8B-5964	RACE	1		
	3S-4388	WASHER	1		
	5M-7882	JOINT ASSEM	1	Y	
(SEE SEPARATE ILLUSTRATION)					
	0T-0627	BOLT	8		
	3B-4506	LOCKWASHER	8		
	8M-8628	FLANGE	1		
	6F-4718	SEAL	1		
	5M-7864	PUMP GROUP	1	Y	
(SEE SEPARATE ILLUSTRATION)					

TORQUE DIVIDER (continued)


Ref.	Part number	Description	Qty	Code	Group page
	5M-5822	GEAR	1		
	1B-8705	KEY	1		
	3H-0449	LOCK	1		
	1B-4430	NUT	1		
	4M-5876	GASKET	1		
	5M-6604	GASKET	1		
	1T-0300	CONVERTER ASSEM.	1	Y	
(SEE SEPARATE ILLUSTRATION)					
	9M-1976	RING	1		
	5M-6208	GEAR(82 TEETH)	1		
	9M-2028	GEAR(66 TEETH)	1		
	5H-6480	RING	1		
	9H-8712	BEARING ASSEM.	1		
	9M-2014	RACE	1		
	1M-4102	PLUG	1		
(PART OF SHAFT ASSEM. 9S5265)					
	9S-5265	SHAFT ASSEM.	1		
	2D-1523	RING	1		
	5M-6181	GEAR(23 TEETH)	3		
	5M-7881	SPRING	3		
	7M-5734	WASHER	6		
	2A-3746	PLUG	3		
(PART OF SHAFT ASSEM. 5M6199)					
	5M-6199	SHAFT ASSEM.	3		
	1K-6978	SET SCREW	3		
	5M-7877	LOCK	3		
	9S-5267	CARRIER ASSEM.	1		
	7M-8594	RIVET	5		
	5M-6178	WASHER	2		
(PART OF CARRIER ASSEM. 9S5267)					
	2S-0669	BEARING ASSEM.	3		
	5M-7878	RING	1		
	2K-5986	PIN	2		

CAT codes: Y.

TORQUE DIVIDER

TORQUE DIVIDER--Part 2 of 2 Effective with Serial No. 69J533~69J637 2S1386, 2S625 Valve Group parts are shown on Page 53

Drawing 1 of 1

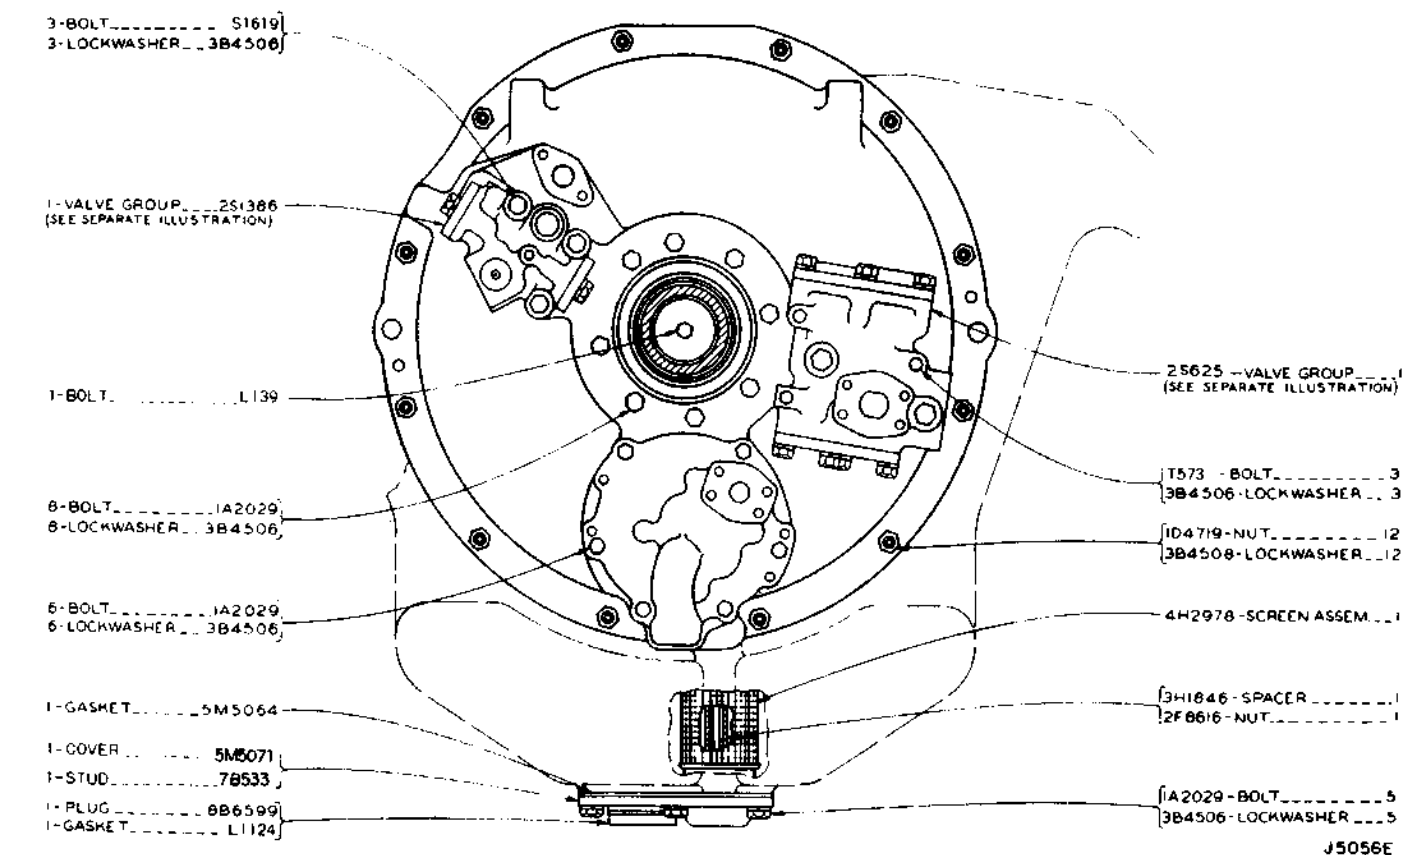

Ref.	Part number	Description	Qty	Code	Group page
	0S-1619	BOLT	3		
	3B-4506	LOCKWASHER	3		
	2S-1386	VALVE GROUP	1	Y	
(SEE SEPARATE ILLUSTRATION)					
	0L-0139	BOLT	1		
	1A-2029	BOLT	8		
	3B-4506	LOCKWASHER	8		
	1A-2029	BOLT	6		
	3B-4506	LOCKWASHER	6		
	5M-5064	GASKET	1		
	5M-5071	COVER	1		
	7B-0533	STUD	1		
	8B-6599	PLUG	1		
	0L-1124	GASKET	1		
	2S-0625	VALVE GROUP	1	Y	

TORQUE DIVIDER (continued)


Ref.	Part number	Description	Qty.	Code	Group page
(SEE SEPARATE ILLUSTRATION)					
	0T-0573	BOLT	3		
	3B-4506	LOCKWASHER	3		
	1D-4719	NUT	12		
	3B-4508	LOCKWASHER	12		
	4H-2978	SCREEN ASSEM.	1		
	3H-1846	SPACER	1		
	2F-8616	NUT	1		
	1A-2029	BOLT	5		
	3B-4506	LOCKWASHER	5		

CAT codes: Y.

TORQUE DIVIDER

TORQUE DIVIDER--Part 1 of 2 Effective with Serial No. 69J638~69J1988 5M7882 Joint Assem. 5M7864 Pump Assem. and 1T930 Converter Group parts are shown on Pages 52B and 52A

Drawing 1 of 1

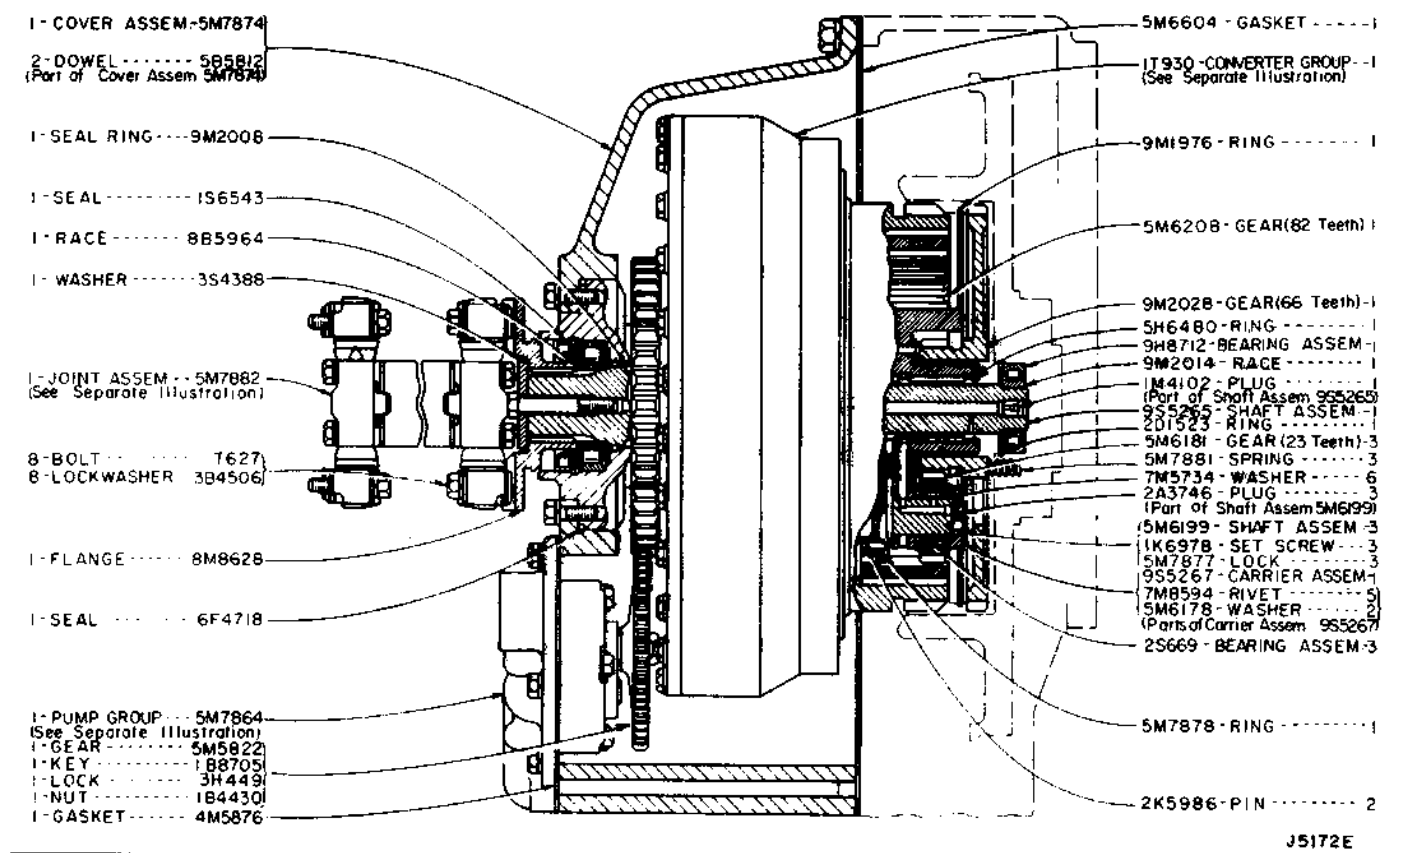

Ref.	Part number	Description	Qty	Code	Group page
	5M-7874	COVER ASSEM.	1		
	5B-5812	DOWEL	2		
	(Part of Cover Assem. 5M7874)				
	9M-2008	SEAL RING	1		
	1S-6543	SEAL	1		
	8B-5964	RACE	1		
	3S-4388	WASHER	1		
	5M-7882	JOINT ASSEM.	1	Y	
	(See Separate Illustration)				
	0T-0627	BOLT	8		
	3B-4506	LOCKWASHER	8		
	8M-8628	FLANGE	1		
	6F-4718	SEAL	1		
	5M-7864	PUMP GROUP	1	Y	
	(See Separate Illustration)				

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

69J-XMBP9763

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99