

CATERPILLAR 330B L

6DR / SEBP2437


Contents

Section	Page
Basic engine	2
Lubrication system	
Cooling system	
Fuel system	
Fuel system	
Basic engine	
Basic engine	
Electrical and electronics	
Power train	
Power train	
Hydraulic system	
Hydraulic system	
Hydraulic system	
Labels, kits and diagnostics	
Air inlet and exhaust	
Hydraulic system	

1N-4406 CAMSHAFT GP

1N-4406 CAMSHAFT GP S/N 6NC1-UP; R6J1-UP; 08Z91662-99999 SINGLE PART OF 116-7567, 116-7568 ENGINE AR ALSO AN ATTACHMENT

Drawing 1 of 1

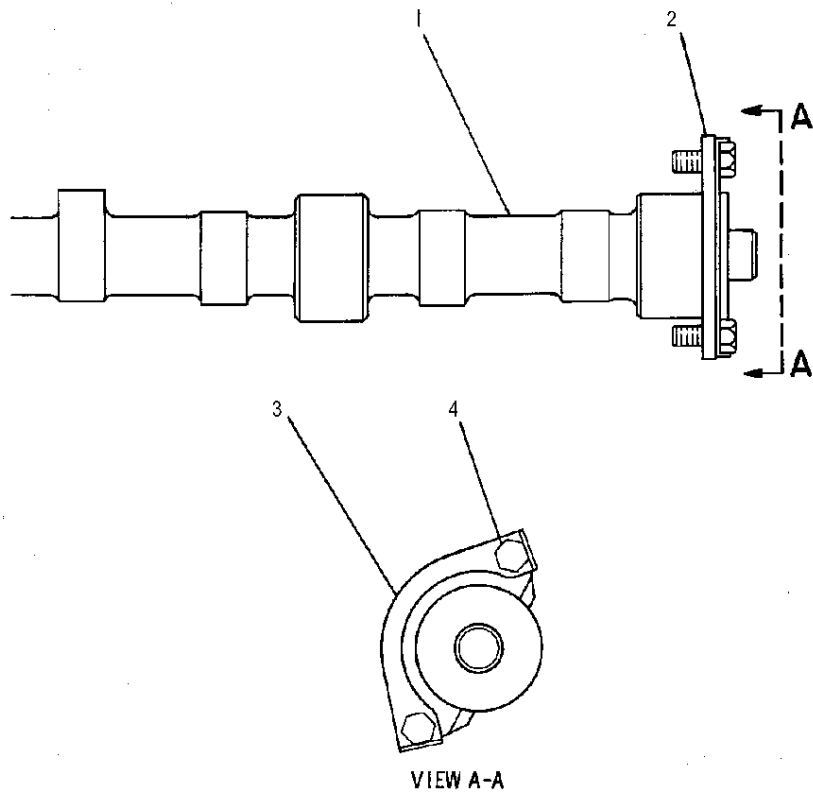


Ref.	Part number	Description	Qty	Code	Group page
1	7E-9980	CAMSHAFT	1		
2	7S-2204	WASHER-THRUST	1		
3	8S-1491	LOCK	1		
4	0S-0509	BOLT (3/8-16X0.75-IN)	2		

CAT codes: R.

7N-1342 COVER GP-CYLINDER BLOCK

7N-1342 COVER GP-CYLINDER BLOCK S/N 6NC1-UP; R6J1-UP; 08Z91662-99999 PART OF 116-7567, 116-7568
ENGINE AR ALSO AN ATTACHMENT

Drawing 1 of 1

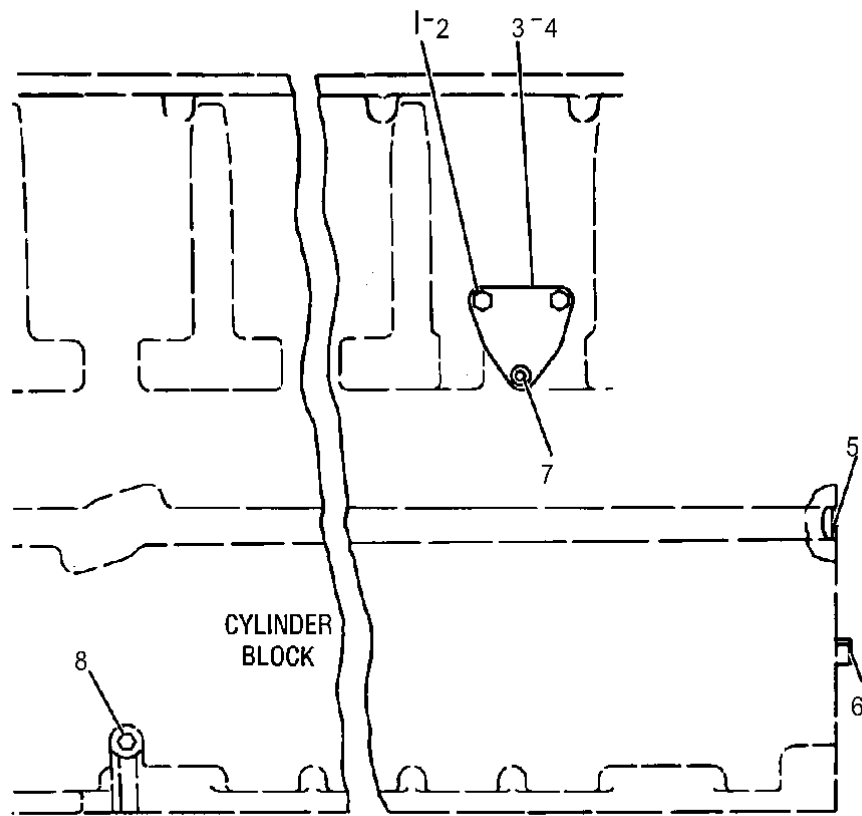


Ref.	Part number	Description	Qty	Code	Group page
1	0L-1351	BOLT (3/8-16X0.875-IN)	2	B	
2	5M-2894	WASHER-HARD (10.2X18.5X2.5-MM THK)	2	B	
3	8L-8662	COVER	1	B	
4	5S-8055	GASKET	1	B	
5	4B-3938	PLUG-CUP	1		
6	2A-3798	DOWEL	2		
7	8M-3267	SCREW-HEX SOCKET (3/8-16X0.75-IN)	1	B	
8	8T-6764	PLUG-PIPE (1/8-27-THD)	1	B	

CAT codes: B.

141-5088 COVER GP-FRONT HOUSING

141-5088 COVER GP-FRONT HOUSING S/N 6NC1-UP; 08Z91662-99999 PART OF 116-7567 ENGINE AR AN ATTACHMENT

Drawing 1 of 1

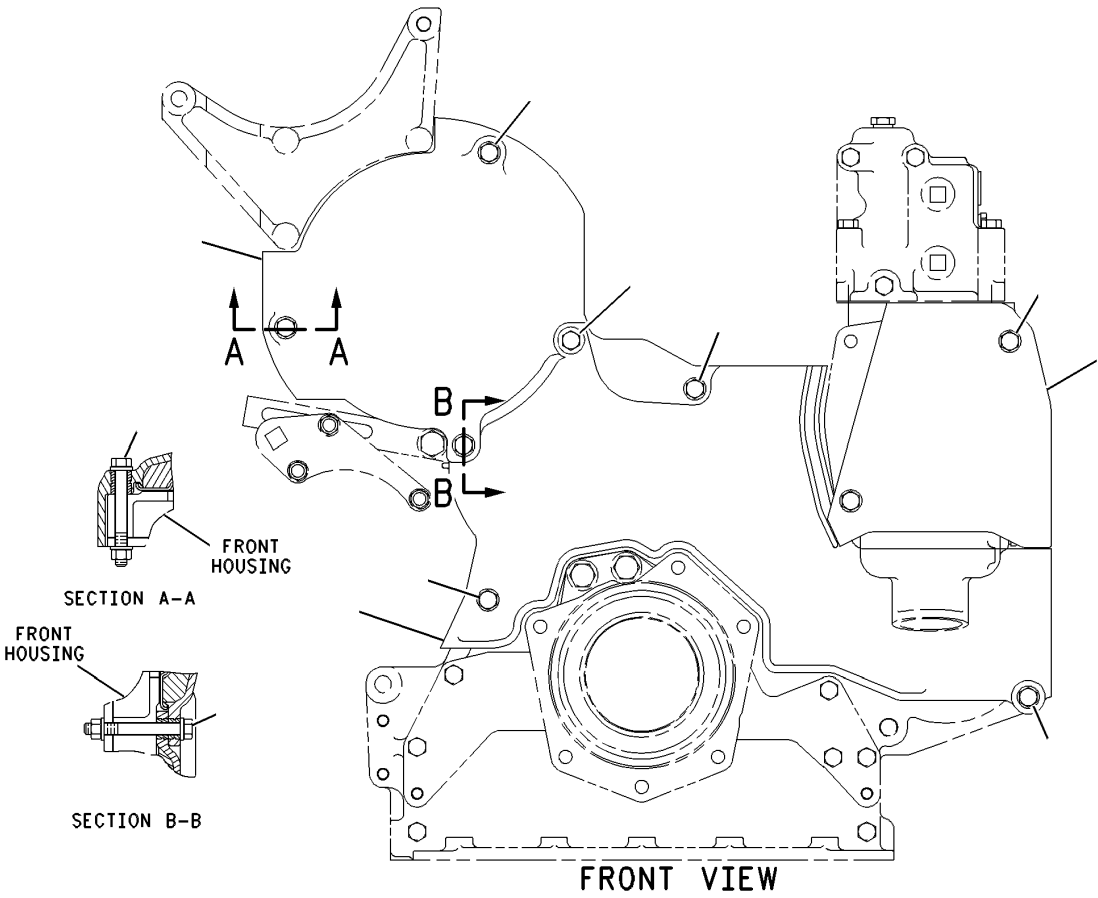


Ref.	Part number	Description	Qty	Code	Group page
1	4P-9137	COVER AS-SOUND SUPPRESSION	1		
2	141-5087	COVER AS-PANEL	1		
3	4P-9133	COVER AS-SOUND SUPPRESSION	1		
4	8T-8915	BOLT (3/8-16X3.25-IN)	2		
5	8T-4896	WASHER-HARD (10.2X18.5X2.5-MM THK)	10		
6	8T-9101	BOLT (3/8-16X2.75-IN)	2		
7	0L-1143	BOLT (3/8-16X2.5-IN)	2		
8	5S-7383	BOLT (3/8-16X1.75-IN)	2		
9	6V-8801	NUT (3/8-16-THD)	2		
10	7X-0575	WASHER-HARD (10.2X22.5X5-MM THK)	1		
11	8T-7008	BOLT (3/8-16X3-IN)	1		

2P-6528 COVER GP-FRONT HOUSING

2P-6528 COVER GP-FRONT HOUSING S/N 6NC1-UP; R6J1-UP; 08Z91662-99999 PART OF 116-7568 ENGINE AR

Drawing 1 of 1

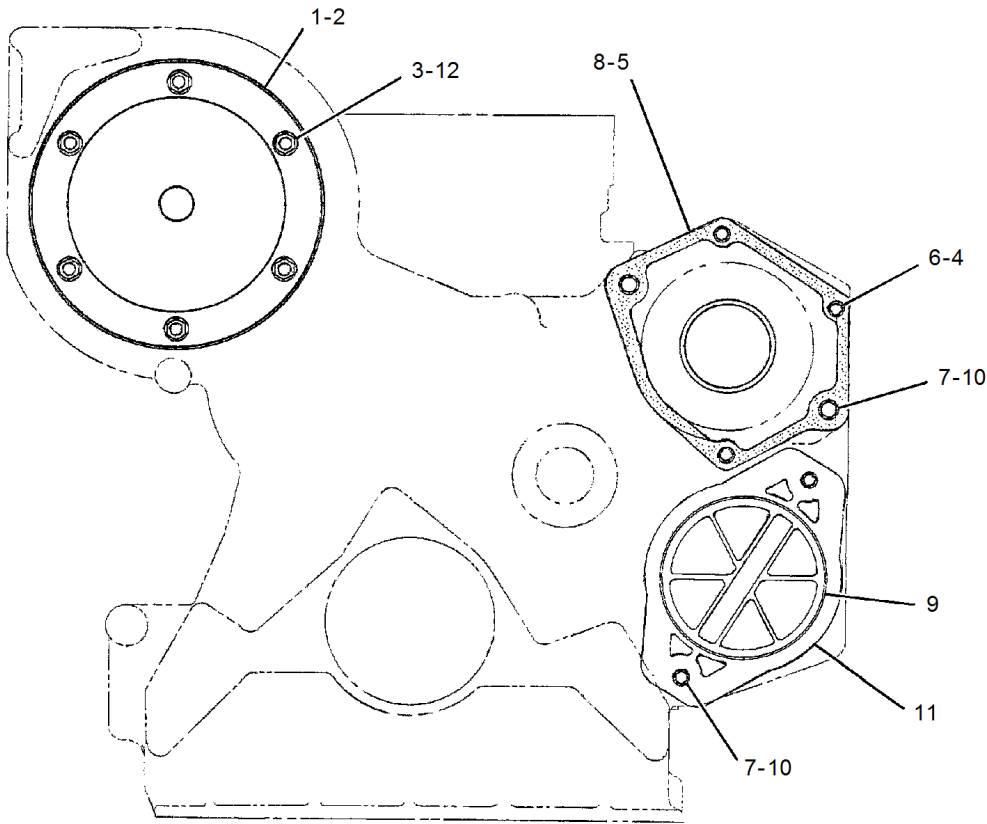


FRONT VIEW OF ENGINE

Ref.	Part number	Description	Qty	Code	Group page
1	9N-5769	COVER-HOUSING	1		
2	6N-7887	GASKET-HOUSING COVER	1		
3	3S-2713	NUT-FULL (3/8-24-THD)	6		
4	5M-2894	WASHER-HARD (10.2X18.5X2.5-MM THK)	3		
5	1W-4542	COVER-WATER PUMP	1		
6	3B-1915	BOLT (3/8-16X1.375-IN)	3		
7	0S-1566	BOLT (5/8-11X1.5-IN)	4		
8	2P-0220	GASKET-PUMP	1		
9	5F-3106	SEAL-O-RING	1		
10	5P-8247	WASHER-HARD (17X32X3.5-MM THK)	4		
11	7N-8374	COVER-PUMP	1		
12	8M-9024	WASHER-HARD (10.2X22.5X5-MM THK)	6		

4N-5162 COVER GP-FRONT HOUSING

4N-5162 COVER GP-FRONT HOUSING S/N 6NC1-UP; 08Z91662-99999 PART OF 116-7567 ENGINE AR AN ATTACHMENT

Drawing 1 of 1

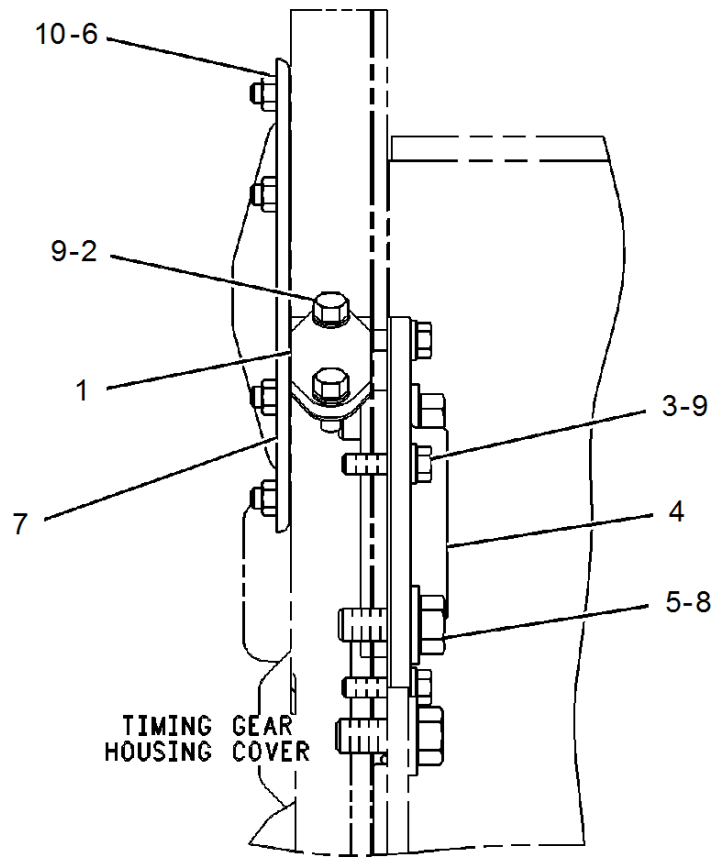


Ref.	Part number	Description	Qty	Code	Group page
1	4N-4526	COVER	1		
	2P-2720	GASKET	1		
2	2P-3200	BOLT-WASHER HEAD	2	C	
3	3B-1915	BOLT (3/8-16X1.375-IN)	3	C	
4	1W-4542	COVER-WATER PUMP	1		
	2P-0220	GASKET-PUMP	1	C	
5	0S-1566	BOLT (5/8-11X1.5-IN)	2		
6	3S-2713	NUT-FULL (3/8-24-THD)	6	C	
7	9N-5769	COVER-HOUSING	1		
	6N-7887	GASKET-HOUSING COVER	1	C	
8	5P-8247	WASHER-HARD (17X32X3.5-MM THK)	2	C	
9	5M-2894	WASHER-HARD (10.2X18.5X2.5-MM THK)	3		
10	8M-9024	WASHER-HARD (10.2X22.5X5-MM THK)	6		

CAT codes: C.

9Y-4721 COVER GP-FRONT HOUSING

9Y-4721 COVER GP-FRONT HOUSING S/N 6NC1-UP; R6J1-UP; 08Z91662-99999 OIL FILL HOLE PART OF 116-7568 ENGINE AR

Drawing 1 of 1

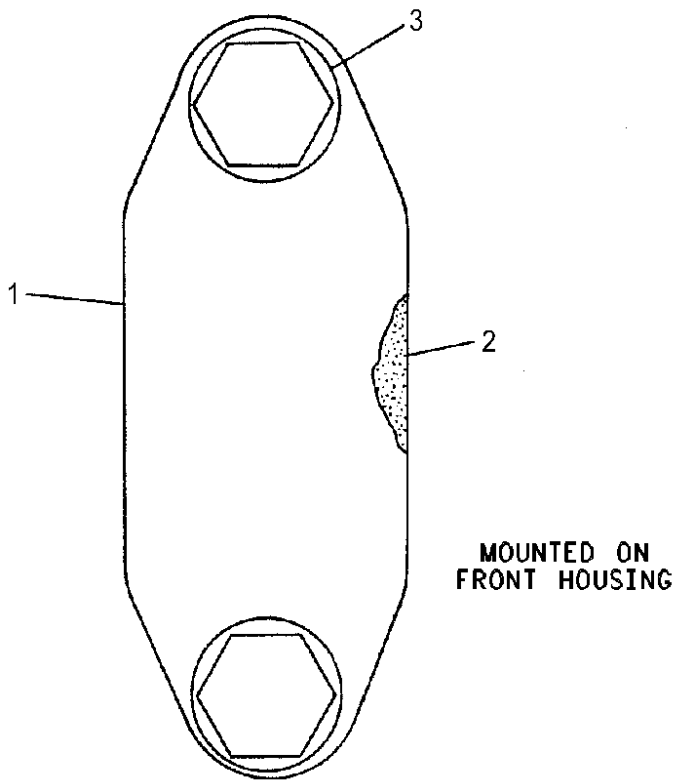


Ref.	Part number	Description	Qty	Code	Group page
1	4N-4526	COVER	1		
2	2P-2720	GASKET	1		
3	2P-3200	BOLT-WASHER HEAD	2		

6I-4560 COVER GP-VALVE MECHANISM

6I-4560 COVER GP-VALVE MECHANISM S/N 6NC1-UP; R6J1-UP; 08Z91662-99999 PART OF 116-7567, 116-7568
ENGINE AR ALSO AN ATTACHMENT

Drawing 1 of 1

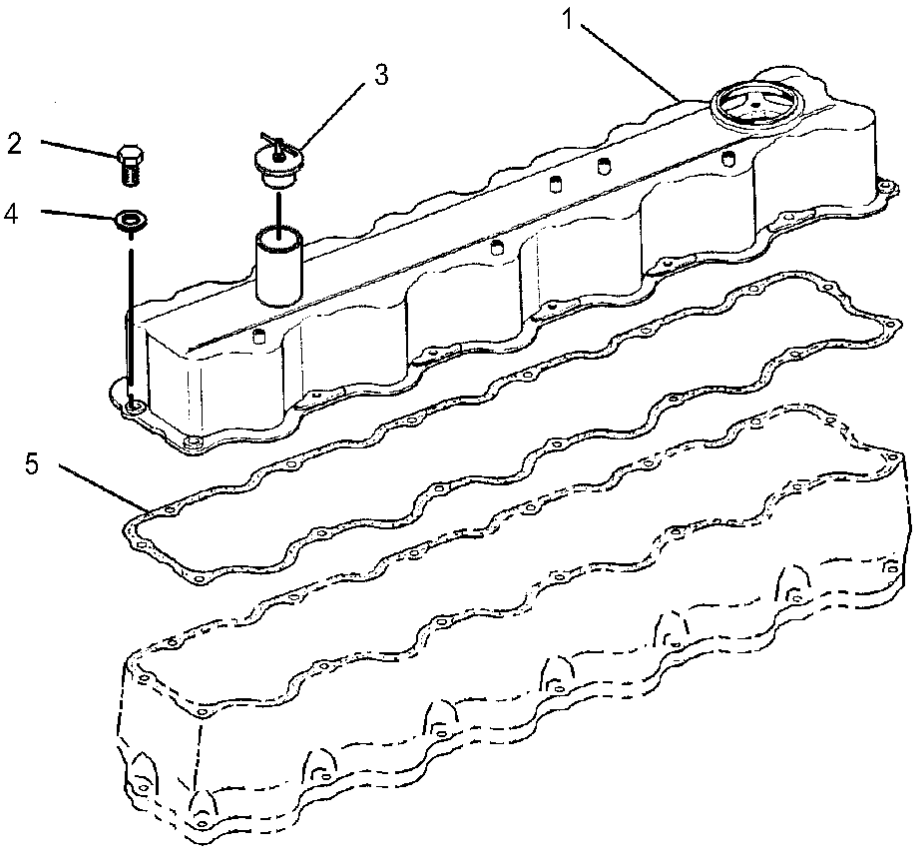


Ref.	Part number	Description	Qty	Code	Group page
1	6I-4561	COVER AS-CYLINDER HEAD	1		
2	0S-1617	BOLT (5/16-18X0.75-IN)	15		
3	5L-2952	CAP AS-FILLER	1		
4	9M-1974	WASHER-HARD (8.8X16X2-MM THK)	15		
5	133-1247	SEAL-VALVE COVER	1		

4P-9856 CRANKSHAFT GP

4P-9856 CRANKSHAFT GP S/N 6NC1-UP; R6J1-UP; 08Z91662-99999 PART OF 116-7567, 116-7568 ENGINE AR ALSO AN ATTACHMENT

Drawing 1 of 1

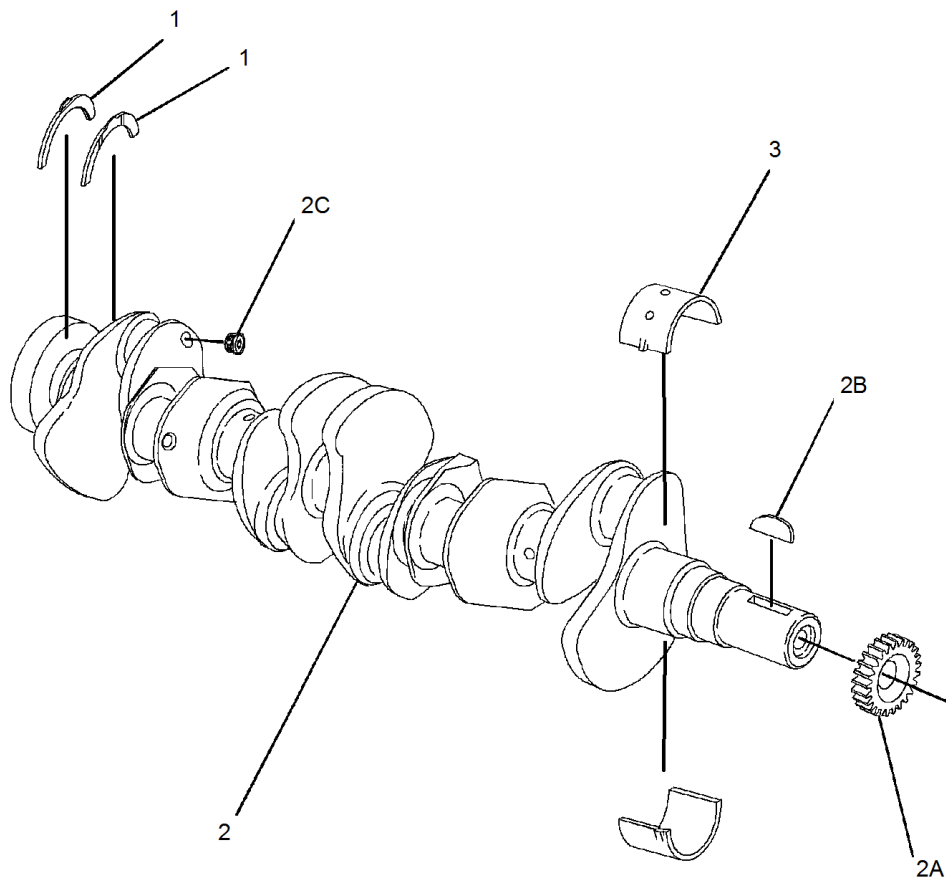

Ref.	Part number	Description	Qty	Code	Group page
1	100-3652	PLATE-THRUST	2	J	
2	344-2603	CRANKSHAFT AS	1		
2A	4P-7827	GEAR-CRANKSHAFT (33-TEETH)	1		
2B	5H-2671	KEY-WOODRUFF	1		
2C	8T-6757	PLUG-PIPE	6		
3	232-3233	BEARING-MAIN (STANDARD)	7	J	
	8N-8225	BEARING-MAIN (0.25-MM US)		AB	
	8N-8226	BEARING-MAIN (0.51-MM US)		AB	
	8N-8227	BEARING-MAIN (0.76-MM US)		AB	
	8N-8228	BEARING-MAIN (0.51-MM OS)		AB	
	8N-8229	BEARING-MAIN (0.25-MM US, 0.51-MM OS)		AB	
	4P-7305	BEARING-MAIN (0.51-MM OS, 0.51-MM US)		AB	
	4P-7306	BEARING-MAIN (0.51-MM OS, 0.76-MM US)		AB	

4P-9856 CRANKSHAFT GP (continued)

Ref.	Part number	Description	Qty.	Code	Group page
AVAILABLE REPLACEMENT PART(S):					
	196-9534	KIT-BASIC ENGINE REPAIR (MAIN BEARING)		AJ	
(INCLUDES STANDARD BEARINGS & THRUST PLATES)					

CAT codes: A, B, J, R.

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

6DR-SEBP2437

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99