

CATERPILLAR PR-750B

8AC / KEBP0051


Contents

Section	Page
Basic engine	2
Lubrication system	
Cooling system	
Air inlet and exhaust	
Fuel system	
Basic engine	
Hydraulic system	
Electrical and electronics	
Power train	
Frame, guards and enclosure	
Undercarriage	
Steering and brakes	
Power train	
Labels, kits and diagnostics	
Hydraulic system	
Air inlet and exhaust	
Cooling system	
Catalog items	

081-9982 POWER PACK GP

819982 POWER PACK GP-PART 1 OF 4 S/N 8AC1-139 820005-PAGE 41, 7X4429-PAGE 42, 819994-PAGE 44, 820004-PAGE 65, 820002-PAGE 66, 820030-PAGE 75 & 820003-PAGE 117

Drawing 1 of 1

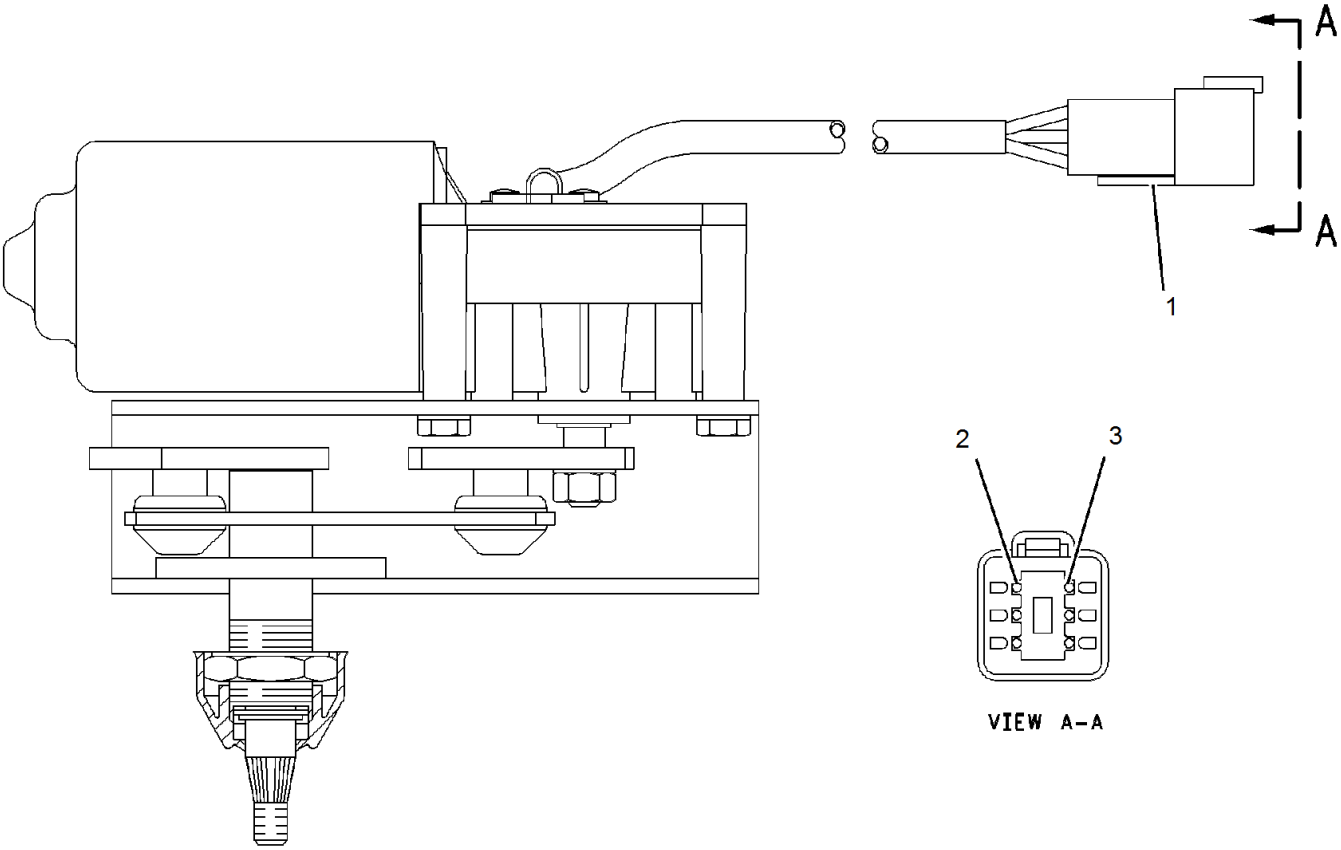

Ref.	Part number	Description	Qty	Code	Group page
1	081-7793	RADIATOR	1		
2	082-0029	BRACE	2		
3	0S-0509	BOLT	2		
	3B-4506	LOCKWASHER	2		
	1D-4717	NUT	2		
4	8C-1862	CLAMP	4		
5	1C-4048	HOSE-HUMP	1		
6	082-0011	TUBE (AIR CLEANER)	1		
7	9N-8319	INDICATOR (SERVICE)	1		
8	5P-0598	CLAMP	16		
9	081-7126	HOSE (RADIATOR)	2		
10	081-8437	ELBOW	1		
11	082-0032	FLASHING	1		
12	082-0008	TUBE	1		

081-9982 POWER PACK GP (continued)

Ref.	Part number	Description	Qty	Code	Group page
13	8C-1215	U-BOLT	2	J	
	1D-4717	NUT	4	J	
14	9N-7932	TIE-CABLE		B	
15	082-0022	TUBE	1		
16	082-0034	FLASHING	1		
17	0S-1588	BOLT	4	J	
18	3B-4506	LOCKWASHER	8	J	
19	082-0026	PIPE (ENG EXHAUST)	1	J	
20	081-6990	TUBE	2		
21	081-9990	TUBE	1		
22	1C-4513	HOSE	2		
23	082-0028	MOUNT (EXHAUST PIPE)	1	J	
	8S-9089	BOLT	2	J	
24	3B-4508	LOCKWASHER	10	J	
	1D-4719	NUT	10	J	
25	1D-4719	NUT	2		
26	3B-4508	LOCKWASHER	6		
27	9N-9023	WASHER	2		
28	8T-4285	MOUNT-RUBBER	2		
29	0S-1585	BOLT	8		
30	082-1037	ELBOW	1		
31	081-6403	BOLT	2		
32	5P-0599	CLAMP	8		
33	9N-9033	HOSE (LOWER RADIATOR)	2		
34	081-9993	TUBE (LOWER RADIATOR)	1		
35	8C-0436	CLAMP	1		
36	1D-5119	NUT	2		
37	081-8308	SCREW	2		
38	082-0023	TUBE	1		
39	8C-1214	CLAMP	1	J	
40	1A-1460	BOLT	8	J	
41	082-0033	FLASHING	1		
42	082-0020	ELBOW	1	J	
	082-0030	FUEL SYSTEM	1	FY	
	7X-4429	TAKE-OFF GP	1	FY	
	082-0005	DRIVE GP-FRONT STUB	1	FY	

081-9982 POWER PACK GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
	082-0004	MOUNTING & DRIVE GP-AIR COMP	1	FY	
	082-0003	MOUNTING GP-ALTERNATOR	1	FY	
	082-0002	LINES GP-AIR COMPRESSOR	1	FY	
	081-9994	DRIVE GP-FAN	1	FY	
J-PART OF EXHAUST GP					
SHOWN IN ILLUS PART 2					

CAT codes: B, F, Y.

081-9982 POWER PACK GP

819982 POWER PACK GP-PART 2 OF 4 S/N 8AC1-139

Drawing 1 of 1

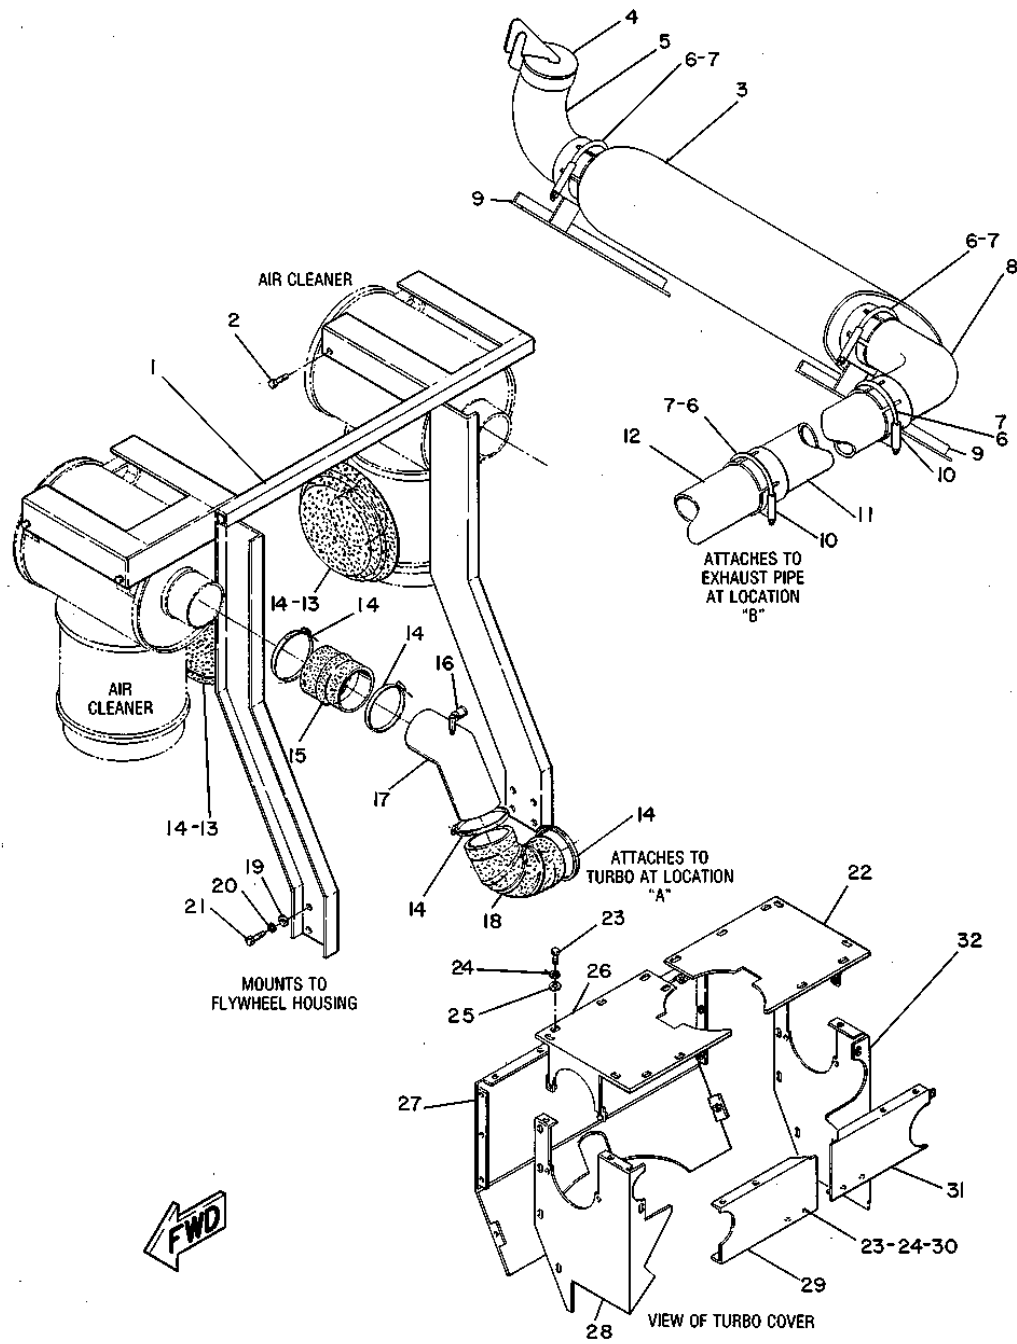

Ref.	Part number	Description	Qty	Code	Group page
1	082-0010	MOUNT (AIR CLEANER)	1		
2	0S-1588	BOLT	8		
	1D-4717	NUT	8		
	3B-4506	LOCKWASHER	8		
3	082-0024	EXHAUST GP	1		


081-9982 POWER PACK GP (continued)

Ref.	Part number	Description	Qty.	Code	Group page
(ALSO INCL PARTS MARKED					
J IN ILLUS PARTS 1 & 3)					
	9N-8185	MUFFLER	1		
4	1C-3923	CAP AS-RAIN	1		
5	081-7352	ELBOW	1		
6	8C-1215	U-BOLT	4		
7	3B-4506	LOCKWASHER	10		
	1D-4717	NUT	8		
8	082-0019	ELBOW	1		
9	082-0018	SUPPORT (MUFFLER)	1		
10	8C-1214	CLAMP	2		
11	082-0017	PIPE (EXHAUST)	1		
12	082-0027	PIPE (AIR BOX)	1		
13	1C-4949	CAP AS	2		
14	8C-1862	CLAMP	6		
15	1C-4048	HOSE-HUMP	1		
16	9N-8319	INDICATOR (SERVICE)	1		
17	082-0011	TUBE	1		
18	081-8437	ELBOW	1		
19	4B-4281	WASHER	8		
20	3B-4510	LOCKWASHER	8		
21	0S-1566	BOLT	8		
22	082-0025	COVER GP-TURBOCHARGER	1		
	081-7791	COVER-TOP REAR	1		
23	0S-1594	BOLT	33		
24	3B-4506	LOCKWASHER	33		
25	4B-4278	WASHER	29		
26	081-7792	COVER-TOP FRONT	1		
27	081-7788	COVER-RIGHT SIDE	1		
28	081-7787	COVER-FRONT	1		
29	081-7790	COVER (FRONT)	1		
30	1D-4717	NUT	4		
31	081-7789	COVER (REAR)	1		
32	081-7786	COVER-REAR	1		

081-9982 POWER PACK GP

819982 POWER PACK GP-PART 3 OF 4 S/N 8AC1-139 6N1889-PAGE 102

Drawing 1 of 1

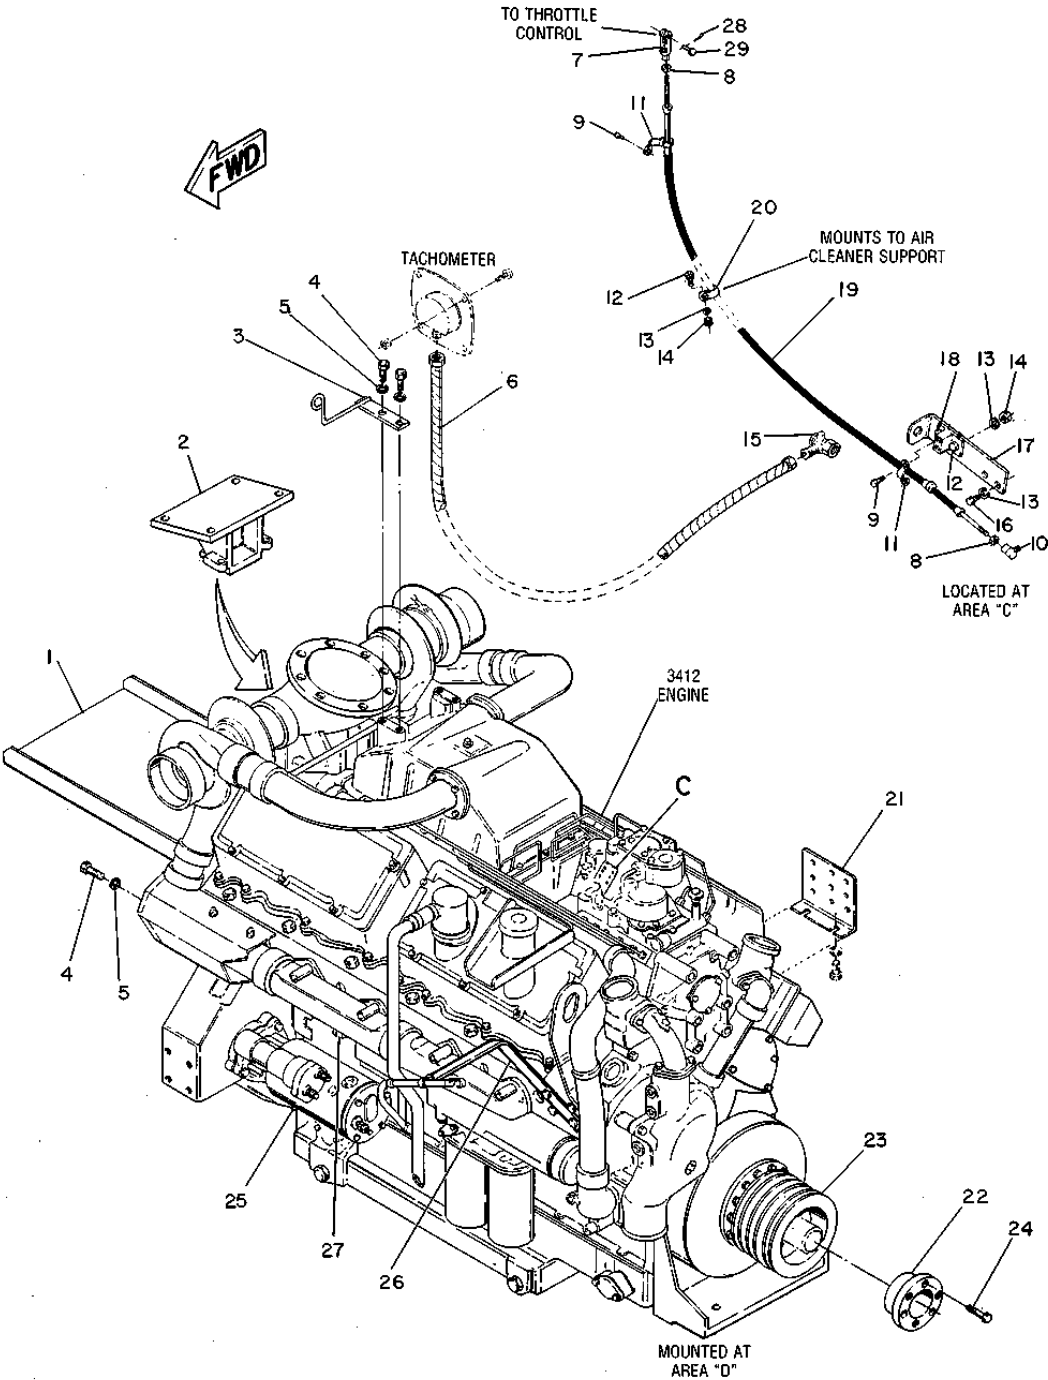

Ref.	Part number	Description	Qty	Code	Group page
1	082-0009	COVER (DRIVE LINE)	1		
2	082-0021	SUPPORT (EXHAUST ELBOW)	1	J	
3	081-9894	GUIDE (CABLE)	1		
4	0S-1621	BOLT	4		
5	3B-4508	LOCKWASHER	4		

081-9982 POWER PACK GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
6	1C-3920	CABLE (TACH DRIVE)	1		
7	8B-3768	ROD END-YOKE	1		
8	1B-4201	NUT-FULL	2		
9	081-6426	SCREW-MACHINE	4		
10	4L-6452	BALL JOINT	1		
11	8C-0865	CLAMP	2		
12	0S-1616	BOLT	3		
13	3B-4504	LOCKWASHER	5		
14	1B-4330	NUT	3		
15	8C-1314	ELBOW-DRIVE	1		
16	0S-1615	BOLT	2		
17	9N-7099	BRACKET (THROTTLE CONTROL)	1		
18	081-9783	BRACKET	1		
19	8C-0864	CABLE	1		
20	7X-4202	CLAMP	1		
21	081-9892	BRACKET (MAGNETIC SWITCH MTG)	1		
22	081-9258	BUSHING	1		
23	081-9031	SHEAVE	1		
24	1A-5822	BOLT	6		
25	6N-1889	STARTING MOTOR GP-ELECTRIC (L.H.)	1	RY	
	081-7707	STARTER (R.H.)	1		
26	082-1046	BRACKET-DIPSTICK	1		
27	3J-5389	PLUG	1		
28	3B-4607	COTTER	1		
29	9S-1303	PIN	1		
J-PART OF EXHAUST GP					
SHOWN IN ILLUS PART 2					

CAT codes: R, Y.

081-9982 POWER PACK GP

819982 POWER PACK GP-PART 4 OF 4 S/N 8AC1-139 817108-PAGE 148

Drawing 1 of 1

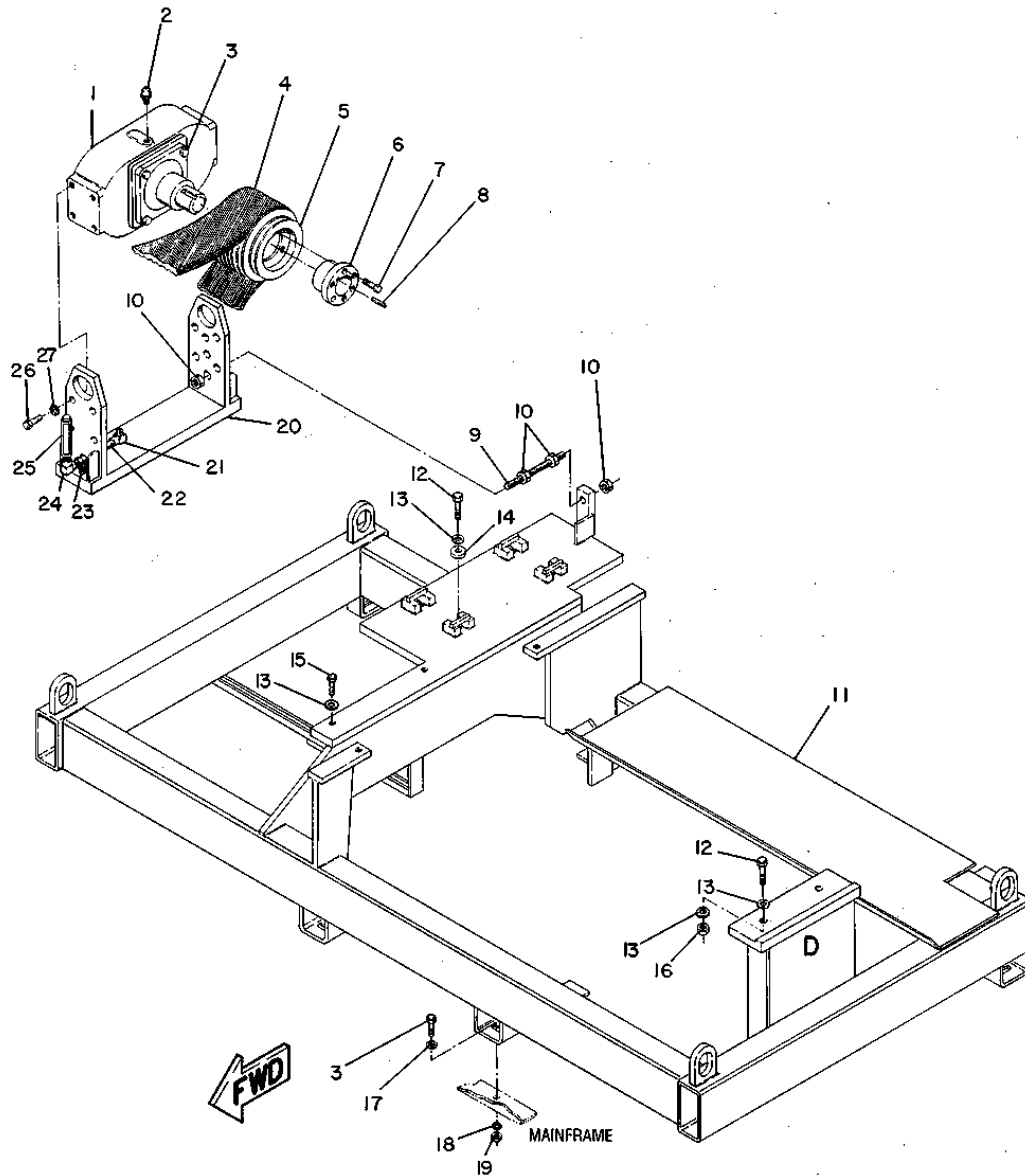

Ref.	Part number	Description	Qty	Code	Group page
1	081-7108	GEARBOX GP-2 PUMP DRIVE	1	Y	
2	1F-8488	BREATHER	1		
3	0S-1585	BOLT	8		
4	8C-2088	V-BELT SET	1		
5	081-9989	SHEAVE	1		

081-9982 POWER PACK GP (continued)

Ref.	Part number	Description	Qty	Code	Group page
6	081-9257	BUSHING	1		
7	1A-5822	BOLT	6		
8	081-7520	BAR	1		
9	081-9992	STUD	1		
10	1B-4332	NUT-FULL	4		
11	081-9980	FRAME	1		
12	1A-8063	BOLT	6		
13	4B-4283	WASHER	12		
14	5P-8250	WASHER	4		
15	2A-1538	BOLT	2		
16	1B-4331	NUT	2		
17	4B-4280	WASHER	4		
18	3B-4508	LOCKWASHER	4		
19	1D-4719	NUT	4		
20	081-9981	SUPPORT (PUMP)	1		
21	002-6453	ELBOW	1		
22	081-8614	NIPPLE	1		
23	081-8745	CLAMP	1		
	0S-1615	BOLT	1		
	1B-4330	NUT	2		
24	081-8285	ELBOW	1		
25	9N-7608	GAUGE (LIQUID LEVEL)	1		
26	0S-1566	BOLT	8		
27	3B-4510	LOCKWASHER	8		

CAT codes: Y.

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

8AC-KEBP0051

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99