

CATERPILLAR 793C

ATY / SEBP3022


Contents

Section	Page
Basic engine	2
Lubrication system	
Cooling system	
Air inlet and exhaust	
Fuel system	
Basic engine	
Basic engine	
Electrical and electronics	
Power train	
Hydraulic system	
Power train	
Hydraulic system	
Hydraulic system	
Air inlet and exhaust	
Hydraulic system	

123-6904 ADAPTER GP-FLYWHEEL HOUSING

123-6904 ADAPTER GP-FLYWHEEL HOUSING S/N 8WM122-3342; 7TR830-UP PART OF 147-0797, 147-0825, 187-4593, 187-4594, 187-4595 ENGINE AR, 451-9857 ENGINE AR-COMPLETE AN ATTACHMENT

Drawing 1 of 1

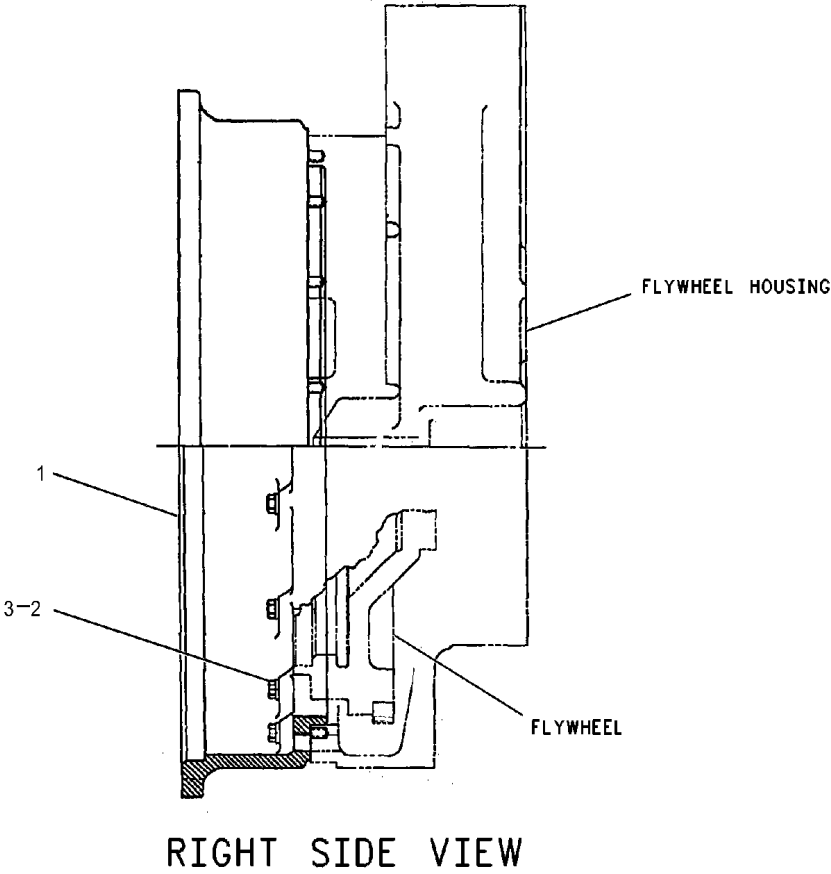


Ref.	Part number	Description	Qty	Code	Group page
1	434-3759	ADAPTER	1		
2	2B-0947	BOLT (1/2-13X2.25-IN)	16		
3	2M-0849	WASHER-HARD (13.5X25.5X5-MM THK)	16		

384-3632 ADAPTER GP-FLYWHEEL HOUSING

384-3632 ADAPTER GP-FLYWHEEL HOUSING S/N 8WM3286-UP; 7TR3563-UP PART OF 147-0797, 187-4593, 488-8197 ENGINE AR, 451-9857 ENGINE AR-COMPLETE AN ATTACHMENT

Drawing 1 of 1

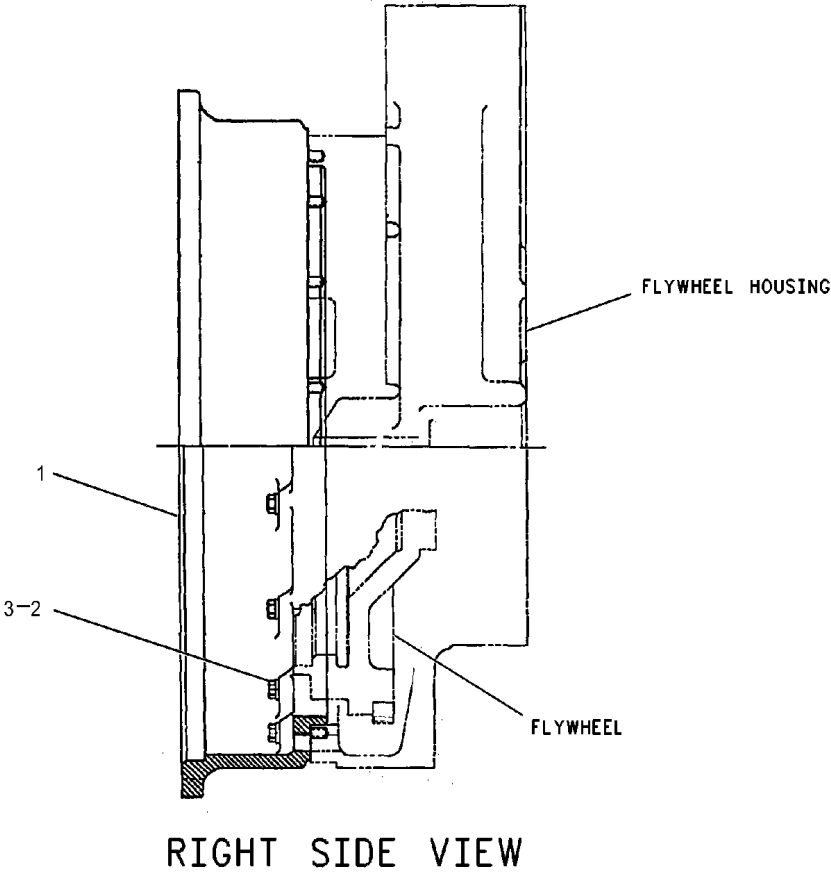


Ref.	Part number	Description	Qty	Code	Group page
1	434-3759	ADAPTER	1		
2	2B-0947	BOLT (1/2-13X2.25-IN)	16		
3	2M-0849	WASHER-HARD (13.5X25.5X5-MM THK)	16		

152-1031 AIR COMPRESSOR GP

152-1031 AIR COMPRESSOR GP S/N 8WM122-3348; 7TR830-UP PART OF 147-0797, 147-0825, 187-4593, 187-4594, 187-4595, 488-8197 ENGINE AR, 451-9857 ENGINE AR-COMPLETE AN ATTACHMENT

Drawing 1 of 1

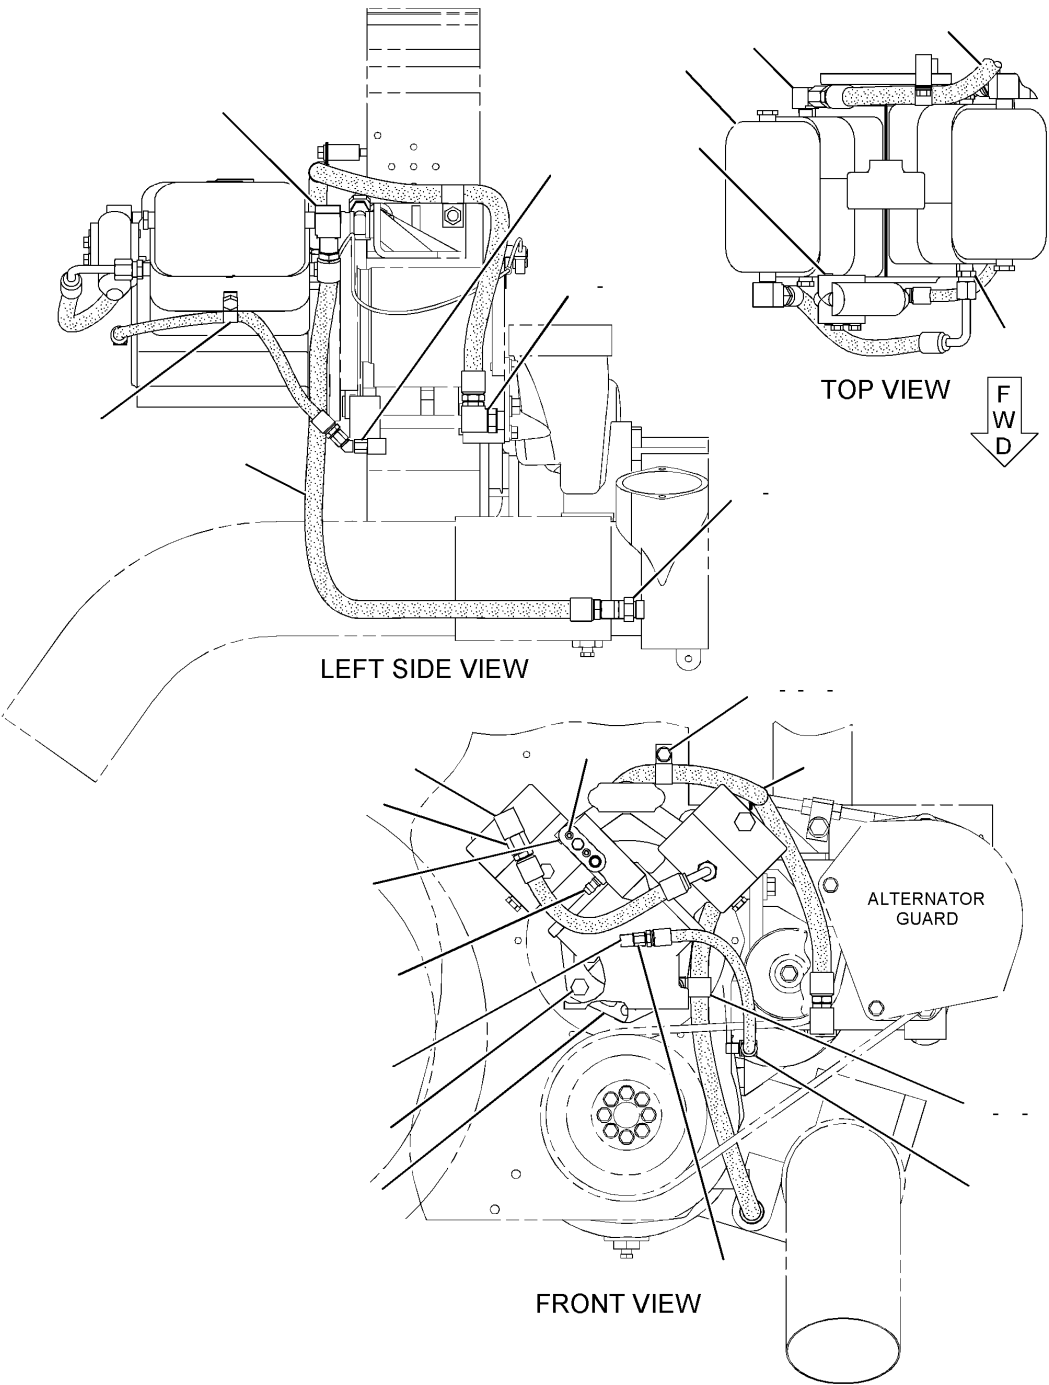

Ref.	Part number	Description	Qty	Code	Group page
1	5F-5434	VALVE AS-VENT	1		
2	5T-8088	HOSE AS	1	I	
3	7V-0916	HOSE AS	1	I	
4	8B-2026	SPACER (0.438X0.75X1.5-IN THK)	1		

152-1031 AIR COMPRESSOR GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
6	8N-2811	GASKET	1		
7	9N-5221	HOSE AS	1	I	
8	152-1005	HOSE AS	1	I	
9	160-9820	AIR COMPRESSOR GP	1	Y	
10	005-4173	ELBOW	1		
11	032-1269	ELBOW	1		
12	0S-1595	BOLT (1/2-13X1.25-IN)	4		
13	0T-0573	BOLT (3/8-16X2.75-IN)	1		
14	1S-0994	CLIP (LOOP)	1		
15	2M-9780	SEAL-O-RING	2		
16	2N-1287	ELBOW-FLARED	1		
17	2N-3378	ELBOW-FLARED	1		
18	5M-2894	WASHER-HARD (10.2X18.5X2.5-MM THK)	1		
19	5P-4295	CLIP	2		
20	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	1		
21	6K-1972	ELBOW-FLARED	1		
22	7L-7262	ELBOW-FLARED	1		
24	8M-0755	ADAPTER	1		
25	8T-6757	PLUG-PIPE	4		
26	9M-4584	CONNECTOR	1		
27	8M-2770	CLIP (LOOP)	1		
28	030-7961	ELBOW	1		

CAT codes: I, R, Y.

152-1031 AIR COMPRESSOR GP

152-1031 AIR COMPRESSOR GP S/N 8WM3349-UP; 7TR3644-UP PART OF 147-0797, 187-4593, 488-8197 ENGINE AR, 451-9857 ENGINE AR-COMPLETE AN ATTACHMENT

Drawing 1 of 1

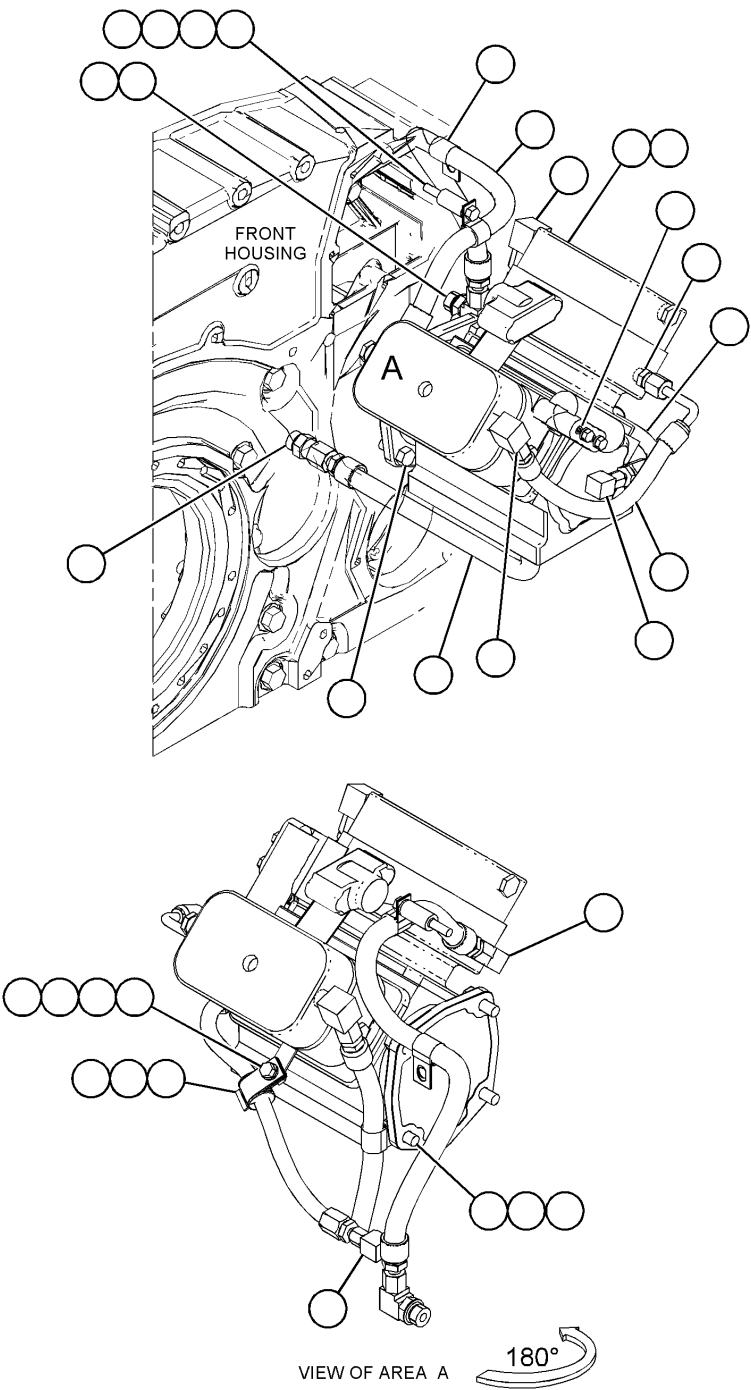

Ref.	Part number	Description	Qty	Code	Group page
1	353-7954	GROMMET	1	C	
2	5T-8088	HOSE AS	1	I	
3	478-6619	HOSE AS	1	C	
4	8B-2026	SPACER (0.438X0.75X1.5-IN THK)	1		

152-1031 AIR COMPRESSOR GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
5	9S-8752	NUT-FULL (3/8-16-THD)	1	C	
6	8N-2811	GASKET	1		
7	9N-5221	HOSE AS	1	I	
8	152-1005	HOSE AS	1	I	
9	160-9820	AIR COMPRESSOR GP	1	Y	
10	005-4173	ELBOW	1		
11	118-7809	PLATE	1	C	
12	032-1269	ELBOW	1		
13	0S-1595	BOLT (1/2-13X1.25-IN)	4		
14	0T-0573	BOLT (3/8-16X2.75-IN)	1		
15	1S-0994	CLIP (LOOP)	1		
16	2M-9780	SEAL-O-RING	2		
17	5P-4592	ELBOW-FLARED	1	C	
18	2N-3378	ELBOW-FLARED	1		
19	5M-2894	WASHER-HARD (10.2X18.5X2.5-MM THK)	2	C	
20	5P-4295	CLIP	2		
21	5P-8245	WASHER-HARD (13.5X25.5X3-MM THK)	1		
22	032-1268	CONNECTOR (90-DEG)	1	C	
23	7L-7262	ELBOW-FLARED	1		
24	8T-1889	CLIP (SLOT)	1	C	
25	8M-0755	ADAPTER	1		
26	8T-1890	CLIP (TAB)	1	C	
27	8T-6757	PLUG-PIPE	4		
28	9M-4584	CONNECTOR	1		
29	0S-1594	BOLT (3/8-16X1-IN)	1	C	

CAT codes: C, I, R, Y.

160-9820 AIR COMPRESSOR GP

160-9820 AIR COMPRESSOR GP S/N 8WM122-UP; 7TR830-3630 PART OF 152-1031 AIR COMPRESSOR GP AN ATTACHMENT

Drawing 1 of 1

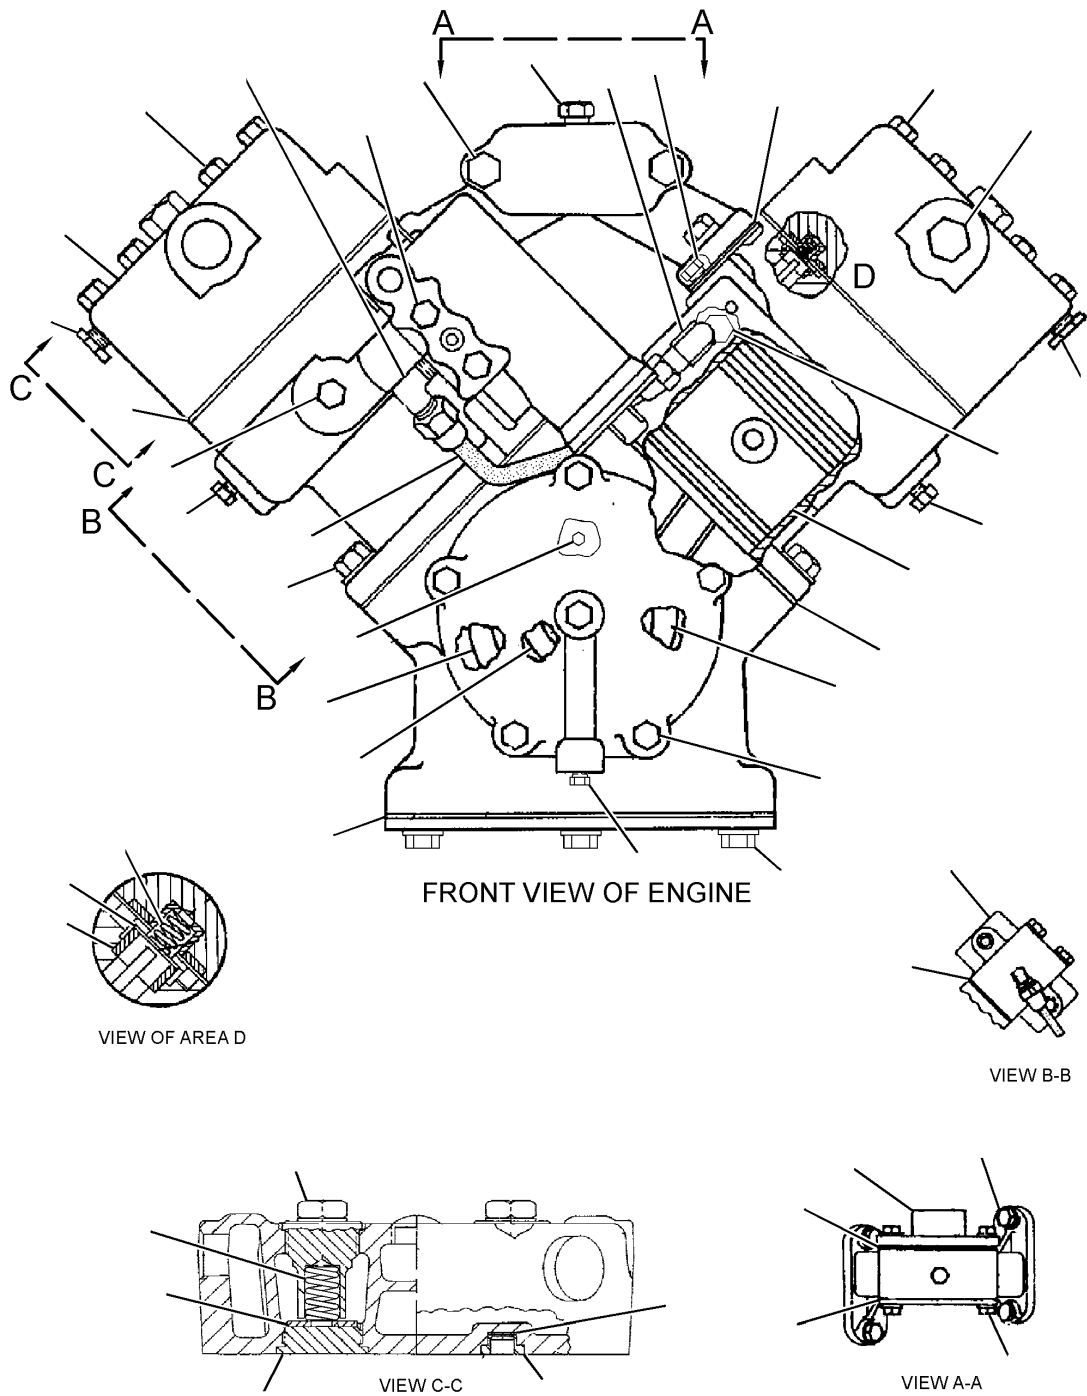

Ref.	Part number	Description	Qty	Code	Group page
1	9M-0379	BOLT	20		
2	8N-4727	PISTON AS-COMPRESSOR	4		
(EACH INCLUDES)					
	1W-2803	PLUG	2		

160-9820 AIR COMPRESSOR GP (continued)

Ref.	Part number	Description	Qty	Code	Group page
3	7W-6492	PLUG-PIPE (1/2-14-THD)	4		
4	3H-7311	GASKET-CYLINDER BLOCK	2		
5	9M-0378	BOLT (5/16-18X2.87-IN)	2		
6	3B-4505	LOCKWASHER	10		
7	2B-2695	BOLT (5/16-18X0.875-IN)	5		
8	8T-6764	PLUG-PIPE (1/8-27-THD)	2		
9	7F-2742	BALL BEARING	1		
10	8T-9364	BOLT (1/4-20X0.625-IN)	8		
11	0S-1594	BOLT (3/8-16X1-IN)	12		
12	3B-4506	LOCKWASHER	12		
13	3H-5162	RETAINER	1		
14	8H-9789	BALL BEARING	1		
15	5M-6213	PLUG-PIPE (1/4-18-THD)	2		
16	2S-1218	GASKET-CYLINDER HEAD	2		
17	2W-5189	CYLINDER HEAD AS	2		
(EACH INCLUDES)					
17A	3F-4987	SPRING-VALVE	2		
17B	3H-5181	VALVE	2		
17C	9M-0394	SEAT-VALVE	2		
17D	9M-0386	CAP	2		
17E	9M-0387	SEAT-VALVE SPRING	2		
17F	1W-6388	INSERT-VALVE SPRING	2		
18	8M-7065	GASKET (AIR INLET)	4		
19	0S-1617	BOLT (5/16-18X0.75-IN)	6		
20	2H-3755	BOLT (5/16-18X0.43-IN)	2		
21	6L-1883	GASKET	1		
22	9L-2276	GUIDE-VALVE	4		
23	9L-2277	VALVE-INLET	4		
24	9L-2278	SPRING-VALVE	4		
25	4N-9680	GOVERNOR GP-AIR COMPRESSOR	1	Y	
26	4B-1273	SCREW-MACHINE (10-24X0.5-IN)	3		
27	8T-4205	WASHER-HARD (7.2X14.5X2-MM THK)	8		
28	8T-6767	PLUG-PIPE (3/8-18-THD)	8		
29	7W-9827	ADAPTER	1		
30	219-2350	GASKET	1		
31	5P-4479	ELBOW (FLARED-LONG)	1		

160-9820 AIR COMPRESSOR GP (continued)

Ref.	Part number	Description	Qty	Code	Group page
32	117-0068	HOSE AS	1	I	
33	6K-1972	ELBOW-FLARED	1		
AVAILABLE REPAIR KIT(S):					
	371-8029	KIT-HEAD	1		
(INCLUDES COVER & GASKET)					
	228-6581	KIT-PISTON RING (AIR COMPRESSOR)			
(INCLUDES PISTON RINGS)					
	9M-0402	KIT-GOVERNOR OVERHAUL (AIR COMPRESSOR)			
(INCLUDES GROMMETS, FILTERS, SPRING, VALVE, COVER, RING & GASKET)					
	209-5258	KIT-BEARING (AIR COMPRESSOR)			
(INCLUDES 2 HALF-SHELL BEARINGS)					
	209-5242	KIT-ROD (AIR COMPRESSOR)			
(INCLUDES CONNECTING ROD, END CAP, CONNECTING ROD BOLTS, LOCKING STRAP & WRIST PIN BUSHING)					

CAT codes: I, Y.

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

ATY-SEBP3022

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99