

CATERPILLAR 242D

DZT / SEBP5969


Contents

Section	Page
Basic engine	2
Lubrication system	
Cooling system	
Air inlet and exhaust	
Fuel system	
Basic engine	
Basic engine	
Electrical and electronics	
Basic engine	
Basic engine	
Hydraulic system	
Steering and brakes	
Electrical and electronics	
Hydraulic system	
Catalog items	

562-1278 BRACKET GP-MOUNTING -FIRE EXTINGUISHER

562-1278 BRACKET GP-MOUNTING -FIRE EXTINGUISHER PART OF 563-7518, 565-3045 MOUNTING GP-FIRE EXTINGUISHER AN ATTACHMENT

Drawing 1 of 1

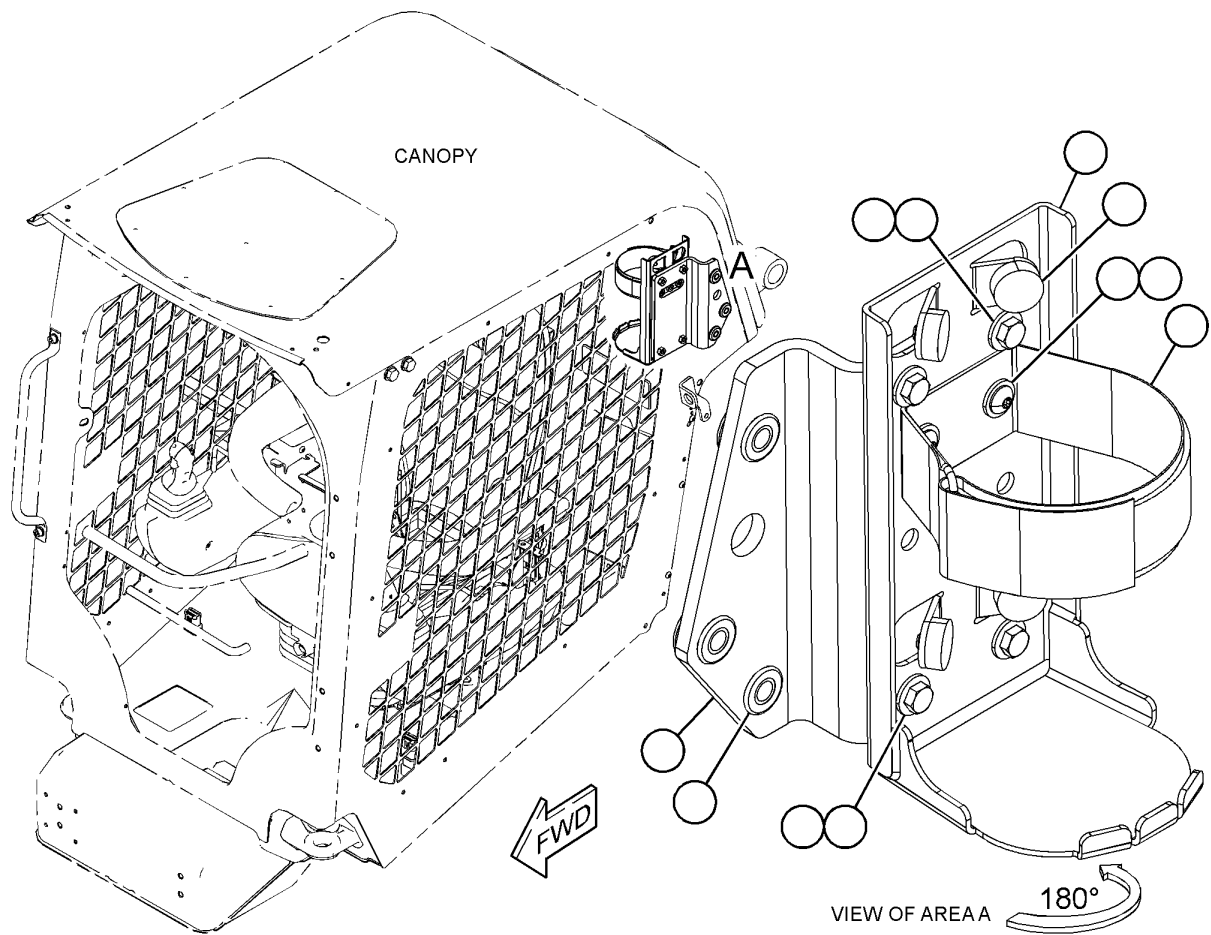


Ref.	Part number	Description	Qty	Code	Group page
1	2W-9710	MOUNT AS	3		
2	563-8153	STRAP AS	1		
3	8T-4189	BOLT (M8X1.25X20-MM)	4	M	
4	167-4061	BUMPER	4		
5	215-6406	SCREW-TRUSS HEAD (M6X1X16-MM)	2	M	
6	562-1279	BRACKET AS	1		
	6V-9632	NUT-WELD (M6X1-THD)	3	M	
7	564-6874	BRACKET AS	1		
	8T-3612	NUT-WELD (M8X1.25-THD)	4	M	
8	5P-4116	WASHER-HARD (8.8X20.5X2-MM THK)	4		
9	9X-2038	WASHER (7X19X2-MM THK)	2		

CAT codes: M.

436-2823 CAMSHAFT GP

436-2823 CAMSHAFT GP S/N DZT1-UP PART OF 345-3550 ENGINE AR-PRIMARY

Drawing 1 of 1

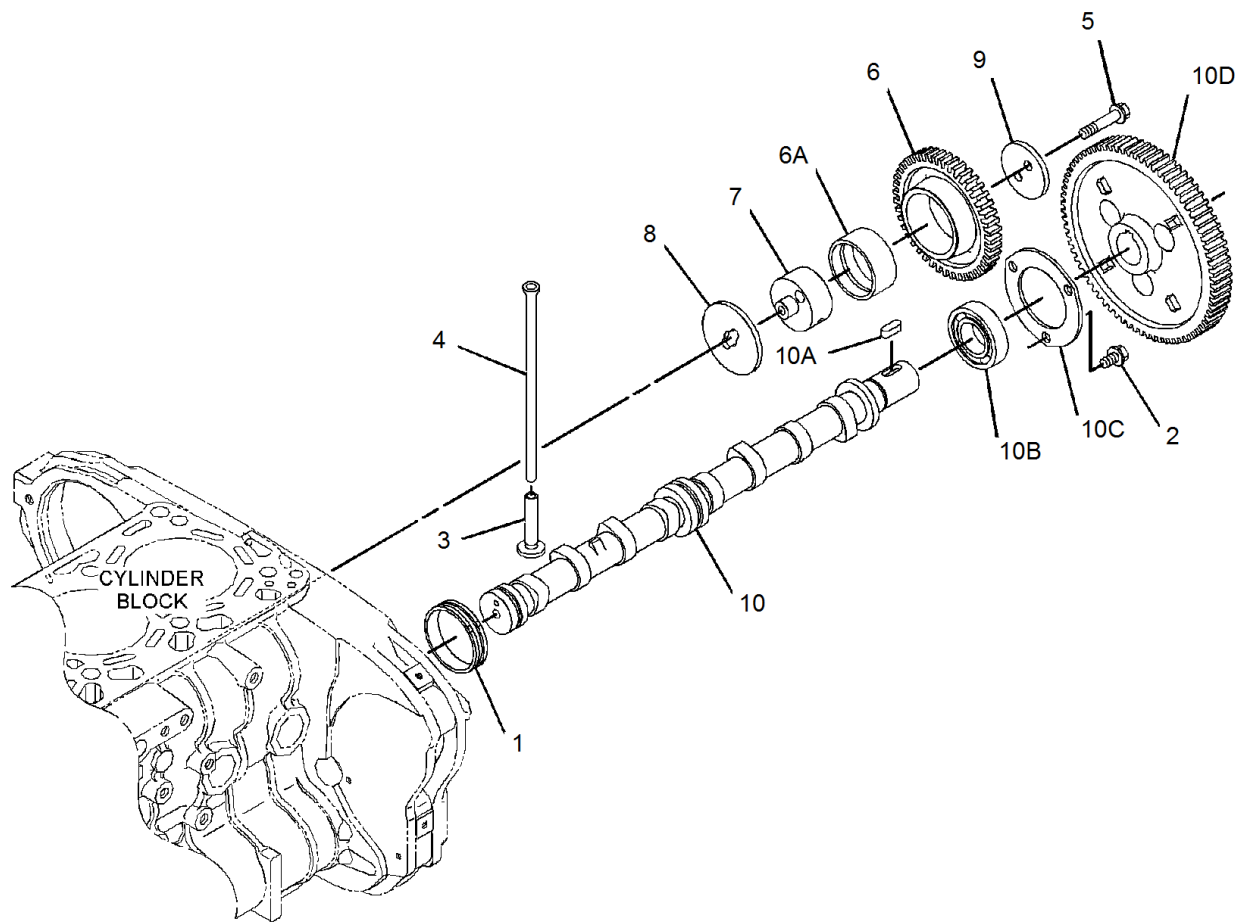


Ref.	Part number	Description	Qty	Code	Group page
1	387-9780	CUP-SEAL	1		
2	387-9785	BOLT-FLANGE HEAD	3		
3	387-9830	TAPPET	8		
4	387-9831	PUSHROD	8		
5	418-1063	BOLT-FLANGE HEAD	2		
6	436-1076	GEAR AS-IDLER	1		
6A	436-1078	BEARING	1		
7	436-1077	SHAFT-IDLER GEAR	1		
8	436-1079	COLLAR	1		
9	436-1080	COLLAR	1		
10	436-1919	CAMSHAFT AS	1		
10A	383-0227	KEY-FEATHER	1		
10B	388-7494	BEARING	1		
10C	388-7496	STOP	1		
10D	436-0857	GEAR-CAM	1		

436-2823 CAMSHAFT GP

436-2823 CAMSHAFT GP PART OF 345-3550, 550-9177, 561-8130 ENGINE AR-PRIMARY

Drawing 1 of 1

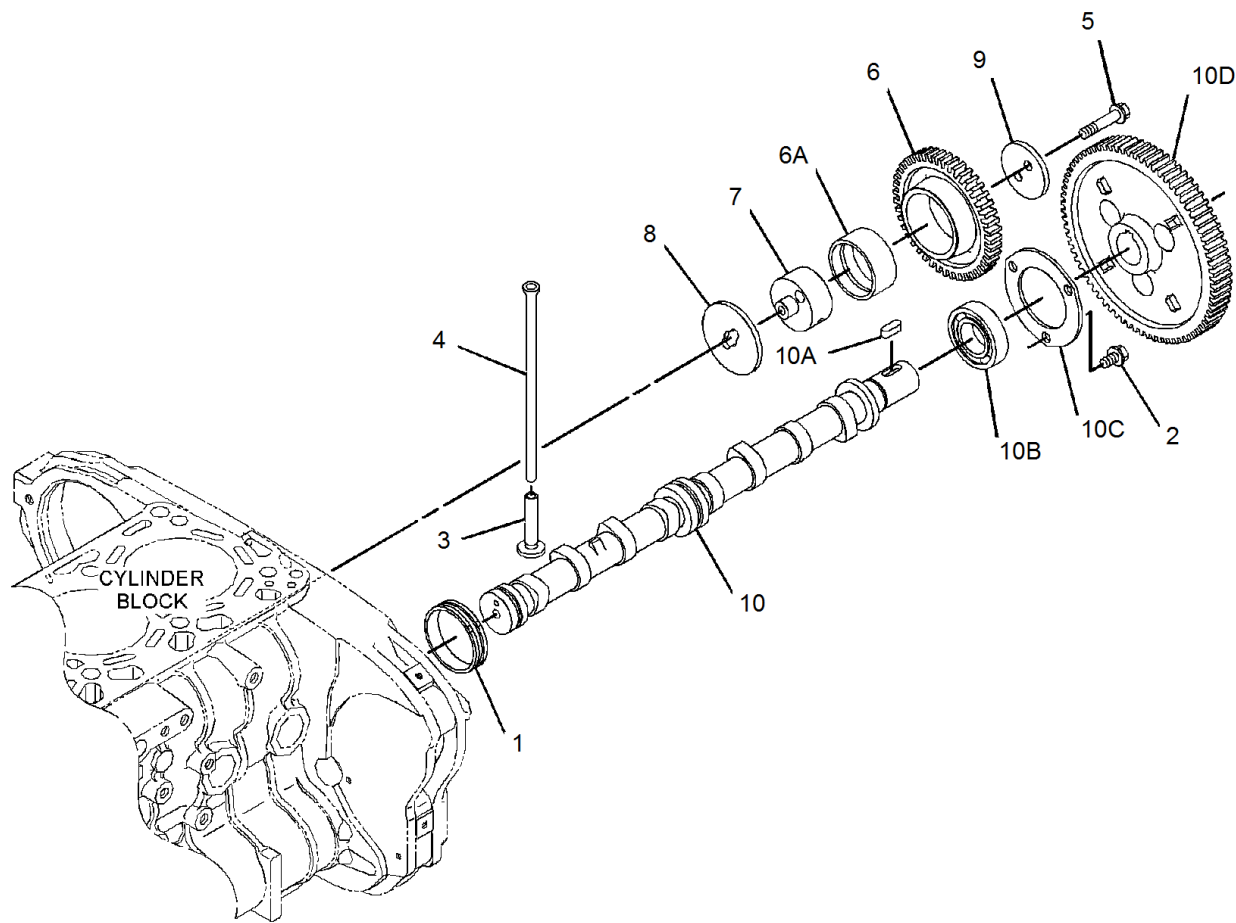

Ref.	Part number	Description	Qty	Code	Group page
1	387-9780	CUP-SEAL	1		
2	387-9785	BOLT-FLANGE HEAD	3		
3	387-9830	TAPPET	8		
4	387-9831	PUSHROD	8		
5	418-1063	BOLT-FLANGE HEAD	2		
6	436-1076	GEAR AS-IDLER	1		
6A	436-1078	BEARING	1		
7	436-1077	SHAFT-IDLER GEAR	1		
8	436-1079	COLLAR	1		
9	436-1080	COLLAR	1		
10	473-5093	CAMSHAFT AS	1	C	
10A	383-0227	KEY-FEATHER	1		

436-2823 CAMSHAFT GP (continued)


Ref.	Part number	Description	Qty	Code	Group page
10B	388-7494	BEARING	1		
10C	388-7496	STOP	1		
10D	473-5094	GEAR-CAMSHAFT	1		

CAT codes: C.

437-2559 COVER GP-VALVE MECHANISM

437-2559 COVER GP-VALVE MECHANISM PART OF 345-3550, 550-9177, 561-8130 ENGINE AR-PRIMARY

Drawing 1 of 1

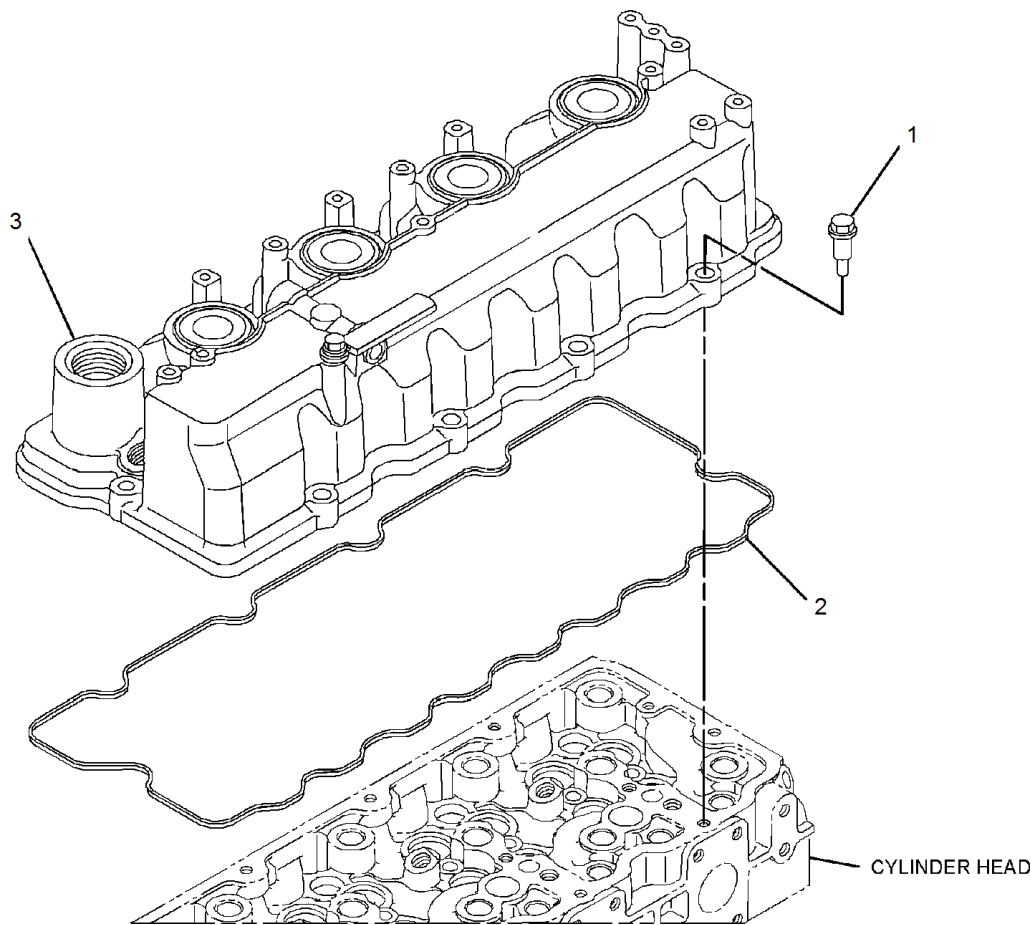


Ref.	Part number	Description	Qty	Code	Group page
1	383-0574	BOLT	10		
2	387-9829	GASKET	1		
3	437-3433	COVER GP-VALVE MECHANISM	1	Y	

CAT codes: Y.

437-3433 COVER GP-VALVE MECHANISM

437-3433 COVER GP-VALVE MECHANISM PART OF 437-2559 COVER GP-VALVE MECHANISM

Drawing 1 of 1

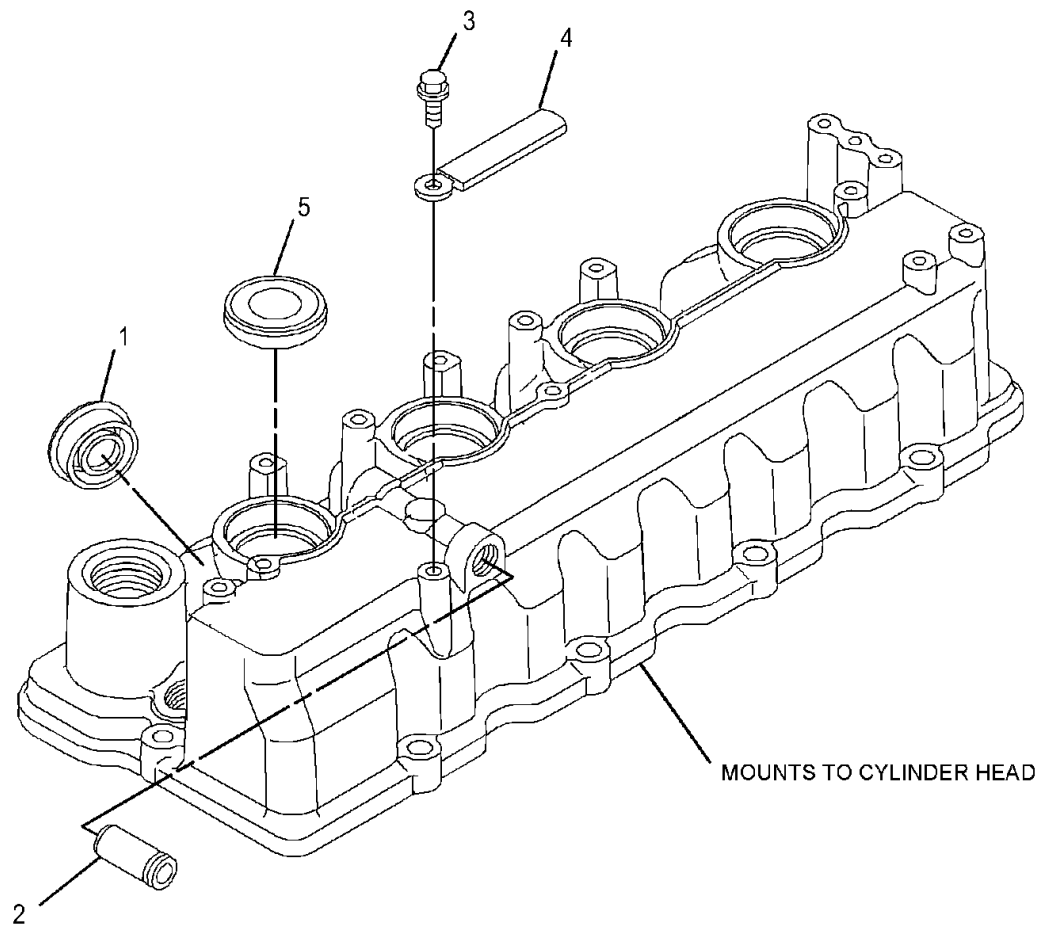


Ref.	Part number	Description	Qty	Code	Group page
1	388-7492	SEAL	4		
2	389-5153	ADAPTER	1		
3	393-7502	BOLT-FLANGE HEAD	1		
4	436-0814	CLAMP	1		
5	436-1103	SEAL-INJECTOR	4		

387-9070 CRANKSHAFT GP

387-9070 CRANKSHAFT GP S/N DZT1-UP PART OF 345-3550 ENGINE AR-PRIMARY

Drawing 1 of 1

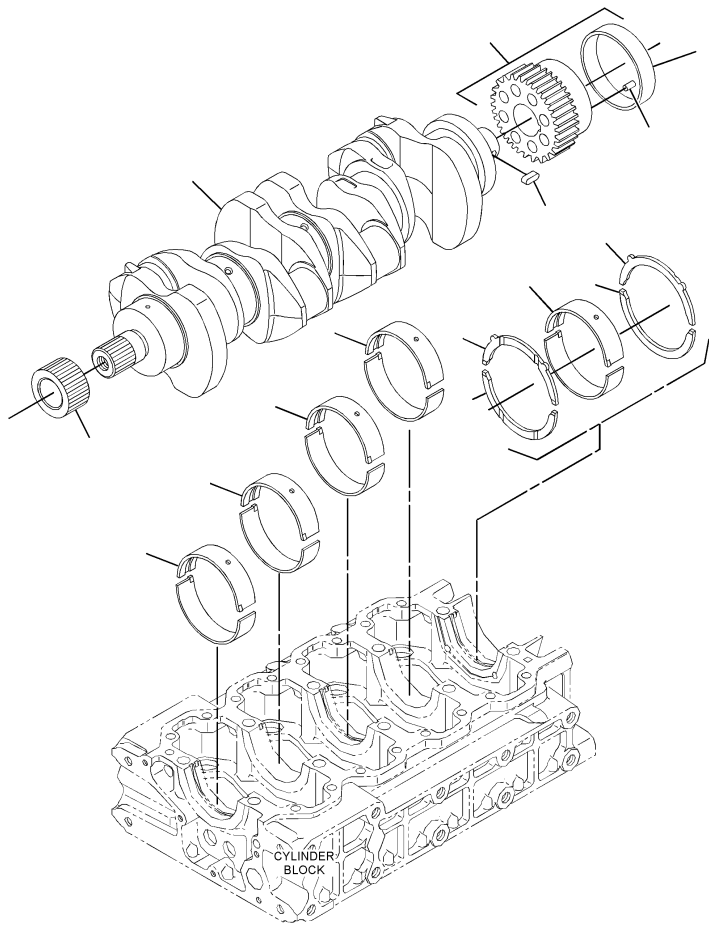

Ref.	Part number	Description	Qty	Code	Group page
1	387-9840	CRANKSHAFT AS	1		
1A	388-7502	GEAR	1		
2	387-9841	GEAR AS-CRANKSHAFT	1		
2A	383-0220	PIN	1		
2B	388-7504	SLEEVE	1		
3	387-9842	KEY (STRAIGHT)	1		
4	393-2914	KIT-CRANKSHAFT BEARING (STANDARD)	5	J	
	393-2915	KIT-CRANKSHAFT BEARING (0.20-MM US)		ABL	
	393-2916	KIT-CRANKSHAFT BEARING (0.40-MM US)		ABN	
5	387-9846	BEARING (STANDARD)	2	J	
	393-2903	BEARING (0.20-MM OS)		ABL	
	393-2904	BEARING (0.40-MM OS)		ABN	
6	387-9845	BEARING (STANDARD)	2	J	
	393-2901	BEARING (0.20-MM OS)		ABL	
	393-2902	BEARING (0.40-MM OS)		ABN	

387-9070 CRANKSHAFT GP (continued)


Ref.	Part number	Description	Qty.	Code	Group page
AVAILABLE REPAIR KIT(S):					
	393-2911	KIT-BEARING (STANDARD)	1	J	
(INCLUDES BEARINGS)					
	393-2912	KIT-BEARING	1	L	
(INCLUDES BEARINGS)					
	393-2913	KIT-BEARING	1	N	
(INCLUDES BEARINGS)					

CAT codes: A, B, J, L, N.

387-9070 CRANKSHAFT GP

387-9070 CRANKSHAFT GP PART OF 345-3550, 550-9177, 561-8130 ENGINE AR-PRIMARY

Drawing 1 of 1

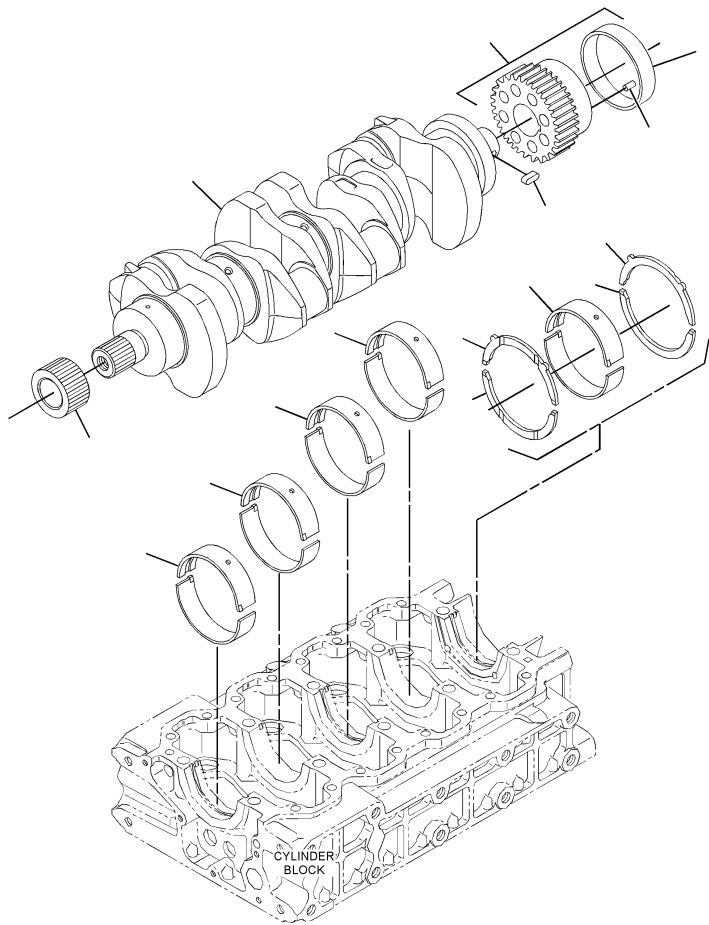

Ref.	Part number	Description	Qty	Code	Group page
1	387-9840	CRANKSHAFT AS	1		
1A	388-7502	GEAR	1		
2	387-9841	GEAR AS-CRANKSHAFT	1		
2A	383-0220	PIN	1		
2B	388-7504	SLEEVE	1		
3	387-9842	KEY (STRAIGHT)	1		
4	393-2914	KIT-CRANKSHAFT BEARING (STANDARD)	5		
	393-2915	KIT-CRANKSHAFT BEARING (0.20-MM US)		AB	
	393-2916	KIT-CRANKSHAFT BEARING (0.40-MM US)		AB	
5	524-6737	BEARING	2	CJ	
	524-6738	BEARING (0.20-MM OS)		ABCL	
	524-6739	BEARING (0.40-MM OS)		ABCN	
6	524-6734	BEARING	2	CJ	
	524-6735	BEARING (0.20-MM OS)		ABCL	
	524-6736	BEARING (0.40-MM OS)		ABCN	

MANUALS-KOMATSU.COM

Complete Caterpillar PDF Parts Catalogue

DZT-SEBP5969

\$99

Buy on this catalogue page in our store.

Download instructions are sent after payment confirmation.

Buy complete PDF - \$99