


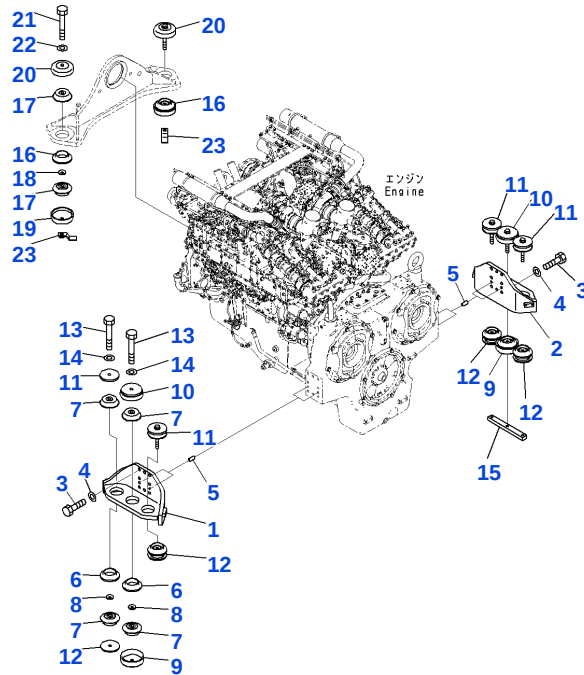


Reference: B0100-001001

B001001 Engine Mounting, Bracket(#30001-)

Item	Part No.	Part Name	Qty	Options
1	21T-01-41120	Bracket	1	SN: 30001-UP
2	21T-01-41110	Bracket	1	SN: 30001-UP
3	01010-82070	Bolt	16	SN: 30001-UP
4	567-40-41380	Washer	16	SN: 30001-UP
5	04020-01842	Pin, Dowel	4	SN: 30001-UP
6	21T-01-11210	Collar	6	SN: 30001-UP
7	21N-01-11120	Cushion	12	SN: 30001-UP
8	21T-01-11220	Collar	6	SN: 30001-UP
9	21T-01-31160	Stopper	2	SN: 30001-UP
10	21T-01-31170	Stopper	2	SN: 30001-UP
11	21T-01-11180	Washer	4	SN: 30001-UP
12	21T-01-11190	Washer	4	SN: 30001-UP
13	208-01-11181	Bolt	6	SN: 30001-UP
14	01643-32460	Washer	6	SN: 30001-UP
15	21T-01-31140	Plate	1	SN: 30001-UP
16	21T-01-11210	Collar	2	SN: 30001-UP
17	21N-01-11120	Cushion	4	SN: 30001-UP
18	21T-01-11220	Collar	2	SN: 30001-UP
19	21N-01-37120	Stopper	2	SN: 30001-UP
20	21N-01-37130	Stopper	2	SN: 30001-UP
21	234-977-1750	Bolt	2	SN: 30001-UP
22	01643-32460	Washer	2	SN: 30001-UP
23	21T-01-67330	Plate	2	SN: 30001-UP

Reference: B0100-001001

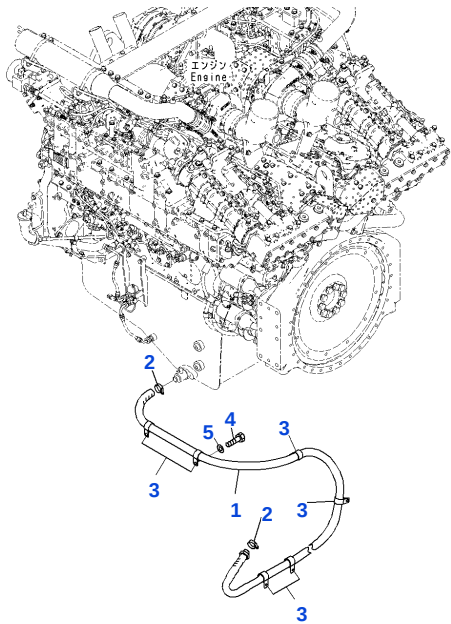


J01001747

Reference: B0100-001002

**B001002 Engine Mounting, Hose (Service Center, Grease Shut-off Valve)
(#30001-)**

Item	Part No.	Part Name	Qty	Options
1	21T-98-31320	Hose	1	SN: 30001-UP
2	07281-00419	Clamp, Hose	2	SN: 30001-UP
3	281-01-13180	Clip	6	SN: 30001-UP
4	01010-81225	Bolt	6	SN: 30001-UP
5	01643-31232	Washer	6	SN: 30001-UP

Reference: B0100-001002

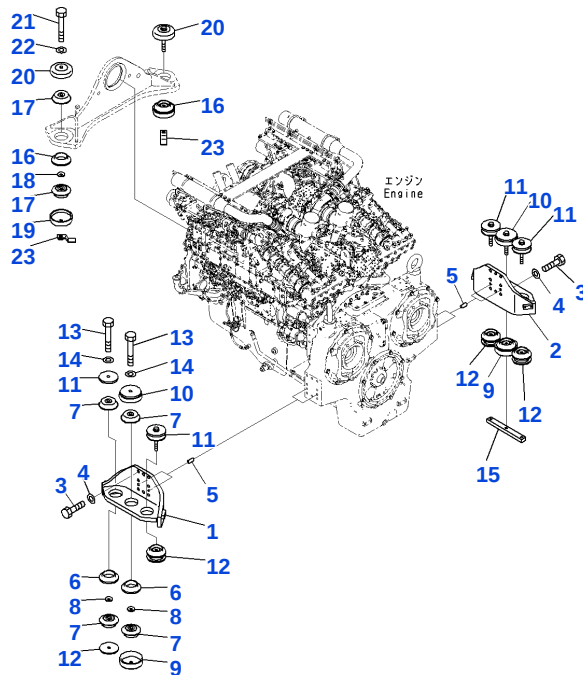


Reference: B0100-002001

B002001 Engine Mounting, Bracket(#30001-)

Item	Part No.	Part Name	Qty	Options
1	21T-01-41120	Bracket	1	SN: 30001-UP
2	21T-01-41110	Bracket	1	SN: 30001-UP
3	01010-82070	Bolt	16	SN: 30001-UP
4	567-40-41380	Washer	16	SN: 30001-UP
5	04020-01842	Pin, Dowel	4	SN: 30001-UP
6	21T-01-11210	Collar	6	SN: 30001-UP
7	21N-01-11120	Cushion	12	SN: 30001-UP
8	21T-01-11220	Collar	6	SN: 30001-UP
9	21T-01-31160	Stopper	2	SN: 30001-UP
10	21T-01-31170	Stopper	2	SN: 30001-UP
11	21T-01-11180	Washer	4	SN: 30001-UP
12	21T-01-11190	Washer	4	SN: 30001-UP
13	208-01-11181	Bolt	6	SN: 30001-UP
14	01643-32460	Washer	6	SN: 30001-UP
15	21T-01-31140	Plate	1	SN: 30001-UP
16	21T-01-11210	Collar	2	SN: 30001-UP
17	21N-01-11120	Cushion	4	SN: 30001-UP
18	21T-01-11220	Collar	2	SN: 30001-UP
19	21N-01-37120	Stopper	2	SN: 30001-UP
20	21N-01-37130	Stopper	2	SN: 30001-UP
21	234-977-1750	Bolt	2	SN: 30001-UP
22	01643-32460	Washer	2	SN: 30001-UP
23	21T-01-67330	Plate	2	SN: 30001-UP

Reference: B0100-002001

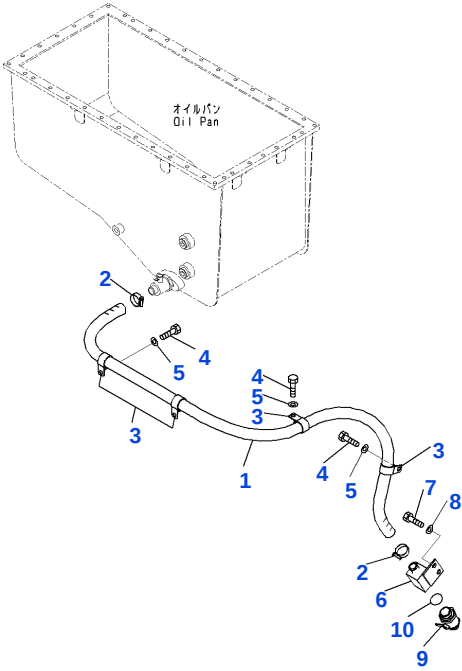


JH197311

Reference: B0100-002002

B002002 Engine Mounting, Hose(#30001-)

Item	Part No.	Part Name	Qty	Options
1	07261-22619	Hose	1	SN: 30001-UP
2	07281-00419	Clamp, Hose	2	SN: 30001-UP
3	281-01-13180	Clip	4	SN: 30001-UP
4	01010-81225	Bolt	4	SN: 30001-UP
5	01643-31232	Washer	4	SN: 30001-UP
6	21T-01-31481	Bracket	1	SN: 30001-UP
7	01010-81225	Bolt	2	SN: 30001-UP
8	01643-31232	Washer	2	SN: 30001-UP
9	21T-01-31490	Valve	1	SN: 30001-UP
10	07002-23634	O-ring	1	SN: 30001-UP

Reference: B0100-002002

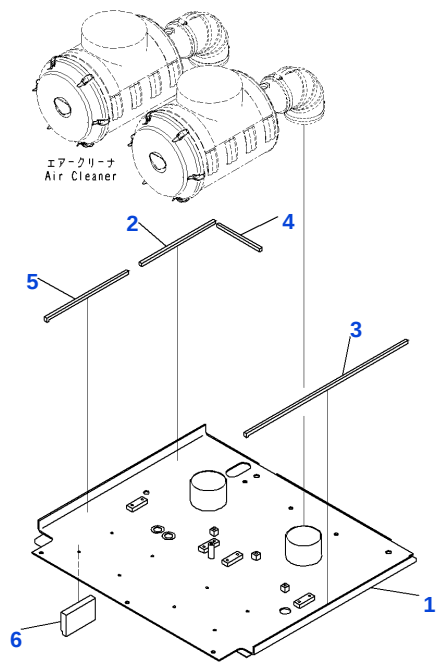


JH100748

Reference: B0300-001001

B003001 Exhaust Pipe, Bracket (1/4)(#30001-)

Item	Part No.	Part Name	Qty	Options
1	21T-01-41171	Bracket	1	SN: 30001-UP
2	21T-01-41530	• Sheet	1	SN: 30001-UP
3	21T-01-41561	• Sheet	1	SN: 30001-UP
4	21T-01-41571	• Sheet	1	SN: 30001-UP
5	21T-01-41581	• Sheet	1	SN: 30001-UP
6	21T-01-41590	• Sheet	1	SN: 30001-UP

Reference: B0300-001001

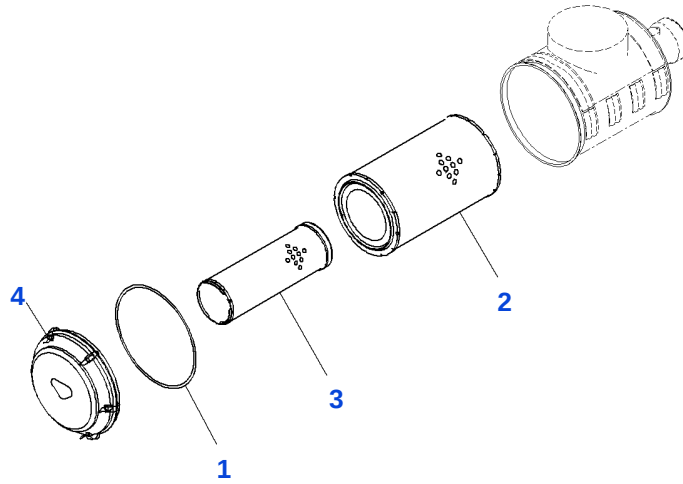


JY180487

Reference: B0300-001002

B003002 Exhaust Pipe, Air Cleaner Assembly(#30001-)

Item	Part No.	Part Name	Qty	Options
	6262-81-7100	Air Cleaner Assembly	2	SN: 30001-UP
	600-185-6100	• Element Assembly	1	SN: 30001-UP
1	600-184-1671	•• O-ring	1	SN: 30001-UP
2	600-185-6110	•• Element, Outer	1	SN: 30001-UP
3		•• Element, Inner	1	SN: 30001-UP
4	600-184-1632	• Cover	1	SN: 30001-UP
		[C1]-This part cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP

Reference: B0300-001002

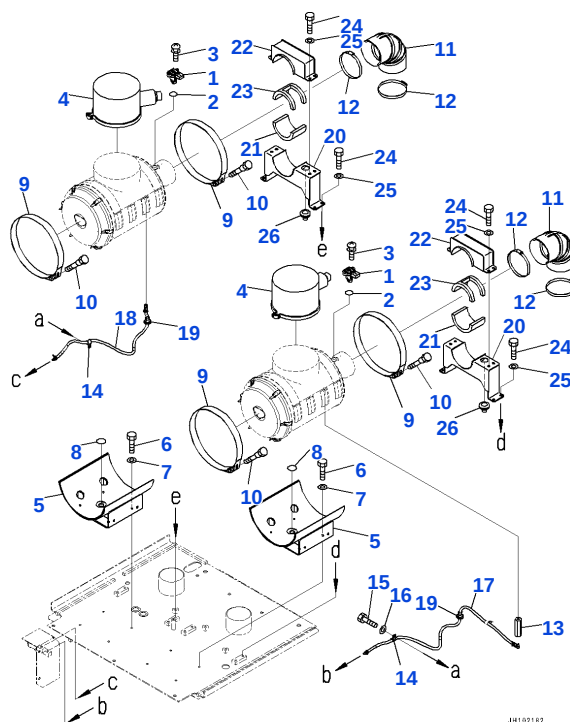


Reference: B0300-001003

B003003 Exhaust Pipe, Air Cleaner Mounting(#30001-)

Item	Part No.	Part Name	Qty	Options
1	6252-81-7900	Sensor, Airflow	2	SN: 30001-UP
2	6252-81-7910	• O-ring	1	SN: 30001-UP
3	01023-10412	Screw	4	SN: 30001-UP
4	600-183-7521	Pre-cleaner	2	SN: 30001-UP
5	21T-01-31711	Bracket	2	SN: 30001-UP
6	01010-81030	Bolt	8	SN: 30001-UP
7	01643-31032	Washer	8	SN: 30001-UP
8	07000-A5050	O-ring	2	SN: 30001-UP
9	6240-11-9910	Band	4	SN: 30001-UP
10	6643-11-4641	Bolt	4	SN: 30001-UP
11	561-02-12150	Elbow	2	SN: 30001-UP
12	07289-00170	Clamp, Hose	4	SN: 30001-UP
13	208-01-41910	Joint	1	SN: 30001-UP
14	04434-51412	Clip	2	SN: 30001-UP
15	01010-81225	Bolt	1	SN: 30001-UP
16	01643-31232	Washer	1	SN: 30001-UP
17	08671-50160	Hose	1	SN: 30001-UP
18	08671-70120	Hose Assembly	1	SN: 30001-UP
19	22U-54-84370	Grommet	2	SN: 30001-UP
20	21T-01-41731	Bracket	2	SN: 30001-UP
21	21T-01-41751	• Sheet	1	SN: 30001-UP
22	21T-01-41721	Bracket	2	SN: 30001-UP
23	21T-01-41741	• Sheet	1	SN: 30001-UP
24	01010-D1225	Bolt	16	SN: 30001-UP
25	01643-71232	Washer	16	SN: 30001-UP
26	2A7-43-21140	Grommet	2	SN: 30001-UP

Reference: B0300-001003

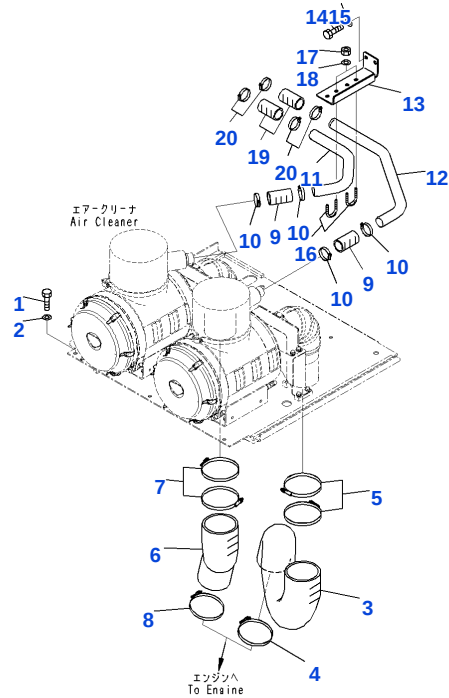


Reference: B0300-001004

B003004 Exhaust Pipe, Air Intake Piping(#30001-)

Item	Part No.	Part Name	Qty	Options
1	01010-81235	Bolt	6	SN: 30001-UP
2	01643-31232	Washer	6	SN: 30001-UP
3	21T-01-41160	Hose	1	SN: 30001-UP
4	07299-00160	Clamp, Hose	1	SN: 30001-UP
5	208-01-72180	Clamp	2	SN: 30001-UP
6	21T-01-41150	Hose	1	SN: 30001-UP
7	208-01-72180	Clamp	2	SN: 30001-UP
8	07299-00160	Clamp, Hose	1	SN: 30001-UP
9	6130-12-8620	Hose	2	SN: 30001-UP
10	07281-00709	Clamp	4	SN: 30001-UP
11	21T-01-41180	Tube	1	SN: 30001-UP
12	21T-01-41190	Tube	1	SN: 30001-UP
13	21T-01-41441	Bracket	1	SN: 30001-UP
14	01010-81235	Bolt	2	SN: 30001-UP
15	01643-31232	Washer	2	SN: 30001-UP
16	07283-35150	Clip	2	SN: 30001-UP
17	01597-01009	Nut	4	SN: 30001-UP
18	423-09-41110	Washer	4	SN: 30001-UP
19	6130-12-8620	Hose	2	SN: 30001-UP
20	07281-00709	Clamp	4	SN: 30001-UP

Reference: B0300-001004

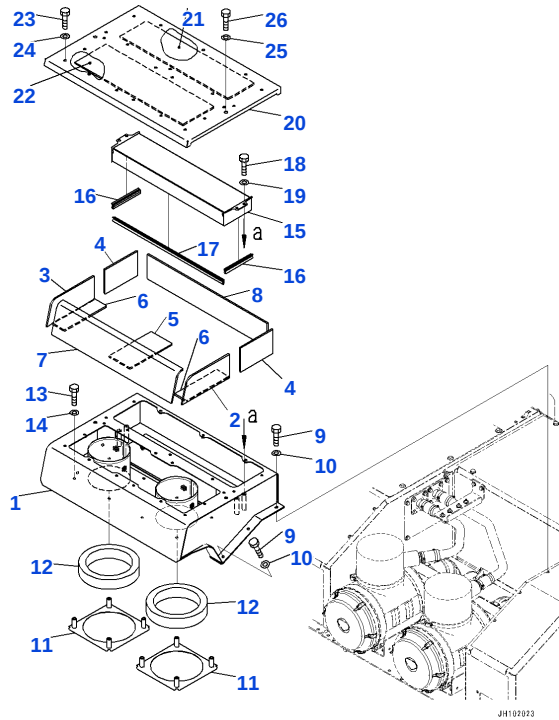


Reference: B0300-001005

B003005 Exhaust Pipe, Air Intake Cover(#30001-)

Item	Part No.	Part Name	Qty	Options
	21T-01-41931	Cover Assembly	1	SN: 30001-UP
1		• Cover	1	SN: 30001-UP
2	21T-01-41810	• Sheet	1	SN: 30001-UP
3	21T-01-41820	• Sheet	1	SN: 30001-UP
4	21T-01-41830	• Sheet	2	SN: 30001-UP
5	21T-01-41840	• Sheet	1	SN: 30001-UP
6	21T-01-41850	• Sheet	2	SN: 30001-UP
7	21T-01-41860	• Sheet	1	SN: 30001-UP
8	21T-01-41870	• Sheet	1	SN: 30001-UP
9	01010-81240	Bolt	5	SN: 30001-UP
10	175-54-34170	Washer	5	SN: 30001-UP
11	21T-01-31540	Plate	2	SN: 30001-UP
12	21T-01-31530	Seal	2	SN: 30001-UP
13	01010-81285	Bolt	8	SN: 30001-UP
14	01643-31232	Washer	8	SN: 30001-UP
15	21T-01-41620	Blade	1	SN: 30001-UP
16	21T-01-41640	Seal	2	SN: 30001-UP
17	21T-01-41650	Seal	1	SN: 30001-UP
18	01010-81230	Bolt	4	SN: 30001-UP
19	01643-31232	Washer	4	SN: 30001-UP
	21T-01-41941	Cover Assembly	1	SN: 30001-UP
20		• Cover	1	SN: 30001-UP
21	21T-01-41890	• Sheet	1	SN: 30001-UP
22	21T-01-41970	• Sheet	1	SN: 30001-UP
23	01010-D1230	Bolt	22	SN: 30001-UP
24	01643-71232	Washer	22	SN: 30001-UP
25	01643-71645	Washer	2	SN: 30001-UP
26	01010-D1630	Bolt	2	SN: 30001-UP
		[C1]-This part cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP

Reference: B0300-001005

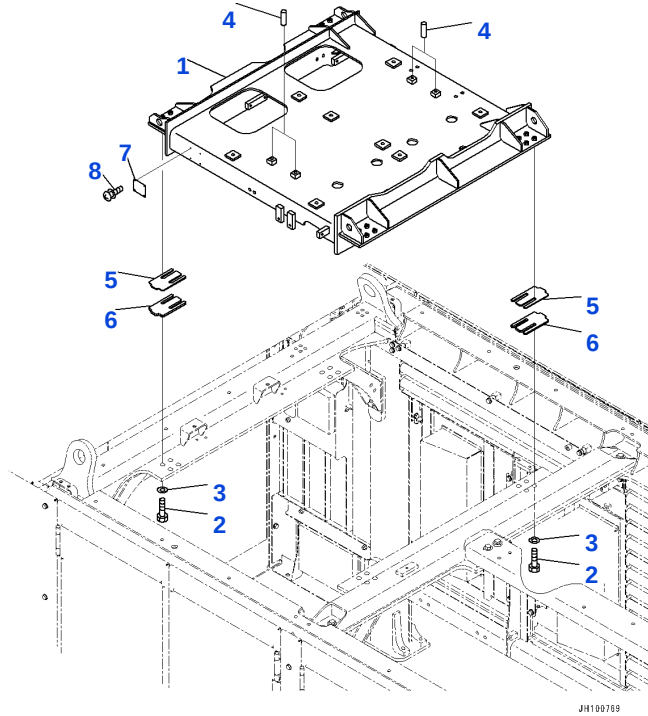

Reference: B0300-001006

B003006 Exhaust Pipe, Bracket (2/4)(#30001-)

Item	Part No.	Part Name	Qty	Options
1	21T-01-41241	Bracket	1	SN: 30001-UP
2	01010-81260	Bolt	16	SN: 30001-UP
3	175-54-34170	Washer	16	SN: 30001-UP
4	04020-01228	Pin, Dowel	4	SN: 30001-UP
5	21T-01-41510	Shim, T=4.5mm	4	SN: 30001-UP
6	21T-01-41520	Shim, T=9mm	4	SN: 30001-UP
7	09817-A0753	Plate, Warning, High Temperature	2	SN: 30001-UP
8	01023-20410	Screw	8	SN: 30001-UP

Reference: B0300-001006

Get the complete PDF catalogue

Komatsu PC2000-11E0 S/N 30001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.