


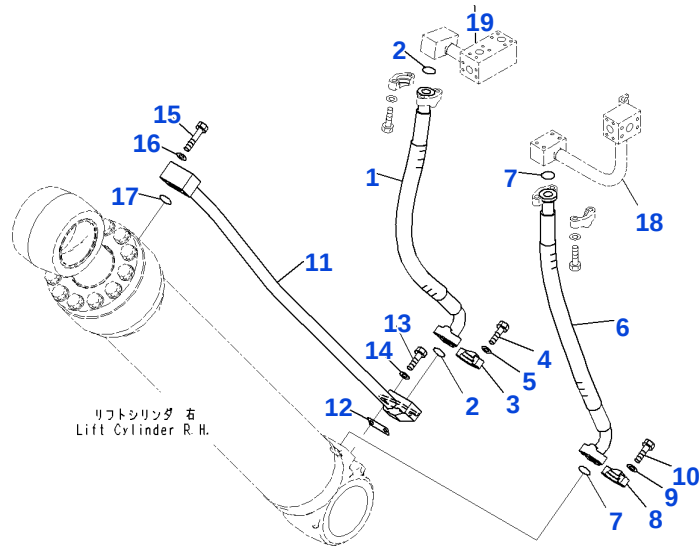


Reference: T4140-001004

T008004 Lift Cylinder, Piping, R.H.(#80001-)

Item	Part No.	Part Name	Qty	Options
1	07084-01412	Hose, Flange Type	1	SN: 80001-UP
2	07000-F3048	O-ring	2	SN: 80001-UP
3	07371-51470	Flange, Split	2	SN: 80001-UP
4	01010-81455	Bolt	4	SN: 80001-UP
5	01643-31445	Washer, Flat	4	SN: 80001-UP
6	07084-01413	Hose, Flange Type	1	SN: 80001-UP
7	07000-F3048	O-ring	2	SN: 80001-UP
8	07371-51470	Flange, Split	2	SN: 80001-UP
9	01643-31445	Washer, Flat	4	SN: 80001-UP
10	01010-81455	Bolt	4	SN: 80001-UP
11	427-62-44730	Tube	1	SN: 80001-UP
12	427-62-44740	Plate	1	SN: 80001-UP
13	01010-81435	Bolt	2	SN: 80001-UP
14	01643-31445	Washer, Flat	2	SN: 80001-UP
15	01010-81495	Bolt	4	SN: 80001-UP
16	01643-31445	Washer, Flat	4	SN: 80001-UP
17	07000-F3048	O-ring	1	SN: 80001-UP
18	427-62-43672	Tube(Hydraulic Piping,Lift Cylinder Piping)	-1	SN: UP
19	427-62-43660	Tube(Hydraulic Piping,Lift Cylinder Piping)	-1	SN: UP

Reference: T4140-001004

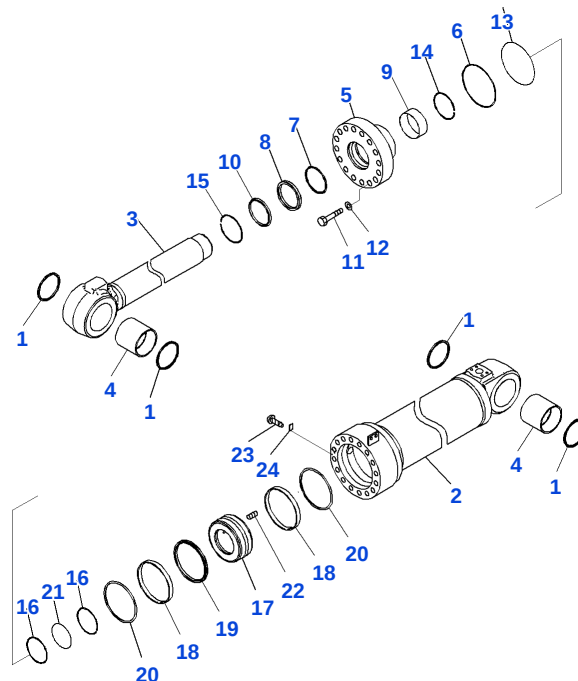


Reference: T4150-001001

T009001 Dump Cylinder, Inner Parts, Bucket Cylinder(#80001-)

Item	Part No.	Part Name	Qty	Options
	707-G1-05970	Cylinder Assembly	1	SN: 80001-UP
1	427-09-11120	• Seal, (Kit : K09)	4	SN: 80001-UP
2	707-13-30200	• Cylinder	1	SN: 80001-UP
3	707-58-18090	• Rod, Piston	1	SN: 80001-UP
4	707-76-18040	• Bushing	2	SN: 80001-UP
5	707-27-30140	• Head, Cylinder	1	SN: 80001-UP
6	707-35-33000	• Back-Up Ring, (Kit : K09)	1	SN: 80001-UP
7	707-51-18650	• Ring, Buffer, (Kit : K09)	1	SN: 80001-UP
8	707-51-18890	• Packing, Rod, (Kit : K09)	1	SN: 80001-UP
9	707-52-91561	• Bushing	1	SN: 80001-UP
10	707-56-18740	• Seal, Dust, (Kit : K09)	1	SN: 80001-UP
11	01011-83660	• Bolt	16	SN: 80001-UP
12	01643-33690	• Washer	16	SN: 80001-UP
13	07000-B5300	• O-ring, (Kit : K09)	1	SN: 80001-UP
14	07179-15190	• Ring, Snap	1	SN: 80001-UP
15	07179-15200	• Ring	1	SN: 80001-UP
16	707-35-31800	• Back-Up Ring, (Kit : K09)	2	SN: 80001-UP
17	707-36-30140	• Piston	1	SN: 80001-UP
18	707-39-30900	• Ring, Wear, (Kit : K09)	2	SN: 80001-UP
19	707-44-30150	• Ring, Piston, (Kit : K09)	1	SN: 80001-UP
20	707-44-30910	• Ring	2	SN: 80001-UP
21	07000-B5180	• O-ring, (Kit : K09)	1	SN: 80001-UP
22	01310-01640	• Screw	1	SN: 80001-UP
23	04418-13060	• Screw	4	SN: 80001-UP
24	09617-03047	• Plate, Name (Limited Supply)	1	SN: 80001-UP
[C2]-This part is supplied for authorized Komatsu distributors only. It cannot be supplied as an individual part. It is supplied as an assembly.				SN: UP

Reference: T4150-001001

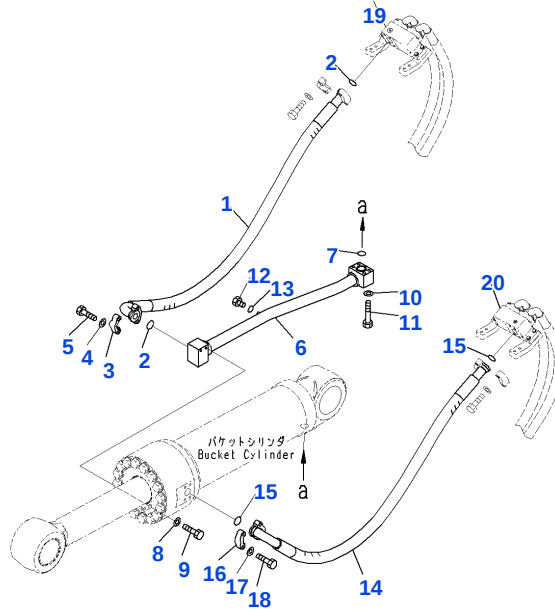


Reference: T4150-001002

T009002 Dump Cylinder, Piping(#80001-)

Item	Part No.	Part Name	Qty	Options
1	07084-02024	Hose	1	SN: 80001-UP
2	07000-F2060	O-ring	2	SN: 80001-UP
3	07371-52080	Flange, Split	2	SN: 80001-UP
4	01643-31845	Washer	4	SN: 80001-UP
5	01010-81865	Bolt	4	SN: 80001-UP
6	427-62-13191	Tube	1	SN: 80001-UP
7	07000-F2060	O-ring	1	SN: 80001-UP
8	01643-31845	Washer	2	SN: 80001-UP
9	01010-81840	Bolt	2	SN: 80001-UP
10	01643-31845	Washer	4	SN: 80001-UP
11	01011-81830	Bolt	4	SN: 80001-UP
12	01010-D1016	Bolt	1	SN: 80001-UP
13	01643-71032	Washer	1	SN: 80001-UP
14	07084-02024	Hose	1	SN: 80001-UP
15	07000-F2060	O-ring	2	SN: 80001-UP
16	07371-52080	Flange, Split	2	SN: 80001-UP
17	01643-31845	Washer	4	SN: 80001-UP
18	01010-81865	Bolt	4	SN: 80001-UP
19	427-62-22240	Block(Hydraulic Piping,Bucket Cylinder Piping, Bottom)	-1	SN: UP
20	427-62-22230	Block(Hydraulic Piping,Bucket Cylinder Piping, Top)	-1	SN: UP

Reference: T4150-001002

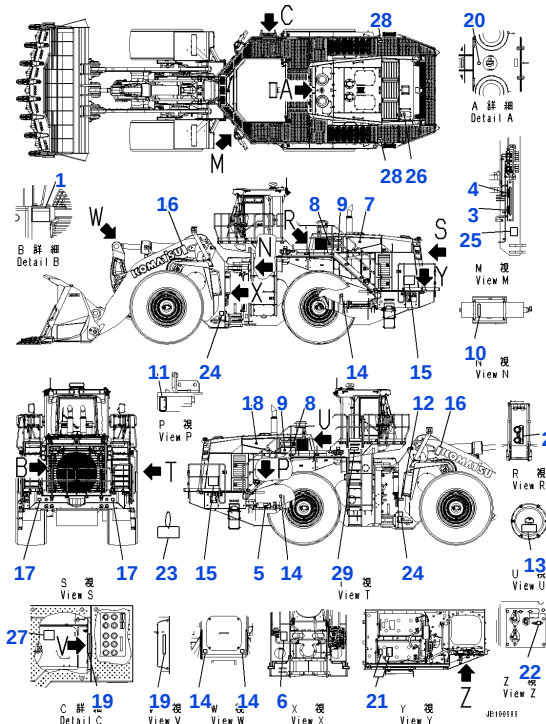


Reference: U00100-001001

U001001 Marks and Plates, (1/4)(#80001-)

Item	Part No.	Part Name	Qty	Options
1	427-93-42850	Plate, Caution, Do Not Open Fan Net	1	SN: 80001-UP
2	427-03-44120	Plate, Coolant Level	1	SN: 80001-UP
3	427-93-42440	Plate, Transmission Oil Level	1	SN: 80001-UP
4	427-93-42450	Plate, Transmission Oil Level	1	SN: 80001-UP
5	428-93-11380	Plate, Fuel Cut-off	1	SN: 80001-UP
6	427-93-42412	Lubrication Chart	1	SN: 80004-UP
	427-93-42411	Lubrication Chart	1	SN: 80001-80003
7	427-93-44110	Plate, Machine Model	1	SN: 80001-UP
8	427-93-42151	Plate, Stripe	2	SN: 80001-UP
9	427-93-42161	Plate, Stripe	2	SN: 80001-UP
10	09659-53000	Plate, Warning, Explosion Hazard	1	SN: 80001-UP
11	427-93-41460	Plate, Fuel Priming Pump Switch	1	SN: 80001-UP
12	09602-10002	Plate, Name (Limited Supply)	1	SN: 80001-UP
13	04418-13060	Screw	4	SN: 80001-UP
14	09960-00802	Mark, Tie Down Point	4	SN: 80001-UP
15	09812-03001	Plate, Danger, Keep a Safe Distance	2	SN: 80001-UP
16	09807-C1683	Plate, Danger, Keep Out under Work Equipment	2	SN: 80001-UP
17	14X-98-35181	Plate, Reflector	2	SN: 80001-UP
18	427-93-44120	Plate, Machine Model	1	SN: 80001-UP
19	427-93-41230	Plate, Caution, Do Not Get On	4	SN: 80001-UP
20	09669-0000A	Plate, Symbol, Coolant Filler	1	SN: 80001-UP
21	09664-30014	Plate, Danger, Battery	4	SN: 80001-UP
22	209-00-71940	Plate, Stairway Lamp	1	SN: 80001-UP
23	09963-03001	Tag, Danger, Do Not Operate	1	SN: 80001-UP
	421-93-21311	Plate Assembly	1	SN: 80001-UP
24		• Decal, Danger, Keep a Safe Distance	1	SN: 80001-UP
25		• Decal, Warning, Articulation Lock, 1st	1	SN: 80001-UP
26		• Decal, Warning, High Temperature	1	SN: 80001-UP
27		• Decal, Warning, High Temperature	1	SN: 80001-UP
28		• Decal, Warning, Battery Cables	1	SN: 80001-UP
29	427-93-41420	Plate, Alternate Exit	1	SN: 80001-UP
		[A2]-The part specified in the line above can be used instead of this part.		SN: UP

Item	Part No.	Part Name	Qty	Options
		[C1]-This part cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP
		[C2]-This part is supplied for authorized Komatsu distributors only. It cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP

Reference: U0100-001001

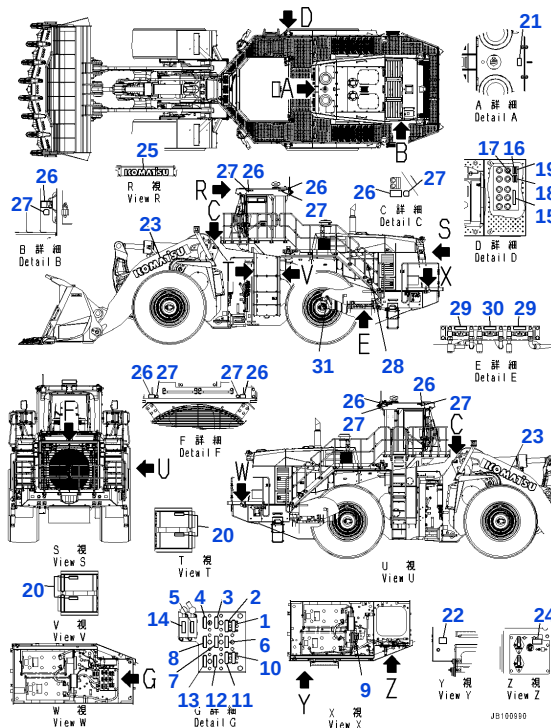


Reference: U0100-001002

U001002 Marks and Plates, (2/4)(#80001-)

Item	Part No.	Part Name	Qty	Options
	427-93-41451	Plate Assembly	1	SN: 80001-UP
1		• Plate, Breaker, Engine Controller	1	SN: 80001-UP
2		• Plate, Breaker, Engine Controller	1	SN: 80001-UP
3		• Plate, Breaker, Starter	1	SN: 80001-UP
4		• Plate, Breaker, Pump	1	SN: 80001-UP
5		• Plate, Breaker, Heater	1	SN: 80001-UP
6		• Plate, Breaker, Work Lamp	1	SN: 80001-UP
7		• Plate, Breaker, Wiper	1	SN: 80001-UP
8		• Plate, Breaker, Air Conditioner	1	SN: 80001-UP
9		• Plate, Breaker, Heater	1	SN: 80001-UP
10		• Plate, Breaker, Horn	1	SN: 80001-UP
11		• Plate, Breaker, Heater	1	SN: 80001-UP
12		• Plate, Breaker, Monitor	1	SN: 80001-UP
13		• Plate, Breaker, Controller	1	SN: 80001-UP
14		• Plate, Breaker, Pump	1	SN: 80001-UP
	427-93-42840	Plate Assembly	1	SN: 80001-UP
15		• Plate, Breather, Hydraulic Tank	1	SN: 80001-UP
16		• Plate, Breather, Rear Axle	1	SN: 80001-UP
17		• Plate, Breather, Front Axle	1	SN: 80001-UP
18		• Plate, Breather, Transmission	1	SN: 80001-UP
19		• Plate, Breather, Damper	1	SN: 80001-UP
20	09659-63000	Plate, Warning, Explosion Hazard	4	SN: 80001-UP
21	09805-13000	Plate, Caution, Hood	1	SN: 80001-UP
22	09652-31241	Plate, Caution, Diesel Fuel	1	SN: 80001-UP
23	09690-A2000	Plate, Komatsu Logo	2	SN: 80001-UP
24	421-93-78160	Plate, Notice, System Operating Lamp	1	SN: 80001-UP
25	09690-A0800	Plate, Komatsu Logo	1	SN: 80001-UP
26	09850-00641	Plate, Safety, Anchor Point For Tie Off	9	SN: 80001-UP
27	09951-00281	Mark, Lifting Operation Prohibited	9	SN: 80001-UP
28	09667-03001	Plate, Caution, Rotating Object	1	SN: 80001-UP
	427-93-42890	Plate Assembly	1	SN: 80001-UP
29		• Plate, Radiator Drain	1	SN: 80001-UP
30		• Plate, Engine Oil Drain	1	SN: 80001-UP
31		• Plate, Radiator Drain Inside	1	SN: 80001-UP

Item	Part No.	Part Name	Qty	Options
		[C1]-This part cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP


Reference: U0100-001002

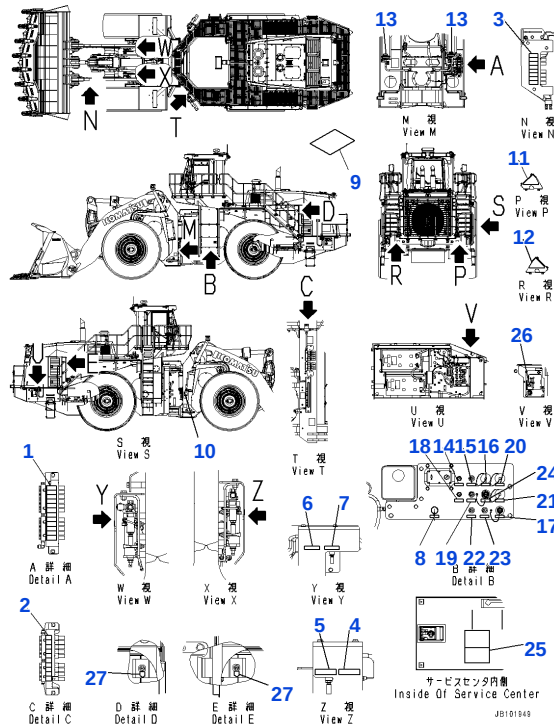

Reference: U0100-001003

U001003 Marks and Plates, (3/4)(#80001-80003)

Item	Part No.	Part Name	Qty	Options
	427-93-41720	Plate Assembly	1	SN: 80001-@
1		• Plate, Auto Grease, Boom	1	SN: 80001-@
2		• Plate, Auto Grease, Axle	1	SN: 80001-@
3		• Plate, Auto Grease, Bucket Cylinder	1	SN: 80001-@
4		• Plate, Auto Grease, Bucket	1	SN: 80001-@
5		• Plate, Auto Grease, Lift Cylinder	1	SN: 80001-@
6		• Plate, Auto Grease, Bucket	1	SN: 80001-@
7		• Plate, Auto Grease, Lift Cylinder	1	SN: 80001-@
8	427-93-42870	Plate, Auto Grease Filling	1	SN: 80001-@
9	423-98-60160	Plate, Method for Engine Shutdown	1	SN: 80001-80003
10	09979-00001	Plate, Industry Canada Interference-Causing Equipment Standard	1	SN: 80001-@
11	427-93-41310	Plate, Caution	1	SN: 80001-@
12	427-93-41320	Plate, Caution	1	SN: 80001-@
13	09659-63000	Plate, Warning, Explosion Hazard	2	SN: 80001-@
	427-93-42760	Plate Assembly	1	SN: 80001-@
14		• Plate, Service Center, Brake Cooling Oil Sample	1	SN: 80001-@
15		• Plate, Service Center, Hydraulic Oil Sample	1	SN: 80001-@
16		• Plate, Service Center, Transmission Oil EVAC	1	SN: 80001-@
17		• Plate, Service Center, Torque Converter Coolant Evac	1	SN: 80001-@
18		• Plate, Service Center, Brake Cooling Oil Sample	1	SN: 80001-@
19		• Plate, Service Center, Transmission Oil Sample	1	SN: 80001-@
20		• Plate, Service Center, Hydraulic Oil Fill	1	SN: 80001-@
21		• Plate, Service Center, Engine Oil EVAC	1	SN: 80001-@
22		• Plate, Service Center, Engine Oil Sample	1	SN: 80001-@
23		• Plate, Service Center, Radiator Coolant Sample	1	SN: 80001-@
24		• Plate, Service Center, Radiator Coolant EVAC	1	SN: 80001-@
25	427-Z89-7150	Plate, Sampling Method	1	SN: 80001-@
26	426-93-43440	Plate, 24volt	1	SN: 80001-@
27	09679-0200A	Plate, Symbol, Headlamp Switch	2	SN: 80001-@
		[C1]-This part cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP

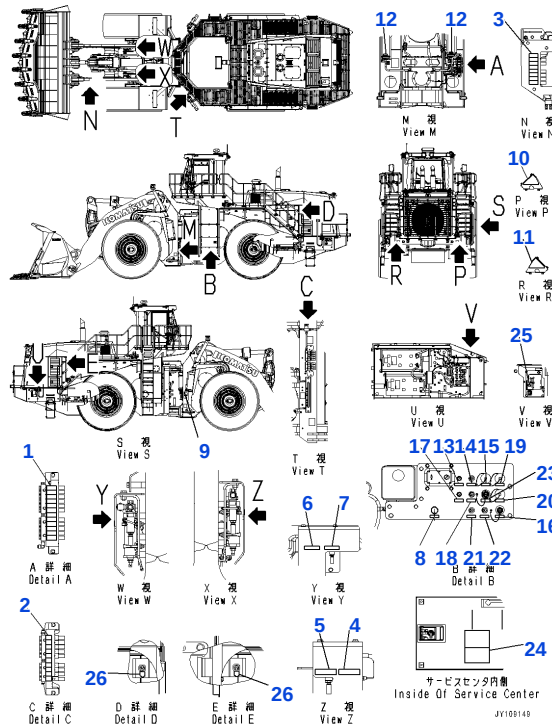

Reference: U0100-001003A

U001004 Marks and Plates, (3/4)(#80004-80055)

Item	Part No.	Part Name	Qty	Options
	427-93-41720	Plate Assembly	1	SN: 80001-@
1		• Plate, Auto Grease, Boom	1	SN: 80001-@
2		• Plate, Auto Grease, Axle	1	SN: 80001-@
3		• Plate, Auto Grease, Bucket Cylinder	1	SN: 80001-@
4		• Plate, Auto Grease, Bucket	1	SN: 80001-@
5		• Plate, Auto Grease, Lift Cylinder	1	SN: 80001-@
6		• Plate, Auto Grease, Bucket	1	SN: 80001-@
7		• Plate, Auto Grease, Lift Cylinder	1	SN: 80001-@
8	427-93-42870	Plate, Auto Grease Filling	1	SN: 80001-@
9	09979-00001	Plate, Industry Canada Interference-Causing Equipment Standard	1	SN: 80001-@
10	427-93-41310	Plate, Caution	1	SN: 80001-@
11	427-93-41320	Plate, Caution	1	SN: 80001-@
12	09659-63000	Plate, Warning, Explosion Hazard	2	SN: 80001-@
	427-93-42760	Plate Assembly	1	SN: 80001-@
13		• Plate, Service Center, Brake Cooling Oil Sample	1	SN: 80001-@
14		• Plate, Service Center, Hydraulic Oil Sample	1	SN: 80001-@
15		• Plate, Service Center, Transmission Oil EVAC	1	SN: 80001-@
16		• Plate, Service Center, Torque Converter Coolant Evac	1	SN: 80001-@
17		• Plate, Service Center, Brake Cooling Oil Sample	1	SN: 80001-@
18		• Plate, Service Center, Transmission Oil Sample	1	SN: 80001-@
19		• Plate, Service Center, Hydraulic Oil Fill	1	SN: 80001-@
20		• Plate, Service Center, Engine Oil EVAC	1	SN: 80001-@
21		• Plate, Service Center, Engine Oil Sample	1	SN: 80001-@
22		• Plate, Service Center, Radiator Coolant Sample	1	SN: 80001-@
23		• Plate, Service Center, Radiator Coolant EVAC	1	SN: 80001-@
24	427-Z89-7150	Plate, Sampling Method	1	SN: 80001-@
25	426-93-43440	Plate, 24volt	1	SN: 80001-@
26	09679-0200A	Plate, Symbol, Headlamp Switch	2	SN: 80001-@
		[C1]-This part cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP

Reference: U0100-001003A

Get the complete PDF catalogue

Komatsu WA800-8 S/N 81001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 selected catalogue pages.