


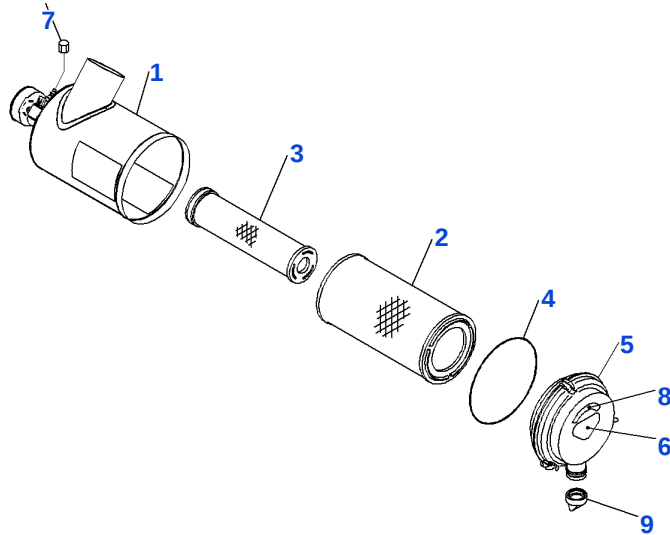


JY035951

Reference: A1410-501001

B001001 Air Cleaner, Inner Parts, Air Cleaner(#10001-)

Item	Part No.	Part Name	Qty	Options
1	6753-81-9500	Air Cleaner	1	SN: 10001-UP
		• Body	1	SN: 10001-UP
	600-185-3200	• Element Assembly	1	SN: 17116-UP
	600-185-3100	• Element Assembly	1	SN: 10001-17115
2	600-185-3110	• • Element, Outer	1	SN: 10001-UP
3		• • Element, Inner	1	SN: 17116-UP
		• • Element, Inner	1	SN: 10001-17115
4	600-184-1370	• • O-ring	1	SN: 10001-UP
5	600-184-1310	• Cover Assembly	1	SN: 10001-UP
6	600-184-2810	• • Plate, Mark, Top	1	SN: 10001-UP
7	561-02-12420	• Cap	1	SN: 10001-UP
8	600-181-1930	• Plate, Cleaning Frequency Sticker for Air Cleaner	1	SN: 10001-UP
9	600-184-1350	• Valve, Vacuumator	1	SN: 10001-UP
		[A2]-The part specified in the line above can be used instead of this part.		SN: UP
		[C1]-This part cannot be supplied as an individual part. It is supplied as an assembly.		SN: UP

Reference: A1410-501001

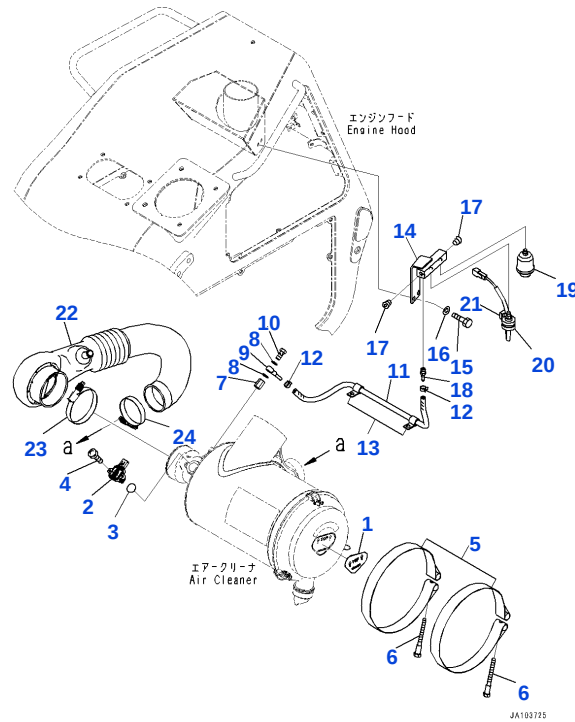


Reference: A1410-501002

B001002 Air Cleaner, Piping(#10001-15149)

Item	Part No.	Part Name	Qty	Options
1	12Y-02-31910	Mark	1	SN: 10001-@
2	6252-81-7800	Sensor, Airflow	1	SN: 15150-@
	6252-81-7900	Sensor, Airflow	1	SN: 10001-15149
3	6252-81-7910	• O-ring	1	SN: 10001-15149
4	01023-10412	Screw	2	SN: 10001-@
5	6136-11-4450	Band	2	SN: 10001-@
6	6643-11-4641	Bolt	2	SN: 10001-@
7	6156-81-8990	Nipple	1	SN: 10001-@
8	07005-01012	Seal, Washer	2	SN: 10001-@
9	6206-71-1770	Joint	1	SN: 10001-@
10	07206-30710	Bolt, Joint	1	SN: 10001-@
11	12Y-01-31331	Hose	1	SN: 10001-@
12	07285-00125	Clip	2	SN: 10001-@
13	04434-51410	Clip	2	SN: 10001-@
14	12Y-01-31321	Bracket	1	SN: 10708-@
	12Y-01-31322	Bracket	1	SN: 10706-10707
	12Y-01-31321	Bracket	1	SN: 10001-10705
15	01010-81025	Bolt	2	SN: 10708-@
	01010-81030	Bolt	2	SN: 10706-10707
	01010-81025	Bolt	2	SN: 10001-10705
16	01643-31032	Washer	2	SN: 10001-@
17	02720-40204	Plug, Taper	2	SN: 10001-@
18	6131-81-8820	Nipple	1	SN: 10001-@
19	08672-01000	Indicator	1	SN: 10001-@
20	7861-93-1430	Sensor, Dust Indicator	1	SN: 10001-@
21	08211-10720	Clip	1	SN: 10001-@
22	12Y-02-31131	Hose	1	SN: 10001-@
23	07299-00105	Clamp	1	SN: 10001-@
24	07299-00080	Clamp, Hose	1	SN: 10001-@
[A2]-The part specified in the line above can be used instead of this part.				SN: UP

Reference: A1410-501002

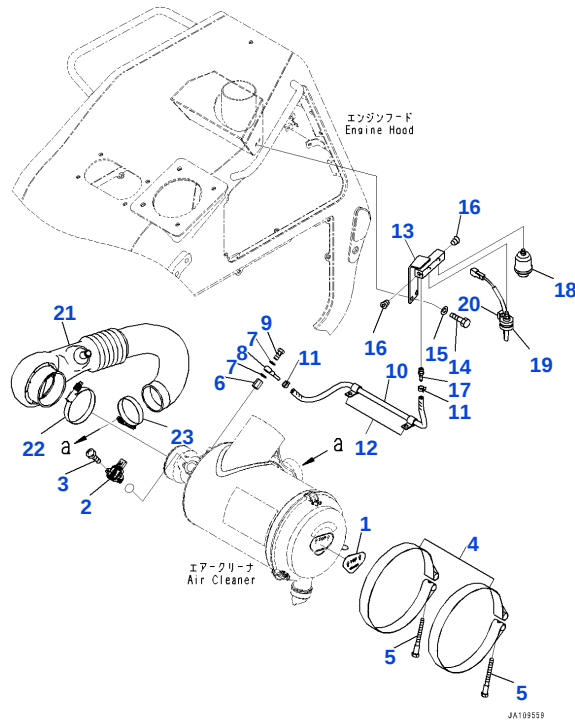


Reference: A1410-501002A

B001003 Air Cleaner, Piping(#15150-)

Item	Part No.	Part Name	Qty	Options
1	12Y-02-31910	Mark	1	SN: 10001-UP
2	6252-81-7800	Sensor, Airflow	1	SN: 15150-UP
3	01023-10412	Screw	2	SN: 10001-UP
4	6136-11-4450	Band	2	SN: 10001-UP
5	6643-11-4641	Bolt	2	SN: 10001-UP
6	6156-81-8990	Nipple	1	SN: 10001-UP
7	07005-01012	Seal, Washer	2	SN: 10001-UP
8	6206-71-1770	Joint	1	SN: 10001-UP
9	07206-30710	Bolt, Joint	1	SN: 10001-UP
10	12Y-01-31331	Hose	1	SN: 10001-UP
11	07285-00125	Clip	2	SN: 10001-UP
12	04434-51410	Clip	2	SN: 10001-UP
13	12Y-01-31321	Bracket	1	SN: 10708-UP
14	01010-81025	Bolt	2	SN: 10708-UP
15	01643-31032	Washer	2	SN: 10001-UP
16	02720-40204	Plug, Taper	2	SN: 10001-UP
17	6131-81-8820	Nipple	1	SN: 10001-UP
18	08672-01000	Indicator	1	SN: 10001-UP
19	7861-93-1430	Sensor, Dust Indicator	1	SN: 10001-UP
20	08211-10720	Clip	1	SN: 10001-UP
21	12Y-02-31131	Hose	1	SN: 10001-UP
22	07299-00105	Clamp	1	SN: 10001-UP
23	07299-00080	Clamp, Hose	1	SN: 10001-UP

Reference: A1410-501002A

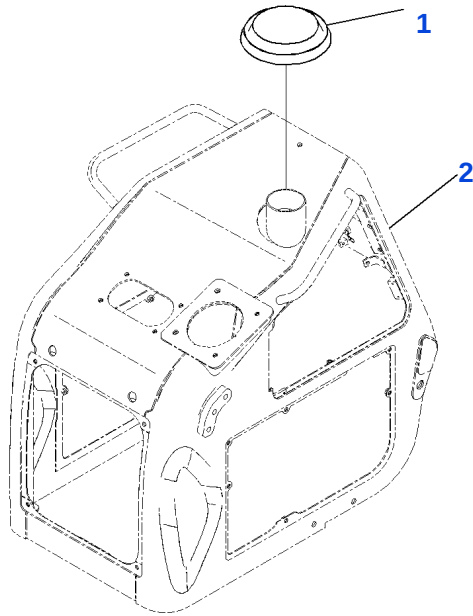


JA027045

Reference: A1470-501001

B002001 Air Cleaner Cap, (#10001-)

Item	Part No.	Part Name	Qty	Options
1	600-181-3861	Cap	1	SN: 16760-UP
	600-181-3860	Cap	1	SN: 10001-16759
2	12Y-54-32116	Hood(Engine Hood,Hood)	-1	SN: UP
	12Y-54-32114	Hood(Engine Hood,Hood)	-1	SN: UP
	12Y-54-32115	Hood(Engine Hood,Hood)	-1	SN: UP
	[A2]-The part specified in the line above can be used instead of this part.			SN: UP

Reference: A1470-501001

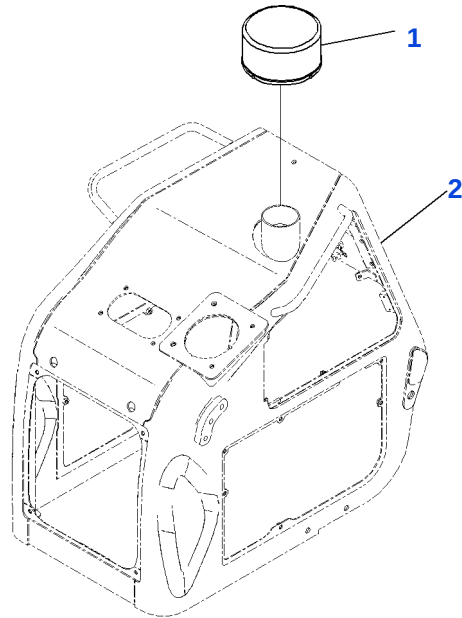


JA027046

Reference: A1470-502001

B003001 Air Pre-cleaner, (#10001-16862)

Item	Part No.	Part Name	Qty	Options
1	11Y-01-31822	Pre-cleaner	1	SN: 16863-@
	11Y-01-31821	Pre-cleaner	1	SN: 10001-16862
2	12Y-54-32116	Hood(Engine Hood,Hood)	-1	SN: UP
	12Y-54-32115	Hood(Engine Hood,Hood)	-1	SN: UP
[B1]-This shows discontinued part. The part specified in the above line is supplied instead.				SN: UP

Reference: A1470-502001

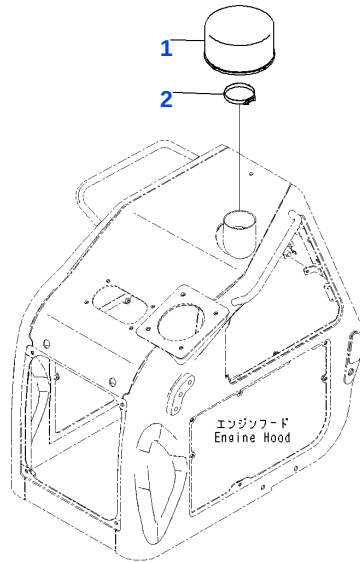

JK118375


KOMATSU

Reference: A1470-502001A

B003002 Air Pre-cleaner, (#16863-)

Item	Part No.	Part Name	Qty	Options
1	11Y-01-31822	Pre-cleaner	1	SN: 16863-UP
2	12Y-02-11371	• Clamp	1	SN: 16863-UP

Reference: A1470-502001A

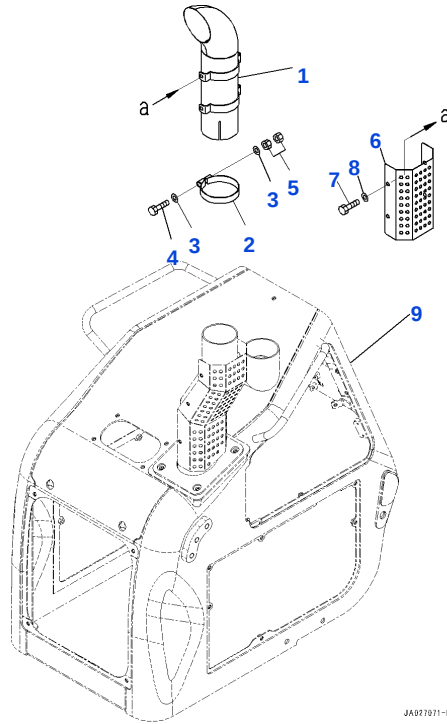


Reference: A1610-501001

B004001 Aftertreatment, Exhaust Pipe (1/2)(#10001-)

Item	Part No.	Part Name	Qty	Options
1	12Y-01-32371	Pipe	1	SN: 10001-UP
2	421-02-31120	Clamp	1	SN: 10001-UP
3	01640-21223	Washer, Flat	2	SN: 10001-UP
4	01010-81285	Bolt	1	SN: 10001-UP
5	01580-11210	Nut	2	SN: 10001-UP
6	12Y-01-31710	Cover	1	SN: 10001-UP
7	01010-D1020	Bolt	4	SN: 10001-UP
8	01643-71032	Washer	4	SN: 10001-UP
9	12Y-54-32116	Hood(Engine Hood,Hood)	-1	SN: UP
	12Y-54-32115	Hood(Engine Hood,Hood)	-1	SN: UP
	12Y-54-32114	Hood(Engine Hood,Hood)	-1	SN: UP

Reference: A1610-501001

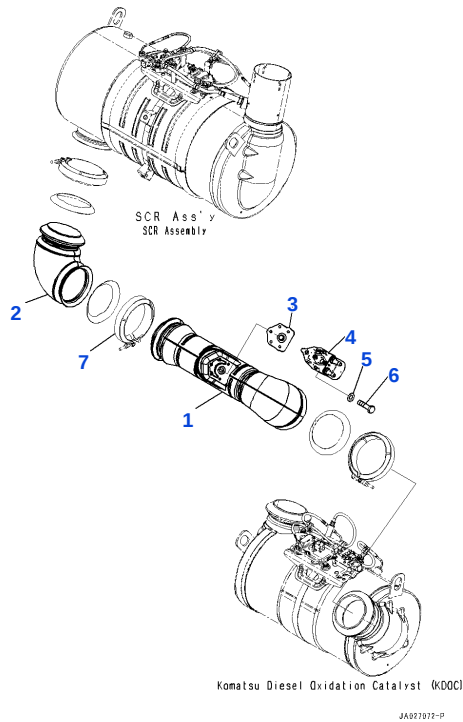


Reference: A1610-501002

B004002 Aftertreatment, DEF Mixing Tube(#10001-)

Item	Part No.	Part Name	Qty	Options
1	6753-01-0070	Tube	1	SN: 10001-UP
2	6753-01-0080	Tube	1	SN: 10001-UP
3	6753-11-5170	Gasket	1	SN: 10001-UP
4	6540-71-1110	Injector	1	SN: 10001-UP
5	01643-30623	Washer	3	SN: 10001-UP
6	6166-13-5990	Bolt	3	SN: 10001-UP
7	6534-91-1121	Clamp(Aftertreatment,DEF Mixing Tube Mounting)	-1	SN: UP
	6534-91-1120	Clamp(Aftertreatment,DEF Mixing Tube Mounting)	-1	SN: UP

Reference: A1610-501002

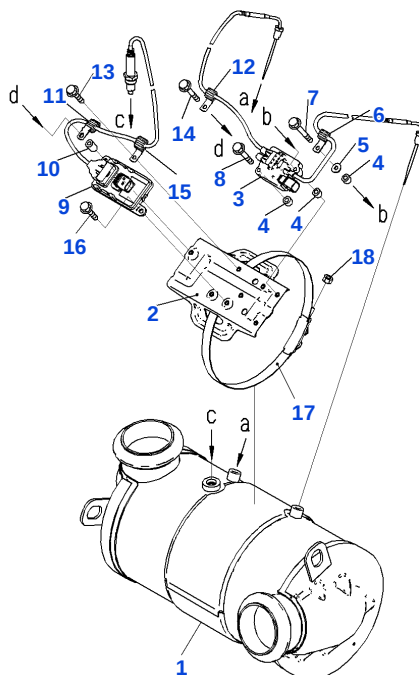


JY107359

Reference: A1610-501003

B004003 Aftertreatment, Inner Parts, Komatsu Diesel Oxidation Catalyst (KDOC)(#10001-)

Item	Part No.	Part Name	Qty	Options
	6534-01-0080	Komatsu diesel Oxidation Catalyst (KDOC) Assembly	1	SN: 10001-UP
1	6534-01-0180	• Komatsu diesel Oxidation Catalyst (KDOC) Assembly	1	SN: 10001-UP
	6534-81-1010	• Bracket	1	SN: 10001-UP
2	6534-81-1020	•• Bracket	1	SN: 10001-UP
3	600-816-2451	•• Sensor, Temperature	1	SN: 10001-UP
4	6534-91-1210	•• Spacer	3	SN: 10001-UP
5	6534-91-1230	•• Washer	1	SN: 10001-UP
6	6534-91-1310	•• Clip	1	SN: 10001-UP
7	6534-91-1260	•• Bolt	1	SN: 10001-UP
8	6534-91-1250	•• Bolt	1	SN: 10001-UP
9	600-816-2630	•• Sensor, NOx	1	SN: 10001-UP
10	6534-91-1220	•• Spacer	1	SN: 10001-UP
11	6534-91-1320	•• Clip	1	SN: 10001-UP
12	6534-91-1310	•• Clip	1	SN: 10001-UP
13	6534-91-1240	•• Bolt	1	SN: 10001-UP
14	6534-91-1250	•• Bolt	1	SN: 10001-UP
15	6534-91-1320	•• Clip	1	SN: 10001-UP
16	6534-91-1240	•• Bolt	1	SN: 10001-UP
17	6534-91-1160	• Band	1	SN: 10001-UP
18	6544-91-1290	•• Nut	1	SN: 10001-UP

Reference: A1610-501003

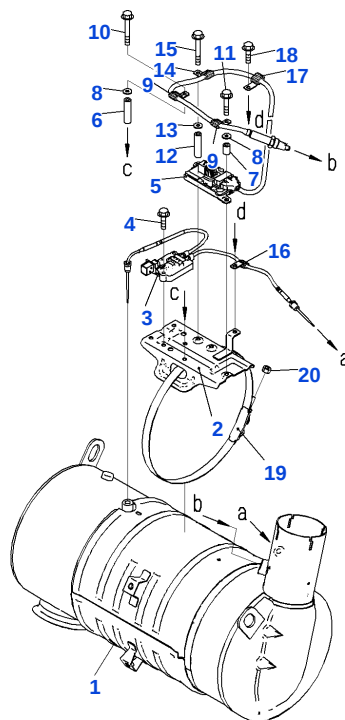

JY102370

Reference: A1610-501004

B004004 Aftertreatment, SCR Assembly A Inner Parts(#10001-)

Item	Part No.	Part Name	Qty	Options
1	6544-01-0080	SCR Assembly	1	SN: 10001-UP
	6544-01-0180	• SCR Assembly	1	SN: 10001-UP
	6544-81-1050	• Bracket	1	SN: 10001-UP
2	6544-81-1060	•• Bracket	1	SN: 10001-UP
3	600-816-2551	•• Sensor, Temperature	1	SN: 10001-UP
4	6544-91-1430	•• Bolt	2	SN: 10001-UP
5	600-816-2710	•• Sensor, NOx	1	SN: 16607-UP
	600-816-2740	•• Sensor, NOx	1	SN: 10001-16606
6	6544-91-1420	•• Spacer	1	SN: 10001-UP
7	6534-91-1220	•• Spacer	1	SN: 10001-UP
8	6534-91-1230	•• Washer	2	SN: 10001-UP
9	6534-91-1320	•• Clip	2	SN: 10001-UP
10	6544-91-1450	•• Bolt	1	SN: 10001-UP
11	6534-91-1250	•• Bolt	1	SN: 10001-UP
12	6544-91-1420	•• Spacer	1	SN: 10001-UP
13	6534-91-1230	•• Washer	1	SN: 10001-UP
14	6534-91-1320	•• Clip	1	SN: 10001-UP
15	6544-91-1450	•• Bolt	1	SN: 10001-UP
16	6534-91-1310	•• Clip	1	SN: 10001-UP
17	6534-91-1320	•• Clip	1	SN: 10001-UP
18	6544-91-1430	•• Bolt	1	SN: 10001-UP
19	6544-91-1320	• Band	1	SN: 10001-UP
20	6544-91-1290	•• Nut	1	SN: 10001-UP
[A2]-The part specified in the line above can be used instead of this part.				SN: UP

Reference: A1610-501004

Get the complete PDF catalogue

Komatsu D51EX-24 S/N 20001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.