


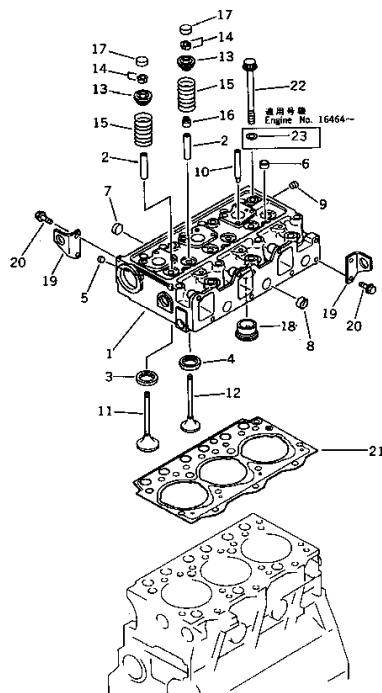


Reference: 0101

030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6201-12-1100	CYLINDER HEAD ASS'Y, VALVE LESS	1	SN: 13618-UP
1		☆ HEAD, CYLINDER	1	SN: 13618-UP
2	6204-19-1310	• GUIDE, VALVE	6	SN: 13618-UP
3	6207-11-1430	• SEAT, INTAKE VALVE (STD)	3	SN: 13618-UP
	6207-19-1430	• SEAT ? 0.25MM, INTAKE VALVE (OS)	3	SN: 13618-UP
	6207-18-1430	• SEAT ? 0.50MM, INTAKE VALVE (OS)	3	SN: 13618-UP
4	6204-11-1440	• SEAT, EXHAUST VALVE (STD)	3	SN: 13618-UP
	6204-19-1440	• SEAT ? 0.25MM, EXHAUST VALVE (OS)	3	SN: 13618-UP
	6204-18-1440	• SEAT ? 0.50MM, EXHAUST VALVE (OS)	3	SN: 13618-UP
5	07046-41008	• PLUG	3	SN: 13618-UP
6	07046-41810	• PLUG	4	SN: 13618-UP
7	07046-42216	• PLUG	2	SN: 13618-UP
8	07046-42516	• PLUG	10	SN: 13618-UP
9	02720-40104	• PLUG	1	SN: 13618-UP
10	6201-11-8910	• PIPE, BREATHER	1	SN: 13618-UP
11	6207-41-4110	VALVE, INTAKE	3	SN: 15370-UP
	6204-41-4110	◆ VALVE, INTAKE	3	SN: 13618-15369
12	6204-41-4210	VALVE, EXHAUST	3	SN: 13618-UP
13	6204-41-4510	SEAT, SPRING	6	SN: 13618-UP
14	6204-41-4520	COTTER	12	SN: 13618-UP
15	6204-41-4410	SPRING, VALVE	6	SN: 13618-UP
16	6204-41-4540	SEAL, EXHAUST VALVE (K1)	3	SN: 13618-UP
17	6204-41-4550	CAP, VALVE STEM	6	SN: 14144-UP
18	6202-12-2110	PLUG, HOT	3	SN: 13618-UP
19	6201-11-1920	HANGER	2	SN: 13618-UP
20	01435-00816	BOLT	4	SN: 13618-UP
21	6201-12-1812	GASKET, HEAD (K1)	1	SN: 18667-UP
	6201-12-1811	□ GASKET, HEAD (K1)	1	SN: 13810-18666
	6201-12-1810	□ GASKET, HEAD (K1)	1	SN: 13618-13809
22	6204-13-1610	BOLT, HEAD	13	SN: 16464-UP
	6142-11-1611	BOLT, HEAD	13	SN: 13618-16463
23	01643-31232	WASHER	13	SN: 16464-UP

Catalog signs: ☆ not supplied separately: assembly only ◆ interchangeable with part above □ part above may be used instead

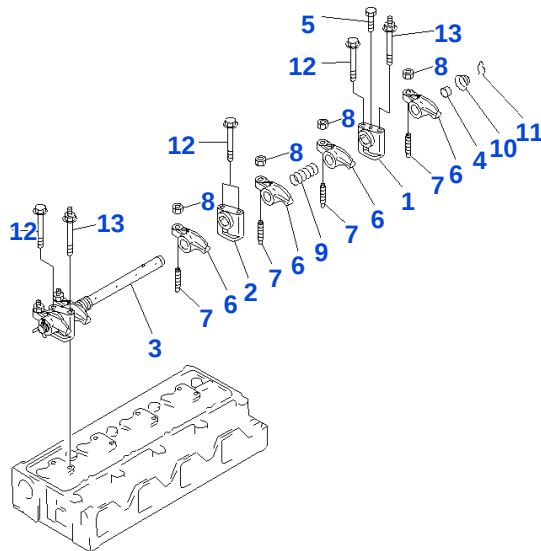

PJ30886


Reference: 0111

030020 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
1	6204-41-5110	BRACKET	1	SN: 13618-UP
2	6204-41-5120	BRACKET	2	SN: 13618-UP
	6201-41-5201	SHAFT ASS'Y	1	SN: 17234-UP
	6201-41-5200	■ SHAFT ASS'Y	1	SN: 13618-17233
		(6201-41-5201{6221-41-5310})		
3		• ☆ SHAFT	1	SN: 17234-UP
		• ☆ SHAFT	1	SN: 13618-17233
4	6221-41-5540	• PLUG	1	SN: 17234-UP
	6142-42-5550	• PLUG	2	SN: 13618-17233
5	6221-41-5310	BOLT	1	SN: 17234-UP
	01010-30612	BOLT	1	SN: 13618-17233
6	6202-43-5410	ARM,ROCKER	6	SN: 17234-UP
	6204-41-5410	◆ ARM,ROCKER	6	SN: 13618-17233
7	6221-41-5410	SCREW,ADJUST	6	SN: 17234-UP
	6204-41-5420	◆ SCREW,ADJUST	6	SN: 13618-17233
8	6221-41-5420	NUT	6	SN: 17234-UP
	6130-41-5430	◆ NUT	6	SN: 13618-17233
9	6202-43-5320	SPRING	2	SN: 17234-UP
	6142-42-5320	◆ SPRING	2	SN: 13618-17233
10	6221-41-5520	SPRING	2	SN: 17234-UP
	6136-41-5320	◆ SPRING	2	SN: 13618-17233
11	6136-41-5330	CLIP	2	SN: 13618-UP
12	01435-00865	BOLT	4	SN: 13618-UP
13	6204-41-5710	BOLT	2	SN: 13618-UP

Catalog signs: ■ may be used instead of described part ☆ not supplied separately: assembly only ◆ interchangeable with part above

Reference: 0111

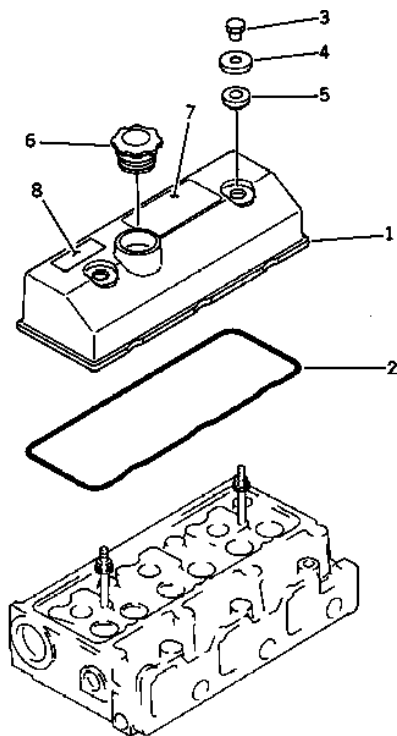


Reference: 0115

030030 CYLINDER HEAD COVER

Item	Part No.	Part Name	Qty	Options
1	6201-11-8110	COVER,HEAD	1	SN: 13618-UP
2	6201-11-8810	O-RING (K1)	1	SN: 13618-UP
3	6136-11-8120	NUT	2	SN: 13618-UP
4	6136-11-8130	WASHER	2	SN: 13618-UP
5	6136-11-8142	PACKING (K1)	2	SN: 13618-UP
6	6204-11-8610	CAP	1	SN: 13618-UP
7	6204-81-2210	PLATE ? NAME,(ENGLISH)	1	SN: 13618-UP
	6204-81-2260	PLATE ? NAME,(GERMAN)	1	SN: 13618-UP
	6204-81-2290	PLATE ? NAME,(FRENCH)	1	SN: 13618-UP
	6204-81-2310	PLATE ? NAME,(ITALIAN)	1	SN: 13618-UP
	6204-81-2240	PLATE ? NAME,(SPANISH)	1	SN: 13618-UP
8	6204-81-2810	PLATE ? CAUTION	1	SN: 18643-UP

Reference: 0115

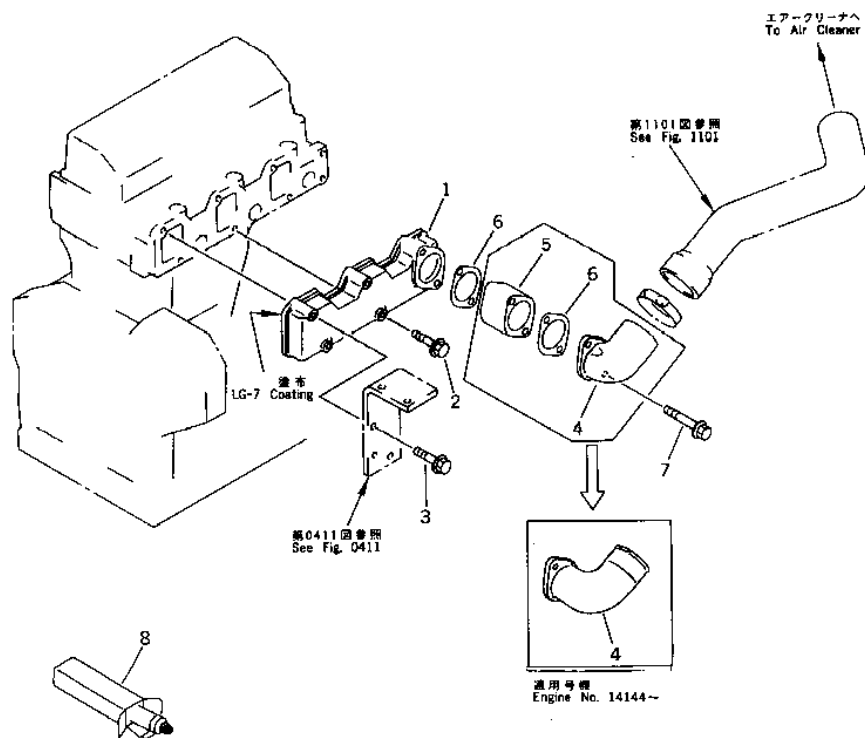


Reference: 0131

030040 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
1	6201-12-4110	MANIFOLD,INTAKE	1	SN: 13618-UP
2	01435-20850	BOLT	2	SN: 13618-UP
3	01435-20855	BOLT	2	SN: 13618-UP
4	6201-12-4230	CONNECTOR,AIR	1	SN: 14144-UP
	6201-12-4210	CONNECTOR,AIR	1	SN: 13618-14143
5	6201-11-4940	SPACER	1	SN: 13618-14143
6	6201-11-4820	GASKET (K1)	1	SN: 14144-UP
	6201-11-4820	GASKET (K1)	2	SN: 13618-14143
7	01435-20860	BOLT	2	SN: 14144-UP
	6202-81-6820	BOLT	2	SN: 13618-14143
8	09920-00150	LIQUID GASKET,LG-7 ? 150G	-2	SN: 13618-UP

Reference: 0131

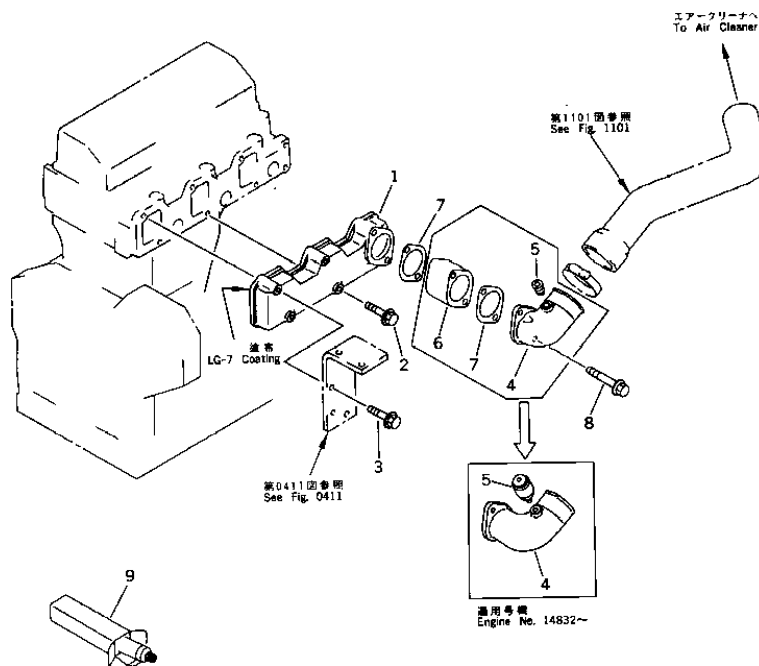


Reference: 0132

030050 AIR INTAKE MANIFOLD AND CONNECTION (WITH DUST INDICATOR OUTLET)

Item	Part No.	Part Name	Qty	Options
1	6201-12-4110	MANIFOLD,INTAKE	1	SN: 13618-UP
2	01435-20850	BOLT	2	SN: 13618-UP
3	01435-20855	BOLT	2	SN: 13618-UP
4	6201-12-4240	CONNECTOR,AIR	1	SN: 14832-UP
	6201-12-4220	CONNECTOR,AIR	1	SN: 13618-14831
5	08670-21635	INDICATOR,DUST	1	SN: 14832-UP
	02720-10204	PLUG	1	SN: 13618-14831
6	6201-11-4940	SPACER	1	SN: 13618-14831
7	6201-11-4820	GASKET (K1)	1	SN: 14832-UP
	6201-11-4820	GASKET (K1)	2	SN: 13618-14831
8	01435-20860	BOLT	2	SN: 14832-UP
	6202-81-6820	BOLT	2	SN: 13618-14831
9	09920-00150	LIQUID GASKET,LG-7 ? 150G	-2	SN: 13618-UP

Reference: 0132

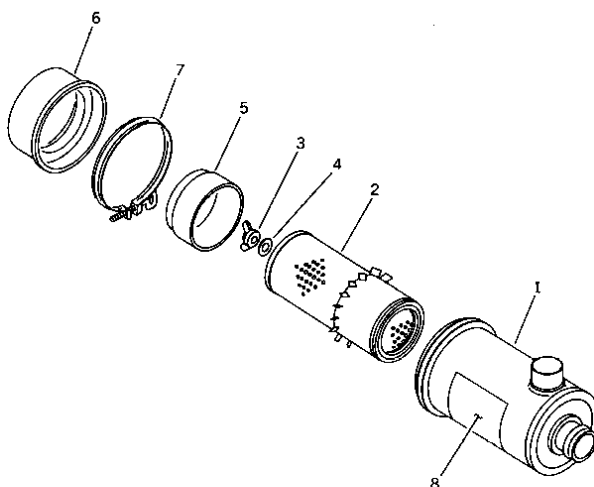


Reference: 0141

030060 AIR CLEANER (SINGLE ELEMENT)

Item	Part No.	Part Name	Qty	Options
1	6201-81-7200	AIR CLEANER ASS'Y	1	SN: 13618-UP
	6201-81-7210	• BODY	1	SN: 13618-UP
	600-182-1100	• ELEMENT ASS'Y	1	SN: 13618-UP
2		• ☆ ELEMENT	1	SN: 13618-UP
3	600-182-1140	• • NUT,WING	1	SN: 13618-UP
4	600-181-6580	• • WASHER,SEAL	1	SN: 13618-UP
5	600-181-1170	• BAFFLE	1	SN: 13618-UP
6	600-181-1130	• CUP	1	SN: 13618-UP
7	600-182-1160	• CLAMP	1	SN: 13618-UP
8	09637-30661	PLATE ? INSTRUCTION	1	SN: 13618-UP
	09641-81661	PLATE ? INSTRUCTION,(GERMAN-ENGLISH)	1	SN: 13618-UP
	09641-30661	PLATE ? INSTRUCTION,(ENGLISH)	1	SN: 13618-UP
	09641-20761	PLATE ? INSTRUCTION,(FRENCH-ENGLISH)	1	SN: 13618-UP
	09641-30761	PLATE ? INSTRUCTION,(ITALIAN-ENGLISH)	1	SN: 13618-UP
	09641-70661	PLATE ? INSTRUCTION,(SPANISH-ENGLISH)	1	SN: 13618-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0141

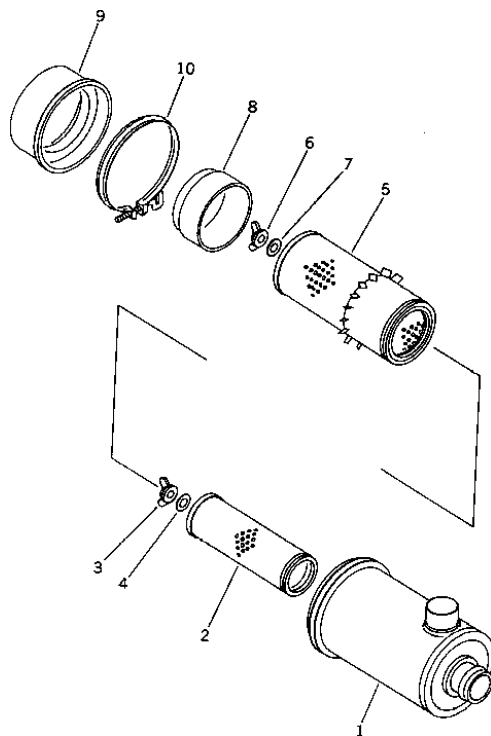


Reference: 0142

030070 AIR CLEANER (DOUBLE ELEMENT)

Item	Part No.	Part Name	Qty	Options
1	6201-81-7300	AIR CLEANER ASS'Y	1	SN: 13618-UP
	6201-81-7210	• BODY	1	SN: 13618-UP
2	600-182-1190	• ELEMENT ASS'Y	1	SN: 13618-UP
		• • ☆ ELEMENT, INNER	1	SN: 13618-UP
3	600-182-1140	• • NUT, WING	1	SN: 13618-UP
4	600-181-6580	• • WASHER, SEAL	1	SN: 13618-UP
5	600-182-1100	• • ELEMENT ASS'Y, OUTER	1	SN: 13618-UP
		• • • ☆ ELEMENT, OUTER	1	SN: 13618-UP
6	600-182-1140	• • • NUT, WING	1	SN: 13618-UP
7	600-181-6580	• • • WASHER, SEAL	1	SN: 13618-UP
8	600-181-1170	• BAFFLE	1	SN: 13618-UP
9	600-181-1130	• CUP	1	SN: 13618-UP
10	600-182-1160	• CLAMP	1	SN: 13618-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0142

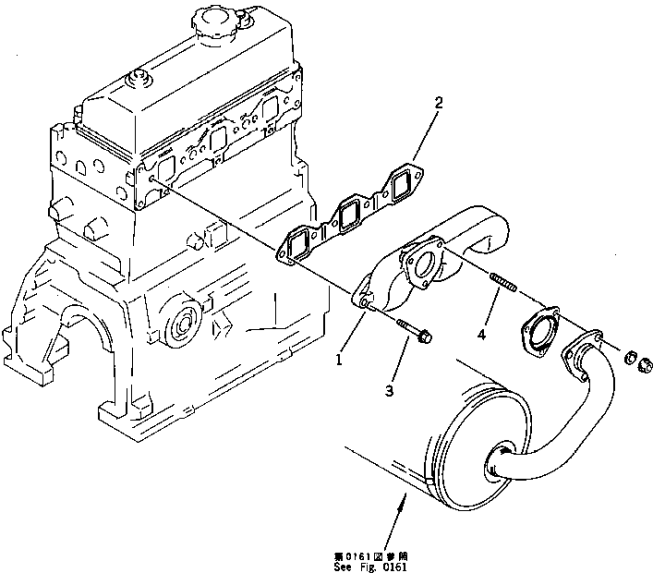


Reference: 0151

030080 EXHAUST MANIFOLD

Item	Part No.	Part Name	Qty	Options
1	6201-11-5110	MANIFOLD,EXHAUST	1	SN: 13618-UP
2	6201-11-5810	GASKET (K1)	1	SN: 13618-UP
3	01435-00825	BOLT	6	SN: 13618-UP
4	01124-60825	STUD	3	SN: 13618-UP

Reference: 0151

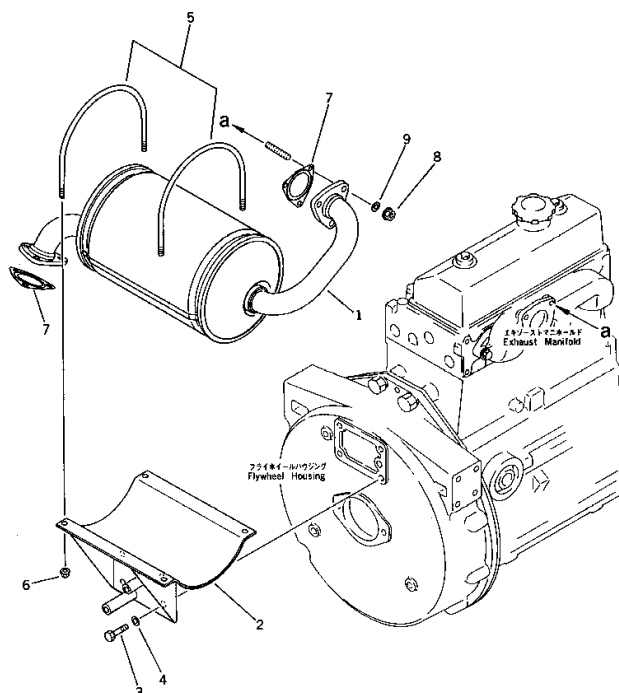

Reference: 0161

030090 MUFFLER

Item	Part No.	Part Name	Qty	Options
1	6201-11-5210	MUFFLER	1	SN: 13618-UP
2	6201-11-5610	BRACKET	1	SN: 13618-UP
3	01010-31025	BOLT	4	SN: 13618-UP
4	01641-01016	WASHER	4	SN: 13618-UP
5	6201-11-5960	U-BOLT	2	SN: 13618-UP
6	01584-00806	NUT	4	SN: 13618-UP
7	6201-11-5580	GASKET (K1)	2	SN: 13618-UP
8	6201-11-5850	NUT	3	SN: 13618-UP
9	01643-20823	WASHER	3	SN: 13618-UP

Reference: 0161

Get the complete PDF catalogue

Komatsu 3D95S-W-1E S/N 13618-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.