


シリンダヘッド
FIG. 1101 CYLINDER HEAD

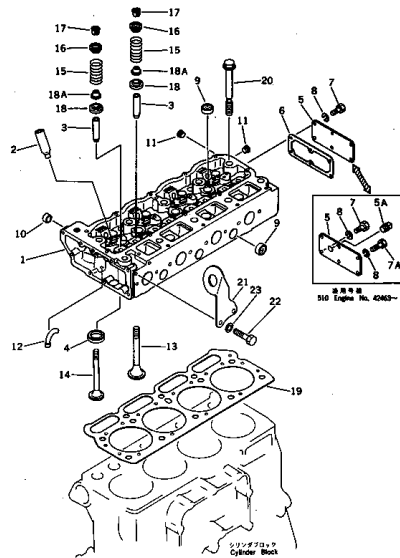

Reference: 1101


030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6130-12-1101	CYLINDER HEAD ASS'Y,WITH VALVE	1	SN: 40027-UP
	6130-11-1200	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 40027-UP
1		• ☆ HEAD,CYLINDER	1	SN: 40027-UP
2	6130-11-1131	• SLEEVE	4	SN: 40027-UP
3	6130-19-1310	• Δ GUIDE,VALVE	8	SN: 40027-UP
4	6130-11-1323	• SEAT,EXHAUST VALVE (STD)	4	SN: 40027-UP
4	6130-19-1323	• SEAT, 0.25MM,EXHAUST VALVE (OS)	4	SN: 40027-UP
4	6130-18-1323	• SEAT, 0.50MM,EXHAUST VALVE (OS)	4	SN: 40027-UP
4	6130-17-1323	• SEAT, 0.75MM,EXHAUST VALVE (OS)	4	SN: 40027-UP
4	6130-16-1323	• SEAT, 1.00MM,EXHAUST VALVE (OS)	4	SN: 40027-UP
5	6130-11-1931	• PLATE	1	SN: 40027-UP
6	6130-11-1940	• GASKET (K1)	1	SN: 40027-UP
7	01010-30816	• BOLT	6	SN: 40027-UP
8	01602-00825	• WASHER,SPRING	6	SN: 40027-UP
9	6130-11-1410	• PLUG	9	SN: 40027-UP
10	6130-11-1420	• PLUG	4	SN: 40027-UP
11	6100-21-1130	• PLUG	2	SN: 40027-UP
12	6130-11-1451	• NOZZLE	8	SN: 40027-UP
13	6130-41-4131	• VALVE,INTAKE	4	SN: 40027-UP
14	6130-41-4210	• VALVE,EXHAUST	4	SN: 40027-UP
15	6130-41-4410	• SPRING,VALVE	8	SN: 40027-UP
16	6130-41-4511	• GUIDE,SPRING	8	SN: 40027-UP
17	6130-41-4520	• COTTER	16	SN: 40027-UP
18	6130-41-4620	• SEAT,SPRING	8	SN: 40027-UP
19	6131-11-1811	GASKET (K1)	1	SN: .-UP
19	6131-11-1810	□ GASKET (K1)	1	SN: 40027-.
20	6130-12-1610	BOLT	10	SN: 40027-UP

Catalog signs: ☆ not supplied separately: assembly only Δ semi-finished: additional work required □ part above may be used instead

Reference: 1101

FIG. 1103 ROCKER ARM

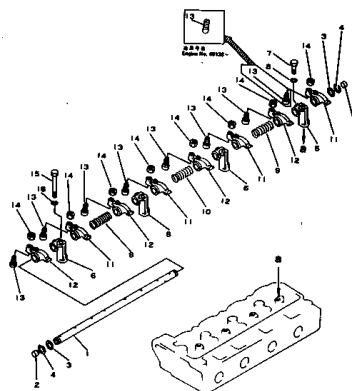


Reference: 1103

030020 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
	6130-42-5100	ROCKER ARM SHAFT A.	1	SN: 40027-UP
1	6130-41-5211	• SHAFT	1	SN: 40027-UP
2	6130-41-5550	• PLUG	2	SN: 40027-UP
3	6130-41-5540	• PLATE	2	SN: 40027-UP
4	04066-00020	• RING,SNAP	2	SN: 40027-UP
5	6130-41-5110	• BRACKET	1	SN: 40027-UP
6	6130-41-5120	• BRACKET	3	SN: 40027-UP
7	01010-30612	• BOLT	1	SN: 40027-UP
8	01602-00619	• WASHER,SPRING	1	SN: 40027-UP
9	6130-41-5320	• SPRING	2	SN: 40027-UP
10	6130-41-5330	• SPRING	1	SN: 40027-UP
11	6130-41-5511	• ARM,ROCKER, INTAKE	4	SN: 40027-UP
12	6130-41-5411	• ARM,ROCKER, EXHAUST	4	SN: 40027-UP
13	6130-42-5440	• SCREW	8	SN: 40138-UP
13	6130-41-5442	• SCREW	8	SN: 40027-40137
14	6130-41-5430	• NUT	8	SN: 40027-UP
15	01010-31280	BOLT	4	SN: 40027-UP
16	01602-01236	WASHER,SPRING	4	SN: 40027-UP

Reference: 1103

シリンダヘッドカバー
FIG. 1106 CYLINDER HEAD COVER

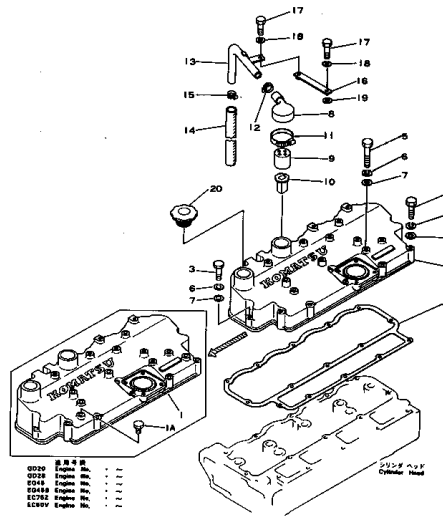

Reference: 1106


030030 CYLINDER HEAD COVER

Item	Part No.	Part Name	Qty	Options
1	6130-12-8115	COVER,HEAD	1	SN: .-UP
1	6130-12-8114	■ COVER,HEAD (6130-12-8115,6114-11-8910(2))	1	SN: 42433-.
1	6130-12-8112	□ COVER,HEAD	1	SN: 40027-42432
1A	6114-11-8910	PLUG	2	SN: .-UP
2	6130-11-7820	GASKET (K1)	1	SN: 40027-UP
3	01010-30850	BOLT	8	SN: 40027-UP
4	01010-30870	BOLT	4	SN: 40027-UP
5	01010-30890	BOLT	3	SN: 40027-UP
6	01602-00825	WASHER,SPRING	15	SN: 40027-UP
7	01640-20816	WASHER	15	SN: 40027-UP
8	6130-12-8931	COVER	1	SN: 43863-UP
8	6130-12-8930	□ COVER	1	SN: 40027-43862
9	6130-12-8910	BREATHER	1	SN: 40027-UP
10	6130-12-8920	BAFFLE	1	SN: 40027-UP
11	07281-00709	CLAMP	1	SN: 40027-UP
12	07281-00359	CLAMP	1	SN: 40027-UP
13	6130-12-8850	PIPE	1	SN: 40027-UP
14	6130-15-8850	HOSE	1	SN: 40027-UP
15	07280-02523	CLAMP	1	SN: 40027-UP
16	6130-12-8860	BRACKET	1	SN: 40027-UP
17	01010-30820	BOLT	2	SN: 40027-UP
18	01602-00825	WASHER,SPRING	2	SN: 40027-UP
19	01643-31032	WASHER	1	SN: 40027-UP
20	6130-12-8610	CAP	1	SN: 40027-UP

Catalog signs: ■ may be used instead of described part □ part above may be used instead

Reference: 1106

エア インテーク コネクション および エア クリーナ
FIG. 1112 AIR INTAKE CONNECTION AND AIR CELANER

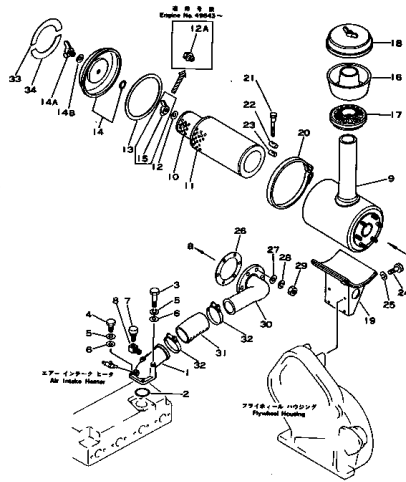

Reference: 1112

030040 AIR INTAKE CONNECTION AND AIR CELANER


Item	Part No.	Part Name	Qty	Options
1	6130-12-4211	CONNECTOR	1	SN: 40027-UP
2	07000-62070	O-RING (K1)	1	SN: .-UP
2	07000-02070	□ O-RING (K1)	1	SN: 40027-.
3	01010-31080	BOLT	2	SN: 40027-UP
4	01010-31025	BOLT	2	SN: 40027-UP
5	01602-01030	WASHER,SPRING	4	SN: 40027-UP
6	01640-21016	WASHER	4	SN: 40027-UP
7	08670-00635	INDICATOR,DUST	1	SN: 40027-UP
8	6693-62-1930	ELBOW	1	SN: 40027-UP
	6130-85-7101	AIR CLEANER ASS'Y	1	SN: 49843-UP
	6130-85-7100	□ AIR CLEANER ASS'Y	1	SN: 40027-49842
9	6130-85-7110	• BODY	1	SN: 40027-UP
	600-181-9301	• ELEMENT ASS'Y	1	SN: 49843-UP
	600-181-9300	• □ ELEMENT ASS'Y	1	SN: 40027-49842
10		• • ☆ ELEMENT,INNER	1	SN: 40027-UP
11		• • ☆ ELEMENT,OUTER	1	SN: 40027-UP
12	600-181-7511	• • WASHER,SEAL	1	SN: 40027-UP
12A	600-181-9631	• • NUT	1	SN: 49843-UP
13	600-181-9410	• PACKING	1	SN: 40027-UP
14	600-181-9130	• COVER	1	SN: 40027-UP
14A	600-181-7610	• • NUT,WING	1	SN: 40027-UP
14B	600-181-7511	• • WASHER,SEAL	1	SN: 40027-UP
15	600-181-7620	• NUT	1	SN: 40027-49842
	600-181-9140	PRE-CLEANER ASS'Y	1	SN: 40027-UP
16	6110-83-9110	• BODY	1	SN: 40027-UP
17	6110-83-9120	• SLEEVE	1	SN: 40027-UP
18	6110-83-9130	• COVER	1	SN: 40027-UP
19	6130-15-4310	BRACKET	1	SN: 40027-UP
20	6130-11-4511	BAND	2	SN: 40027-UP
21	6110-23-6520	BOLT	2	SN: 40027-UP
22	6110-21-6530	PIN	2	SN: 40027-UP
23	6110-21-6540	PIN, WITH THREAD	2	SN: 40027-UP
24	01010-31022	BOLT	4	SN: 40027-UP
25	01602-01030	WASHER,SPRING	4	SN: 40027-UP

Item	Part No.	Part Name	Qty	Options
26	6110-11-4430	GASKET (K1)	1	SN: 40027-UP
27	01640-20816	WASHER	6	SN: 40027-UP
28	01602-00825	WASHER,SPRING	6	SN: 40027-UP
29	01580-00806	NUT	6	SN: 40027-UP
30	6130-15-4230	CONNECTOR	1	SN: 40027-UP
31	6130-15-4240	HOSE	1	SN: 40027-UP
32	07281-00809	CLAMP	2	SN: 40027-UP
33	600-181-7710	PLATE, CAUTION	1	SN: 40027-UP
34	600-181-7720	PLATE, CAUTION	1	SN: 40027-UP

Catalog signs: ☐ part above may be used instead ☆ not supplied separately: assembly only

Reference: 1112

エキゾースト マニホールド および マフラー
FIG. 1122 EXHAUST MANIFOLD AND MUFFLER

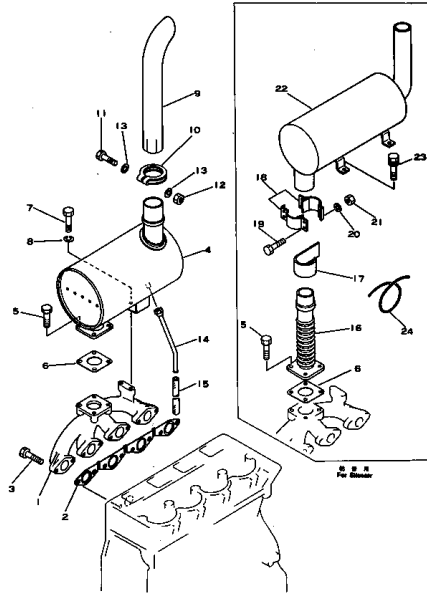

Reference: 1122


030050 EXHAUST MANIFOLD AND MUFFLER

Item	Part No.	Part Name	Qty	Options
1	6130-11-5110	MANIFOLD,EXHAUST	1	SN: 40027-UP
2	6132-11-5810	GASKET (K1)	1	SN: 40717-UP
2	6130-12-5810	☐ GASKET	1	SN: 40027-40716
3	01010-61030	BOLT	8	SN: 40027-UP
4	6130-11-5410	MUFFLER	1	SN: 40027-UP
5	01010-61040	BOLT	4	SN: 40027-UP
6	6130-12-5580	GASKET (K1)	1	SN: 40717-UP
6	6130-11-5210	☐ GASKET	1	SN: 40027-40716
7	01010-61020	BOLT	2	SN: 40027-UP
8	01602-01030	WASHER,SPRING	2	SN: 40027-UP
9	6130-15-5710	PIPE,EXHAUST	1	SN: 40027-UP
10	6130-11-5910	CLAMP	1	SN: 40027-UP
11	01050-31285	BOLT	1	SN: 40027-UP
12	01582-01210	NUT,LOCK	1	SN: 40027-UP
13	01640-21223	WASHER	2	SN: 40027-UP
14	6130-11-5650	PIPE	1	SN: 40027-UP
15	07260-20945	HOSE	1	SN: 42559-UP
15	07260-20963	☐ HOSE	1	SN: 40027-42558
16	M720170804331	BELLOWS,EXHAUST (SILENCED TYPE)	1	SN: 40027-UP
17	M710040343411	COVER,(SILENCED TYPE)	1	SN: 40027-UP
18	M720040304340	BAND,(SILENCED TYPE)	2	SN: 40027-UP
19	M018010800306	BOLT,(SILENCED TYPE)	4	SN: 40027-UP
20	M011600080006	WASHER,SPRING (SILENCED TYPE)	4	SN: 40027-UP
21	M018200800006	NUT,(SILENCED TYPE)	4	SN: 40027-UP
22	6130-15-5511	MUFFLER,(SILENCED TYPE)	1	SN: 40027-UP
23	M800919008202	BOLT,(SILENCED TYPE)	4	SN: 40027-UP
24	M710040343420	WIRE,(SILENCED TYPE)	1	SN: 40027-UP

Catalog signs: ☐ part above may be used instead

Reference: 1122

ウォーター パイプ および サーモスタット
FIG. 1131 WATER PIPE AND THERMOSTAT

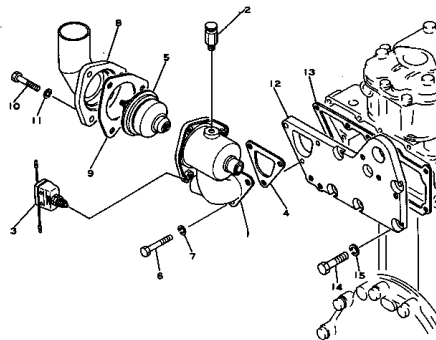

Reference: 1131


030060 WATER PIPE AND THERMOSTAT

Item	Part No.	Part Name	Qty	Options
	6130-11-6013	THERMOSTAT CASE A.	1	SN: 40027-UP
1	6130-11-6413	• CASE	1	SN: 40027-UP
2	6003500-2-10	• VALVE,AIR	1	SN: 40027-UP
3	07042-20415	• PLUG,(FOR SHIPPING)	1	SN: 40027-UP
3	600-815-1291	SWITCH,THERMOSTAT	1	SN: ..-UP
3	600-815-1290	☐ SWITCH,THERMOSTAT	1	SN: ..-
3	600-815-1281	☐ SWITCH,THERMOSTAT	1	SN: 40027-.
4	6130-11-6810	GASKET (K1)	1	SN: 40027-UP
5	6110-13-6311	THERMOSTAT	1	SN: 40027-UP
6	01010-30835	BOLT	3	SN: 40027-UP
7	01602-00825	WASHER,SPRING	3	SN: 40027-UP
8	6130-11-6521	PIPE	1	SN: 40027-UP
9	6110-13-6451	GASKET (K1)	1	SN: 40027-UP
10	01010-30818	BOLT	3	SN: 40027-UP
11	01602-00825	WASHER,SPRING	3	SN: 40027-UP
12	6131-11-6210	PLATE	1	SN: 40027-UP
13	6130-11-6310	GASKET (K1)	1	SN: 40027-UP
14	01010-30822	BOLT	6	SN: 40027-UP
15	01602-00825	WASHER,SPRING	6	SN: 40027-UP

Catalog signs: ☐ part above may be used instead

Reference: 1131

シリンダ ブロック
FIG. 1201 CYLINDER BLOCK

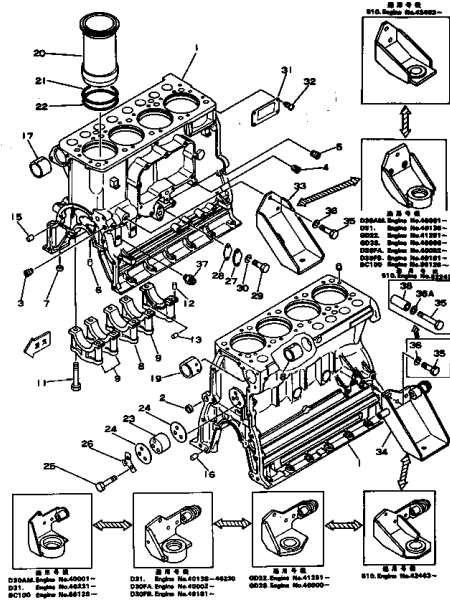

Reference: 1201

060010 CYLINDER BLOCK


Item	Part No.	Part Name	Qty	Options
	6130-22-1200	CYLINDER BLOCK ASS'Y	1	SN: 40027-UP
1		• ☆ BLOCK,CYLINDER	1	SN: 40027-UP
2	6130-11-1420	• PLUG	1	SN: 40027-UP
3	07043-50415	• PLUG	1	SN: .-UP
3	07042-00415	• □ PLUG	1	SN: 40027-.
4	6100-21-1130	• PLUG	4	SN: 40027-UP
5	6110-23-1170	• PLUG	3	SN: 40027-UP
6	6130-22-1920	• PIN	4	SN: 40027-UP
7	07046-21410	• PLUG	2	SN: 40027-UP
8	6130-29-1240	• △ CAP,MAIN METAL	1	SN: 40027-UP
9	6130-29-1220	• △ CAP,MAIN METAL	3	SN: 40027-UP
10	6130-29-1260	• △ CAP,MAIN METAL	1	SN: 40027-UP
11	6130-22-1710	• BOLT	10	SN: 40027-UP
12	04020-00514	• PIN,DOWEL	2	SN: 40027-UP
13	6130-21-1262	• PIN,DOWEL	2	SN: 44283-UP
13	6130-21-1260	• □ PIN,DOWEL	2	SN: 40027-44282
14	6130-22-1910	• PIN,GROOVE	2	SN: 40027-UP
15	04020-01024	• PIN,DOWEL	2	SN: 40027-UP
16	04020-01434	• PIN,DOWEL	2	SN: 40027-UP
17	6130-21-1410	• BUSHING,CAMSHAFT	1	SN: 40027-UP
18	6130-21-1420	• BUSHING,CAMSHAFT	1	SN: 40027-UP
19	6130-21-1430	• BUSHING,CAMSHAFT	1	SN: 40027-UP
20	6130-22-2310	LINER,CYLINDER	4	SN: 40027-UP
21	6130-21-2220	O-RING (K2)	4	SN: 40027-UP
22	6130-21-2230	O-RING (K2)	4	SN: 40027-UP
23	6130-21-2410	SHAFT,IDLE	1	SN: 40027-UP
24	6130-21-2420	PLATE,THRUST	2	SN: 40027-UP
25	01010-61265	BOLT	3	SN: 40027-UP
26	6130-21-2430	PLATE,LOCK (K2)	1	SN: 40027-UP
27	6130-21-6220	PLATE	1	SN: 40027-UP
28	6130-21-6231	GASKET (K2)	1	SN: 40027-UP
29	01010-30822	BOLT	2	SN: 40027-UP
30	01602-00825	WASHER,SPRING	2	SN: 40027-UP
31	09605-01130	PLATE, NAME,(LIMITED SUPPLY)	1	SN: 40027-UP

Item	Part No.	Part Name	Qty	Options
32	04418-02550	SCREW	4	SN: 40027-UP
33	6130-25-3710	BRACKET,FRONT, L.H.	1	SN: 40027-UP
34	6130-25-3720	BRACKET,FRONT, R.H.	1	SN: 40027-UP
35	01010-31225	BOLT	6	SN: 40027-UP

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead Δ semi-finished: additional work required

Reference: 1201

フロント カバー
FIG. 1211 FRONT COVER

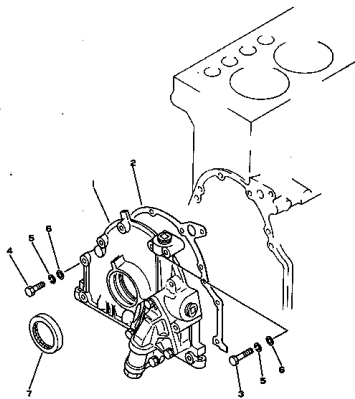

Reference: 1211

060020 FRONT COVER

Item	Part No.	Part Name	Qty	Options
1	6130-52-1006	OIL PUMP ASS'Y	1	SN: .-UP
1	6130-52-1005	☐ OIL PUMP ASS'Y	1	SN: 40027-.
2	6130-22-3811	GASKET (K2)	1	SN: .-UP
2	6130-22-3810	☐ GASKET	1	SN: 40027-.
3	01010-31075	BOLT	2	SN: 40027-UP
4	01010-31045	BOLT	7	SN: 40027-UP
5	01602-01030	WASHER,SPRING	9	SN: 40027-UP
6	01640-21016	WASHER	9	SN: 40027-UP
7	6130-22-3290	SEAL, FRONT (K2)	1	SN: 42956-UP
7	07012-10060	☐ SEAL,FRONT	1	SN: 40027-42955

Catalog signs: ☐ part above may be used instead

Reference: 1211

Get the complete PDF catalogue

Komatsu 4D105-3L S/N 40027-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.