


シリンダヘッド 通用番号
FIG. 101 CYLINDER HEAD (ENGINE NO. 10001 - 26915)

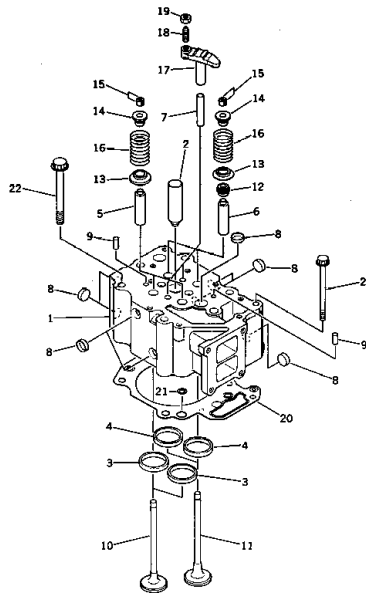

Reference: 101

030010 CYLINDER HEAD(#10001-26915)


Item	Part No.	Part Name	Qty	Options
	6150-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-@
	6150-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-@
1		• ☆ HEAD,CYLINDER	1	SN: 10001-@
2	6136-11-1130	• SLEEVE	1	SN: 10001-@
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-@
3	6150-19-1331	• INSERT, 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-@
3	6150-18-1331	• INSERT, 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-@
3	6150-17-1331	• INSERT, 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-@
3	6150-16-1331	• INSERT, 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-@
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-@
4	6150-19-1320	• INSERT, 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-@
4	6150-18-1320	• INSERT, 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-@
4	6150-17-1320	• INSERT, 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-@
4	6150-16-1320	• INSERT, 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-@
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-@
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-@
7	6150-11-1140	• GUIDE	2	SN: 10001-@
8	6162-13-1150	• PLUG,EXPANSION	8	SN: 10001-@
9	04020-00820	• PIN,DOWEL	2	SN: 10001-@
10	6150-41-4120	• VALVE,INTAKE	2	SN: 20075-@
10	6150-41-4111	• □ VALVE,INTAKE	2	SN: 10001-20074
11	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-@
12	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-@
13	6150-41-4430	• SEAT,LOWER	4	SN: 10001-@
14	6150-41-4510	• SEAT,UPPER	4	SN: 10001-@
15	6136-42-4520	• COTTER,VALVE	8	SN: 10001-@
16	6150-41-4411	• SPRING,VALVE	4	SN: 10001-@
	6150-41-5601	CROSSHEAD ASS'Y	12	SN: 10296-@
	6150-41-5600	□ CROSSHEAD ASS'Y	12	SN: 10001-10295
17	6150-41-5611	• CROSSHEAD	1	SN: 10296-@
17	6150-41-5610	• CROSSHEAD	1	SN: 10001-10295
18	6150-41-5620	• SCREW	1	SN: 10296-@
18	6610-41-5620	• SCREW	1	SN: 10001-10295
19	6150-41-5630	• NUT	1	SN: 10296-@

Item	Part No.	Part Name	Qty	Options
19	6710-41-5630	• NUT	1	SN: 10001-10295
20	6150-17-1812	GASKET (K1)	6	SN: 10001-@
20	6150-11-1812	☐ GASKET (K1)	6	SN: 23500-26915
20	6150-11-1811	☐ GASKET (K1)	6	SN: 23499-23499
20	6150-11-1810	☐ GASKET (K1)	6	SN: 10001-23498
21	6150-11-1820	• GROMMET	4	SN: 10001-23498
22	6150-11-1610	BOLT	36	SN: 10001-@
23	6150-81-9160	BOLT	6	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead

Reference: 101

シリンダヘッド
FIG. 101A CYLINDER HEAD (ENGINE NO. 26916 -)

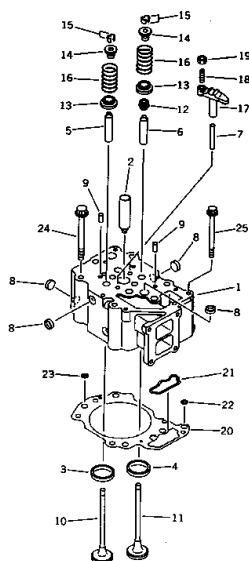

Reference: 101A

030020 CYLINDER HEAD(#26916-)


Item	Part No.	Part Name	Qty	Options
	6150-11-1010	CYLINDER HEAD ASS'Y,WITH VALVE	6	SN: 10001-UP
	6150-11-1100	• CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 10001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 10001-UP
2	6136-11-1130	• SLEEVE	1	SN: 10001-UP
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 10001-UP
3	6150-19-1331	• INSERT, 0.25MM,INTAKE VALVE (OS)	2	SN: 10001-UP
3	6150-18-1331	• INSERT, 0.50MM,INTAKE VALVE (OS)	2	SN: 10001-UP
3	6150-17-1331	• INSERT, 0.75MM,INTAKE VALVE (OS)	2	SN: 10001-UP
3	6150-16-1331	• INSERT, 1.00MM,INTAKE VALVE (OS)	2	SN: 10001-UP
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 10001-UP
4	6150-19-1320	• INSERT, 0.25MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6150-18-1320	• INSERT, 0.50MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6150-17-1320	• INSERT, 0.75MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6150-16-1320	• INSERT, 1.00MM,EXHAUST VALVE (OS)	2	SN: 10001-UP
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 10001-UP
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 10001-UP
7	6150-11-1140	• GUIDE	2	SN: 10001-UP
8	6162-13-1150	• PLUG,EXPANSION	8	SN: 10001-UP
9	04020-00820	• PIN,DOWEL	2	SN: 10001-UP
10	6150-41-4120	• VALVE,INTAKE	2	SN: 20075-UP
11	6150-41-4210	• VALVE,EXHAUST	2	SN: 10001-UP
12	6140-41-4540	• SEAL,EXHAUST VALVE (K1)	2	SN: 10001-UP
13	6150-41-4430	• SEAT,LOWER	4	SN: 10001-UP
14	6150-41-4510	• SEAT,UPPER	4	SN: 10001-UP
15	6136-42-4520	• COTTER,VALVE	8	SN: 10001-UP
16	6150-41-4411	• SPRING,VALVE	4	SN: 10001-UP
	6150-41-5601	CROSSHEAD ASS'Y	12	SN: 10296-UP
17	6150-41-5611	• CROSSHEAD	1	SN: 10296-UP
18	6150-41-5620	• SCREW	1	SN: 10296-UP
19	6150-41-5630	• NUT	1	SN: 10296-UP
20	6150-17-1812	GASKET (K1)	6	SN: 26916-UP
21	6150-11-1920	• GROMMET,OIL	1	SN: 26916-UP
22	6150-11-1930	• GROMMET,OIL	1	SN: 26916-UP
23	6150-11-1940	• GROMMET,WATER	4	SN: 26916-UP

Item	Part No.	Part Name	Qty	Options
24	6150-11-1610	BOLT	36	SN: 10001-UP
25	6150-81-9160	BOLT	6	SN: 10001-UP

Catalog signs: ☆ not supplied separately; assembly only

Reference: 101A

FIG. 103 ROCKER ARM AND HOUSING

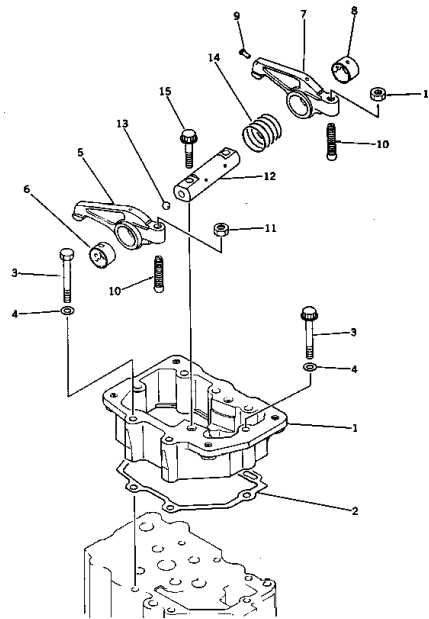

Reference: 103


030030 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING,ROCKER ARM	6	SN: 10001-UP
2	6150-11-7810	GASKET (K1)	6	SN: 10001-UP
3	6150-81-9140	BOLT	40	SN: 10001-UP
4	01643-31032	WASHER	40	SN: 30748-UP
4	01640-21016	□ WASHER	40	SN: 10001-30747
	6150-41-5400	ARM ASS'Y,INTAKE	6	SN: 10001-UP
5		• ☆ ARM,ROCKER	1	SN: 10001-UP
6	6150-41-5420	• BUSHING	1	SN: 10001-UP
	6150-41-5500	ARM ASS'Y,EXHAUST	6	SN: 10001-UP
7		• ☆ ARM,ROCKER	1	SN: 10001-UP
8	6150-41-5420	• BUSHING	1	SN: 10001-UP
9	6162-43-5340	• RIVET	1	SN: 10001-UP
10	6150-41-5540	SCREW	12	SN: 10001-UP
11	01582-01008	NUT	12	SN: 10001-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 10001-UP
12		• ☆ SHAFT	1	SN: 10001-UP
13	6150-81-8420	• BALL	1	SN: 10001-UP
14	6150-41-5320	SPRING	6	SN: 10001-UP
15	6150-81-9370	BOLT	12	SN: 10001-UP

Catalog signs: □ part above may be used instead ☆ not supplied separately: assembly only

Reference: 103

FIG. 107 ROCKER ARM HOUSING COVER

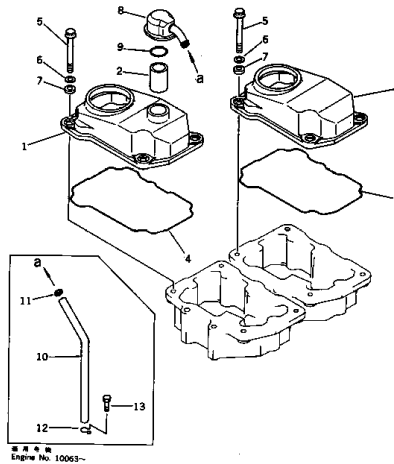

Reference: 107


030040 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
	6150-11-8141	HEAD COVER ASS'Y,NO.1	1	SN: 11040-UP
	6150-11-8140	☐ HEAD COVER ASS'Y,NO.1	1	SN: 10001-11039
1	6150-11-8151	• COVER,HEAD	1	SN: 11040-UP
1	6150-11-8150	• ☐ COVER,HEAD	1	SN: 10001-11039
2	6151-11-8210	• TUBE	1	SN: 10001-UP
3	6150-11-8111	COVER,HEAD, NO.2,3,4,5,6	5	SN: 11040-UP
3	6150-11-8110	☐ COVER,HEAD, NO.2,3,4,5,6	5	SN: 10001-11039
4	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
5	6150-81-9370	BOLT	24	SN: 21370-UP
5	6150-81-9170	☐ BOLT	24	SN: 10064-21369
5	6150-81-9230	☐ BOLT	24	SN: 10001-10063
6	01640-21016	WASHER	24	SN: 10001-UP
7	6150-11-8820	RUBBER (K1)	24	SN: 10001-UP
8	6150-21-6710	BREATHER	1	SN: 10001-UP
9	6114-21-5190	O-RING (K1)	1	SN: 10001-UP
10	07287-01910	HOSE	1	SN: 10063-UP
11	07285-00220	CLIP	1	SN: 10063-UP
12	6130-22-5290	CLIP	1	SN: 10063-UP
13	01010-51030	BOLT	1	SN: 10063-UP

Catalog signs: ☐ part above may be used instead

Reference: 107

エアークマニホールドおよびコネクション
FIG. 112 AIR INTAKE MANIFOLD AND CONNECTION

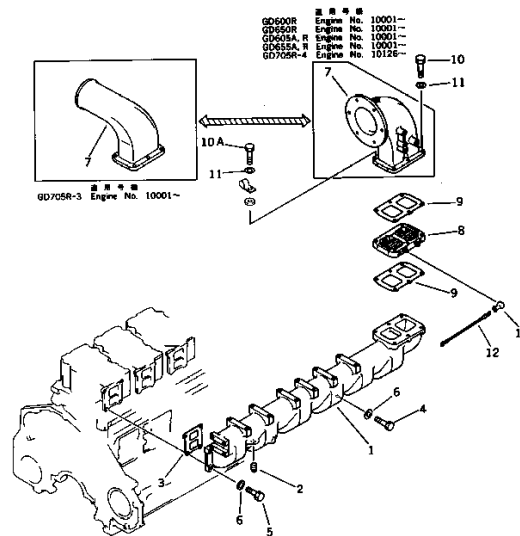

Reference: 112


030050 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
	6150-11-4910	INTAKE MANIFOLD A.	1	SN: 10001-UP
1		• ☆ MANIFOLD,INTAKE	1	SN: 10001-UP
2	07042-00415	• PLUG	1	SN: 10001-UP
3	6150-11-4810	GASKET (K1)	6	SN: 10001-UP
4	01011-51010	BOLT	8	SN: 10001-UP
5	01010-51030	BOLT	14	SN: 10001-UP
6	01640-21016	WASHER	22	SN: 10001-UP
7	6150-11-4210	CONNECTOR	1	SN: 10001-UP
8	600-815-3810	HEATER,RIBBON	1	SN: 10001-UP
9	6150-11-4820	GASKET (K1)	2	SN: 10001-UP
10	01010-51055	BOLT	5	SN: 10001-UP
10A	01010-51060	BOLT	1	SN: 15428-UP
10A	01010-51055	BOLT	1	SN: 10001-15427
11	01641-21016	WASHER	6	SN: 10001-UP
12	6678-81-4340	WIRE, 170MM	1	SN: 10001-UP
13	08038-00519	CAP	1	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 112

エキゾーストマニホールド
FIG. 121 EXHAUST MANIFOLD

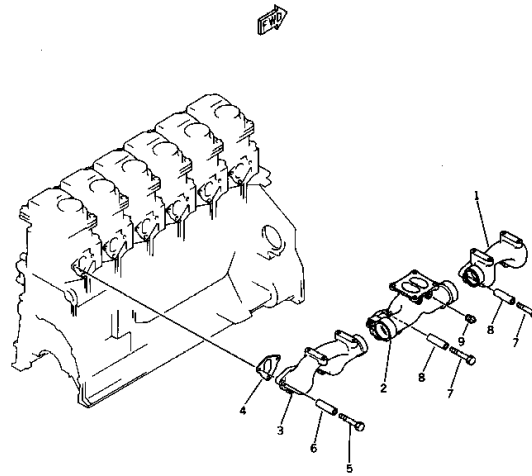


Reference: 121

030060 EXHAUST MANIFOLD

Item	Part No.	Part Name	Qty	Options
1	6151-11-5110	MANIFOLD,EXHAUST, FRONT	1	SN: 10001-UP
2	6150-11-5120	MANIFOLD,EXHAUST, CENTER	1	SN: 10001-UP
3	6151-11-5130	MANIFOLD,EXHAUST, REAR	1	SN: 10001-UP
4	6150-11-5810	GASKET (K1)	6	SN: 10001-UP
5	01011-31000	BOLT	18	SN: 10001-10063
6	6136-11-5120	SPACER	18	SN: 10001-10063
7	01010-31080	BOLT	18	SN: 10064-UP
8	6134-11-5120	SPACER	18	SN: 10064-UP
9	07042-00108	PLUG	2	SN: 10001-UP

Reference: 121

FIG. 131 WATER MANIFOLD

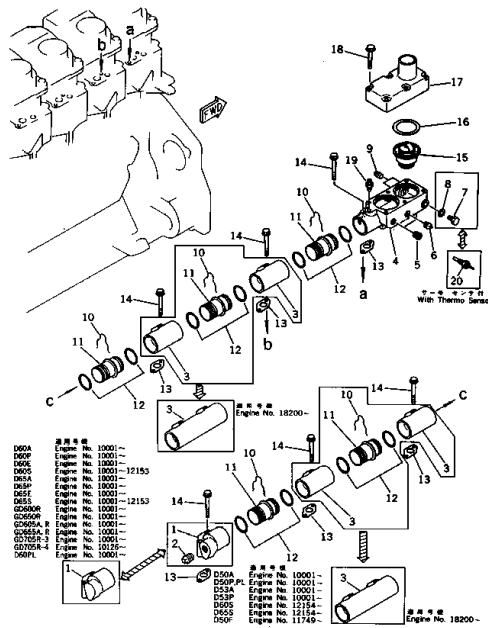

Reference: 131


030070 WATER MANIFOLD

Item	Part No.	Part Name	Qty	Options
1	6150-11-6120	MANIFOLD,WATER	1	SN: 10001-UP
3	6150-11-6111	MANIFOLD,WATER	2	SN: 18200-UP
3	6150-11-6110	MANIFOLD,WATER	4	SN: 10001-18199
4	6150-11-6410	HOUSING	1	SN: 10001-UP
5	07042-00108	PLUG	1	SN: 10001-UP
6	07042-00415	PLUG	1	SN: 10001-UP
7	6672-12-6290	PLUG	1	SN: 10001-UP
8	07005-01612	SEAL, WASHER (K1)	1	SN: 10001-UP
9	07042-00312	PLUG,(WITHOUT CORROSION RESISTOR)	2	SN: 10001-UP
10	6150-11-6280	SPRING	3	SN: 18200-UP
10	6150-11-6280	SPRING	5	SN: 10001-18199
11	6150-11-6210	TUBE	3	SN: 18200-UP
11	6150-11-6210	TUBE	5	SN: 10001-18199
12	02893-05043	O-RING (K1)	6	SN: 18200-UP
12	02893-05043	O-RING (K1)	10	SN: 10001-18199
13	6150-11-6310	GASKET (K1)	6	SN: 10001-UP
14	6150-81-9190	BOLT	12	SN: 10001-UP
15	600-421-6310	THERMOSTAT	2	SN: 10001-UP
16	6138-11-6810	GASKET (K1)	2	SN: 10001-UP
17	6150-11-6510	COVER	1	SN: 10001-UP
18	6150-81-9180	BOLT	6	SN: 10001-UP
19	6151-11-6910	NIPPLE	1	SN: 10001-UP
20	08620-00000	SENSOR,THERMO (WITH THERMO SENSOR)	1	SN: 10001-UP

Reference: 131



エアークリーナ
FIG. 164 AIR CLEANER

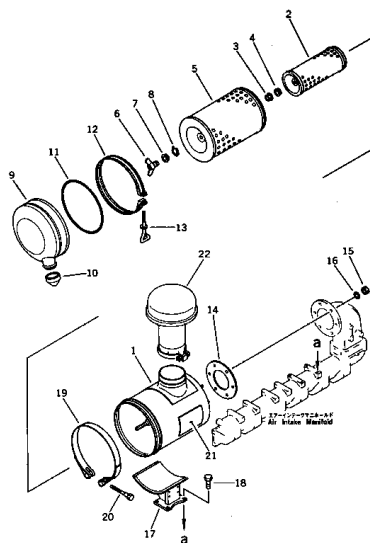

Reference: 164

030080 AIR CLEANER

Item	Part No.	Part Name	Qty	Options
	6631-81-7603	AIR CLEANER ASS'Y	1	SN: 10001-UP
1	6631-81-7610	• BODY	1	SN: 10001-UP
	6115-81-7602	• ELEMENT ASS'Y	1	SN: 10001-UP
2		• ☆ ELEMENT, INNER	1	SN: 10001-UP
3	600-181-7910	• NUT	1	SN: 10001-UP
4	600-181-7511	• WASHER, SEAL	1	SN: 10001-UP
	600-181-2300	• ELEMENT ASS'Y, OUTER	1	SN: 10001-UP
5		• ☆ ELEMENT, OUTER	1	SN: 10001-UP
6	600-181-2990	• NUT, WING	1	SN: 10001-UP
7	600-181-4591	• WASHER, SEAL	1	SN: 10001-UP
8	04064-01510	• RING, SNAP	1	SN: 10001-UP
9	600-181-3280	• PAN	1	SN: 10001-UP
10	600-181-2550	• VALVE	1	SN: 10001-UP
11	6692-81-7130	• O-RING	1	SN: 10001-UP
12	600-181-3260	• BAND	1	SN: 10001-UP
13	6692-81-7180	• BOLT	1	SN: 10001-UP
14	6136-11-4840	GASKET (K1)	1	SN: 11126-UP
14	6631-11-4381	□ GASKET (K1)	1	SN: 10001-11125
15	01582-11008	NUT	6	SN: 10001-UP
16	01640-21016	WASHER	6	SN: 10001-UP
17	6150-11-4510	BRACKET	1	SN: 10001-UP
18	01010-51025	BOLT	4	SN: 10001-UP
19	6691-11-4610	BAND ASS'Y	1	SN: 10001-UP
19	6110-11-4520	• PIN	1	SN: 10001-UP
19	6110-11-4530	• PIN, WITH THREAD	1	SN: 10001-UP
20	6643-11-4641	BOLT	1	SN: 10001-UP
21	09637-00161	PLATE, INSTRUCTION, (JAPANESE-ENGLISH)	1	SN: 10001-UP
21	09637-30262	PLATE, INSTRUCTION, (FRENCH-ENGLISH)	1	SN: 10001-UP
22	6692-81-7711	CAP ASS'Y	1	SN: 10001-UP

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 164

Get the complete PDF catalogue

Komatsu 6D125-1N S/N 10001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.