



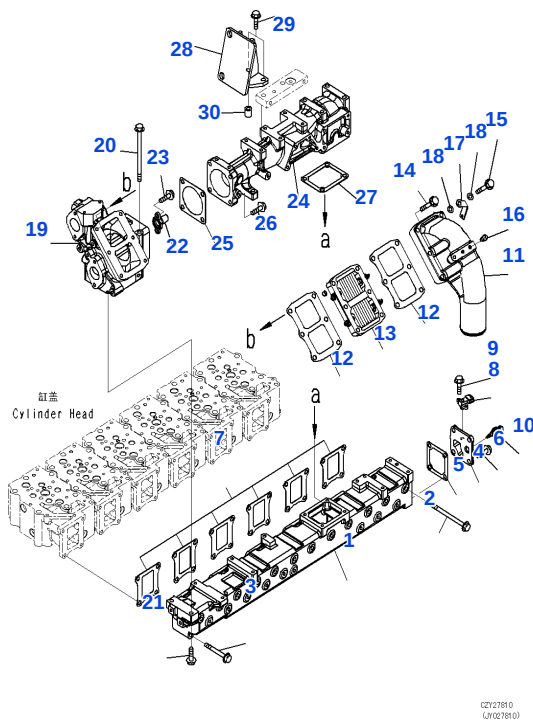

Reference: JA00003

JA00003 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
1	6251-11-4110	MANIFOLD, AIR INTAKE	1	
2	01436-01030	BOLT	12	
3	01435-01080	BOLT	12	
4	6251-11-4250	COVER	1	
5	6251-11-4260	GASKET	1	
6	01435-01025	BOLT	2	
7	6150-13-4810	GASKET	6	
8	6261-81-2700	SENSOR ASSEMBLY, PRESSURE	1	
	6261-81-2710	• SENSOR, PRESSURE	1	
	6261-81-2720	• O-RING	1	
9	01435-00616	BOLT	2	
10	6560-61-7300	SENSOR, TEMPERATURE	1	
	6560-61-7310	• SENSOR	1	
	6735-21-1930	• O-RING	1	
11	6251-11-4320	CONNECTOR, AIR INLET	1	
12	6251-11-4830	GASKET	2	
13	600-815-3812	HEATER, RIBBON	1	
14	01435-01070	BOLT	5	
15	01435-01080	BOLT	1	
16	07042-A0108	PLUG	2	
17	6251-81-4520	PLATE	1	
18	01643-31032	WASHER	2	
19	6251-11-7210	HOUSING, AIR JUNCTION	1	
20	01436-01060	BOLT	2	
21	01435-01040	BOLT	2	
22	6251-11-9730	NOZZLE, VENTURI	1	
23	01437-10816	BOLT	2	
24	6251-11-7410	CONNECTOR	1	
25	6251-11-7450	GASKET	1	
26	01435-01035	BOLT	4	
27	6251-11-4820	GASKET	1	
28	6251-11-4410	BRACKET	1	
29	01435-01045	BOLT	2	
30	6210-11-5820	SPACER	1	

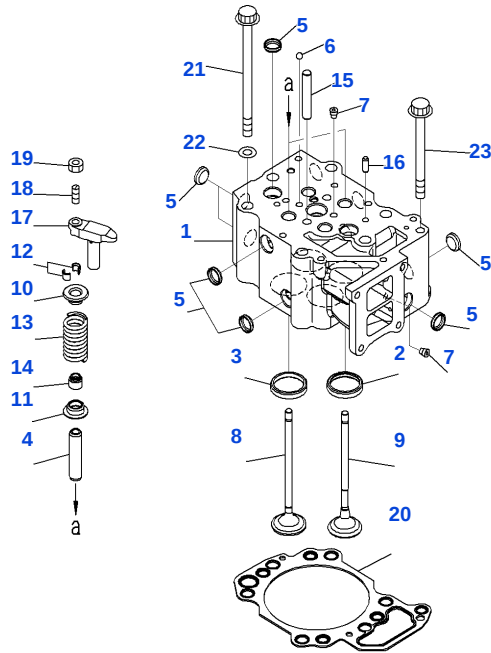


Reference: JA00004

JA00004 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6251-11-1200	CYLINDER HEAD ASSEMBLY	6	
1		• HEAD, CYLINDER	1	
2	6150-11-1320	• INSERT, HEXHAUST, STANDARD	2	
	6150-19-1320	• INSERT	2	
	6150-18-1320	• INSERT, HEXHAUST VALVE, OVERSIZE 0.50MM	2	
	6150-17-1320	• INSERT, HEXHAUST VALVE, OVERSIZE 0.75MM	2	
	6150-16-1320	• INSERT, HEXHAUST VALVE, OVERSIZE 1.00MM	2	
3	6150-12-1380	• INSERT, INTAKE, STANDARD	2	
	6251-19-1380	• INSERT, INTAKE, OVERSIZE 0.25MM	2	
	6251-18-1380	• INSERT, INTAKE, OVERSIZE 0.50MM	2	
	6251-17-1380	• INSERT, INTAKE, OVERSIZE 0.75MM	2	
	6251-16-1380	• INSERT, INTAKE, OVERSIZE 1.00MM	2	
4	6150-12-1370	• GUIDE	4	
5	6162-13-1150	• PLUG, EXPANSION	11	
6	04260-00793	• BALL	1	
7	07043-70108	• PLUG, TAPER	3	
8	6150-42-4110	VALVE, INTAKE	12	
9	6150-42-4210	VALVE, EXHAUST	12	
10	6150-41-4510	SEAT, UPPER	24	
11	6150-41-4430	SEAT, LOWER	24	
12	6136-42-4520	COTTER, VALVE	48	
13	6251-41-4450	SPRING, VALVE	24	
14	6150-41-4570	SEAL, VALVE STEM	24	
15	6210-11-1140	GUIDE, CROSSHEAD	12	
16	04020-00820	PIN, DOWEL	12	
	6150-42-5600	CROSSHEAD ASSEMBLY	12	
17	6150-42-5610	• CROSSHEAD	1	
18	6150-41-5621	• SCREW	1	
19	6150-41-5630	• NUT	1	
20	6251-11-1810	GASKET, CYLINDER HEAD, STANDARD	6	
	6251-19-1810	GASKET, CYLINDER HEAD, OVERSIZE 0.4MM	6	
		• GROMMET, OIL, STANDARD	4	

Item	Part No.	Part Name	Qty	Options
		• GROMMET, OIL, OVERSIZE 0.4MM	4	
		• GROMMET, OIL, STANDARD	1	
		• GROMMET, OIL, OVERSIZE 0.4MM	1	
		• GROMMET, WATER, STANDARD	1	
		• GROMMET, WATER, OVERSIZE 0.4MM	1	
		• GROMMET, WATER, STANDARD	5	
		• GROMMET, WATER, OVERSIZE 0.4MM	5	
		• GROMMET, WATER, STANDARD	1	

Reference: |A00004

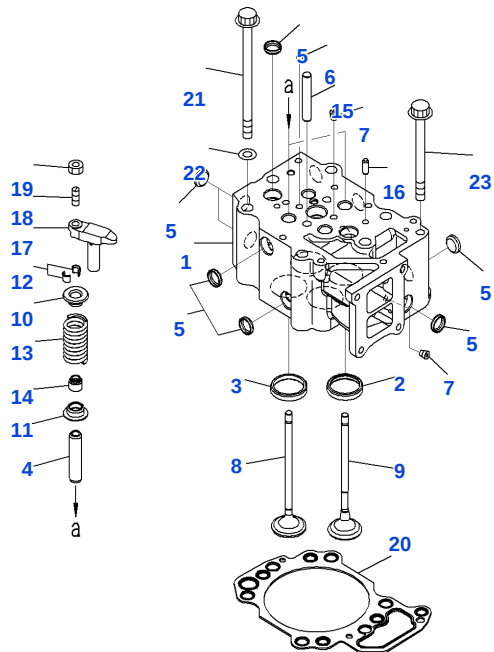


00045478

Reference: |A00005

|A00005 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
		GROMMET, WATER, OVERSIZE 0.4MM	1	
21	6150-11-1620	BOLT	36	
22	6164-31-3330	WASHER	36	
23	01438-01020	BOLT	6	

Reference: |A00005

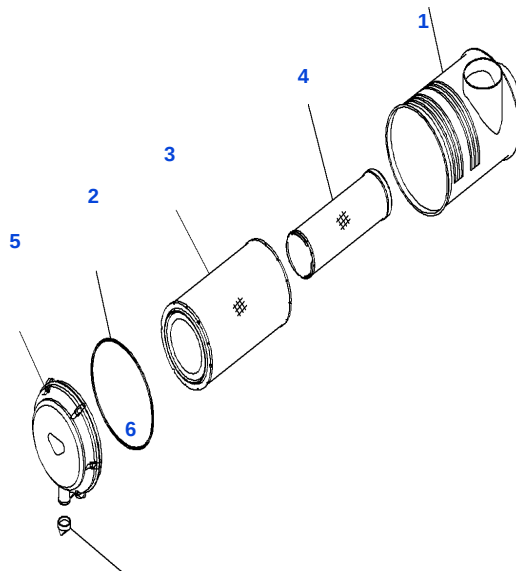


JY029435

Reference: |A00006

|A00006 AIR CLEANER

Item	Part No.	Part Name	Qty	Options
1	6156-81-7202	AIR CLEANER ASSEMBLY	1	
		• BODY	1	
	600-185-6100	• ELEMENT ASSEMBLY	1	
2	600-184-1671	•• O-RING	1	
3	600-185-6110	•• ELEMENT, OUTER	1	
4		•• ELEMENT, INNER	1	
5	600-184-1611	• COVER ASSEMBLY	1	
6	600-184-1350	• VALVE, VAQUATOR	1	

Reference: |A00006

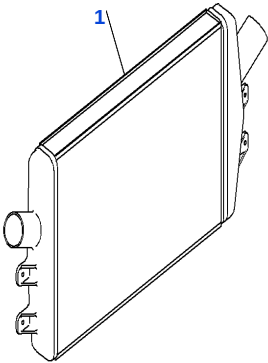


00055908

Reference: |A00007

|A00007 AFTERCOOLER

Item	Part No.	Part Name	Qty	Options
1	6251-61-5110	AFTERCOOLER	1	

Reference: |A00007

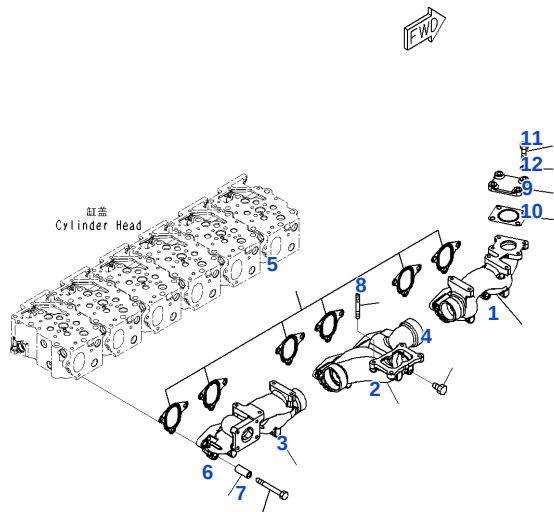


02048067
00048067

Reference: |A00008

|A00008 EXHAUST MANIFOLD

Item	Part No.	Part Name	Qty	Options
1	6151-11-5110	MANIFOLD, FRONT	1	
2	6251-11-5120	MANIFOLD, CENTER	1	
3	6251-11-5130	MANIFOLD, REAR	1	
4	6215-11-5920	PLUG	1	
5	6253-11-5160	GASKET	6	
6	6134-11-5120	SPACER	18	
7	01010-E1080	BOLT	18	
8	6156-11-5170	STUD	2	
9	6251-11-4210	COVER	1	
10	6261-11-9520	GASKET	1	
11	01010-E1035	BOLT	4	
12	01643-31032	WASHER	4	

Reference: |A00008

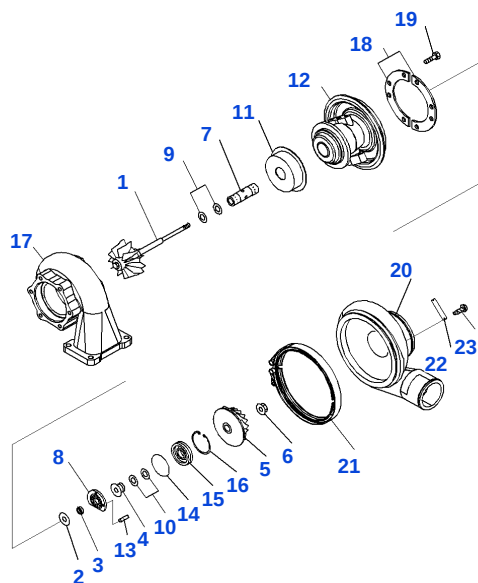


00047001

Reference: |A00009

|A00009 TURBOCHARGER (INNER PARTS)

Item	Part No.	Part Name	Qty	Options
	6506-21-5021	TURBOCHARGER	1	
	6506-21-5911	• CORE ASSEMBLY	1	
1		•• ROTOR, TURBINE	1	
2		•• PLATE, COLLAR	1	
3		•• SPACER, COLLAR	1	
4		•• FLINGER	1	
5		•• IMPELLER, BLOWER	1	
6		•• NUT, LOCK	1	
7		•• BEARING, JOURNAL	1	
8		•• BEARING, THRUST	1	
9		•• SEAL RING, SEAL TURBINE	2	
10		•• SEAL RING, SEAL TURBINE	2	
11		•• SHIELD, HEAT	1	
12		•• HOUSING, CENTER	1	
13		•• PIN, DOWEL	1	
14		•• O-RING	1	
15		•• INSERT	1	
16		•• RING, SNAP	1	
17	6506-21-4230	• HOUSING, TURBINE	1	
18	6505-11-0520	• PLATE	2	
19	01020-01016	• BOLT	8	
20	6506-21-2030	• HOUSING, BLOWER	1	
21	6501-11-1721	• V-BAND	1	
22	6505-99-9011	• PLATE, NAME	1	
23	04418-02550	• SCREW	2	

Reference: |A00009

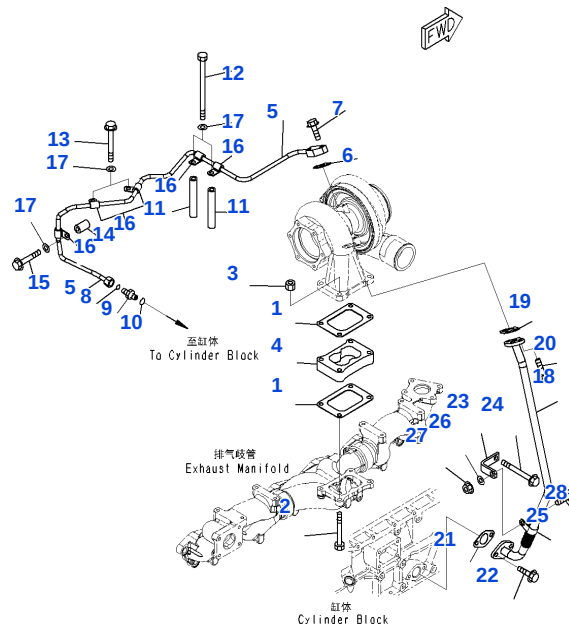

02/09/96
LJ/0001/96

Reference: |A00010

|A00010 TURBOCHARGER

Item	Part No.	Part Name	Qty	Options
1	6251-11-5830	GASKET	2	
2	6156-11-5160	BOLT	2	
3	6114-11-5590	NUT	4	
4	6251-11-5180	PLATE	1	
5	6251-51-8230	TUBE, SUPPLY	1	
6	6221-51-8160	GASKET	1	
7	01435-00830	BOLT	2	
8	6251-51-9880	O-RING	1	
9	6251-51-9850	UNION	1	
10	6251-51-9890	O-RING	1	
11	6151-51-5490	SPACER	2	
12	01011-81095	BOLT	2	
13	01435-01085	BOLT	2	
14	6150-81-6920	SPACER	1	
15	01435-01065	BOLT	1	
16	600-051-6100	CLIP	5	
17	01643-31032	WASHER	5	
18	6251-51-8330	TUBE, RETURN	1	
19	6151-51-8151	GASKET	1	
20	01435-01025	BOLT	2	
21	6154-51-8310	GASKET	1	
22	01435-01025	BOLT	2	
23	6251-21-5480	BRACKET	1	
24	01435-01095	BOLT	1	
25	600-051-6190	CLIP	1	
26	01643-31032	WASHER	1	
27	01584-01008	NUT	1	
28	01435-01025	BOLT	1	

Reference: |A00010

Get the complete PDF catalogue

Komatsu SAA6D125E-5F S/N 674420-up

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.