


FIG.3201 TRANSFER (1/2)

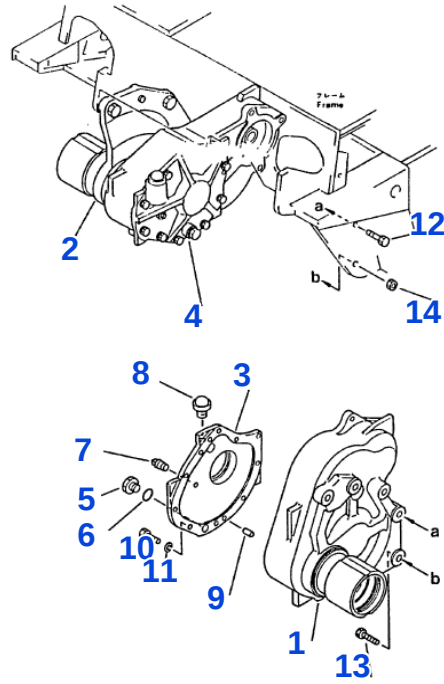


Reference: F-01

F-01 FIG.3201 TRANSFER (1/2)

Item	Part No.	Part Name	Qty	Options
1	3BA-21-31131	CASE (LH)	1	
	3BA-21-39130	CASE (LH) (COLD)	1	
2	3BA-21-31111	CASE (RH)	1	
	3BA-21-39110	CASE (RH) (COLD)	1	
3	3BA-21-31141	COVER (LH)	1	
	3BA-21-39140	COVER (LH) (COLD)	1	
4	3BA-21-31121	COVER (RH)	1	
	3BA-21-39120	COVER (RH) (COLD)	1	
5	07044-12412	PLUG	2	
6	07002-02434	O-RING	2	
7	07042-20312	PLUG	2	
8	3EB-21-15211	CAP	2	
9	04020-01228	PIN, DOWEL	4	
10	01010-51030	BOLT	20	
11	01602-21030	WASHER, SPRING	20	
12	01010-51845	BOLT	6	
13	01090-51860	BOLT	4	
14	01582-11815	NUT	4	

Reference: F-01

FIG.3202 TRANSFER (2/2)

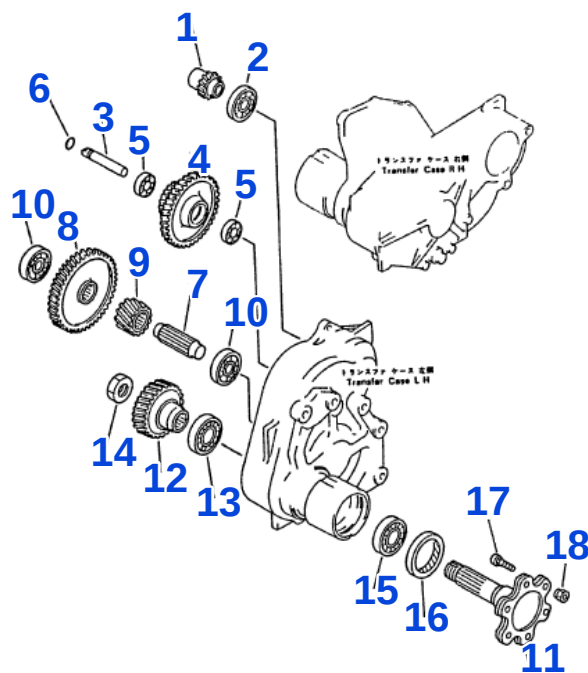


Reference: F-02

F-02 FIG.3202 TRANSFER (2/2)

Item	Part No.	Part Name	Qty	Options
1	3BA-21-31151	GEAR (Z=18)	2	
2	06000-06207	BEARING	2	
3	3BA-21-31221	SHAFT	2	
4	3BA-21-31161	GEAR (Z=26, 63)	2	
5	06000-06304	BEARING	4	
6	07000-02016	O-RING	2	
7	3BA-21-31240	SHAFT	2	
8	3BA-21-31171	GEAR (Z=71)	2	
9	3BA-21-31180	GEAR (Z=15)	2	
10	06000-06307	BEARING	4	
11	3BA-21-31250	SHAFT	2	
12	3BA-21-31190	GEAR (Z=29)	2	
13	06000-32012	BEARING	2	
14	3EB-14-11380	NUT	2	
15	06000-32011	BEARING	2	
16	3BA-21-31260	SEAL, OIL	2	
17	34B-24-11221	BOLT, SERRATION	12	
	46B-11J-1430	BOLT, SERRATION (COLD)	12	
18	300-22-31241	NUT, HUB	12	
	46B-11J-1440	NUT, HUB (COLD)	12	

Reference: F-02

FIG.3301 STEERING AXLE

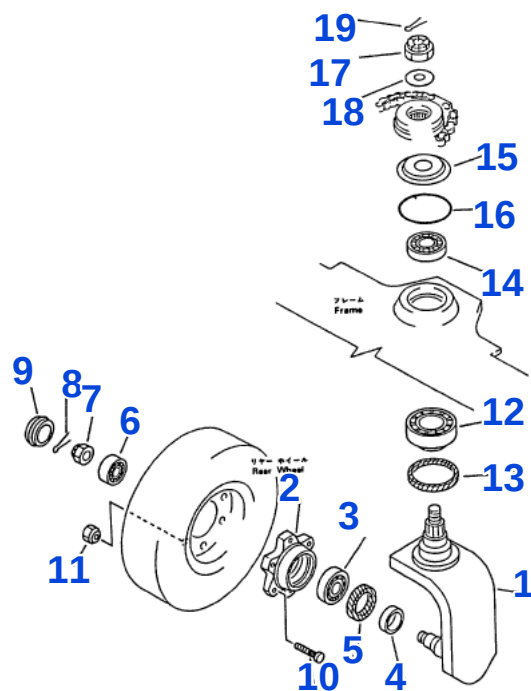


Reference: F-03

F-03 FIG.3301 STEERING AXLE

Item	Part No.	Part Name	Qty	Options
1	3BA-24-31111	AXLE, STEERING	1	
	3BA-24-39110	AXLE, STEERING. (COLD)	1	
2	3BA-24-31151	HUB	1	
	3BA-24-39120	HUB (COLD)	1	
3	06000-32010	BEARING	1	
4	3BA-24-31190	SPACER	1	
5	3BA-24-31210	SEAL, OIL	1	
6	06002-32207	BEARING	1	
7	01593-13018	NUT	1	
8	04050-16045	PIN, COTTER	1	
9	3BB-25-24150	COVER	1	
10	34B-24-11221	BOLT, SERRATION	6	
	46B-11J-1430	BOLT, SERRATION (COLD)	6	
11	300-22-31241	NUT, HUB	6	
	46B-11J-1440	NUT, HUB (COLD)	6	
12	06000-32016	BEARING	1	
13	3BA-24-31160	SEAL, OIL	1	
14	06000-32012	BEARING	1	
15	3BA-24-31181	CAP	1	
16	07000-12120	O-RING	1	
17	01593-13018	NUT	1	
18	01643-33080	WASHER	1	
19	04050-16045	PIN, COTTER	1	

Reference: F-03

FIG.3321 STEERING SYSTEM

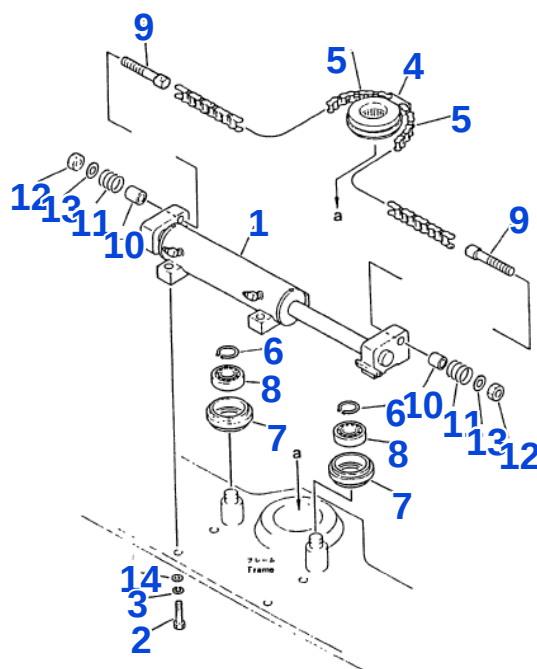


Reference: F-04

F-04 FIG.3321 STEERING SYSTEM

Item	Part No.	Part Name	Qty	Options
1	3BA-64-31111	POWER STEERING CYLINDER ASSY	1	
2	01010-51650	BOLT	4	
3	01602-21648	WASHER, SPRING	4	
	3BA-34-31170	WHEEL ASSY	1	
	3BA-34-39110	WHEEL ASSY (COLD)	1	
4	3BA-34-31111	• WHEEL	1	
5	04100-21019	• CHAIN (WITHOUT MASTER LINKS)	2	
	3BB-34-3427330	• CHAIN (WITH MASTER LINKS)	2	
	3BA-34-39120	• CHAIN (COLD)	2	
6	04064-02512	RING, SNAP	2	
	3BA-34-31180	WHEEL ASSY	2	
7	3BA-34-31120	• WHEEL	1	
8	06002-06305	• BEARING	1	
9	3BA-34-31140	STOPPER, CHAIN	2	
10	3BA-76-13560	BOSS	2	
11	3BA-34-31150	SPRING	2	
12	01599-01617	NUT	2	
13	01643-31645	WASHER	2	
14	01643-31645	WASHER	4	

Reference: F-04

FIG.3401 FRONT WHEEL

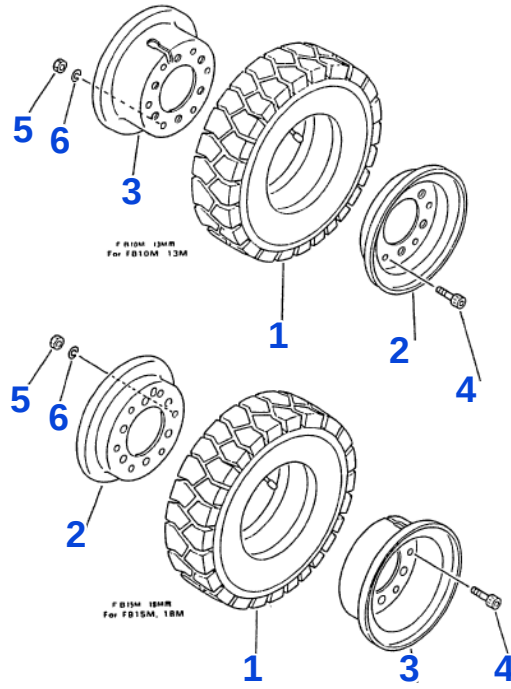


Reference: F-05

F-05 FIG.3401 FRONT WHEEL

Item	Part No.	Part Name	Qty	Options
1	3BA-27-31121	TIRE ASSY (FOR 1.0T)	2	
	3BA-27-31131	• TIRE (18X7-8-10PR)	1	
	3BA-27-31140	• TUBE	1	
	3BA-27-31221	TIRE ASSY (FOR 1.25T)	2	
	3BA-27-31231	• TIRE (18X7-8-14PR)	1	
	3BA-27-31140	• TUBE	1	
	3BA-27-31221	TIRE ASSY (FOR 1.5T)	2	
	3BA-27-31231	• TIRE (18X7-8-14PR)	1	
	3BA-27-31140	• TUBE	1	
	3BA-27-31421	TIRE ASSY (FOR 1.75T)	2	
	3BA-27-31431	• TIRE (18X7-8-16PR)	1	
	3BA-27-31140	• TUBE	1	
	3BA-27-31150	RIM ASSY	2	
2	*	• RIM (LH) (FOR 1.0T-1.25T)	1	
	*	• RIM (LH) (FOR 1.5T-1.75T)	1	
3	*	• RIM (RH) (FOR 1.0T-1.25T)	1	
	*	• RIM (RH) (FOR 1.5T-1.75T)	1	
4	01252-41430	BOLT	12	
5	01580-11411	NUT	12	
	01580-31411	NUT (COLD)	12	
6	01602-21442	WASHER, SPRING	12	

Reference: F-05

FIG.3421 FRONT WHEEL (ELASTIC CUSHION : OP)

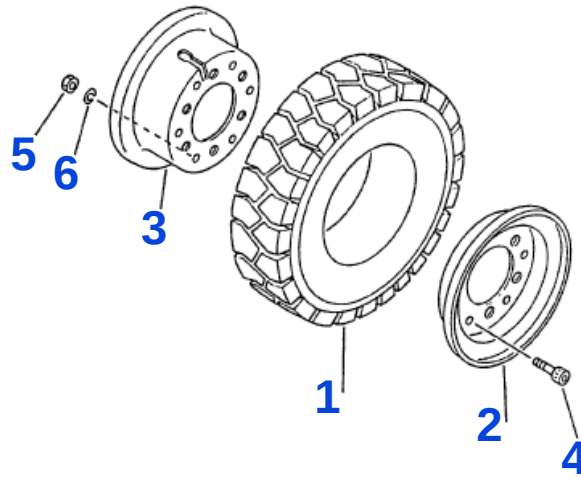


Reference: F-06

F-06 FIG.3421 FRONT WHEEL (ELASTIC CUSHION : OP)

Item	Part No.	Part Name	Qty	Options
1	3BB-28-21210	TIRE (18X7-8)	2	
	3BA-27-31150	RIM ASSY	2	
2	*	• RIM (LH)	1	
3	*	• RIM (RH)	1	
4	01010-51430	BOLT	12	
5	01580-11411	NUT	12	
6	01602-21442	WASHER, SPRING	12	

Reference: F-06

FIG.3441 FRONT WHEEL (CUSHION SOLID : OP)

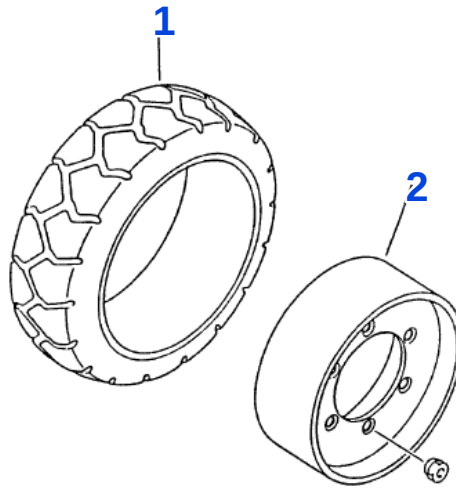


Reference: F-07

F-07 FIG.3441 FRONT WHEEL (CUSHION SOLID : OP)

Item	Part No.	Part Name	Qty	Options
	3BA-27-31710	TIRE ASSY	2	
1	3BA-27-25220	• TIRE, CUSHION (18X7X12 1/ 8)	1	
2	3BA-27-31720	• RIM	1	

Reference: F-07

FIG.3601 REAR WHEEL

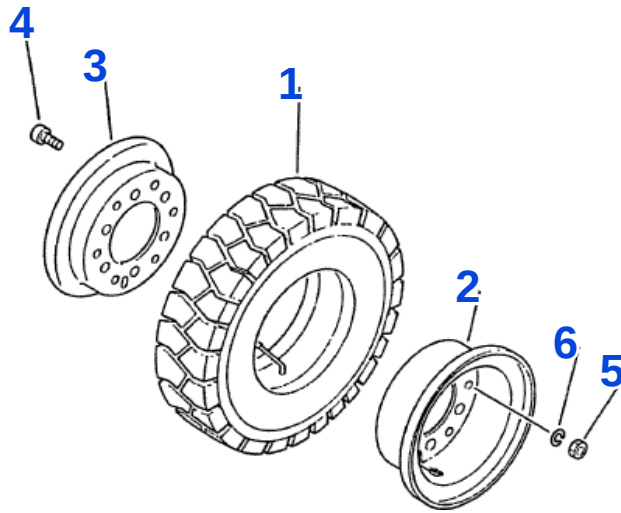


Reference: F-08

F-08 FIG.3601 REAR WHEEL

Item	Part No.	Part Name	Qty	Options
1	3BA-27-31121	TIRE ASSY (FOR 1.0T)	1	
	3BA-27-31131	• TIRE (18X7-8-10PR)	1	
	3BA-27-31140	• TUBE	1	
	3BA-27-31221	TIRE ASSY (FOR 1.25T, 1.5T)	1	
	3BA-27-31231	• TIRE (18X7-8-14PR)	1	
	3BA-27-31140	• TUBE	1	
	3BA-27-31421	TIRE ASSY (FOR 1.75T)	1	
	3BA-27-31431	• TIRE (18X7-8-16PR)	1	
	3BA-27-31140	• TUBE	1	
	3BA-27-31150	RIM ASSY	1	
2	*	• RIM (LH)	1	
3	*	• RIM (RH)	1	
4	01252-41430	BOLT	6	
5	01580-11411	NUT	6	
	01580-31411	NUT (COLD)	6	
6	01602-21442	WASHER, SPRING	6	

Reference: F-08

FIG.3621 REAR WHEEL (ELASTIC CUSHION : OP)

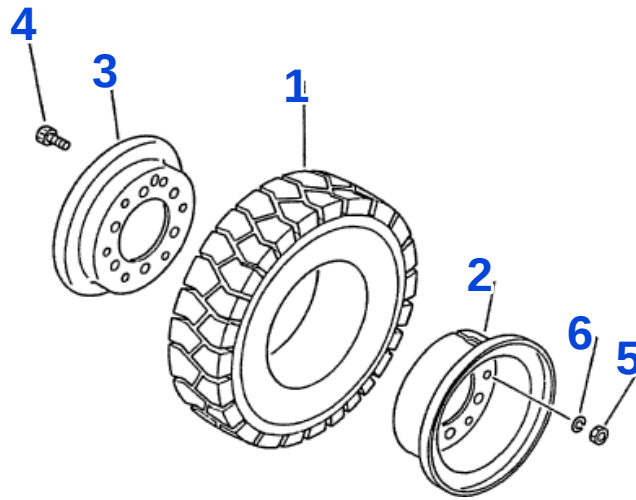


Reference: F-09

F-09 FIG.3621 REAR WHEEL (ELASTIC CUSHION : OP)

Item	Part No.	Part Name	Qty	Options
1	3BB-28-21210	TIRE (18X7-8)	1	
	3BA-27-31150	RIM ASSY	1	
2	*	• RIM (LH)	1	
3	*	• RIM (RH)	1	
4	01010-51430	BOLT	6	
5	01580-11411	NUT	6	
6	01602-21442	WASHER, SPRING	6	

Reference: F-09

FIG.3641 REAR WHEEL (CUSHION SOLID : OP)

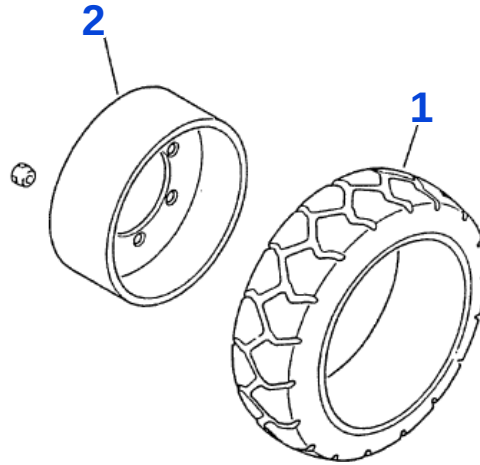

Reference: F-10

F-10 FIG.3641 REAR WHEEL (CUSHION SOLID : OP)

Item	Part No.	Part Name	Qty	Options
	3BA-27-31710	TIRE ASSY	1	
1	3BA-27-25220	• TIRE, CUSHION (18X7X12 1/ 8)	1	
2	3BA-27-31720	• RIM	1	

Reference: F-10

Get the complete PDF catalogue

Komatsu XXAM-2 CHASSIS & MAST (PM015) S/N 2001~/ 3001~

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.

Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.