


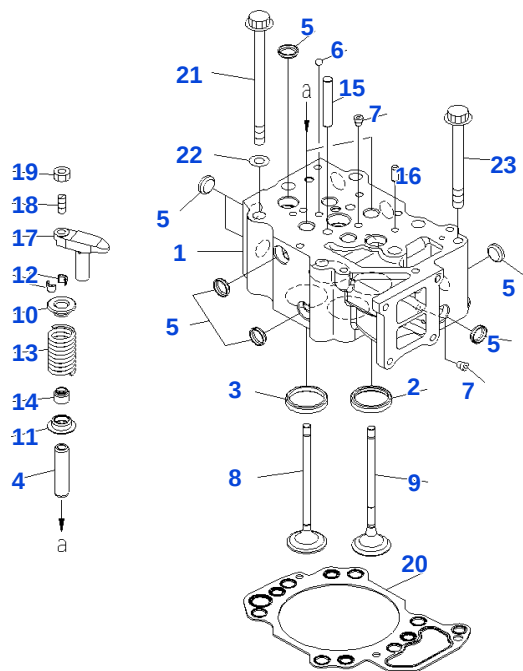

00045478

Reference: A1010-A3E1


030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6251-11-1100	CYLINDER HEAD ASS'Y	6	SN: 560001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 560001-UP
2	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 560001-UP
	6150-19-1320	• INSERT, 0.25MM,EXHAUST VALVE (OS)	2	SN: 560001-UP
	6150-18-1320	• INSERT, 0.50MM,EXHAUST VALVE (OS)	2	SN: 560001-UP
	6150-17-1320	• INSERT, 0.75MM,EXHAUST VALVE (OS)	2	SN: 560001-UP
	6150-16-1320	• INSERT, 1.00MM,EXHAUST VALVE (OS)	2	SN: 560001-UP
3	6251-11-1380	• SEAT,INTAKE VALVE (STD)	2	SN: 560001-UP
	6251-19-1380	• INSERT, 0.25MM,INTAKE VALVE (OS)	2	SN: 560001-UP
	6251-18-1380	• INSERT, 0.50MM,INTAKE VALVE (OS)	2	SN: 560001-UP
	6251-17-1380	• INSERT, 0.75MM,INTAKE VALVE (OS)	2	SN: 560001-UP
	6251-16-1380	• INSERT, 1.00MM,INTAKE VALVE (OS)	2	SN: 560001-UP
4	6150-12-1370	• GUIDE,VALVE (SERVICE ONLY)	4	SN: 560001-UP
5	6162-13-1150	• PLUG,EXPANSION	11	SN: 560001-UP
6	04260-00793	• BALL	1	SN: 560001-UP
7	07043-70108	• PLUG	3	SN: 560001-UP
8	6150-42-4110	VALVE,INTAKE	12	SN: 560001-UP
9	6150-42-4210	VALVE,EXHAUST	12	SN: 560001-UP
10	6150-41-4510	SEAT,UPPER	24	SN: 560001-UP
11	6150-41-4430	SEAT,LOWER	24	SN: 560001-UP
12	6136-42-4520	COTTER,VALVE	48	SN: 560001-UP
13	6251-41-4450	SPRING,VALVE	24	SN: 560001-UP
14	6150-41-4570	SEAL,VALVE STEM	24	SN: 560001-UP
15	6210-11-1140	GUIDE,CROSSHEAD	12	SN: 560001-UP
16	04020-00820	PIN	12	SN: 560001-UP
	6150-42-5600	CROSSHEAD ASS'Y	12	SN: 560001-UP
17	6150-42-5610	• CROSSHEAD	1	SN: 560001-UP
18	6150-41-5621	• SCREW	1	SN: 560001-UP
19	6150-41-5630	• NUT	1	SN: 560001-UP
20	6251-11-1810	GASKET,CYLINDER HEAD	6	SN: 560001-UP
	6150-11-1970	• GROMMET,OIL	1	SN: 560001-UP
	6150-11-1930	• GROMMET,OIL	1	SN: 560001-UP
	6150-11-1950	• GROMMET,WATER	4	SN: 560001-UP
	6150-12-1960	• GROMMET,WATER	1	SN: 560001-UP

Item	Part No.	Part Name	Qty	Options
	6150-11-1960	• GROMMET,OIL	5	SN: 560001-UP
21	6150-11-1620	BOLT	36	SN: 560001-UP
22	6164-31-3330	WASHER	36	SN: 560001-UP
23	01438-01020	BOLT	6	SN: 560001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: A1010-A3E1

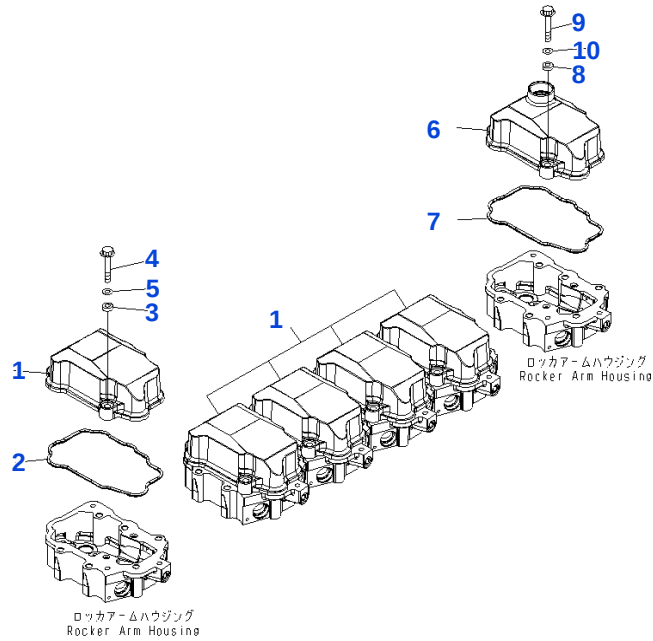


00045477

Reference: A1110-A3C7

030020 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6251-11-8110	COVER,ROCKER ARM HOUSING	5	SN: 560001-UP
2	6251-11-8810	GASKET	5	SN: 560001-UP
3	6150-11-8820	RUBBER,SEAL	10	SN: 560001-UP
4	6150-81-9370	BOLT	10	SN: 560001-UP
5	01640-21016	WASHER	10	SN: 560001-UP
6	6251-11-8150	COVER,ROCKER ARM HOUSING	1	SN: 560001-UP
7	6251-11-8810	GASKET	1	SN: 560001-UP
8	6150-11-8820	RUBBER,SEAL	2	SN: 560001-UP
9	6150-81-9370	BOLT	2	SN: 560001-UP
10	01640-21016	WASHER	2	SN: 560001-UP

Reference: A1110-A3C7

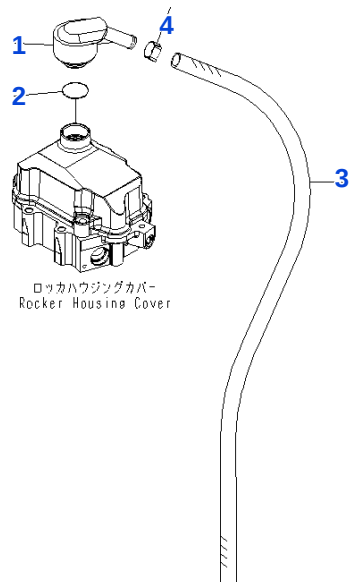


00045478

Reference: A1111-A3C4

030030 ROCKER ARM HOUSING COVER ACCESSORY (BREATHER AND HOSE)

Item	Part No.	Part Name	Qty	Options
1	6150-21-6710	BREATHER	1	SN: 560001-UP
2	6114-21-5190	O-RING	1	SN: 560001-UP
3	07287-01913	HOSE	1	SN: 560001-UP
4	07285-00220	CLIP	1	SN: 560001-UP

Reference: A1111-A3C4

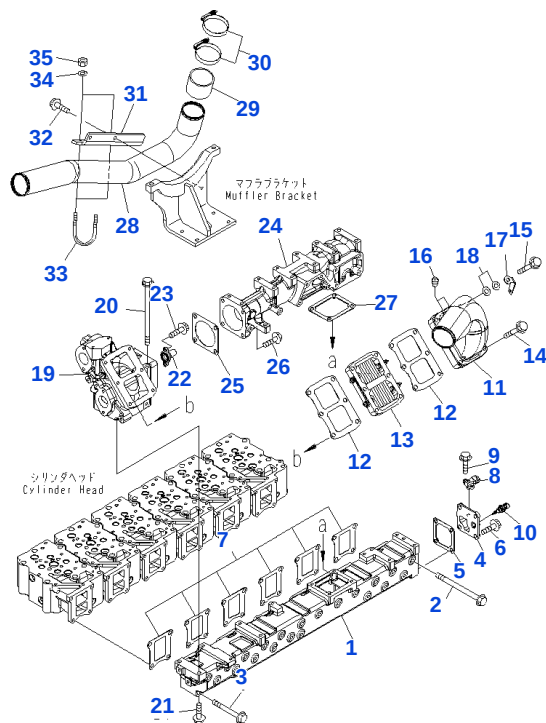

00045471


Reference: A1310-A3S2

030040 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
1	6251-11-4110	MANIFOLD,AIR INTAKE	1	SN: 560001-UP
2	01436-01030	BOLT	12	SN: 560001-UP
3	01435-01080	BOLT	12	SN: 560001-UP
4	6251-11-4250	COVER	1	SN: 560001-UP
5	6251-11-4260	GASKET	1	SN: 560001-UP
6	01435-01025	BOLT	2	SN: 560001-UP
7	6150-13-4810	GASKET	6	SN: 560001-UP
8	6261-81-2700	SENSOR ASS'Y	1	SN: 560001-UP
	6261-81-2710	• SENSOR,BOOST PRESSURE	1	SN: 560001-UP
	6261-81-2720	• O-RING	1	SN: 560001-UP
9	01435-00616	BOLT	2	SN: 560001-UP
10	6560-61-7300	SENSOR ASS'Y	1	SN: 560001-UP
	6560-61-7310	• SENSOR,TEMPERATURE AIR INTAKE	1	SN: 560001-UP
	6735-21-1930	• O-RING	1	SN: 560001-UP
11	6251-11-4340	CONNECTOR	1	SN: 560001-UP
12	6251-11-4830	GASKET	2	SN: 560001-UP
13	600-815-3811	HEATER,RIBBON	1	SN: 560001-UP
14	01435-01070	BOLT	5	SN: 560001-UP
15	01435-01080	BOLT	1	SN: 560001-UP
16	07042-A0108	PLUG	2	SN: 560001-UP
17	6251-81-4520	PLATE	1	SN: 560001-UP
18	01643-31032	WASHER	2	SN: 560001-UP
19	6251-11-7210	HOUSING,AIR JUNCTION	1	SN: 560001-UP
20	01436-01060	BOLT	2	SN: 560001-UP
21	01435-01040	BOLT	2	SN: 560001-UP
22	6251-11-9730	NOZZLE,VENTURI	1	SN: 560001-UP
23	01437-10816	BOLT	2	SN: 560001-UP
24	6251-11-7410	CONNECTOR	1	SN: 560001-UP
25	6251-11-7450	GASKET	1	SN: 560001-UP
26	01435-01035	BOLT	4	SN: 560001-UP
27	6251-11-4820	GASKET	1	SN: 560001-UP
28	6251-11-4140	PIPE	1	SN: 560001-UP
29	6151-11-4410	HOSE	1	SN: 560001-UP
30	6152-12-4490	CLAMP	2	SN: 560001-UP

Item	Part No.	Part Name	Qty	Options
31	6251-11-4150	BRACKET	1	SN: 560001-UP
32	01435-01025	BOLT	2	SN: 560001-UP
33	07283-37663	CLIP	2	SN: 560001-UP
34	01643-31032	WASHER	4	SN: 560001-UP
35	01597-01009	NUT	4	SN: 560001-UP

Reference: A1310-A3S2

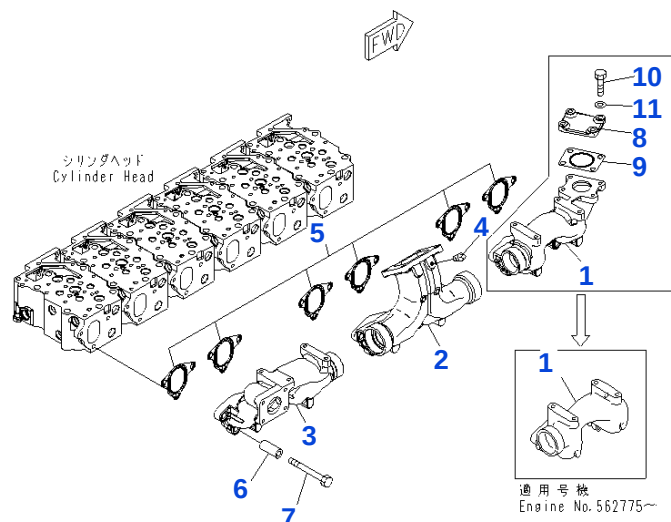


00063758

Reference: A1510-A3G7

030050 EXHAUST MANIFOLD

Item	Part No.	Part Name	Qty	Options
1	6151-11-5110	MANIFOLD,FRONT	1	SN: 562775-UP
	6251-11-5110	MANIFOLD,FRONT	1	SN: 560001-562774
2	6251-11-5140	MANIFOLD,CENTER	1	SN: 560001-UP
3	6251-11-5130	MANIFOLD,REAR	1	SN: 560001-UP
4	6215-11-5920	PLUG	1	SN: 560001-UP
5	6152-15-5830	GASKET	6	SN: 560001-UP
6	6134-11-5120	SPACER	18	SN: 560001-UP
7	01010-E1080	BOLT	18	SN: 560001-UP
8	6251-11-4210	COVER	1	SN: 560001-562774
9	6261-11-9520	GASKET	1	SN: 560001-562774
10	01010-E1035	BOLT	4	SN: 560001-562774
11	01643-31032	WASHER	4	SN: 560001-562774

Reference: A1510-A3G7

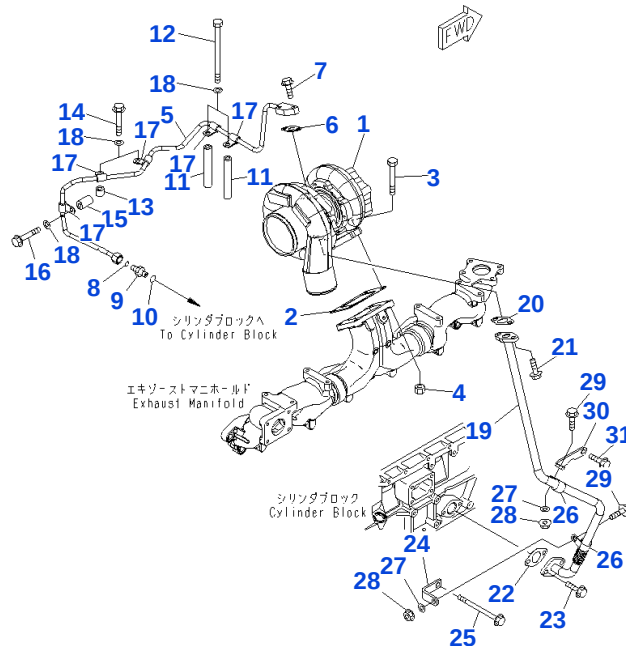


00051955

Reference: A1530-A3K9

030060 TURBOCHARGER MOUNTING AND LUBRICATING OIL PIPING

Item	Part No.	Part Name	Qty	Options
1		TURBOCHARGER ASS'Y,(SEE FIG.A1530-B3K9)	-1	SN: 560001-UP
2	6251-11-5830	GASKET	1	SN: 560001-UP
3	01050-61045	BOLT	4	SN: 560001-UP
4	6114-11-5590	NUT	4	SN: 560001-UP
5	6251-51-8250	TUBE,SUPPLY	1	SN: 560001-UP
6	6221-51-8160	GASKET	1	SN: 560001-UP
7	01435-00830	BOLT	2	SN: 560001-UP
8	6251-51-9880	O-RING	1	SN: 560001-UP
9	6251-51-9850	UNION	1	SN: 560001-UP
10	6251-51-9890	O-RING	1	SN: 560001-UP
11	6151-51-5490	SPACER	2	SN: 560001-UP
12	01011-81095	BOLT	2	SN: 560001-UP
13	6631-11-5630	SPACER	1	SN: 560001-UP
14	01435-01085	BOLT	2	SN: 560001-UP
15	6150-81-6920	SPACER	1	SN: 560001-UP
16	01435-01060	BOLT	1	SN: 560001-UP
17	600-051-6100	CLIP	5	SN: 560001-UP
18	01643-31032	WASHER	5	SN: 560001-UP
19	6251-51-8570	TUBE,RETURN	1	SN: 560001-UP
20	6151-51-8151	GASKET	1	SN: 560001-UP
21	01435-01025	BOLT	2	SN: 560001-UP
22	6154-51-8310	GASKET	1	SN: 560001-UP
23	01435-01025	BOLT	2	SN: 560001-UP
24	6251-21-5480	BRACKET	1	SN: 560001-UP
25	01435-01095	BOLT	1	SN: 560001-UP
26	600-051-6190	CLIP	2	SN: 560001-UP
27	01643-31032	WASHER	2	SN: 560001-UP
28	01584-01008	NUT	2	SN: 560001-UP
29	01435-01025	BOLT	2	SN: 560001-UP
30	6251-21-5470	BRACKET	1	SN: 560001-UP
31	01435-01045	BOLT	1	SN: 560001-UP

Reference: A1530-A3K9

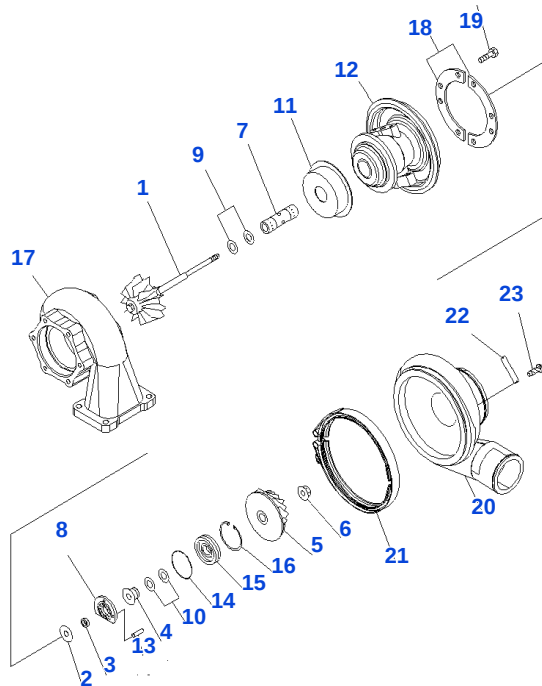

00045481


Reference: A1530-B3K9

030070 TURBOCHARGER (KTR90-232E) (INNER PARTS)

Item	Part No.	Part Name	Qty	Options
	6506-21-5010	TURBOCHARGER ASS'Y	1	SN: 560001-UP
	6506-21-5920	• CORE ASS'Y	1	SN: 560001-UP
1		•• ☆ ROTOR,TURBINE	1	SN: 560001-UP
2		•• ☆ PLATE	1	SN: 560001-UP
3		•• ☆ SPACER	1	SN: 560001-UP
4		•• ☆ FLINGER	1	SN: 560001-UP
5		•• ☆ IMPELLER,BLOWER	1	SN: 560001-UP
6		•• ☆ NUT,LOCK	1	SN: 560001-UP
7		•• ☆ BEARING,JOURNAL	1	SN: 560001-UP
8		•• ☆ BEARING,THRUST	1	SN: 560001-UP
9		•• ☆ RING,SEAL, TURBINE	2	SN: 560001-UP
10		•• ☆ RING,SEAL, BLOWER	2	SN: 560001-UP
11		•• ☆ SHIELD,HEAT	1	SN: 560001-UP
12		•• ☆ HOUSING,CENTER	1	SN: 560001-UP
13		•• ☆ PIN,DOWEL	1	SN: 560001-UP
14		•• ☆ O-RING	1	SN: 560001-UP
15		•• ☆ INSERT	1	SN: 560001-UP
16		•• ☆ RING,SNAP	1	SN: 560001-UP
17	6506-21-4230	• HOUSING,TURBINE	1	SN: 560001-UP
18	6505-11-0520	• PLATE	2	SN: 560001-UP
19	01020-01016	• BOLT	8	SN: 560001-UP
20	6506-21-2040	• HOUSING,BLOWER	1	SN: 560001-UP
21	6501-11-1721	• V-BAND	1	SN: 560001-UP
22	6505-99-9011	• PLATE, NAME	1	SN: 560001-UP
23	04418-02550	• SCREW	2	SN: 560001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: A1530-B3K9

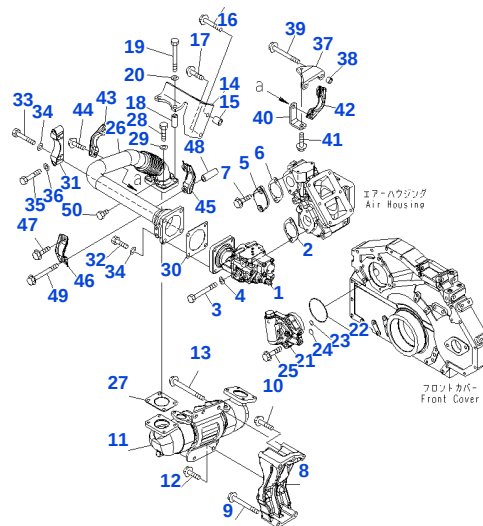

00045400

Reference: A1550-A3A1

030080 EXHAUST GAS RECIRCULATION (1/3) (EGR VALVE AND COOLER MOUNTING)

Item	Part No.	Part Name	Qty	Options
1	6261-41-4900	VALVE ASS'Y,(EGR)	1	SN: 560001-UP
2	6166-61-6341	GASKET	1	SN: 560001-UP
3	01011-E1005	BOLT	2	SN: 560001-UP
4	01643-31032	WASHER	2	SN: 560001-UP
5	6251-11-4220	COVER	1	SN: 560001-UP
6	6166-61-6341	GASKET	1	SN: 560001-UP
7	01435-01025	BOLT	2	SN: 560001-UP
8	6251-21-6610	BRACKET	1	SN: 560001-UP
9	01435-01090	BOLT	2	SN: 560001-UP
10	01435-01035	BOLT	1	SN: 560001-UP
11	6251-61-7100	COOLER ASS'Y,(EGR)	1	SN: 560001-UP
12	01435-01020	BOLT	1	SN: 560001-UP
13	01436-01020	BOLT	2	SN: 560001-UP
14	6251-61-7150	BRACKET	1	SN: 560001-UP
15	6128-21-6730	SPACER	1	SN: 560001-UP
16	01435-01050	BOLT	1	SN: 560001-UP
17	01435-01025	BOLT	1	SN: 560001-UP
18	6933-21-6330	SPACER	2	SN: 560001-UP
19	01010-E1085	BOLT	2	SN: 560001-UP
20	01643-31032	WASHER	2	SN: 560001-UP
21		OIL PUMP ASS'Y,(SEE FIG.A1550-D3A1)	-1	SN: 560001-UP
22	07000-72085	O-RING	1	SN: 560001-UP
23	07000-72012	O-RING	1	SN: 560001-UP
24	07000-72015	O-RING	1	SN: 560001-UP
25	01435-01035	BOLT	3	SN: 560001-UP
26	6251-11-9320	TUBE	1	SN: 560001-UP
27	6261-11-9520	GASKET	1	SN: 560001-UP
28	01010-E1030	BOLT	2	SN: 560001-UP
29	01643-31032	WASHER	2	SN: 560001-UP
30	6207-11-5390	GASKET	1	SN: 560001-UP
31	6251-11-9150	PLATE	1	SN: 560001-UP
32	01010-E1030	BOLT	2	SN: 560001-UP
33	01010-E1060	BOLT	2	SN: 560001-UP
34	01643-31032	WASHER	4	SN: 560001-UP
35	01010-81050	BOLT	2	SN: 560001-UP
36	01643-31032	WASHER	2	SN: 560001-UP
37	6251-11-9210	BRACKET	1	SN: 560001-UP
38	6131-12-5920	SPACER	2	SN: 560001-UP
39	01435-01090	BOLT	2	SN: 560001-UP
40	6251-11-9220	BRACKET	1	SN: 560001-UP
41	01435-01020	BOLT	1	SN: 560001-UP
42	6251-11-9130	CLAMP,HALF	1	SN: 560001-UP
43	6251-11-9170	CLAMP,HALF	1	SN: 560001-UP
44	01435-01025	BOLT	2	SN: 560001-UP
45	6251-11-9180	CLAMP,HALF	1	SN: 560001-UP
46	6251-11-9170	CLAMP,HALF	1	SN: 560001-UP

Get the complete PDF catalogue

Komatsu SAA6D125E-5 S/N 560001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.