


Fig. 101 ENGINE MOUNT

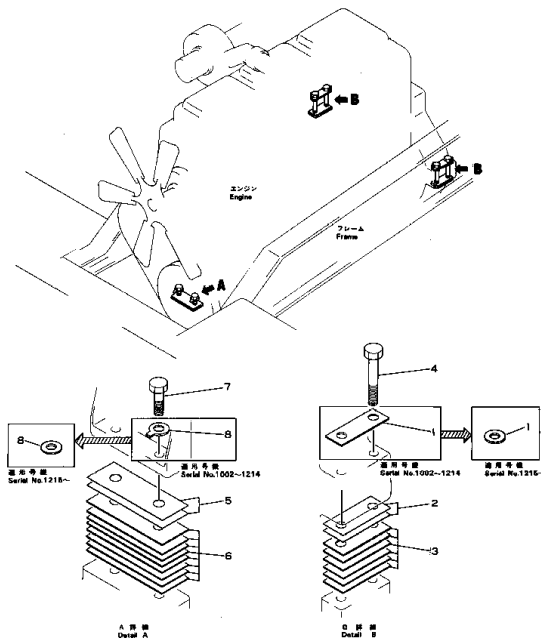


Reference: 101

030010 ENGINE MOUNT

Item	Part No.	Part Name	Qty	Options
1	01643-31845	WASHER	4	SN: 1215-UP
	281-20-15221	PLATE	2	SN: 1002-1214
2	566-01-11210	SHIM ? 0.2MM	4	SN: 1002-UP
3	566-01-11220	SHIM ? 0.5MM	12	SN: 1002-UP
4	01011-31825	BOLT	4	SN: 1215-UP
	01011-31820	BOLT	4	SN: 1002-1214
5	567-01-11110	SHIM	2	SN: 1002-UP
6	567-01-11120	SHIM	8	SN: 1002-UP
7	01010-31855	BOLT	2	SN: 1002-UP
8	01643-31845	WASHER	2	SN: 1215-UP
	01650-01816	WASHER	2	SN: 1002-1214

Reference: 101

Fig. 107 エンジン ルーブ、オイル フィルタ ハイピンダ (適用 号 機
ENGINE LUB. OIL FILTER PIPING (Serial No. 1002~1100))

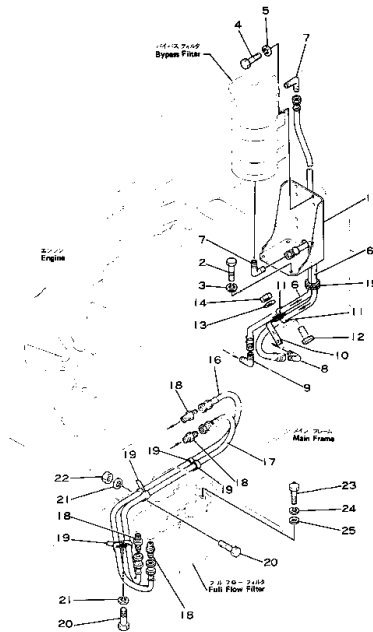


Reference: 107

030020 ENGINE LUB. OIL FILTER PIPING(#1002-1100)

Item	Part No.	Part Name	Qty	Options
1	567-01-12110	BRACKET	1	SN: 1002-@
2	01010-31225	BOLT	4	SN: 1002-@
3	01602-01236	WASHER	4	SN: 1002-@
4	01010-30820	BOLT	8	SN: 1002-@
5	01602-00825	WASHER	8	SN: 1002-@
6	07102-20313	HOSE	2	SN: 1053-@
	02750-02130	HOSE	2	SN: 1002-1052
7	567-01-12140	ELBOW	2	SN: 1053-@
	02701-11007	ELBOW	2	SN: 1002-1052
8	281-01-17480	ELBOW	1	SN: 1053-@
	02701-11009	ELBOW	1	SN: 1002-1052
9	482-04-31990	ELBOW	1	SN: 1053-@
	02701-11002	ELBOW	1	SN: 1002-1052
10	567-01-12120	BRACKET	1	SN: 1002-@
11	08036-01814	CLIP	2	SN: 1002-@
12	01010-31225	BOLT	3	SN: 1002-@
13	01602-01236	WASHER	3	SN: 1002-@
14	01580-01210	NUT	1	SN: 1002-@
15	08037-03614	GROMMET	1	SN: 1002-@
16	07108-20622	HOSE	1	SN: 1002-1100
17	07108-20619	HOSE	1	SN: 1002-1100
18	6672-52-9911	CONNECTOR	4	SN: 1002-1100
19	281-01-13180	CLIP	6	SN: 1002-1100
20	01010-31020	BOLT	2	SN: 1002-@
21	01602-01030	WASHER	2	SN: 1002-@
22	01580-01008	NUT	1	SN: 1002-1100
23	01010-31430	BOLT	4	SN: 1002-1100
24	01602-01442	WASHER	4	SN: 1002-1100
25	01640-21223	WASHER	4	SN: 1002-1100

Reference: 107

Fig. 107A エンジン ルーム オイル フィルタ ハイピン (適用 考慮) (Serial No. 1101~)

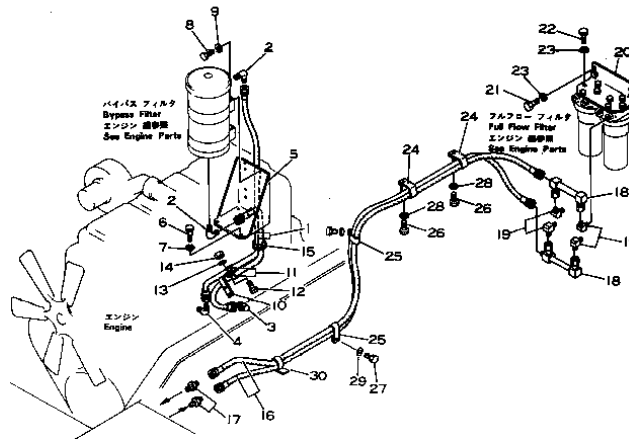


Reference: 107A

030030 ENGINE LUB. OIL FILTER PIPING(#1101-)

Item	Part No.	Part Name	Qty	Options
1	07102-20313	HOSE	2	SN: 1053-UP
2	567-01-12140	ELBOW	2	SN: 1053-UP
3	281-01-17480	ELBOW	1	SN: 1053-UP
4	482-04-31990	ELBOW	1	SN: 1053-UP
5	567-01-12110	BRACKET	1	SN: 1002-UP
6	01010-31225	BOLT	4	SN: 1002-UP
7	01602-01236	WASHER	4	SN: 1002-UP
8	01010-30820	BOLT	8	SN: 1002-UP
9	01602-00825	WASHER	8	SN: 1002-UP
10	567-01-12120	BRACKET	1	SN: 1002-UP
11	08036-01814	CLIP	2	SN: 1002-UP
12	01010-31225	BOLT	4	SN: 1002-UP
13	01602-01236	WASHER	4	SN: 1002-UP
14	01580-01210	NUT	1	SN: 1002-UP
15	08037-03614	GROMMET	1	SN: 1002-UP
16	07102-20628	HOSE	1	SN: 1101-UP
17	6672-52-9911	CONNECTOR	2	SN: 1101-UP
18	567-01-12170	TUBE	2	SN: 1101-UP
19	6672-52-9931	ELBOW	4	SN: 1101-UP
20	567-01-12150	BRACKET	1	SN: 1101-UP
21	01010-31230	BOLT	4	SN: 1101-UP
22	02010-70725	BOLT	8	SN: 1101-UP
23	01602-01236	WASHER	12	SN: 1101-UP
24	567-01-12160	CLIP	2	SN: 1101-UP
25	560-41-17130	CLIP	2	SN: 1101-UP
26	01010-31025	BOLT	2	SN: 1101-UP
27	02030-70616	BOLT	1	SN: 1101-UP
28	01602-01030	WASHER	2	SN: 1101-UP
29	01602-00619	WASHER	1	SN: 1101-UP
30	08034-00823	BAND	1	SN: 1101-UP

Reference: 107A

Fig. 114 エアー インテーク システム (適用 号 機: Serial No. 1002~1040)

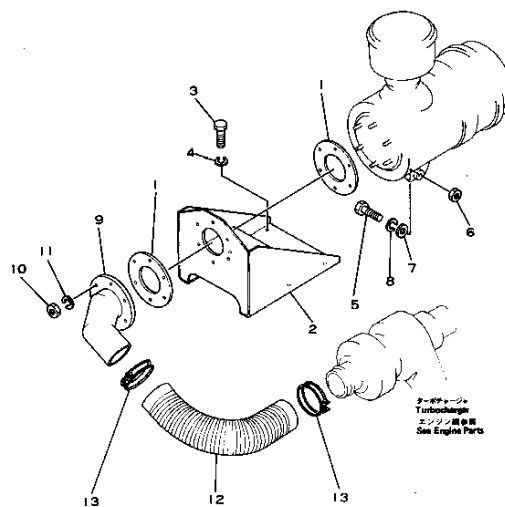


Reference: 114

030040 AIR INTAKE SYSTEM(#1002-1040)

Item	Part No.	Part Name	Qty	Options
1	6121-11-4820	GASKET	1	SN: 1002-1040
2	567-02-12111	BRACKET	1	SN: 1002-1040
3	01010-31220	BOLT	4	SN: 1002-1040
4	01602-01236	WASHER	4	SN: 1002-1040
5	01010-31240	BOLT	3	SN: 1002-1040
6	01580-01210	NUT	3	SN: 1002-1040
7	01642-21216	WASHER	3	SN: 1002-1040
8	01602-01236	WASHER	3	SN: 1002-1040
9	567-02-12122	TUBE	1	SN: 1002-1040
10	01582-01210	NUT	6	SN: 1002-1040
11	01602-01236	WASHER	6	SN: 1002-1040
12	565-02-18110	HOSE	1	SN: 1002-1040
13	565-02-18140	CLAMP	2	SN: 1002-1040

Reference: 114

Fig. 114A AIR INTAKE SYSTEM (Serial No. 1041~)

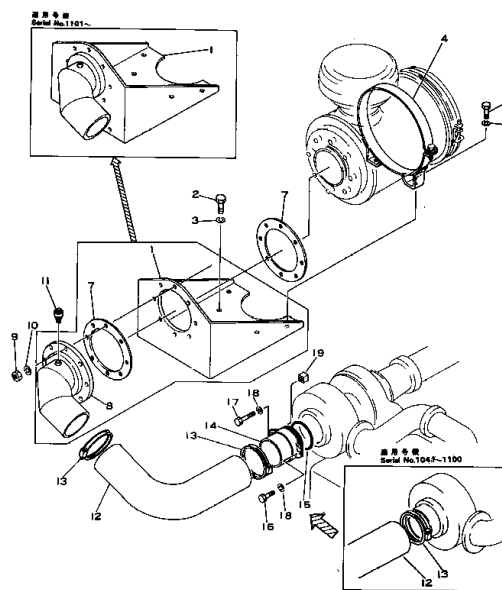

Reference: 114A


030050 AIR INTAKE SYSTEM(#1041-)

Item	Part No.	Part Name	Qty	Options
1	567-02-12113	BRACKET	1	SN: 1101-UP
	567-02-12112	□ BRACKET	1	SN: 1041-1100
2	01010-31220	BOLT	4	SN: 1041-UP
3	01602-01236	WASHER	4	SN: 1041-UP
4	569-02-12120	BAND	1	SN: 1041-UP
5	01010-31020	BOLT	1	SN: 1041-UP
6	01602-01030	WASHER	2	SN: 1041-UP
	6127-81-4820	GASKET	1	SN: 1101-UP
7	6127-81-4820	GASKET	2	SN: 1041-1100
8	567-02-12124	TUBE	1	SN: 1053-1100
	567-02-12123	TUBE	1	SN: 1041-1052
9	01580-01008	NUT	8	SN: 1041-UP
10	01602-01030	WASHER	8	SN: 1041-UP
11	08670-00635	INDICATOR,DUST	1	SN: 1041-UP
12	565-02-18110	HOSE	1	SN: 1041-UP
13	07281-01279	CLAMP	2	SN: 1101-UP
	565-02-18140	□ CLAMP	2	SN: 1041-1100
14	566-02-12562	TUBE	1	SN: 1101-UP
15	07000-65120	O-RING	1	SN: 1101-UP
16	01010-50825	BOLT	1	SN: 1101-UP
17	01010-50845	BOLT	1	SN: 1101-UP
18	01602-20825	WASHER	2	SN: 1101-UP
19	567-02-12130	SPACER	1	SN: 1101-UP

Catalog signs: □ part above may be used instead

Reference: 114A

Fig. 115 AIR CLEANER (Serial No. 1002~1040)

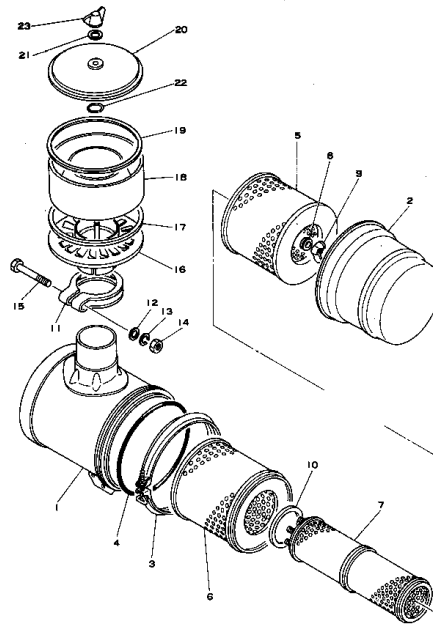


Reference: 115

030060 AIR CLEANER(#1002-1040)

Item	Part No.	Part Name	Qty	Options
	6668-81-7101	AIR CLEANER ASS'Y	1	SN: 1002-1040
1	6668-81-7110	• BODY	1	SN: 1002-1040
2	6685-81-7950	• COVER	1	SN: 1002-1040
3	6685-81-7970	• BAND ASS'Y	1	SN: 1002-1040
4	6685-81-7890	• O-RING	1	SN: 1002-1040
5	600-181-1610	• ELEMENT,OUTER ? INSIDE (KIT)	1	SN: 1002-1040
6	600-181-1620	• ELEMENT,OUTER ? OUTSIDE (KIT)	1	SN: 1002-1040
7	600-181-1630	• ELEMENT,INNER (KIT)	1	SN: 1002-1040
8	6685-81-7980	• PACKING	1	SN: 1002-1040
9	6685-81-7990	• NUT	1	SN: 1002-1040
10	600-300-8351	• GASKET,INNER ELEMENT (KIT)	1	SN: 1002-1040
	565-02-18400	PRE-CLEANER ASS'Y	1	SN: 1002-1040
11	600-300-8226	• BAND	1	SN: 1002-1040
12	01640-21016	• WASHER	1	SN: 1002-1040
13	01602-21030	• WASHER	1	SN: 1002-1040
14	01582-01008	• NUT	1	SN: 1002-1040
15	600-300-8240	• BOLT	1	SN: 1002-1040
16	565-02-18410	• CYCLONE	1	SN: 1002-1040
17	600-300-0820	• GASKET	1	SN: 1002-1040
18	600-300-0712	• BODY	1	SN: 1002-1040
19	6643-81-7590	• TRAP	1	SN: 1002-1040
20	6643-81-7551	• COVER	1	SN: 1002-1040
21	6643-81-7561	• WASHER	1	SN: 1002-1040
22	04064-01610	• RING	1	SN: 1002-1040
23	6643-81-7572	• NUT	1	SN: 1002-1040
	6685-81-7012	ELEMENT ASS'Y	1	SN: 1002-1040
5	600-181-1610	• ELEMENT,OUTER ? INSIDE	1	SN: 1002-1040
6	600-181-1620	• ELEMENT,OUTER ? OUTSIDE	1	SN: 1002-1040
7	600-181-1630	• ELEMENT,INNER	1	SN: 1002-1040
10	600-300-8351	• GASKET,INNER ELEMENT	1	SN: 1002-1040

Reference: 115

Fig. 115A AIR CLEANER (Serial No. 1041~)

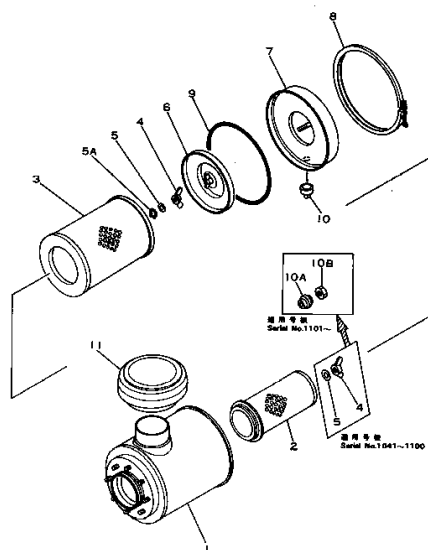


Reference: 115A

030070 AIR CLEANER(#1041-)

Item	Part No.	Part Name	Qty	Options
1	6692-81-7302	AIR CLEANER ASS'Y	1	SN: 1101-UP
	6692-81-7301	AIR CLEANER ASS'Y	1	SN: 1053-1100
	6692-81-7300	AIR CLEANER ASS'Y	1	SN: 1041-1052
	6692-81-7311	• BODY	1	SN: 1053-UP
	6692-81-7310	• BODY	1	SN: 1041-1052
2	600-181-4212	• ELEMENT,INNER (KIT)	1	SN: 1101-UP
	600-181-4211	• ELEMENT,INNER (KIT)	1	SN: 1041-1100
3	600-181-4311	• ELEMENT,OUTER (KIT)	1	SN: 1041-UP
4	600-181-1990	• NUT (KIT)	1	SN: 1101-UP
	600-181-4581	• NUT (KIT)	2	SN: 1041-1100
5	600-181-4591	• WASHER (KIT)	1	SN: 1101-UP
	600-181-4591	• WASHER (KIT)	2	SN: 1041-1100
5A	04064-01510	• RING (KIT)	1	SN: 1101-UP
6	6710-82-7130	• BAFFLE	1	SN: 1041-UP
7	6710-82-7121	• CUP	1	SN: 1041-UP
8	600-181-1480	• CLAMP	1	SN: 1053-UP
	600-181-1490	• CLAMP	1	SN: 1041-1052
9	6127-81-7190	• O-RING	1	SN: 1041-UP
10	600-181-1590	• VALVE,VACUATOR	1	SN: 1053-UP
	600-181-9810	• VALVE,VACUATOR	1	SN: 1041-1052
10A	600-181-7511	• WASHER (KIT)	1	SN: 1101-UP
10B	600-181-9671	• NUT (KIT)	1	SN: 1101-UP
11	600-181-1510	CAP	1	SN: 1041-UP
	6125-81-7032	ELEMENT ASS'Y	1	SN: 1101-UP
	6125-81-7031	ELEMENT ASS'Y	1	SN: 1041-1100

Reference: 115A

Fig. 117 EXHAUST PIPE (Serial No. 1002~1052)

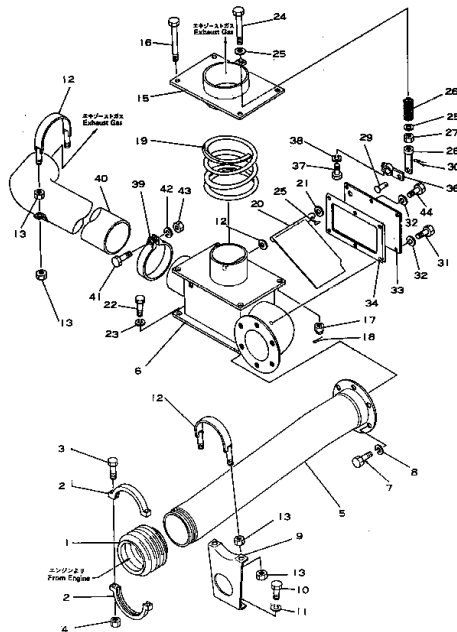

Reference: 117


030080 EXHAUST PIPE(#1002-1052)

Item	Part No.	Part Name	Qty	Options
1	567-02-11110	BELLOWS	1	SN: 1002-@
2	6657-11-5590	CLAMP	4	SN: 1002-@
3	01010-30870	BOLT	4	SN: 1002-@
4	01580-00806	NUT	4	SN: 1002-@
5	567-02-11121	TUBE	1	SN: 1002-@
6	567-02-11211	BOX	1	SN: 1002-1052
7	566-02-11710	BOLT	6	SN: 1002-@
8	01602-01236	WASHER	6	SN: 1002-@
9	567-02-11160	BRACKET	1	SN: 1002-@
10	01010-31230	BOLT	2	SN: 1002-@
11	01602-01236	WASHER	2	SN: 1002-@
12	567-02-11170	CLIP	2	SN: 1002-@
13	01580-01008	NUT	8	SN: 1002-@
15	567-02-11221	FLANGE	1	SN: 1002-1052
16	566-02-11760	BOLT	4	SN: 1002-@
17	566-02-11830	NUT	4	SN: 1002-@
18	04050-03028	PIN	4	SN: 1002-@
19	566-02-11740	SPRING	1	SN: 1002-@
20	567-02-11230	SHUTTER	1	SN: 1002-1052
21	01640-21826	WASHER	2	SN: 1002-1052
22	01010-31430	BOLT	4	SN: 1002-@
23	01602-01442	WASHER	4	SN: 1002-@
24	01011-31405	BOLT	1	SN: 1002-1052
25	01641-21423	WASHER	3	SN: 1002-1052
26	566-02-11850	SPRING	1	SN: 1002-1052
27	01580-01411	NUT	1	SN: 1002-1052
28	566-02-11840	LEVER	1	SN: 1002-1052
29	04205-11438	PIN	1	SN: 1002-1052
30	04050-14022	PIN	1	SN: 1002-1052
31	566-02-11710	BOLT	5	SN: 1002-1052
32	01602-01236	WASHER	6	SN: 1002-1052
33	567-02-11251	PLATE	1	SN: 1002-1052
34	567-02-11240	PACKING	1	SN: 1002-1052
35	04010-00519	KEY	1	SN: 1002-1052

Item	Part No.	Part Name	Qty	Options
36	566-02-11720	LEVER	1	SN: 1002-1052
37	01010-30830	BOLT	1	SN: 1002-1052
38	01602-00825	WASHER	1	SN: 1002-1052
39	567-02-11180	BAND	1	SN: 1002-@
40	567-02-11261	TUBE	1	SN: 1002-@
41	01010-31025	BOLT	1	SN: 1002-@
42	01602-01020	WASHER	1	SN: 1002-@
43	01580-01008	NUT	1	SN: 1002-@
44	566-02-11950	BOLT	1	SN: 1002-1052

Reference: 117

Fig. 117A EXHAUST PIPE (Serial No. 1053--1214)

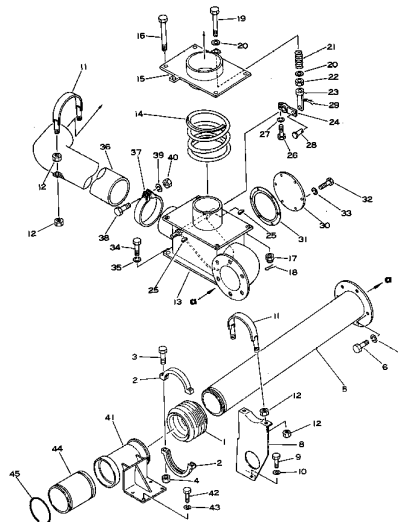

Reference: 117A

030090 EXHAUST PIPE(#1053-1214)

Item	Part No.	Part Name	Qty	Options
1	566-02-11633	BELLOWS	1	SN: 1101-@
	567-02-11110	BELLOWS	1	SN: 1002-1100
2	6657-11-5590	CLAMP	4	SN: 1002-1214
3	01010-30870	BOLT	4	SN: 1002-1214
4	01580-00806	NUT	4	SN: 1002-@
5	567-02-11122	TUBE,860MM	1	SN: 1065-1214
	567-02-11121	TUBE,970MM	1	SN: 1002-1064
6	566-02-11710	BOLT	6	SN: 1002-1214
7	01602-01236	WASHER	6	SN: 1002-1214
8	567-02-11162	BRACKET	1	SN: 1101-1214
	567-02-11161	BRACKET	1	SN: 1065-1100
	567-02-11160	BRACKET	1	SN: 1002-1064
9	01010-31230	BOLT	2	SN: 1002-@
10	01602-01236	WASHER	2	SN: 1002-@
11	567-02-11170	CLIP	2	SN: 1002-@
12	01580-01008	NUT	8	SN: 1002-@
	567-02-00010	BOX ASS'Y,EXHAUST	1	SN: 1053-1214
13	567-02-11212	• BOX	1	SN: 1053-1214
14	566-02-11740	• SPRING	1	SN: 1002-@
15	567-02-11222	• FLANGE	1	SN: 1053-1214
16	566-02-11760	• BOLT	4	SN: 1002-1214
17	566-02-11830	• NUT	4	SN: 1002-1214
18	04050-03028	• PIN	4	SN: 1002-1214
19	01011-31405	• BOLT	2	SN: 1053-1214
20	01641-21423	• WASHER	6	SN: 1053-1214
21	566-02-11850	• SPRING	2	SN: 1053-1214
22	01580-01411	• NUT	2	SN: 1053-1214
23	566-02-11840	• LEVER	2	SN: 1053-1214
24	566-02-11720	• LEVER	2	SN: 1053-1214
25	04010-00519	• KEY	2	SN: 1053-@
26	01010-30830	• BOLT	2	SN: 1053-@
27	01602-00825	• WASHER	2	SN: 1053-@
28	04205-11438	• PIN	2	SN: 1053-@
29	04050-14022	• PIN	2	SN: 1053-@
30	567-02-11252	• PLATE	1	SN: 1053-1214
31	567-02-11241	• PACKING	1	SN: 1053-1214
32	01010-31020	• BOLT	6	SN: 1053-1214
33	01602-01030	• WASHER	6	SN: 1053-@
34	01010-31430	BOLT	4	SN: 1002-@
35	01602-01442	WASHER	4	SN: 1002-@
36	567-02-11261	TUBE	1	SN: 1002-1214
37	567-02-11180	BAND	1	SN: 1002-1214
38	01010-31025	BOLT	1	SN: 1002-1214
39	01602-01020	WASHER	1	SN: 1002-@
40	01580-01008	NUT	1	SN: 1002-@
41	567-02-11281	TUBE	1	SN: 1002-1214
42	01010-31225	BOLT	4	SN: 1101-@

Get the complete PDF catalogue

Komatsu HD200-2 S/N 1002-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.