


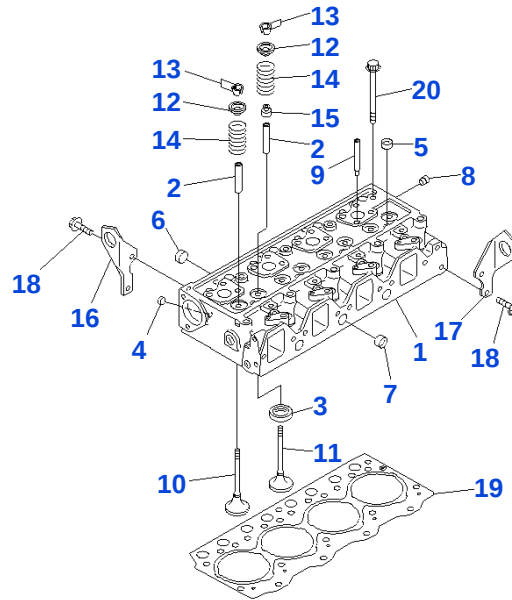

PJ30870


Reference: 0101

030010 CYLINDER HEAD (TYPE A #10428-24726)(#10428-24726)

Item	Part No.	Part Name	Qty	Options
	6204-11-1010	CYLINDER HEAD ASSEMBLY, WITH VALVE	1	SN: 10428-24726
	6204-11-1100	• CYLINDER HEAD ASSEMBLY, WITHOUT VALVE	1	SN: 10428-@
1		• ☆ HEAD, CYLINDER	1	SN: 10428-@
2	6204-19-1310	• • GUIDE, VALVE	8	SN: 10428-@
3	6204-11-1440	• • SEAT, EXHAUST VALVE (STD)	4	SN: 10428-@
3	6204-19-1440	• • SEAT, 0.25MM, EXHAUST VALVE (OS)	4	SN: 10428-@
3	6204-18-1440	• • SEAT, 0.50MM, EXHAUST VALVE (OS)	4	SN: 10428-@
4	07046-41008	• • PLUG	4	SN: 10428-@
5	07046-41810	• • PLUG	9	SN: 10428-@
6	07046-42216	• • PLUG	3	SN: 10428-@
7	07046-42516	• • PLUG	11	SN: 10428-@
8	02720-20104	• • PLUG	1	SN: 10428-@
9	6204-11-8910	• • PIPE, BREATHER	2	SN: 10428-@
10	6207-41-4110	• VALVE, INTAKE	4	SN: 10428-@
11	6204-41-4210	• VALVE, EXHAUST	4	SN: 10428-@
12	6204-41-4510	• SEAT	8	SN: 10428-@
13	6204-41-4520	• COTTER	16	SN: 10428-@
14	6204-41-4410	• SPRING, VALVE	8	SN: 10428-@
15	6204-41-4540	• SEAL, VALVE (K1)	8	SN: 10428-@
16	6206-11-1930	HANGER, FRONT	1	SN: 10428-@
17	6206-11-1920	HANGER, REAR	1	SN: 10428-@
18	01435-01020	BOLT	4	SN: 10428-@
19	6204-11-1810	GASKET, HEAD (K1)	1	SN: 10428-@
20	6142-11-1611	BOLT, HEAD	17	SN: 10428-@

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0101

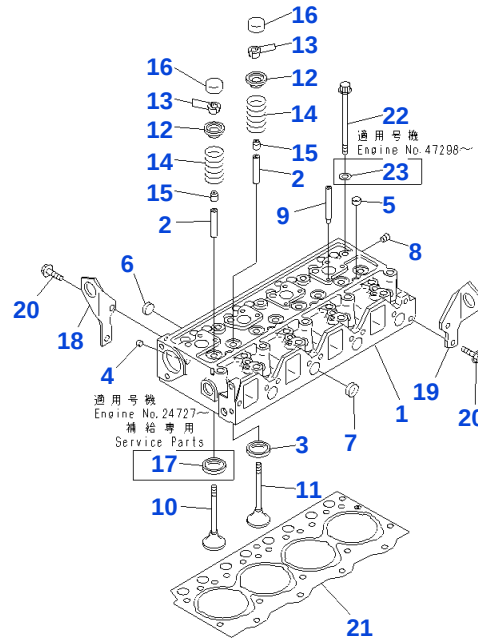


PJ33271

Reference: 0101A

030020 CYLINDER HEAD (TYPE A #24727-) (TYPE B #24727-)(#24727-)

Item	Part No.	Part Name	Qty	Options
	6204-11-1030	CYLINDER HEAD ASSEMBLY, WITH VALVE	1	SN: 24727-UP
	6204-11-1100	• CYLINDER HEAD ASSEMBLY, WITHOUT VALVE	1	SN: 10428-UP
1		• ☆ HEAD, CYLINDER	1	SN: 10428-UP
2	6204-19-1310	• • GUIDE, VALVE	8	SN: 10428-UP
3	6204-11-1440	• • SEAT, EXHAUST VALVE (STD)	4	SN: 10428-UP
3	6204-19-1440	• • SEAT, 0.25MM, EXHAUST VALVE (OS)	4	SN: 10428-UP
3	6204-18-1440	• • SEAT, 0.50MM, EXHAUST VALVE (OS)	4	SN: 10428-UP
4	07046-41008	• • PLUG	4	SN: 10428-UP
5	07046-41810	• • PLUG	9	SN: 10428-UP
6	07046-42216	• • PLUG	3	SN: 10428-UP
7	07046-42516	• • PLUG	11	SN: 10428-UP
8	02720-20104	• • PLUG	1	SN: 10428-UP
9	6204-11-8910	• • PIPE, BREATHER	2	SN: 10428-UP
10	6207-41-4110	• VALVE, INTAKE	4	SN: 10428-UP
11	6204-41-4210	• VALVE, EXHAUST	4	SN: 10428-UP
12	6204-41-4510	• SEAT	8	SN: 10428-UP
13	6204-41-4520	• COTTER	16	SN: 10428-UP
14	6204-41-4410	• SPRING, VALVE	8	SN: 10428-UP
15	6204-41-4540	• SEAL, VALVE (K1)	8	SN: 10428-UP
16	6204-41-4550	• CAP, VALVE STEM	8	SN: 24727-UP
17	6207-11-1430	SEAT, INTAKE VALVE (STD)	4	SN: 24727-UP
17	6207-19-1430	SEAT, 0.25MM, INTAKE VALVE (OS)	4	SN: 24727-UP
17	6207-18-1430	SEAT, 0.50MM, INTAKE VALVE (OS)	4	SN: 24727-UP
18	6206-11-1930	HANGER, FRONT	1	SN: 10428-UP
19	6206-11-1920	HANGER, REAR	1	SN: 10428-UP
20	01435-01020	BOLT	4	SN: 10428-UP
21	6204-11-1812	GASKET, HEAD (K1)	1	SN: 69989-UP
21	6204-11-1811	□ GASKET, HEAD	1	SN: 45259-69988
21	6204-11-1810	□ GASKET, HEAD (K1)	1	SN: 10428-45258
22	6204-13-1610	BOLT, HEAD	17	SN: 47298-UP
22	6142-11-1611	■ BOLT, HEAD (6204-13-1610, 01643-31232)	17	SN: 10428-47297
23	01643-31232	WASHER	17	SN: 47298-UP

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead ■ may be used instead of described part

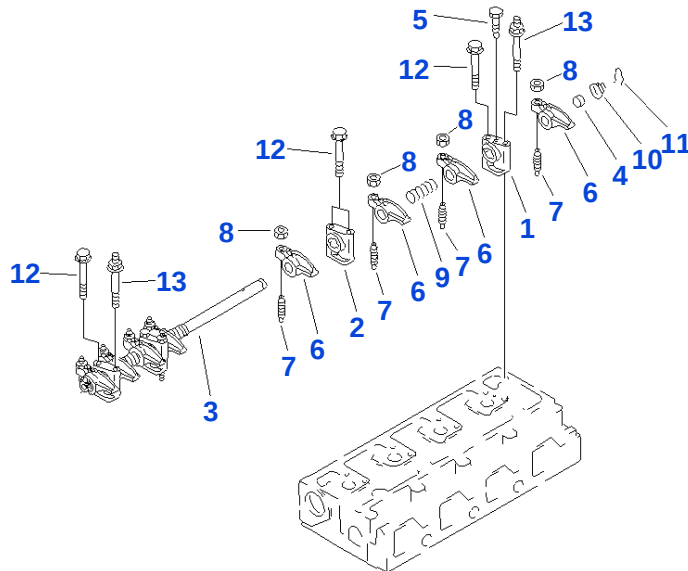

PE30139


Reference: 0111

030030 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
	6202-43-5100	ROCKER ARM ASSEMBLY	1	SN: 61348-UP
	6204-41-5100	□ ROCKER ARM ASSEMBLY	1	SN: 10428-61347
1	6204-41-5110	• BRACKET	1	SN: 10428-UP
2	6204-41-5120	• BRACKET	3	SN: 10428-UP
	6202-43-5200	• SHAFT ASSEMBLY	1	SN: 61348-UP
	6204-41-5200	• ■ SHAFT ASSEMBLY (6202-43-5200,6221-41-5310)	1	SN: 10428-61347
3		• ☆ SHAFT	1	SN: 61348-UP
3		• ☆ SHAFT	1	SN: 10428-61347
4	6221-41-5540	• PLUG	2	SN: 61348-UP
4	6142-42-5550	• PLUG	2	SN: 10428-61347
5	6221-41-5310	• BOLT	1	SN: 61348-UP
5	01010-30612	• BOLT	1	SN: 10428-61347
6	6202-43-5410	• ARM, ROCKER	8	SN: 61348-UP
6	6204-41-5410	• □ ARM, ROCKER	8	SN: 10428-61347
7	6221-41-5410	• SCREW, ADJUST	8	SN: 61348-UP
7	6204-41-5420	• □ SCREW, ADJUST	8	SN: 10428-61347
8	6221-41-5420	• NAT	8	SN: 61348-UP
8	6130-41-5430	• □ NAT	8	SN: 10428-61347
9	6202-43-5320	• SPRING	3	SN: 61348-UP
9	6142-42-5320	• □ SPRING	3	SN: 10428-61347
10	6221-41-5520	• SPRING, CONICAL	2	SN: 61348-UP
10	6136-41-5320	• □ SPRING, CONICAL	2	SN: 10428-61347
11	6136-41-5330	• CLIP	2	SN: 10428-UP
12	01435-00865	BOLT	5	SN: 10428-UP
13	6204-41-5710	BOLT	3	SN: 10428-UP

Catalog signs: □ part above may be used instead ■ may be used instead of described part ☆ not supplied separately: assembly only

Reference: 0111

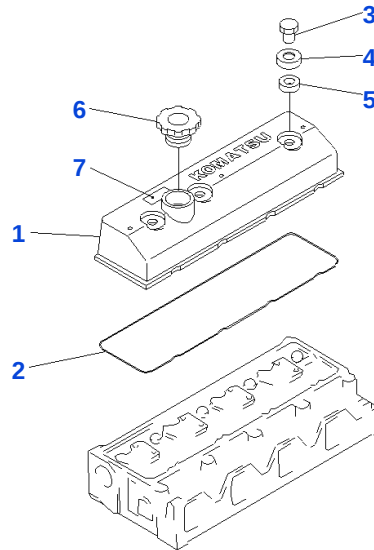


PJ36985

Reference: 0115

030040 CYLINDER HEAD COVER

Item	Part No.	Part Name	Qty	Options
1	6204-11-8110	COVER,HEAD	1	SN: 10428-UP
2	6204-11-8810	O RING (K1)	1	SN: 10428-UP
3	6136-11-8120	NAT	3	SN: 10428-UP
4	6136-11-8130	WASHER	3	SN: 10428-UP
5	6136-11-8142	PACKING (K1)	3	SN: 10428-UP
6	6130-12-8610	CAP	1	SN: 10428-UP
7	6204-81-2810	PLATE, CAUTION, (JAPANESE)	1	SN: B:69801-UP

Reference: 0115

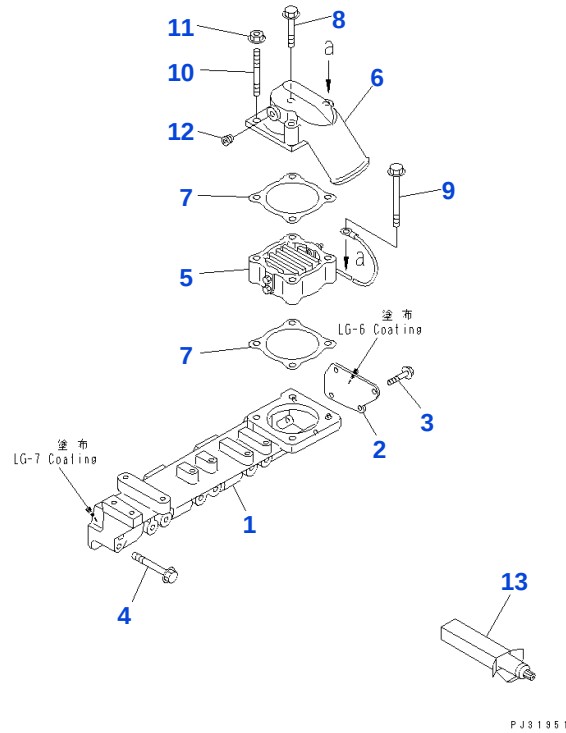


Reference: 0131

030050 AIR INTAKE MANIFOLD AND CONNECTION (TYPE A #10428-25531) (#10428-25531)

Item	Part No.	Part Name	Qty	Options
	6204-11-4120	INTAKE MANIFOLD ASSEMBLY	1	SN: 10428-@
1	6204-11-4130	• MANIFOLD, INTAKE	1	SN: 10428-@
2	6204-11-4140	• PLATE	1	SN: 10428-@
3	01435-00812	• BOLT	4	SN: 10428-@
4	01435-21075	BOLT	8	SN: 10428-@
5	600-815-2341	HEATER, RIBBON	1	SN: 10428-@
6	6204-11-4240	CONNECTOR, AIR	1	SN: 10428-25531
7	6136-11-4820	GASKET (K1)	2	SN: 10428-@
8	01435-21065	BOLT	1	SN: 10428-@
9	01436-21000	BOLT	2	SN: 10428-@
10	01144-31065	STUD	1	SN: 10428-@
11	01584-21008	NUT	1	SN: 10428-@
12	02720-20204	PLUG	1	SN: 10428-25531
13	09920-00150	EXHAUST GAS GASKET, LG-7, 150G	-2	SN: 10428-@

Reference: 0131

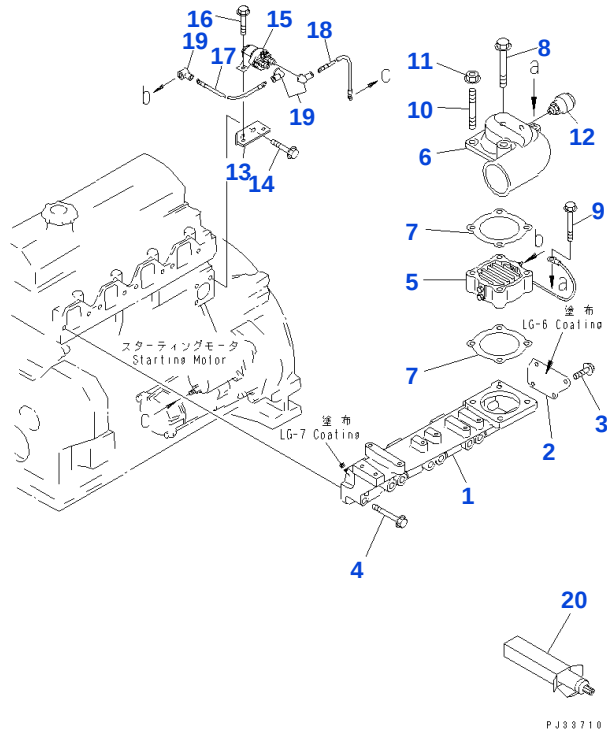


Reference: 0131A

030060 AIR INTAKE MANIFOLD AND CONNECTION (TYPE A #25532-) (#25532-)

Item	Part No.	Part Name	Qty	Options
	6204-11-4120	INTAKE MANIFOLD ASSEMBLY	1	SN: 10428-UP
1	6204-11-4130	• MANIFOLD, INTAKE	1	SN: 10428-UP
2	6204-11-4140	• PLATE	1	SN: 10428-UP
3	01435-00812	• BOLT	4	SN: 10428-UP
4	01435-21075	BOLT	8	SN: 10428-UP
5	600-815-2341	HEATER, RIBBON	1	SN: 10428-UP
6	6206-11-4220	CONNECTOR, AIR	1	SN: 25532-UP
7	6136-11-4820	GASKET (K1)	2	SN: 10428-UP
8	01435-21065	BOLT	1	SN: 10428-UP
9	01436-21000	BOLT	2	SN: 10428-UP
10	01144-31065	STUD	1	SN: 10428-UP
11	01584-21008	NAT	1	SN: 10428-UP
12	08670-02001	INDICATOR,DUST	1	SN: .-UP
12	8670-00635	□ INJECTOR, DUST (JAPANESE-ENGLISH)	1	SN: 25532-.
13	6206-81-5510	BRACKET	1	SN: 25532-UP
14	01435-21020	BOLT	2	SN: 25532-UP
15	600-815-2170	SWITCH	1	SN: 25532-UP
16	01435-20612	BOLT	2	SN: 25532-UP
17	6151-81-4470	WIRE, 200MM	1	SN: 25532-UP
18	6136-85-4320	WIRE, 270MM	1	SN: 25532-UP
19	08038-00519	CAP	3	SN: 25532-UP
20	09920-00150	EXHAUST GAS GASKET, LG-7, 150G	-2	SN: 10428-UP

Catalog signs: ☐ part above may be used instead

Reference: 0131A

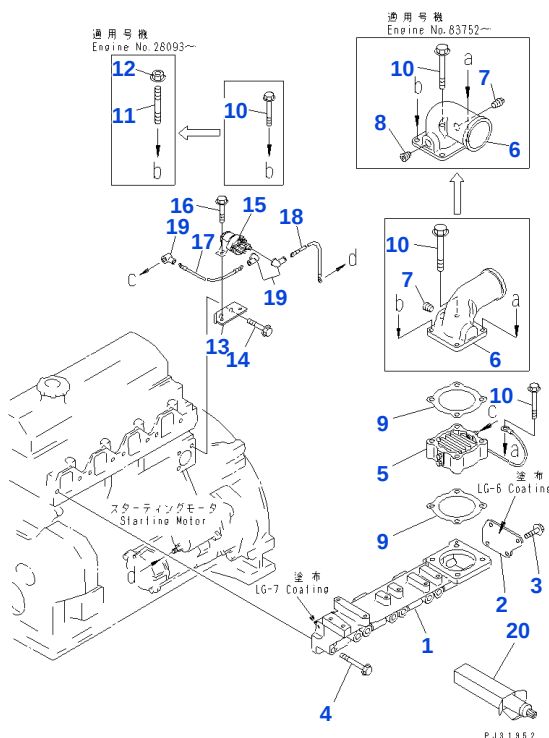


Reference: 0132

030070 AIR INTAKE MANIFOLD AND CONNECTION (TYPE B #24727-) (#24727-)

Item	Part No.	Part Name	Qty	Options
	6204-11-4120	INTAKE MANIFOLD ASSEMBLY	1	SN: 24727-UP
1	6204-11-4130	• MANIFOLD, INTAKE	1	SN: 24727-UP
2	6204-11-4140	• PLATE	1	SN: 24727-UP
3	01435-00812	• BOLT	4	SN: 24727-UP
4	01435-21075	BOLT	8	SN: 24727-UP
5	600-815-2341	HEATER, RIBBON	1	SN: 24727-UP
6	6204-11-4250	CONNECTOR, AIR	1	SN: 83752-UP
6	6204-11-4210	■ CONNECTOR, AIR (6204-11-4250,07042-70415)	1	SN: 24727-83751
7	07042-70415	PLUG	1	SN: 83752-UP
7	02720-20204	PLUG	1	SN: 24727-83751
8	02720-20204	PLUG	1	SN: 83752-UP
9	6136-11-4820	GASKET (K1)	2	SN: 24727-UP
10	01435-21065	BOLT	5	SN: 28093-UP
10	01435-21070	BOLT	4	SN: 24727-28092
11	01144-31065	STUD	1	SN: 28093-UP
12	01584-01008	NAT	1	SN: 28093-UP
13	6206-81-5510	BRACKET	1	SN: 24727-UP
14	01435-21020	BOLT	2	SN: 24727-UP
15	600-815-2170	SWITCH	1	SN: 24727-UP
16	01435-20612	BOLT	2	SN: 24727-UP
17	6151-81-4470	WIRE, 200MM	1	SN: 24727-UP
18	6136-85-4320	WIRE, 270MM	1	SN: 24727-UP
19	08038-00519	CAP	3	SN: 24727-UP
20	09920-00150	EXHAUST GAS GASKET, LG-7, 150G	-2	SN: 24727-UP

Catalog signs: ■ may be used instead of described part

Reference: 0132

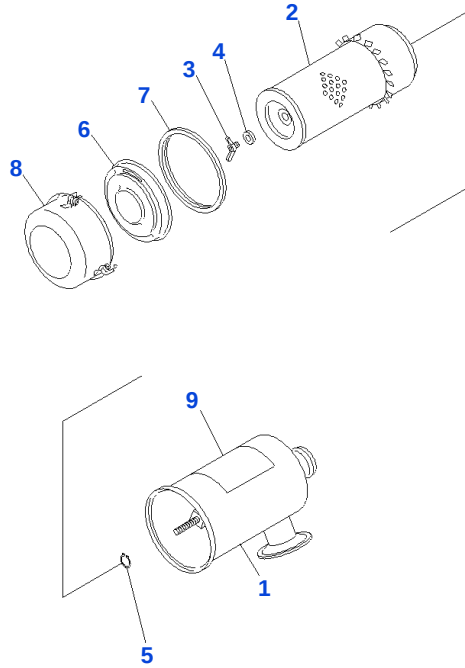

PJ31953


Reference: 0141

030080 AIR CLEANER (TYPE A #10428-25531)(#10428-25531)

Item	Part No.	Part Name	Qty	Options
1	6144-81-7101	AIR CLEANER ASSEMBLY	1	SN: 10428-25531
	6144-81-7110	• BODY	1	SN: 10428-25531
	600-181-7300	• ELEMENT ASSEMBLY	1	SN: 10428-@
2		• ☆ ELEMENT	1	SN: 10428-@
3	600-181-8640	• NUT, WING	1	SN: 10428-@
4	600-181-7511	• WASHER, SEAL	1	SN: 10428-@
5	04064-01510	• RING, SNAP	1	SN: 10428-@
6	600-181-7480	• DIVIDER	1	SN: 10428-@
7	600-181-7460	• GASKET	1	SN: 10428-@
8	600-181-7470	• PAN, DUST	1	SN: 10428-@
9	09641-00661	PLATE, INSTRUCTION, (JAPANESE-ENGLISH)	1	SN: 10428-@

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0141

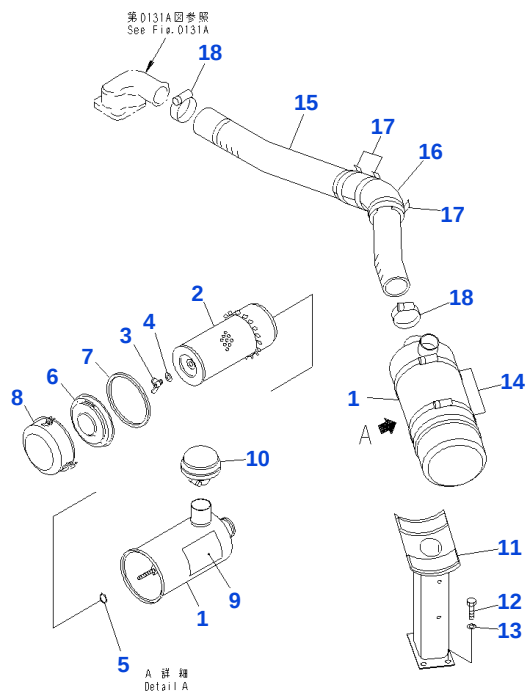

PJ33144

Reference: 0141A

030090 AIR CLEANER AND CONNECTION (TYPE A #25532-)(#25532-)

Item	Part No.	Part Name	Qty	Options
1	6204-81-7300	AIR CLEANER ASSEMBLY	1	SN: 25532-UP
	6143-81-7710	• BODY	1	SN: 25532-UP
	600-181-7300	• ELEMENT ASSEMBLY	1	SN: 10428-UP
2		• ☆ ELEMENT	1	SN: 10428-UP
3	600-181-8640	• NUT, WING	1	SN: 10428-UP
4	600-181-7511	• WASHER, SEAL	1	SN: 10428-UP
5	04064-01510	• RING, SNAP	1	SN: 10428-UP
6	600-181-7480	• DIVIDER	1	SN: 10428-UP
7	600-181-7460	• GASKET	1	SN: 10428-UP
8	600-181-7470	• PAN, DUST	1	SN: 10428-UP
9	09641-00661	PLATE, INSTRUCTION	1	SN: 10428-UP
10	600-181-7870	CAP	1	SN: 25532-UP
11	20X-01-23121	BRACKET	1	SN: 25532-UP
12	01010-51025	BOLT	3	SN: 25532-UP
13	01643-31032	WASHER	3	SN: 25532-UP
14	07281-01919	CLAMP	2	SN: 25532-UP
15	20X-01-23110	HOSE	1	SN: 25532-UP
16	203-62-41150	COVER	2	SN: 25532-UP
17	08034-00834	BAND	3	SN: 25532-UP
18	07281-00809	CLAMP	2	SN: 25532-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0141A

Get the complete PDF catalogue

Komatsu 4D95L-1 (JPN) K.4D95L-1 INDUSTRIAL TYPE-A HIKOMA MANUFACTURING
TYPE-B MOROOKA S/N 10428-UP (JAPANESE)

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.