


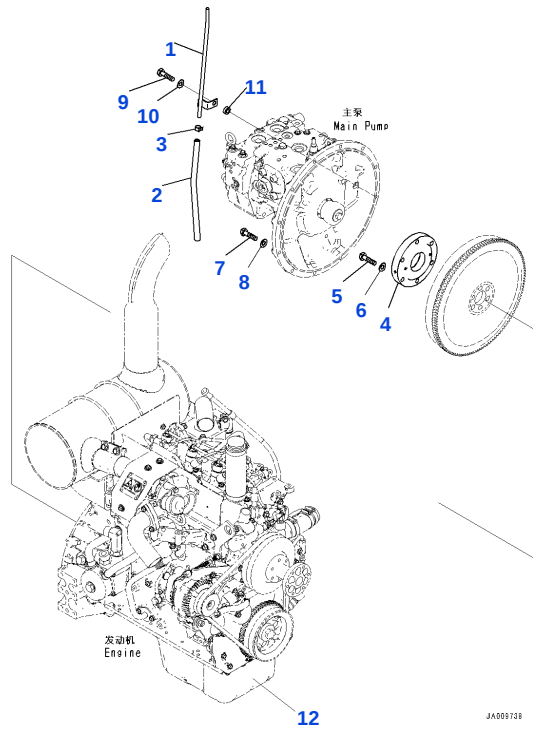


Reference: |B00003

|B00003 ENGINE RELATED PARTS (DRAIN PIPING)

Item	Part No.	Part Name	Qty	Options
1	22B-01-21311	TUBE	1	
2	07260-20936	HOSE	1	
3	07285-00150	CLIP	1	
4	708-3D-12220	COUPLING	1	
5	01010-81245	BOLT	6	
6	01643-31232	WASHER	6	
7	01010-81040	BOLT	11	
8	01643-31032	WASHER	11	
9	01010-81050	BOLT	1	
10	01643-31032	WASHER	1	
11	205-917-1610	COLLAR	1	
12	6271-Q0-DJ21	ENGINE	1	

Reference: |B00003

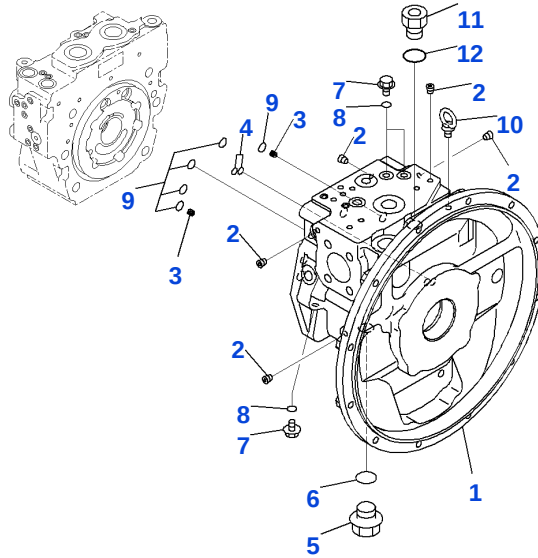


00060236

Reference: |B00004

|B00004 ENGINE RELATED PARTS (MAIN PUMP) (1/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00020	PUMP ASSEMBLY	1	
-	708-3D-01020	• PUMP SUBASSEMBLY	1	
-	708-3D-04130	•• CASE ASSEMBLY, FRONT	1	
1		••• CASE, FRONT	1	
2		••• PLUG, STOCKING	28	
3	708-1L-29340	•• ORIFICE	2	
4	07000-B1009	•• O-RING	2	
5	07044-12412	•• PLUG	1	
6	07002-62434	•• O-RING	1	
7	708-8E-16150	•• PLUG	3	
8	07002-61023	•• O-RING	3	
9	07000-B2012	•• O-RING	5	
10	04530-11018	•• BOLT, EYE	1	
11	07040-12414	•• PLUG	1	
12	07002-62434	•• O-RING	1	

Reference: |B00004

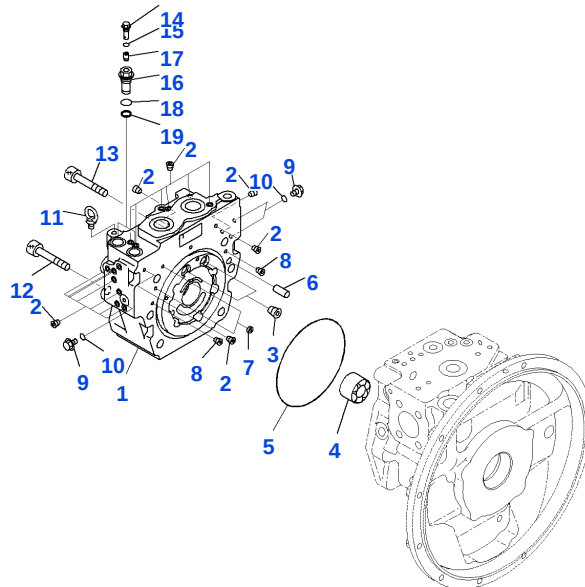


00000237

Reference: |B00005

|B00005 ENGINE RELATED PARTS (MAIN PUMP) (2/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
-	708-3D-01021	• PUMP SUBASSEMBLY	1	
-	708-3D-04220	•• CAP ASSEMBLY, END	1	
1		••• CAP, END	1	
2		••• PLUG	17	
3		••• PLUG	2	
4	708-2L-32260	•• BEARING	1	
5	07000-A5165	•• O-RING	1	
6	04020-01228	•• PIN, DOWEL	1	
7	708-2L-25480	•• FILTER	2	
8	708-1L-29340	•• ORIFICE	2	
9	708-8E-16150	•• PLUG	3	
10	07002-61023	•• O-RING	3	
11	04530-11018	•• BOLT, EYE	1	
12	708-3D-11810	•• BOLT, HEXAGON SOCKET HEAD	3	
13	01252-61450	•• BOLT, HEXAGON SOCKET HEAD	3	
-	708-3M-05110	•• VALVE ASSEMBLY	2	
14		••• PLUG	1	
15		••• O-RING	1	
16		••• HOLDER	1	
17		••• VALVE	1	
18	07002-61823	••• O-RING	1	
19		••• SEAL	1	

Reference: |B00005

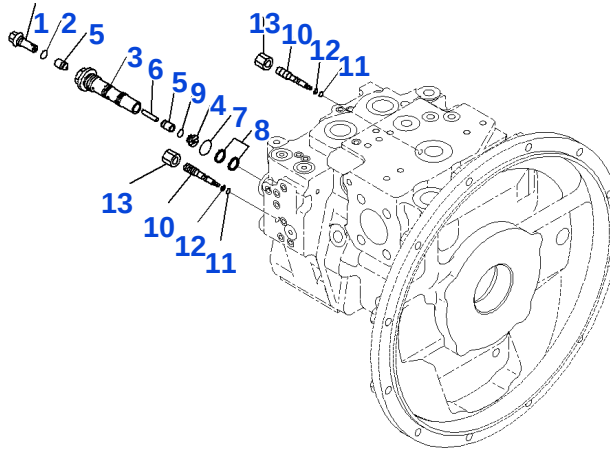


90060238

Reference: |B00006

|B00006 ENGINE RELATED PARTS (MAIN PUMP) (3/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
-	708-3D-01021	• PUMP SUBASSEMBLY	1	
-	708-3M-05210	•• VALVE ASSEMBLY, SHUTTLE	1	
1		••• PLUG	1	
2		••• O-RING	1	
3		••• HOLDER	1	
4		••• SEAT	1	
5		••• VALVE	2	
6		••• PIN	1	
7	07002-61823	••• O-RING	1	
8		••• SEAL	2	
9		••• O-RING	1	
10	708-3M-15211	•• PLUG	2	
11	07000-B1003	•• O-RING	2	
12	07001-01003	•• RING, BACK-UP	2	
13	708-3S-15820	•• NUT	2	

Reference: |B00006

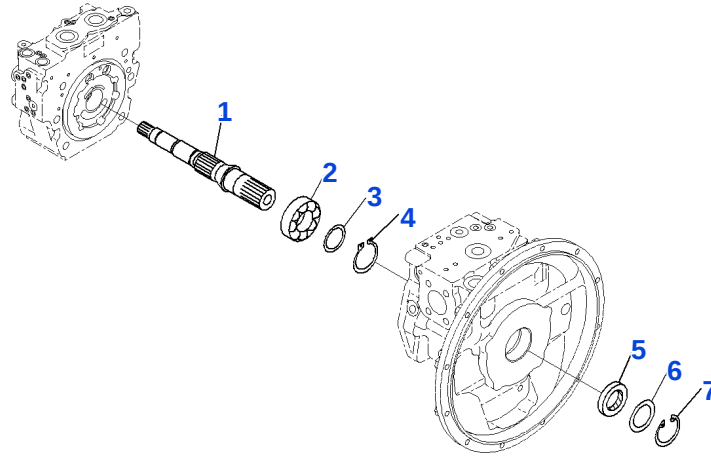


00060239

Reference: |B00007

|B00007 ENGINE RELATED PARTS (MAIN PUMP) (4/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
-	708-3D-01021	• PUMP SUBASSEMBLY	1	
1	708-3D-12130	•• SHAFT	1	
2	708-2L-32150	•• BEARING	1	
3	708-2E-05040	•• WASHER KIT	1	
-		••• WASHER, T=3.1MM	1	
-		••• WASHER, T=3.0MM	1	
-		••• WASHER, T=2.9MM	1	
-		••• WASHER, T=2.8MM	1	
4	708-25-12790	•• RING, SNAP	1	
5	708-25-52861	•• SEAL, OIL	1	
6	708-2L-22160	•• SPACER	1	
7	04065-06825	•• RING, SNAP	1	

Reference: |B00007

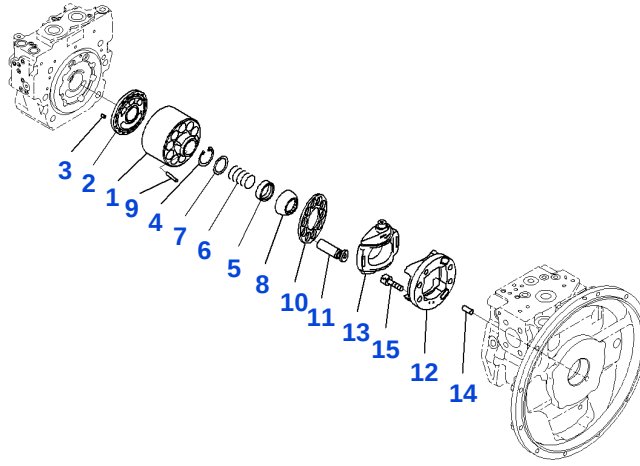


00000240

Reference: |B00008

|B00008 ENGINE RELATED PARTS (MAIN PUMP) (5/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
-	708-3D-01021	• PUMP SUBASSEMBLY	1	
-	708-3D-04320	•• BLOCK ASSEMBLY, FRONT	1	
1		••• CYLINDER BLOCK	1	
2		••• PLATE	1	
3	708-18-13230	•• PIN	1	
4	04065-04818	•• RING, SNAP	1	
5	708-2L-23131	•• SEAT	1	
6	708-2L-33160	•• SPRING	1	
7	708-7L-13140	•• SEAT	1	
8	708-2L-23351	•• GUIDE, RETAINER	1	
9	708-2L-23360	•• PIN	3	
10	708-3D-13330	•• RETAINER, SHOE, SHOE	1	
11	708-3D-13340	•• PISTON SUBASSEMBLY	10	
-	708-3D-04420	•• CRADLE SUBASSEMBLY	1	
12		••• CRADLE	1	
13		••• CAM, ROCKER	1	
14	04020-01228	•• PIN, DOWEL	1	
15	01252-61230	•• BOLT, HEXAGON SOCKET HEAD	4	

Reference: |B00008

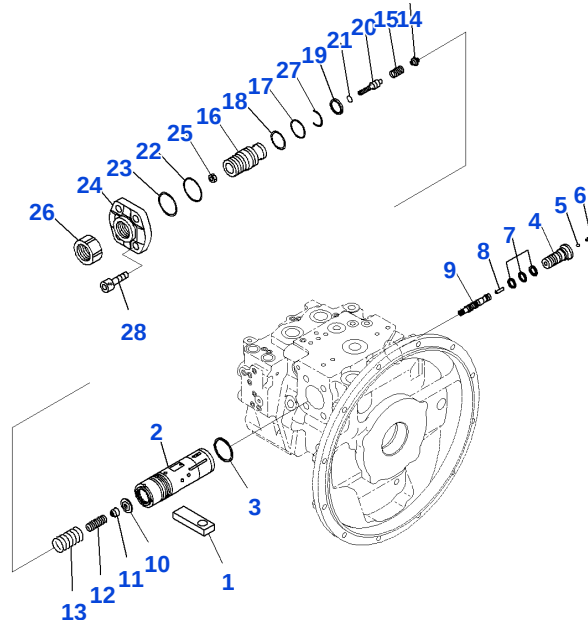


00060241

Reference: |B00009

|B00009 ENGINE RELATED PARTS (MAIN PUMP) (6/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
-	708-3D-01021	• PUMP SUBASSEMBLY	1	
1	708-2L-34120	•• SLIDER	1	
-	708-3D-04610	•• VALVE ASSEMBLY, PC	1	
2		••• PISTON ASSEMBLY, SERVO, SERVO	1	
3		••• SEAL	1	
4		••• PLUG	1	
5	708-2L-35760	••• BALL	1	
6	708-2L-35770	••• PLUG	1	
7		••• SEAL	3	
8	708-3D-15320	••• PIN	1	
9	708-2L-35860	••• SPOOL	1	
10	708-2L-35630	••• RETAINER	1	
11	708-2L-35641	••• SEAT	1	
12	708-3D-15410	••• SPRING	1	
13	708-2L-35730	••• SPRING	1	
14	708-2L-35650	••• SEAT	1	
15	708-3D-15420	••• SPRING	1	
16		••• SCREW	1	
17	07000-B3034	••• O-RING	1	
18	708-2L-35210	••• RING, BACK-UP	1	
19		••• SEAL	1	
20	708-2L-35270	••• PLUG	1	
21	07000-B2011	••• O-RING	1	
22	07000-B3045	••• O-RING	1	
23	708-2L-35750	••• RING, BACK-UP	1	
24	708-2L-34230	••• COVER	1	
25	01580-10806	••• NUT	1	
26	708-2L-35290	••• NUT	1	
27	708-2L-35670	••• RING, WIRE	1	
28	01252-61440	•• BOLT, HEXAGON SOCKET HEAD	4	

Reference: |B00009

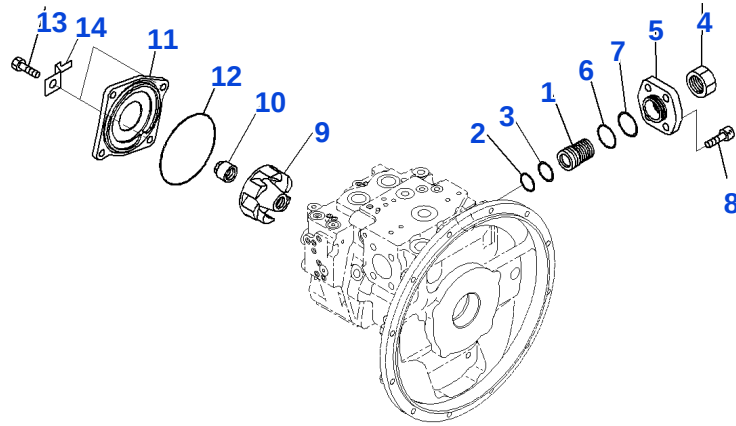



JY010877

Reference: |B00010

|B00010 ENGINE RELATED PARTS (MAIN PUMP) (7/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
-	708-3D-01021	• PUMP SUBASSEMBLY	1	
-	708-1L-04860	•• COVER ASSEMBLY	1	
1	708-2L-34270	••• SCREW	1	
2	07000-B3034	••• O-RING	1	
3	708-2L-35210	••• RING, BACK-UP	1	
4	708-2L-35290	••• NUT	1	
5	708-2L-34260	••• COVER	1	
6	07000-B3045	••• O-RING	1	
7	708-2L-35750	••• RING, BACK-UP	1	
8	01252-61440	•• BOLT, HEXAGON SOCKET HEAD	4	
9	708-3D-11620	•• IMPELLER	1	
10	708-3D-11630	•• NUT	1	
11	708-3D-11730	•• COVER	1	
12	07000-A2145	•• O-RING	1	
13	01010-81230	•• BOLT	4	
14	08193-21012	•• CLIP	2	

Reference: |B00010

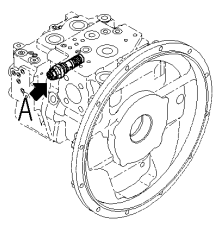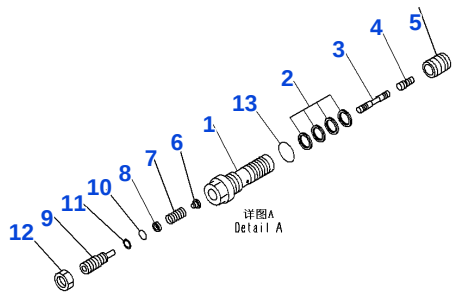


00000243

Reference: |B00011

|B00011 ENGINE RELATED PARTS (MAIN PUMP) (8/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
-	708-3D-04710	• VALVE ASSEMBLY, LS	1	
1		•• SLEEVE	1	
2		•• SEAL	4	
3	708-2G-15460	•• SPOOL	1	
4	708-2L-28540	•• PISTON	1	
5	708-2L-35360	•• SLEEVE	1	
6	708-2L-35331	•• SEAT	1	
7	708-2L-35410	•• SPRING	1	
8	708-2L-35341	•• SEAT	1	
9	708-2L-35351	•• PLUG	1	
10	07000-B1009	•• O-RING	1	
11	07001-01009	•• RING, BACK-UP	1	
12	01583-11408	•• NUT	1	
13	07002-62434	•• O-RING	1	

Reference: |B00011

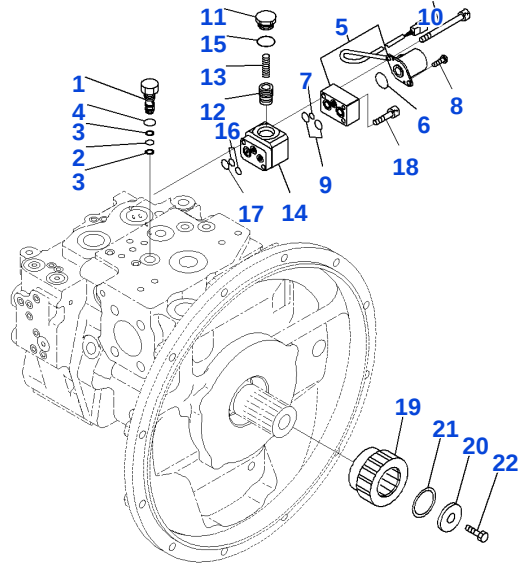

JY018194

Reference: |B00012

|B00012 ENGINE RELATED PARTS (MAIN PUMP) (9/9)

Item	Part No.	Part Name	Qty	Options
-	708-3D-00021	PUMP ASSEMBLY	1	
1	708-1G-15910	• PLUG	1	
2	07000-B1008	• O-RING	1	
3	07001-01008	• RING, BACK-UP	2	
4	07002-61423	• O-RING	1	
5	702-21-58900	• VALVE, PILOT	1	
6	700-80-61260	•• O-RING	1	
7	723-11-19960	•• O-RING	1	
8	702-21-54180	•• SCREW	2	
9	702-21-54910	•• O-RING	2	
10	702-16-55260	• BOLT	2	
-	702-21-56620	• VALVE ASSEMBLY	1	
11	702-21-55920	•• PLUG	1	
12		•• PISTON	1	
13	702-21-56630	•• SPRING	1	
14		•• BLOCK	1	
15	07002-12034	•• O-RING	1	
16	07000-11008	• O-RING	2	
17	722-12-18240	• O-RING	1	
18	01252-60530	• BOLT, HEXAGON SOCKET HEAD	1	
19	708-3D-12210	• SHAFT	1	
20	708-2L-32280	• RETAINER	1	
21	04065-04018	• RING, SNAP	1	
22	01010-81235	• BOLT	1	

Reference: |B00012

Get the complete PDF catalogue

Komatsu PC130-8M0 S/N DBBV0001-up

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.