


FIG. 1101 CYLINDER HEAD

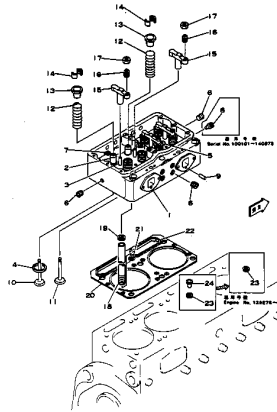

Reference: 1101

030010 CYLINDER HEAD


Item	Part No.	Part Name	Qty	Options
	6610-10-1001	CYLINDER HEAD ASS'Y,WITH VALVE	3	SN: 152140-UP
	6610-10-1000	□ CYLINDER HEAD ASS'Y,WITH VALVE	3	SN: 100101-152139
	6610-10-1101	• CYLINDER HEAD ASS'Y,LESS VALVE	1	SN: 152140-UP
	6610-10-1100	• □ CYLINDER HEAD ASS'Y,LESS VALVE	1	SN: 100101-152139
1		• ☆ HEAD,CYLINDER	1	SN: 100101-UP
2	6610-11-1311	• GUIDE,VALVE	8	SN: .-UP
	6610-11-1310	• □ GUIDE,VALVE	8	SN: 100101-.
	6610-12-1311	• △ GUIDE,VALVE	8	SN: .-UP
3	6610-11-1140	• GUIDE,CROSSHEAD VALVE	4	SN: 100101-UP
4	6610-11-1220	• INSERT (STD)	4	SN: 152140-UP
	6610-11-1120	• □ INSERT (STD)	4	SN: 100101-152139
	6610-19-1220	• INSERT ? 0.13MM (OS)	4	SN: 152140-UP
	6610-19-1120	• □ INSERT ? 0.13MM (OS)	4	SN: 100101-152139
	6610-18-1220	• INSERT ? 0.25MM (OS)	4	SN: 152140-UP
	6610-18-1120	• □ INSERT ? 0.25MM (OS)	4	SN: 100101-152139
	6610-17-1220	• INSERT ? 0.50MM (OS)	4	SN: 152140-UP
	6610-17-1120	• □ INSERT ? 0.50MM (OS)	4	SN: 100101-152139
	6610-16-1220	• INSERT ? 0.75MM (OS)	4	SN: 152140-UP
	6610-16-1120	• □ INSERT ? 0.75MM (OS)	4	SN: 100101-152139
	6610-15-1220	• INSERT ? 1.00MM (OS)	4	SN: 152140-UP
	6610-15-1120	• □ INSERT ? 1.00MM (OS)	4	SN: 100101-152139
5	6610-11-1130	• SLEEVE,INJECTOR	2	SN: 100101-UP
6	02720-41616	• PLUG	6	SN: .-UP
	02720-11616	• □ PLUG	6	SN: 100101-.
7	6610-11-1461	• PLUG	2	SN: .-UP
	6610-11-1460	• □ PLUG	2	SN: 100101-.
8	6610-11-1470	• PLUG	1	SN: 100101-140878
9	6610-11-1420	• PIN,DOWEL	2	SN: 100101-UP
10	6610-41-4210	• VALVE,EXHAUST	4	SN: 100101-UP
11	6610-41-4110	• VALVE,INTAKE	4	SN: 100101-UP
12	6610-41-4410	• SPRING,VALVE	8	SN: 100101-UP
13	6610-41-4510	• GUIDE,VALVE SPRING	8	SN: 100101-UP
14	6600-01-3910	• COLLET,HALF ? VALVE	16	SN: 100101-UP
15	6610-41-5610	CROSSHEAD,VALVE	12	SN: 100101-UP
16	6610-41-5620	SCREW	12	SN: 100101-UP
17	6710-41-5630	NUT	12	SN: 116827-UP
	6600-01-2520	□ NUT	12	SN: 100101-116826
18	6610-21-2610	PIPE,OIL	3	SN: 100101-UP
19	6610-11-1711	GASKET (K1)	3	SN: .-UP
	6610-11-1710	□ GASKET (K1)	3	SN: 100101-.
	6610-11-1080	GASKET ASS'Y,CYLINDER HEAD	3	SN: 100101-129275
20	6610-11-1811	• GASKET,CYLINDER HEAD (K1)	1	SN: 129276-UP
		• ☆ GASKET,CYLINDER HEAD (K1)	1	SN: 100101-129275
21	6610-11-1840	• GROMMET (K1)	1	SN: 100101-UP
22	6610-11-1830	• RING (K1)	2	SN: 100101-UP
23	6610-11-1821	• GROMMET (K1)	8	SN: 129276-UP

Item	Part No.	Part Name	Qty	Options
24	6610-11-1820	•• ☐ GROMMET (K1)	8	SN: 100101-129275
	6610-11-1850	• RETAINER (K1)	8	SN: 100101-129275

Catalog signs: ☐ part above may be used instead ☆ not supplied separately: assembly only Δ semi-finished: additional work required

Reference: 1101

FIG. 1103 ロッカ アーム および ハウジング
ROCKER ARM AND HOUSING

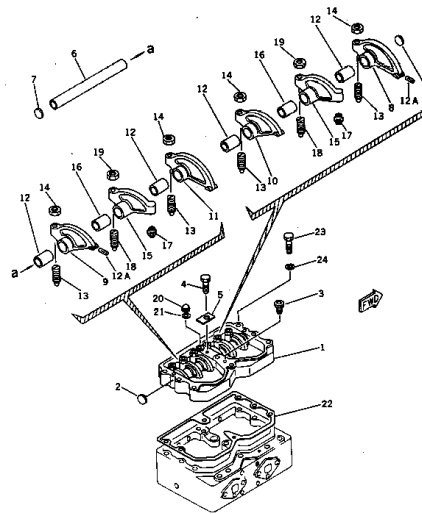

Reference: 1103

030020 ROCKER ARM AND HOUSING


Item	Part No.	Part Name	Qty	Options
	6620-11-7010	HOUSING ASS'Y,ROCKER ARM	3	SN: 100101-UP
	6610-11-7020	• HOUSING ASS'Y,ROCKER ARM	1	SN: 100101-UP
1	6610-11-7110	•• HOUSING	1	SN: 100101-UP
2	6710-11-7150	•• PLUG,EXPANSION	2	SN: 114020-UP
	6610-11-7150	•• □ PLUG,EXPANSION	2	SN: 100101-114019
3	6610-11-7140	• PLUG,VENTILATOR	1	SN: 100101-UP
4	6710-11-7330	• SCREW	1	SN: 114020-UP
	6610-11-7330	• □ SCREW	1	SN: 100101-114019
5	6610-11-7340	• PLATE,LOCK (K1)	1	SN: 100101-114019
	6610-41-5020	• SHAFT ASS'Y,ROCKER ARM	1	SN: 100101-UP
6		•• ☆ SHAFT	1	SN: 100101-UP
7	6610-41-5220	•• PLUG	2	SN: 100101-UP
	6610-41-5030	• ARM ASS'Y,EXHAUST VALVE ? NO.1 ?3 ?5	1	SN: 100101-UP
	6610-41-5050	• ARM ASS'Y,EXHAUST VALVE ? NO.2 ?4 ?6	1	SN: 100101-UP
	6620-41-5030	• ARM ASS'Y,INTAKE VALVE ? NO.1 ?3 ?5	1	SN: 100101-UP
	6620-41-5050	• ARM ASS'Y,INTAKE VALVE ? NO.2 ?4 ?6	1	SN: 100101-UP
	6610-41-5040	•• ARM ASS'Y,EXHAUST VALVE ? NO.1 ?3 ?5	1	SN: 100101-UP
	6610-41-5060	•• ARM ASS'Y,EXHAUST VALVE ? NO.2 ?4 ?6	1	SN: 100101-UP
	6620-41-5040	•• ARM ASS'Y,INTAKE VALVE ? NO.1 ?3 ?5	1	SN: 100101-UP
	6620-41-5060	•• ARM ASS'Y,INTAKE VALVE ? NO.2 ?4 ?6	1	SN: 100101-UP
8		••• ☆ ARM,EXHAUST VALVE ? NO.1 ?3 ?5	1	SN: 100101-UP
9		••• ☆ ARM,EXHAUST VALVE ? NO.2 ?4 ?6	1	SN: 100101-UP
10		••• ☆ ARM,INTAKE VALVE ? NO.1 ?3 ?5	1	SN: 100101-UP
11		••• ☆ ARM,INTAKE VALVE ? NO.2 ?4 ?6	1	SN: 100101-UP
12	6610-41-5330	••• BUSHING	1	SN: 100101-UP
12A	6610-41-5340	••• PIN	1	SN: 100101-UP
13	6610-41-5350	•• SCREW,ADJUSTING	1	SN: 100101-UP
14	6610-41-5360	•• NUT	1	SN: 100101-UP
	6610-41-5070	• ARM ASS'Y,INJECTOR	2	SN: 100101-UP
	6610-41-5080	•• ARM ASS'Y,INJECTOR	1	SN: 100101-UP
15		••• ☆ ARM	1	SN: 100101-UP
16	6710-41-5531	••• BUSHING	1	SN: .-UP
	6710-41-5530	••• □ BUSHING	1	SN: 126436-.
	6610-41-5530	••• □ BUSHING	1	SN: 100101-126435

Item	Part No.	Part Name	Qty	Options
17	6610-41-5540	••• SOCKET,INJECTOR	1	SN: 100101-UP
18	6610-41-5550	•• SCREW,ADJUSTING	1	SN: 100101-UP
19	6600-01-2510	•• NUT	1	SN: 100101-UP
20	6610-11-7310	CAP,LUBRICATING OIL PIPE	3	SN: 100101-UP
21	6610-11-7320	GASKET (K1)	3	SN: 100101-UP
22	6610-11-7811	GASKET (K1)	3	SN: 100101-UP
23	02010-30889	BOLT	19	SN: 100101-UP
24	02310-11632	WASHER,SPRING	19	SN: 100101-.

Catalog signs: ☐ part above may be used instead ☆ not supplied separately: assembly only

Reference: 1103

FIG. 1105 ROCKER ARM HOUSING COVER

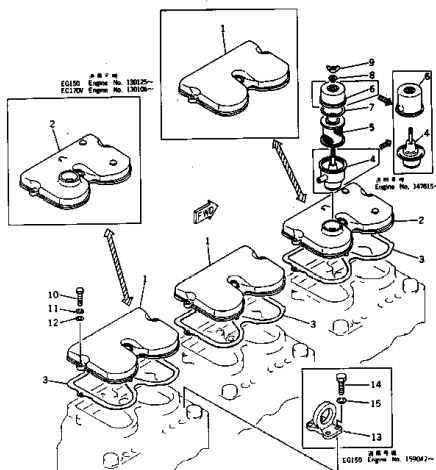

Reference: 1105


030030 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6610-11-8120	COVER	2	SN: 100101-UP
2	6610-11-8110	COVER	1	SN: 100101-UP
3	6610-11-8810	GASKET (K1)	3	SN: 100101-UP
	6620-21-7502	BREATHER ASS'Y	1	SN: 147615-UP
	6620-21-7501	☐ BREATHER ASS'Y	1	SN: 100101-147614
4	6620-21-7512	• BODY	1	SN: 147615-UP
	6620-21-7511	• BODY	1	SN: 100101-147614
5	6620-21-7550	• ELEMENT	1	SN: 100101-UP
6	6620-21-7521	• COVER	1	SN: 147615-UP
	6620-21-7520	• COVER	1	SN: 100101-147614
7	6620-21-7530	• GASKET (K1)	1	SN: 100101-UP
8	6620-21-7562	• GASKET (K1)	1	SN: 147615-UP
	6620-21-7561	• GASKET (K1)	1	SN: 111374-147614
	6620-21-7560	• ☐ GASKET (K1)	1	SN: 100101-111373
9	6620-21-7541	• NUT	1	SN: 147615-UP
	6620-21-7540	• NUT	1	SN: 100101-147614
10	02010-70632	BOLT	9	SN: 172867-UP
	02010-20632	☐ BOLT	9	SN: 100101-172866
11	02310-11224	WASHER,SPRING	9	SN: 100101-UP
12	02300-11320	WASHER	9	SN: 100101-UP

Catalog signs: ☐ part above may be used instead

Reference: 1105

FIG. 1107 コンプレッション リリース
COMPRESSION RELEASE

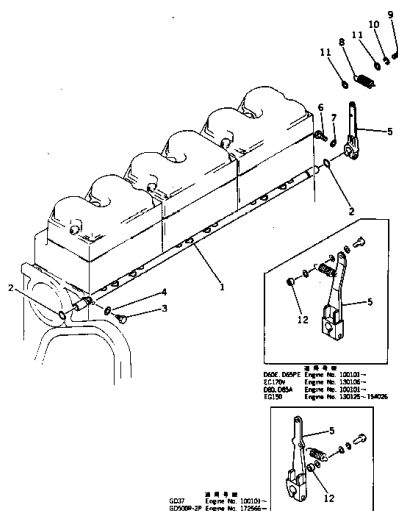


Reference: 1107

030040 COMPRESSION RELEASE

Item	Part No.	Part Name	Qty	Options
1	6623-41-8113	SHAFT,COMPRESSION RELEASE	1	SN: 100101-UP
2	02891-02016	O-RING (K2)	2	SN: 100101-UP
3	6610-41-8710	BOLT	1	SN: 100101-UP
4	6600-01-2620	WASHER	1	SN: 100101-UP
5	6691-41-8210	LEVER,COMPRESSION RELEASE	1	SN: 100101-UP
6	01010-31240	BOLT	1	SN: 100101-UP
7	01602-01236	WASHER,SPRING	1	SN: 100101-UP
8	6610-41-8220	SPRING	1	SN: 100101-UP
9	02030-20525	BOLT	1	SN: 132155-UP
	02030-20522	BOLT	1	SN: 100101-132154
10	02310-11020	WASHER,SPRING	1	SN: 100101-UP
11	02300-11120	WASHER	2	SN: 100101-UP
12	6691-41-8230	SPACER	1	SN: 100101-UP

Reference: 1107

エアインテーク マニホールド および コネクション
FIG. 1114 AIR INTAKE MANIFOLD AND CONNECTION

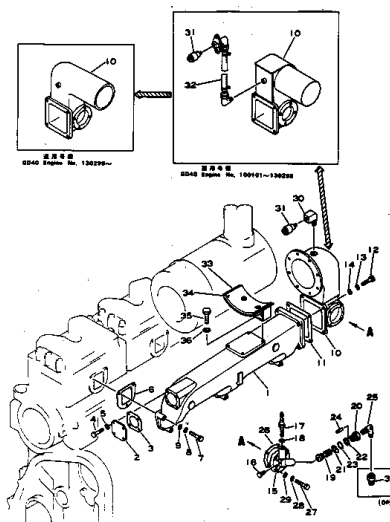

Reference: 1114

030050 AIR INTAKE MANIFOLD AND CONNECTION


Item	Part No.	Part Name	Qty	Options
1	6682-13-4110	MANIFOLD,AIR INTAKE	1	SN: 100101-UP
2	6685-11-4850	COVER	1	SN: 100101-UP
3	6127-11-4640	GASKET (K1)	1	SN: 100101-UP
4	01010-31025	BOLT	4	SN: 100101-UP
5	01602-01030	WASHER,SPRING	4	SN: 100101-UP
6	6610-11-4812	GASKET (K1)	3	SN: 100101-UP
	6610-11-4811	☒ GASKET (K1)	3	SN: (100101-151513)
7	6645-13-4191	BOLT	9	SN: 100101-UP
8	02310-11224	WASHER,SPRING	9	SN: 100101-UP
9	02300-11320	WASHER	9	SN: 100101-UP
10	6691-11-4210	CONNECTOR,AIR INTAKE	1	SN: 100101-UP
11	6682-13-4320	GASKET (K1)	1	SN: 100101-UP
12	01010-31245	BOLT	4	SN: 100101-UP
13	01602-01236	WASHER,SPRING	4	SN: 100101-UP
14	01640-21223	WASHER	4	SN: 100101-UP
15	6675-11-4950	COVER,COLD START	1	SN: 100101-UP
16	6610-21-2720	PLUG	1	SN: 100101-UP
17	600-815-2110	GLOW PLUG,PREHEATER	1	SN: .-UP
	6610-81-4211	GLOW PLUG ASS'Y,PREHEATER	1	SN: 100101-.
18	600-815-2190	• GASKET	1	SN: .-UP
	6610-81-4230	• GASKET	1	SN: 100101-.
	6610-81-4103	NOZZLE ASS'Y,PREHEATER	1	SN: 100101-UP
19	6610-81-4112	• NOZZLE ASS'Y	1	SN: 100101-UP
20	6610-81-4132	• ADAPTER	1	SN: 100101-UP
21	6610-81-4120	• PLATE	1	SN: 100101-UP
22	6610-81-4150	• GASKET	1	SN: 100101-UP
23	6610-81-4240	• O-RING	1	SN: 100101-UP
24	6610-81-4140	• PIN,SPRING	1	SN: 100101-UP
25	6610-81-8820	ELBOW,PRIMING PUMP	1	SN: 100101-UP
26	6675-11-4960	GASKET (K1)	1	SN: 100101-UP
27	01010-30825	BOLT	4	SN: 100101-UP
28	01602-00825	WASHER,SPRING	4	SN: 100101-UP
29	01640-20816	WASHER	4	SN: 100101-UP
30	6110-83-9620	ADAPTER	1	SN: 100101-119082

Item	Part No.	Part Name	Qty	Options
31	08670-00635	INDICATOR,DUST	1	SN: 119083-UP
	6110-83-9610	☐ INDICATOR,DUST	1	SN: 100101-119082
33	6691-11-4510	BRACKET,AIR CLEANER	1	SN: 100101-UP
34	6691-11-4520	FELT	1	SN: 100101-UP
35	01010-31025	BOLT	2	SN: 100101-UP
36	01602-01030	WASHER,SPRING	2	SN: 100101-UP

Catalog signs: ☒ discontinued: use part above ☐ part above may be used instead

Reference: 1114

エアークリーナ
FIG. 1119 AIR CLEANER

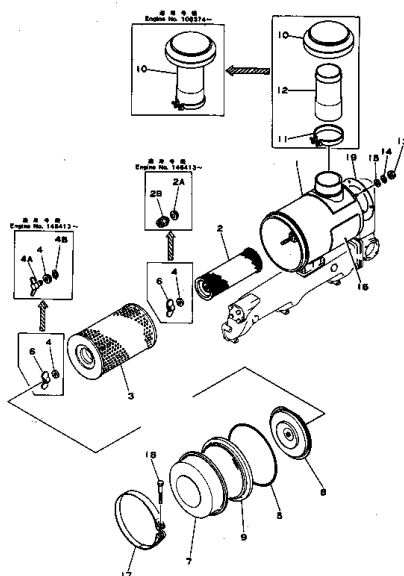

Reference: 1119

030060 AIR CLEANER

Item	Part No.	Part Name	Qty	Options
1	6691-80-7101	AIR CLEANER ASS'Y	1	SN: 146413-UP
	6691-80-7100	□ AIR CLEANER ASS'Y	1	SN: 100101-146412
	6691-81-7101	• AIR CLEANER ASS'Y	1	SN: 146413-UP
	6691-81-7100	• □ AIR CLEANER ASS'Y	1	SN: 100101-146412
	6691-81-7110	•• BODY	1	SN: 100101-UP
	6691-80-7212	•• ELEMENT ASS'Y	1	SN: 146413-UP
	6691-80-7211	•• ELEMENT ASS'Y	1	SN: 114951-146412
	6691-80-7210	•• ■ ELEMENT ASS'Y (6691-80-7211{600-181-4581})	1	SN: 100101-114950
2		••• ☆ ELEMENT, INNER	1	SN: 100101-UP
2A	600-181-7511	••• WASHER, SEAL	1	SN: 146413-UP
2B	600-181-9671	••• NUT	1	SN: 146413-UP
	600-181-3300	••• ELEMENT ASS'Y, OUTER	1	SN: 146413-UP
3		•••• ☆ ELEMENT, OUTER	1	SN: 100101-UP
4	600-181-4591	••• WASHER, SEAL	1	SN: 146413-UP
	600-181-4591	••• WASHER, SEAL	2	SN: 114951-146412
	600-181-4590	••• ■ WASHER, SEAL (600-181-4591{600-181-4581})	2	SN: 100101-114950
4A	600-181-1990	•••• NUT, WING	1	SN: 146413-UP
4B	04064-01510	•••• RING, SNAP	1	SN: 146413-UP
5	6691-81-7220	••• O-RING	1	SN: 100101-UP
6	600-181-4581	•• NUT, WING	2	SN: 114951-UP
	600-181-4580	•• ■ NUT, WING (600-181-4591{600-181-4581})	2	SN: 100101-114950
7	6691-81-7130	•• COVER	1	SN: 100101-UP
8	6691-81-7120	•• BAFFLE	1	SN: 100101-UP
9	600-181-4610	•• CLAMP	1	SN: .-UP
	6691-81-7140	•• □ CLAMP	1	SN: 100101-.
10	6691-81-7712	• CAP	1	SN: 106374-UP
	6691-81-7710	• □ CAP	1	SN: 100101-106373
11	6691-81-7720	• CLAMP ASS'Y	1	SN: 100101-106373
12	6691-81-7730	• PIPE	1	SN: 100101-106373
13	01500-31008	• NUT	8	SN: 100101-UP
14	01602-01030	• WASHER, SPRING	8	SN: 100101-UP

Item	Part No.	Part Name	Qty	Options
15	01641-21016	• WASHER	8	SN: 100101-UP
16	09641-00160	PLATE ? INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 105354-UP
	09637-00160	PLATE ? INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 100101-105353
17	6691-11-4610	BAND ASS'Y,AIR CLEANER	1	SN: 100101-UP
		• ☆ PIN	1	SN: 100101-UP
		• ☆ PIN ? WITH THREAD	1	SN: 100101-UP
18	6643-11-4641	BOLT	1	SN: 111397-UP
	6110-11-4540	□ BOLT	1	SN: 100101-111396
19	6691-11-4380	GASKET (K1)	1	SN: 100101-UP

Catalog signs: □ part above may be used instead ■ may be used instead of described part ☆ not supplied separately: assembly only

Reference: 1119

Get the complete PDF catalogue

Komatsu NH-220-CI-2L S/N 100101-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.