


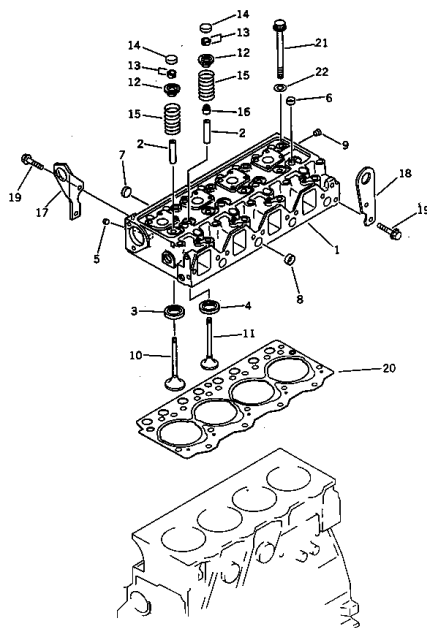


Reference: 0101

030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6205-11-1200	CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 48811-UP
1		• ☆ HEAD,CYLINDER	1	SN: 48811-UP
2	6204-19-1310	• GUIDE,VALVE	8	SN: 48811-UP
3	6209-11-1430	• SEAT,INTAKE VALVE (STD)	4	SN: 48811-UP
	6209-19-1430	• SEAT□ 0.25MM,INTAKE VALVE (OS)	4	SN: 48811-UP
	6209-18-1430	• SEAT□ 0.50MM,INTAKE VALVE (OS)	4	SN: 48811-UP
4	6207-11-1440	• SEAT,EXHAUST VALVE (STD)	4	SN: 48811-UP
	6207-19-1440	• SEAT□ 0.25MM,EXHAUST VALVE (OS)	4	SN: 48811-UP
	6207-18-1440	• SEAT□ 0.50MM,EXHAUST VALVE (OS)	4	SN: 48811-UP
5	07046-41008	• PLUG	4	SN: 48811-UP
6	07046-41810	• PLUG	5	SN: 48811-UP
7	07046-42216	• PLUG	3	SN: 48811-UP
8	07046-42516	• PLUG	12	SN: 48811-UP
9	02720-40104	• PLUG	1	SN: 48811-UP
10	6209-41-4110	VALVE,INTAKE	4	SN: 48811-UP
11	6209-41-4210	VALVE,EXHAUST	4	SN: 48811-UP
12	6204-41-4510	SEAT,SPRING	8	SN: 48811-UP
13	6204-41-4520	COTTER	16	SN: 48811-UP
14	6204-41-4550	CAP	8	SN: 48811-UP
15	6204-41-4431	SPRING,VALVE	8	SN: 48811-UP
16	6204-41-4540	SEAL (K1)	4	SN: 48811-UP
17	6206-11-1930	HANGER,FRONT	1	SN: 48811-UP
18	6206-11-1910	HANGER,REAR	1	SN: 48811-UP
19	01435-01020	BOLT	4	SN: 48811-UP
20	6205-11-1813	GASKET,HEAD (K1)	1	SN: 48811-UP
	6205-11-1812	☒ GASKET,HEAD (K1)	1	SN: (48811-91653)
21	6204-13-1610	BOLT	17	SN: 48811-UP
22	01643-51232	WASHER	17	SN: 99737-UP
	01643-31232	☐ WASHER	17	SN: 48811-99736

Catalog signs: ☆ not supplied separately: assembly only ☒ discontinued: use part above ☐ part above may be used instead

Reference: 0101

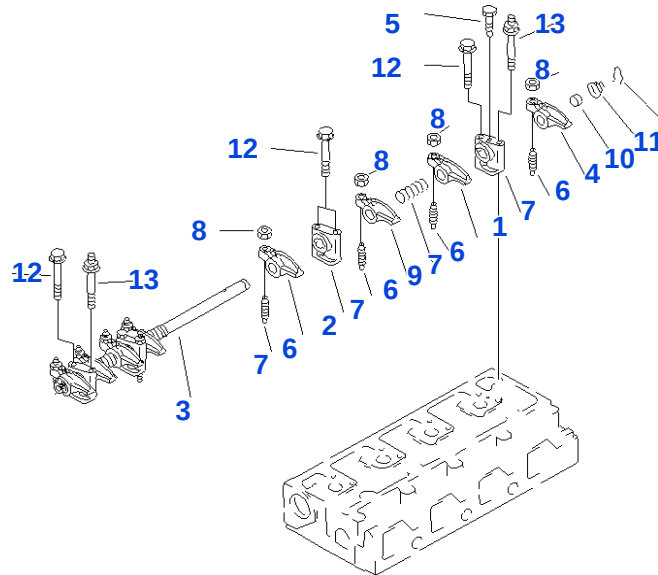

PE30139


Reference: 0111

030020 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
1	6204-41-5110	BRACKET	1	SN: 48811-UP
2	6204-41-5120	BRACKET	3	SN: 48811-UP
	6202-43-5200	SHAFT ASS'Y	1	SN: 48811-UP
3		• ☆ SHAFT	1	SN: 48811-UP
4	6221-41-5540	• PLUG	2	SN: 48811-UP
5	6221-41-5310	BOLT	1	SN: 48811-UP
6	6202-43-5410	ARM,ROCKER	8	SN: 48811-UP
7	6221-41-5410	SCREW,ADJUST	8	SN: 48811-UP
8	6221-41-5420	NUT	8	SN: 48811-UP
9	6202-43-5320	SPRING	3	SN: 48811-UP
10	6221-41-5520	SPRING	2	SN: 48811-UP
11	6136-41-5330	CLIP	2	SN: 48811-UP
12	01435-00865	BOLT	5	SN: 48811-UP
13	6204-41-5710	BOLT	3	SN: 48811-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0111

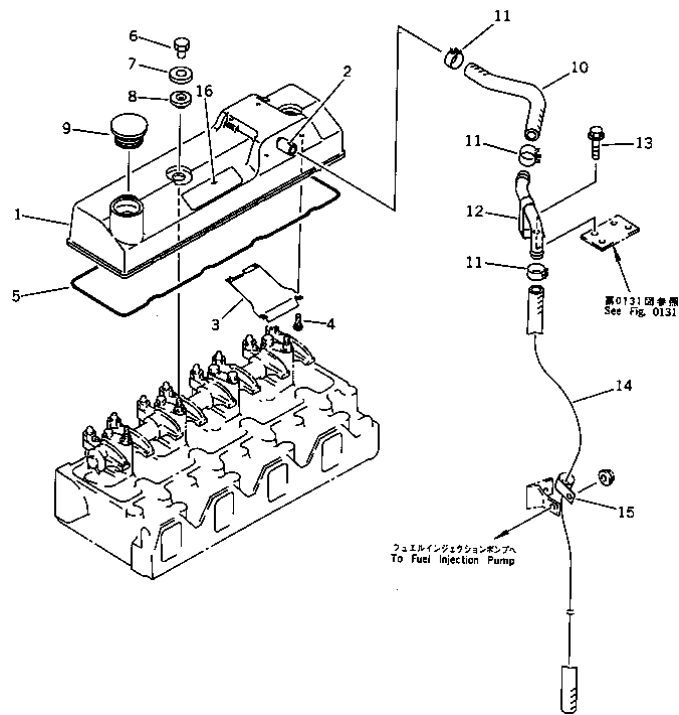


Reference: 0115

030030 CYLINDER HEAD COVER

Item	Part No.	Part Name	Qty	Options
	6205-11-8300	HEAD COVER ASS'Y	1	SN: 48811-UP
1	6205-11-8110	• COVER,HEAD	1	SN: 48811-UP
2	6207-11-8170	• TUBE	1	SN: 48811-UP
3	6207-11-8140	• PLATE	1	SN: 48811-UP
4	04418-02550	• SCREW	4	SN: 48811-UP
5	6204-11-8810	O-RING (K1)	1	SN: 48811-UP
6	6136-11-8120	NUT	3	SN: 48811-UP
7	6136-11-8130	WASHER	3	SN: 48811-UP
8	6136-11-8142	PACKING (K1)	3	SN: 48811-UP
9	6204-11-8610	CAP,OIL	1	SN: 48811-UP
10	07286-01616	HOSE,BREATHER	1	SN: 53425-UP
	07286-01620	HOSE,BREATHER	1	SN: 48811-53424
11	07285-00180	CLIP	3	SN: 48811-UP
12	6205-11-8930	TUBE,BREATHER	1	SN: 48811-UP
13	01435-20614	BOLT	1	SN: 48811-UP
14	07286-01680	HOSE	1	SN: 101880-UP
	07286-01675	☐ HOSE	1	SN: 48811-101879
15	08036-02514	CLIP	1	SN: 50259-UP
	600-050-2710	☐ CLAMP	1	SN: 48811-50258
16	6204-81-2210	PLATE [□] NAME,(LIMITED SUPPLY) (ENGLISH)	1	SN: 48811-UP
	6204-81-2240	PLATE [□] NAME,(LIMITED SUPPLY) (SPANISH)	1	SN: 59717-UP
	6204-81-2260	PLATE [□] NAME,(LIMITED SUPPLY) (GERMAN)	1	SN: 59717-UP
	6204-81-2270	PLATE [□] NAME,(LIMITED SUPPLY) (INDONESIAN)	1	SN: 59717-UP
	6204-81-2290	PLATE [□] NAME,(LIMITED SUPPLY) (FRENCH)	1	SN: 59717-UP
	6204-81-2310	PLATE [□] NAME,(LIMITED SUPPLY) (ITALIAN)	1	SN: 59717-UP

Catalog signs: ☐ part above may be used instead

Reference: 0115

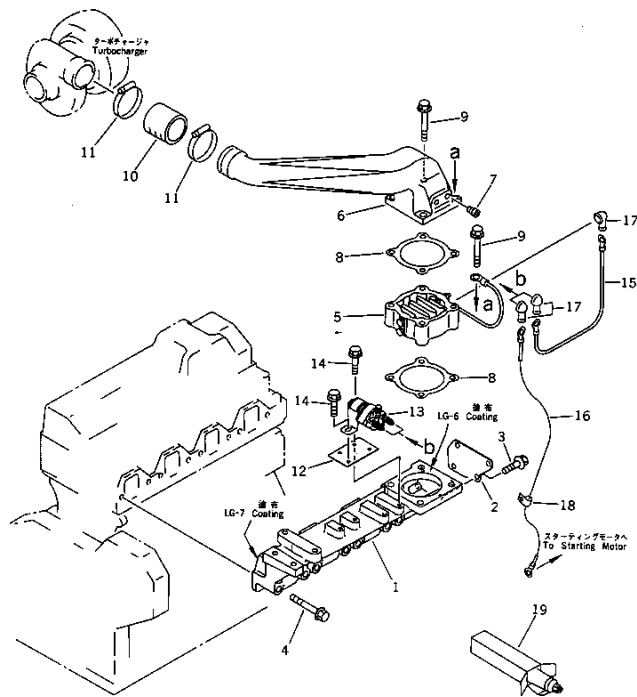


Reference: 0131

030040 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
	6204-11-4120	INTAKE MANIFOLD A.	1	SN: 48811-UP
1	6204-11-4130	• MANIFOLD,INTAKE	1	SN: 48811-UP
2	6204-11-4140	• PLATE	1	SN: 48811-UP
3	01435-00812	• BOLT	4	SN: 48811-UP
4	01435-21075	BOLT	8	SN: 48811-UP
5	600-815-2341	HEATER,RIBBON	1	SN: 48811-UP
6	6205-11-4310	CONNECTOR,AIR	1	SN: 48811-UP
7	07043-50108	PLUG	1	SN: 48811-UP
8	6136-11-4820	GASKET (K1)	2	SN: 48811-UP
9	01435-21070	BOLT	4	SN: 48811-UP
10	6207-11-4370	HOSE	1	SN: 48811-UP
11	07281-00709	CLAMP	2	SN: 48811-UP
12	6205-81-5510	PLATE	1	SN: 48811-UP
13	600-815-2170	SWITCH,HEATER	1	SN: 48811-UP
14	01435-20612	BOLT	3	SN: 48811-UP
15	6151-81-4410	WIRE□ 265MM	1	SN: 48811-UP
16	6205-81-4710	WIRE	1	SN: 48811-UP
17	08038-00519	CAP	3	SN: 48811-UP
18	08036-10810	CLIP	1	SN: 48811-UP
19	09920-00150	LIQUID GASKET,LG-7□ 150G	-2	SN: 48811-UP

Reference: 0131

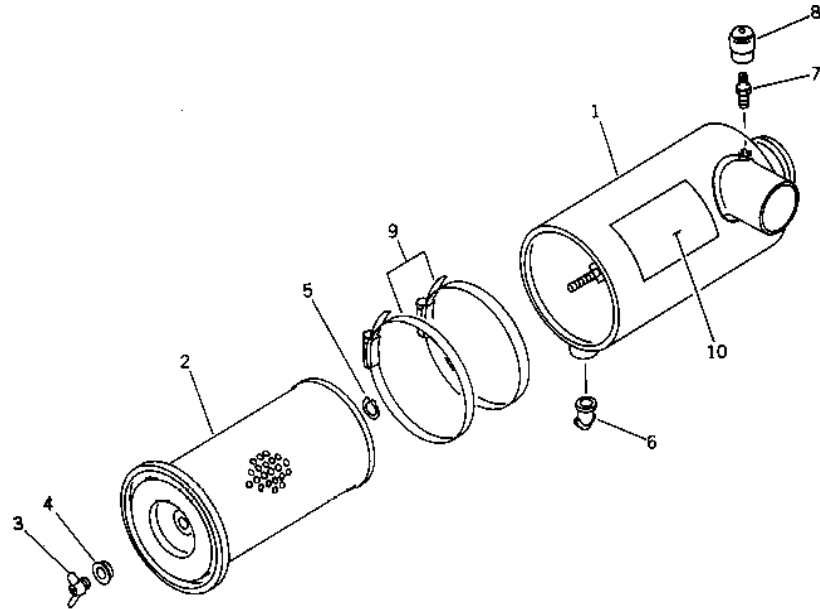


Reference: 0141

030050 AIR CLEANER (SINGLE ELEMENT TYPE)

Item	Part No.	Part Name	Qty	Options
1	6205-81-7210	BODY	1	SN: 48811-UP
	600-181-9460	ELEMENT ASS'Y	1	SN: 48811-UP
2		• ☆ ELEMENT	1	SN: 48811-UP
3	600-181-8640	• NUT,WING	1	SN: 48811-UP
4	600-181-7511	• WASHER,SEAL	1	SN: 48811-UP
5	04064-01510	• RING,SNAP	1	SN: 48811-UP
6	600-181-9890	VALVE	1	SN: 48811-UP
7	6205-81-7190	CONNECTOR	1	SN: 48811-UP
8	08670-12001	INDICATOR,DUST	1	SN: 48811-UP
9	07281-02169	CLAMP	2	SN: 48811-UP
10	09637-00661	PLATE▯ INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 48811-UP
	09637-05661	PLATE▯ INSTRUCTION,(INDONESIAN)	1	SN: 48811-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0141

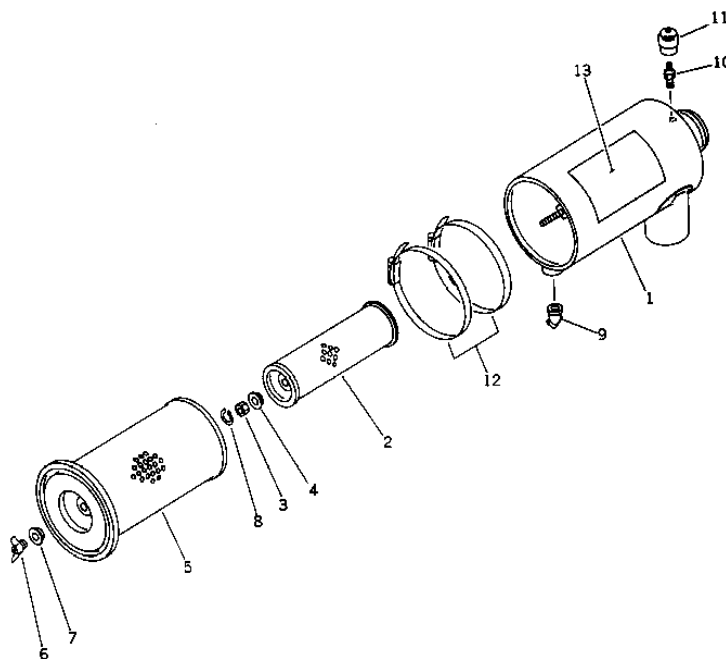


Reference: 0142

030060 AIR CLEANER (DOUBLE ELEMENT TYPE)

Item	Part No.	Part Name	Qty	Options
1	6205-81-7210	BODY	1	SN: 48811-UP
	600-181-9450	ELEMENT ASS'Y	1	SN: 48811-UP
2		• ☆ ELEMENT,INNER	1	SN: 48811-UP
3	600-181-9631	• NUT	1	SN: 48811-UP
4	600-181-7511	• WASHER,SEAL	1	SN: 48811-UP
	600-181-9460	• ELEMENT ASS'Y,OUTER	1	SN: 48811-UP
5		• • ☆ ELEMENT,OUTER	1	SN: 48811-UP
6	600-181-8640	• • NUT,WING	1	SN: 48811-UP
7	600-181-7511	• • WASHER,SEAL	1	SN: 48811-UP
8	04064-01510	• • RING,SNAP	1	SN: 48811-UP
9	600-181-9890	VALVE	1	SN: 48811-UP
10	6205-81-7190	CONNECTOR	1	SN: 48811-UP
11	08670-12001	INDICATOR,DUST	1	SN: 48811-UP
12	07281-02169	CLAMP	2	SN: 48811-UP
13	09637-00161	PLATE▯ INSTRUCTION,(JAPANESE-ENGLISH)	1	SN: 48811-UP
	09637-05161	PLATE▯ INSTRUCTION,(INDONESIAN)	1	SN: 48811-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0142

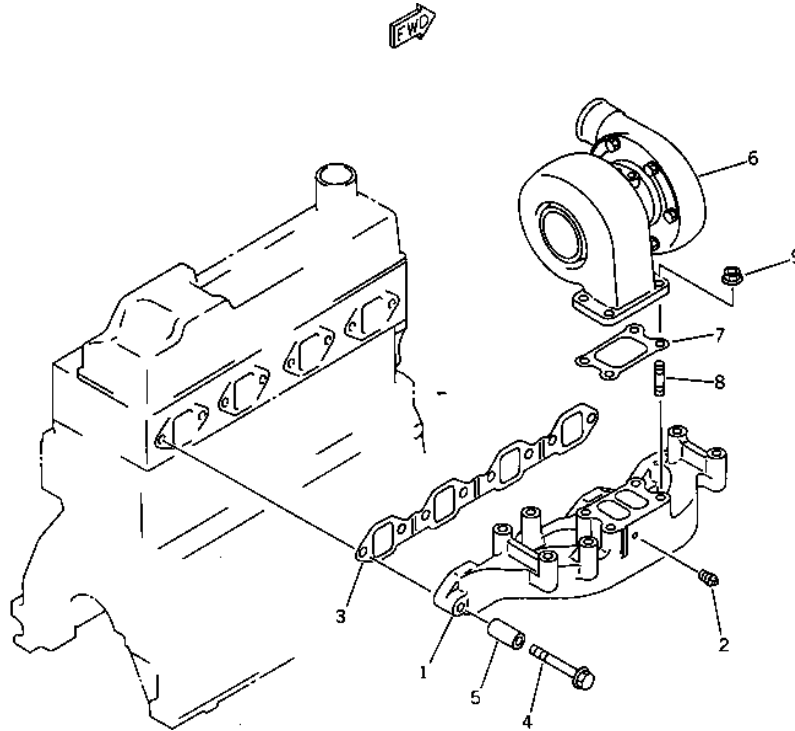


Reference: 0151

030070 EXHAUST MANIFOLD AND TURBOCHARGER

Item	Part No.	Part Name	Qty	Options
1	6205-11-5111	MANIFOLD,EXHAUST	1	SN: 48811-UP
2	07042-20108	PLUG	1	SN: 48811-UP
3	6205-11-5810	GASKET (K1)	1	SN: 48811-UP
4	01435-01090	BOLT	8	SN: 48811-UP
5	6134-11-5120	SPACER	8	SN: 48811-UP
6	6205-81-8110	TURBOCHARGER ASS'Y,(SEE FIG.0155)	1	SN: 48811-UP
7	6207-11-5580	GASKET (K1)	1	SN: 48811-UP
8	01140-61025	STUD	4	SN: 48811-UP
9	6142-12-5850	NUT	4	SN: 48811-UP

Reference: 0151

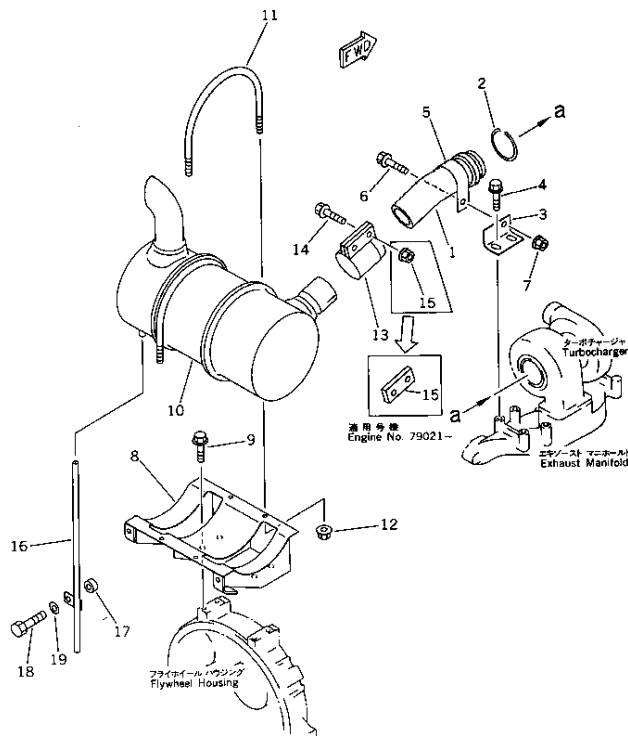


Reference: 0161

030080 MUFFLER AND CONNECTION

Item	Part No.	Part Name	Qty	Options
1	6205-11-5620	PIPE	1	SN: 48811-UP
2	6207-11-5380	RING,SEAL	1	SN: 48811-UP
3	6207-11-5990	BRACKET	1	SN: 48811-UP
4	01435-01020	BOLT	2	SN: 48811-UP
5	6205-11-5930	CLIP	1	SN: 48811-UP
6	01435-01025	BOLT	1	SN: 48811-UP
7	01584-01008	NUT	1	SN: 48811-UP
8	6205-11-5530	BRACKET	1	SN: 48811-UP
9	01435-01025	BOLT	4	SN: 48811-UP
10	6205-11-5220	MUFFLER	1	SN: 48811-UP
11	6206-11-5980	U-BOLT	2	SN: 48811-UP
12	01584-00806	NUT	4	SN: 48811-UP
13	6206-11-5910	CLAMP	1	SN: 48811-UP
14	01435-01235	BOLT	2	SN: 48811-UP
15	6206-11-5850	PLATE,LOCK	1	SN: 79717-UP
	01584-01210	□ NUT	2	SN: 48811-79716
16	6205-11-5460	TUBE	1	SN: 48811-UP
17	175-79-33240	SPACER	1	SN: 48811-UP
18	01010-51050	BOLT	1	SN: 48811-UP
19	01643-31032	WASHER	1	SN: 48811-UP

Catalog signs: □ part above may be used instead

Reference: 0161

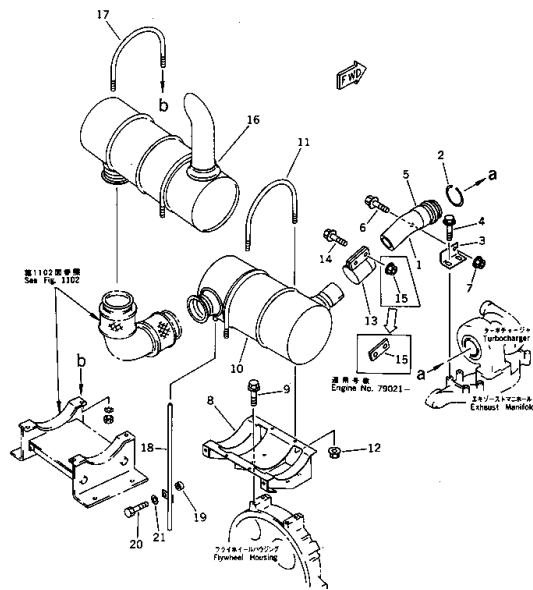


Reference: 0162

030090 MUFFLER AND CONNECTION (NOISE SUPPRESSION SPEC.) (#48811-104408)

Item	Part No.	Part Name	Qty	Options
1	6205-11-5620	PIPE	1	SN: 48811-104408
2	6207-11-5380	RING,SEAL	1	SN: 48811-104408
3	6207-11-5990	BRACKET	1	SN: 48811-104408
4	01435-01020	BOLT	2	SN: 48811-104408
5	6205-11-5930	CLIP	1	SN: 48811-104408
6	01435-01025	BOLT	1	SN: 48811-104408
7	01584-01008	NUT	1	SN: 48811-104408
8	6205-11-5530	BRACKET	1	SN: 48811-104408
9	01435-01025	BOLT	4	SN: 48811-104408
10	6205-11-5230	MUFFLER	1	SN: 48811-104408
11	6206-11-5980	U-BOLT	2	SN: 48811-104408
12	01584-00806	NUT	4	SN: 48811-104408
13	6206-11-5910	CLAMP	1	SN: 48811-104408
14	01435-01235	BOLT	2	SN: 48811-104408
15	6206-11-5850	PLATE,LOCK	1	SN: 79717-104408
	01584-01210	□ NUT	2	SN: 48811-79716
16	6205-11-5240	MUFFLER	1	SN: 48811-104408
17	6206-11-5980	U-BOLT	2	SN: 48811-104408
18	6205-11-5460	TUBE	1	SN: 48811-104408
19	175-79-33240	SPACER	1	SN: 48811-104408
20	01010-51050	BOLT	1	SN: 48811-104408
21	01643-31032	WASHER	1	SN: 48811-104408

Catalog signs: □ part above may be used instead

Reference: 0162

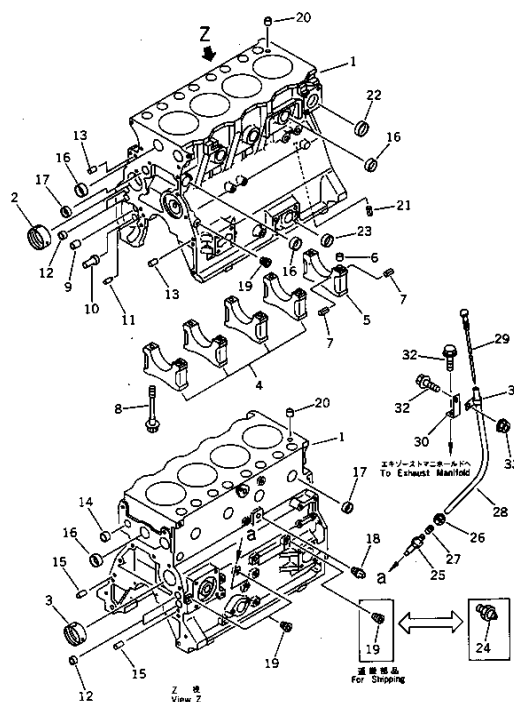

Reference: 0201

060010 CYLINDER BLOCK

Item	Part No.	Part Name	Qty	Options
	6205-21-1401	CYLINDER BLOCK ASS'Y	1	SN: 48811-UP
1		• ☆ BLOCK,CYLINDER	1	SN: 48811-UP
2	6204-21-1410	• BUSHING,CAMSHAFT	1	SN: 48811-UP
3	6206-21-1420	• BUSHING,CAMSHAFT	2	SN: 48811-UP
4	6204-29-1210	• △ CAP,MAIN METAL□ NO.1□2□3□4	4	SN: 48811-UP
5	6204-29-1220	• △ CAP,MAIN METAL□ NO.5	1	SN: 48811-UP
6	6141-21-1530	• RING,DOWEL	2	SN: 48811-UP
7	04025-00408	• PIN,SPRING	4	SN: 48811-UP
8	6204-21-1610	• BOLT	10	SN: 48811-UP
9	6204-51-1711	• BUSHING,OIL PUMP	1	SN: 48811-UP
10	6204-51-1620	• SHAFT,OIL PUMP	1	SN: 48811-UP
11	6136-52-1620	• PIN,DOWEL□ OIL PUMP	1	SN: 48811-UP
12	07046-41810	• PLUG,EXPANSION	4	SN: 48811-UP
13	04020-00820	• PIN,DOWEL	2	SN: 48811-UP
14	07046-42216	• PLUG	1	SN: 48811-UP
15	04020-01228	• PIN,DOWEL	2	SN: 48811-UP
16	07046-43016	• PLUG,EXPANSION	7	SN: 48811-UP
17	07046-42516	• PLUG,EXPANSION	5	SN: 48811-UP
18	07042-10312	• PLUG	1	SN: 48811-UP
19	07043-50108	• PLUG	6	SN: 48811-UP
20	6140-21-1130	• BUSHING,DOWEL	2	SN: 48811-UP
21	6207-21-1190	• PIN,ROLL	4	SN: 48811-UP
22	07046-44016	PLUG	1	SN: 48811-UP
23	07046-23016	PLUG	1	SN: 48811-UP
24	08073-00505	SWITCH	1	SN: 48811-UP
25	6204-21-5510	GUIDE,BASE	1	SN: 48811-UP
26	6150-21-5930	NUT	1	SN: 48811-UP
27	6150-21-5920	COLLAR	1	SN: 48811-UP
28	6205-21-5430	GUIDE,OIL GAUGE	1	SN: 48811-UP
29	6205-21-5360	GAUGE,OIL	1	SN: 48811-UP
30	6205-21-5740	BRACKET	1	SN: 48811-UP
31	6206-21-5520	CLIP	1	SN: 48811-UP
32	01435-21020	BOLT	2	SN: 48811-UP
33	01584-01008	NUT	1	SN: 48811-UP

Get the complete PDF catalogue

Komatsu S4D95L-1B S/N 48811-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.