


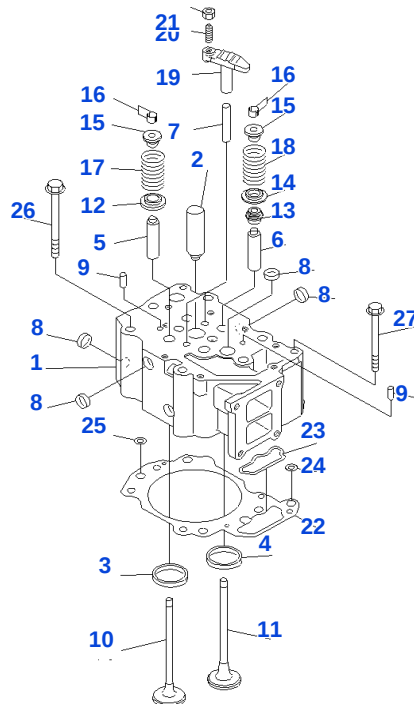

Reference: 0101A


030010 CYLINDER HEAD(#26761-)

Item	Part No.	Part Name	Qty	Options
	6151-11-1100	CYLINDER HEAD ASS'Y,VALVE LESS	6	SN: 11574-UP
1		• ☆ HEAD,CYLINDER	1	SN: 11574-UP
2	6136-11-1130	• SLEEVE	1	SN: 11574-UP
3	6150-11-1331	• INSERT,INTAKE VALVE (STD)	2	SN: 11574-UP
	6150-19-1331	• INSERT□ 0.25MM,INTAKE VALVE (OS)	2	SN: 11574-UP
	6150-18-1331	• INSERT□ 0.50MM,INTAKE VALVE (OS)	2	SN: 11574-UP
	6150-17-1331	• INSERT□ 0.75MM,INTAKE VALVE (OS)	2	SN: 11574-UP
	6150-16-1331	• INSERT□ 1.00MM,INTAKE VALVE (OS)	2	SN: 11574-UP
4	6150-11-1320	• INSERT,EXHAUST VALVE (STD)	2	SN: 11574-UP
	6150-19-1320	• INSERT□ 0.25MM,EXHAUST VALVE (OS)	2	SN: 11574-UP
	6150-18-1320	• INSERT□ 0.50MM,EXHAUST VALVE (OS)	2	SN: 11574-UP
	6150-17-1320	• INSERT□ 0.75MM,EXHAUST VALVE (OS)	2	SN: 11574-UP
	6150-16-1320	• INSERT□ 1.00MM,EXHAUST VALVE (OS)	2	SN: 11574-UP
5	6150-12-1341	• GUIDE,INTAKE VALVE	2	SN: 11574-UP
6	6150-12-1351	• GUIDE,EXHAUST VALVE	2	SN: 11574-UP
7	6150-11-1140	• GUIDE	2	SN: 11574-UP
8	6162-13-1150	• PLUG	8	SN: 11574-UP
9	04020-00820	• PIN,DOWEL	2	SN: 11574-UP
10	6150-41-4111	VALVE,INTAKE	12	SN: 11574-UP
11	6150-41-4210	VALVE,EXHAUST	12	SN: 11574-UP
12	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 11574-UP
13	6140-41-4540	SEAL,EXHAUST VALVE (K1)	12	SN: 11574-UP
14	6150-41-4430	SEAT,LOWER	12	SN: 11574-UP
15	6150-41-4510	SEAT,UPPER	24	SN: 11574-UP
16	6136-42-4520	COTTER	48	SN: 11574-UP
17	6150-41-4420	SPRING,INTAKE	12	SN: 11574-UP
18	6150-41-4411	SPRING,EXHAUST	12	SN: 11574-UP
19	6150-41-5611	CROSSHEAD	12	SN: 11574-UP
20	6150-41-5620	SCREW	12	SN: 11574-UP
21	6150-41-5630	NUT	12	SN: 11574-UP
22	6150-17-1812	GASKET (K1)	6	SN: 26761-UP
23	6150-11-1920	• GROMMET,OIL	1	SN: 26761-UP
24	6150-11-1930	• GROMMET,OIL	1	SN: 26761-UP
25	6150-11-1940	• GROMMET,WATER	4	SN: 26761-UP

Item	Part No.	Part Name	Qty	Options
26	6150-11-1610	BOLT	36	SN: 11574-UP
27	6150-81-9160	BOLT	6	SN: 11574-UP

Catalog signs: ☆ not supplied separately; assembly only

Reference: 0101A

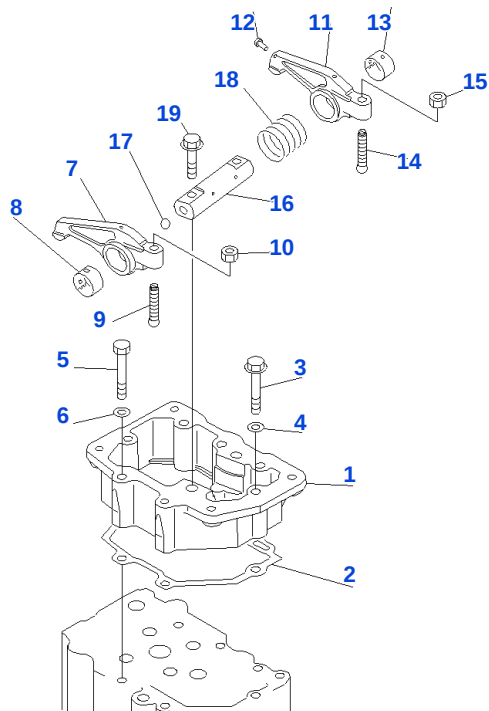

P 630625


Reference: 0111

030020 ROCKER ARM AND HOUSING

Item	Part No.	Part Name	Qty	Options
1	6150-11-7110	HOUSING,ROCKER ARM	6	SN: 11574-UP
2	6150-11-7810	GASKET (K1)	6	SN: 11574-UP
3	6150-81-9140	BOLT	40	SN: 11574-UP
4	01643-31032	WASHER	40	SN: 29854-UP
	01640-21016	◆ WASHER	40	SN: 11574-29853
5	01010-51095	BOLT	2	SN: 11574-UP
6	01640-21016	WASHER	2	SN: 11574-UP
	6150-41-5400	ARM ASS'Y,INTAKE	6	SN: 11574-UP
7		• ☆ ARM,ROCKER	1	SN: 11574-UP
8	6150-41-5420	• BUSHING	1	SN: 11574-UP
9	6150-41-5540	SCREW	6	SN: 11574-UP
10	01582-01008	NUT	6	SN: 11574-UP
	6150-41-5500	ARM ASS'Y,EXHAUST	6	SN: 11574-UP
11		• ☆ ARM,ROCKER	1	SN: 11574-UP
12	6162-43-5340	• RIVET	1	SN: 11574-UP
13	6150-41-5420	• BUSHING	1	SN: 11574-UP
14	6150-41-5540	SCREW	6	SN: 11574-UP
15	01582-01008	NUT	6	SN: 11574-UP
	6150-41-5300	ROCKER ARM SHAFT A.	6	SN: 11574-UP
16		• ☆ SHAFT	1	SN: 11574-UP
17	6150-81-8420	• BALL	1	SN: 11574-UP
18	6150-41-5320	SPRING	6	SN: 11574-UP
19	6150-81-9370	BOLT	12	SN: 11574-UP

Catalog signs: ◆ interchangeable with part above ☆ not supplied separately: assembly only

Reference: 0111

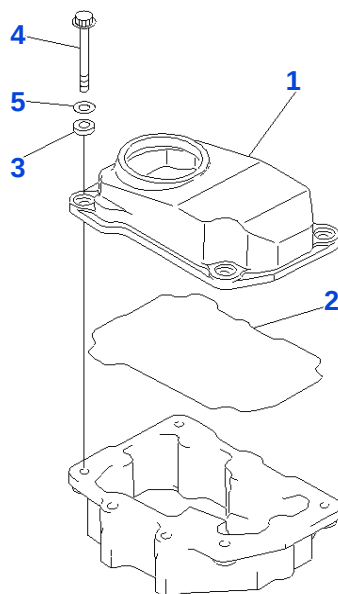

PG30209


Reference: 0115

030030 ROCKER ARM HOUSING COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8111	COVER,HEAD	6	SN: 12981-UP
	6150-11-8110	☐ COVER,HEAD	6	SN: 11574-12980
2	6150-11-8810	GASKET (K1)	6	SN: 11574-UP
3	6150-11-8820	RUBBER (K1)	24	SN: 11574-UP
4	6150-81-9370	BOLT	24	SN: 21383-UP
	6150-81-9170	☐ BOLT	24	SN: 13134-21382
	6150-81-9230	BOLT	24	SN: 11574-13133
5	01640-21016	WASHER	24	SN: 11574-UP

Catalog signs: ☐ part above may be used instead

Reference: 0115

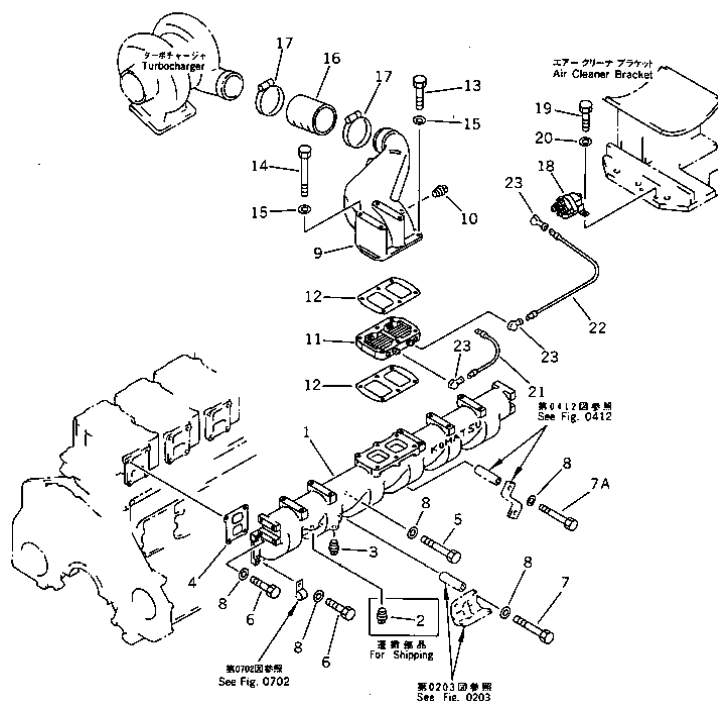


Reference: 0132

030040 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
	6151-11-4910	INTAKE MANIFOLD A.	1	SN: 26688-UP
1		• ☆ MANIFOLD,INTAKE	1	SN: 26688-UP
2	07042-00415	• PLUG	1	SN: 26688-UP
3	07042-00108	• PLUG	2	SN: 26688-UP
4	6150-11-4810	GASKET (K1)	6	SN: 26688-UP
5	01011-51010	BOLT	8	SN: 26688-UP
6	01010-51030	BOLT	13	SN: 26688-UP
7	01011-51000	BOLT	2	SN: 26688-UP
7A	01011-51045	BOLT	1	SN: 26688-UP
8	01640-21016	WASHER	24	SN: 26688-UP
9	6151-11-4311	CONNECTOR	1	SN: 26688-UP
10	07042-00108	PLUG	1	SN: 26688-UP
11	600-815-3810	HEATER	1	SN: 26688-UP
12	6150-11-4820	GASKET (K1)	2	SN: 26688-UP
13	01010-51055	BOLT	2	SN: 26688-UP
14	01011-51065	BOLT	4	SN: 26688-UP
15	01640-21016	WASHER	6	SN: 26688-UP
16	6151-11-4410	HOSE	1	SN: 26688-UP
17	07281-01029	CLAMP	2	SN: 26688-UP
18	600-815-2170	SWITCH,HEATER	1	SN: 26688-UP
19	01010-50610	BOLT	2	SN: 26688-UP
20	01640-20610	WASHER	2	SN: 26688-UP
21	6678-81-4340	WIRE□ 170MM	1	SN: 26688-UP
22	6151-81-4470	WIRE□ 200MM	1	SN: 26688-UP
23	08038-00519	CAP	3	SN: 26688-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0132

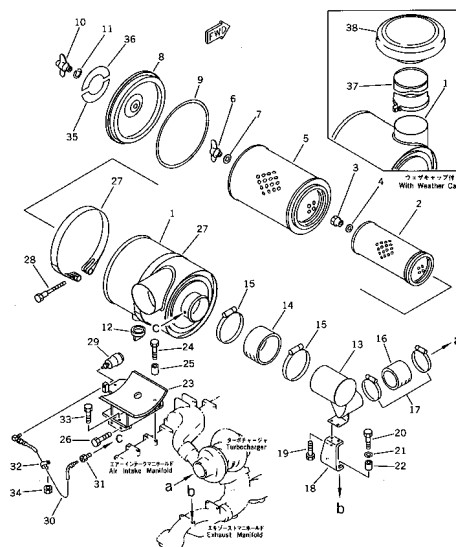

Reference: 0142


030050 AIR CLEANER AND MOUNTING

Item	Part No.	Part Name	Qty	Options
1	6151-81-7860	BODY	1	SN: 26688-UP
	6151-81-7870	BODY,(WITH WEATHER CAP)	1	SN: 26688-UP
	600-181-1600	ELEMENT ASS'Y	1	SN: 26688-UP
	600-181-1160	ELEMENT ASS'Y,(TUNNEL SPEC.)	1	SN: 26688-UP
2		• ☆ ELEMENT,INNER	1	SN: 26688-UP
		• ☆ ELEMENT,INNER (TUNNEL SPEC.)	1	SN: 26688-UP
3	600-181-4370	• NUT	1	SN: 26688-UP
4	600-181-7511	• WASHER,SEAL	1	SN: 26688-UP
	600-181-1660	• ELEMENT ASS'Y,OUTER	1	SN: 26688-UP
5		• • ☆ ELEMENT,OUTER	1	SN: 26688-UP
6	561-02-62550	• • NUT,WING	1	SN: 26688-UP
7	600-181-4440	• • GASKET	1	SN: 26688-UP
	600-181-1980	COVER ASS'Y	1	SN: 26688-UP
8	600-181-1690	• COVER	1	SN: 26688-UP
9	600-181-1770	• GASKET	1	SN: 26688-UP
10	561-02-62370	• NUT ASS'Y	1	SN: 26688-UP
11	561-02-12380	• CLIP	1	SN: 26688-UP
12	600-181-1370	VALVE	1	SN: 26688-UP
13	6151-11-4291	CONNECTOR	1	SN: 26688-UP
14	7700-75-2860	HOSE	1	SN: 26688-UP
15	07281-01589	CLAMP	2	SN: 26688-UP
16	6151-11-4450	HOSE	1	SN: 26688-UP
17	07281-01159	CLAMP	2	SN: 26688-UP
18	6151-11-4610	BRACKET	1	SN: 26688-UP
19	01010-51025	BOLT	2	SN: 26688-UP
20	01010-31040	BOLT	2	SN: 26688-UP
21	01640-21016	WASHER	2	SN: 26688-UP
22	6631-11-5630	SPACER	2	SN: 26688-UP
23	6151-11-4542	BRACKET	1	SN: 26688-UP
24	01010-51080	BOLT	4	SN: 26688-UP
25	6152-51-5520	SPACER	4	SN: 26688-UP
26	01010-51025	BOLT	2	SN: 26688-UP
27	6151-11-4840	BAND ASS'Y	2	SN: 26688-UP
	6691-21-6550	• PIN	1	SN: 26688-UP
	6691-21-6560	• PIN□ WITH THREAD	1	SN: 26688-UP
28	6643-11-4641	BOLT	2	SN: 26688-UP
29	08670-02001	INDICATOR,DUST	1	SN: 40624-UP
	08670-01635	□ INDICATOR,DUST	1	SN: 26688-40623
30	08671-50100	HOSE	1	SN: 26688-UP
31	6138-81-8990	JOINT	1	SN: 26688-UP
32	08036-01414	CLIP	1	SN: 26688-UP
33	01010-51020	BOLT	1	SN: 26688-UP
34	01580-11008	NUT	1	SN: 26688-UP
35	09639-00305	PLATE□ INSTRUCTION	1	SN: 26688-UP
36	09638-50305	PLATE□ CAUTION	1	SN: 26688-UP
37	6151-81-7950	EXTENSION	1	SN: 26688-UP
38	566-02-42200	CAP,WEATHER	1	SN: .-UP

Item	Part No.	Part Name	Qty	Options
	600-181-1511	◆ CAP,WEATHER	1	SN: 26688-

Catalog signs: ☆ not supplied separately: assembly only ☐ part above may be used instead ◆ interchangeable with part above

Reference: 0142

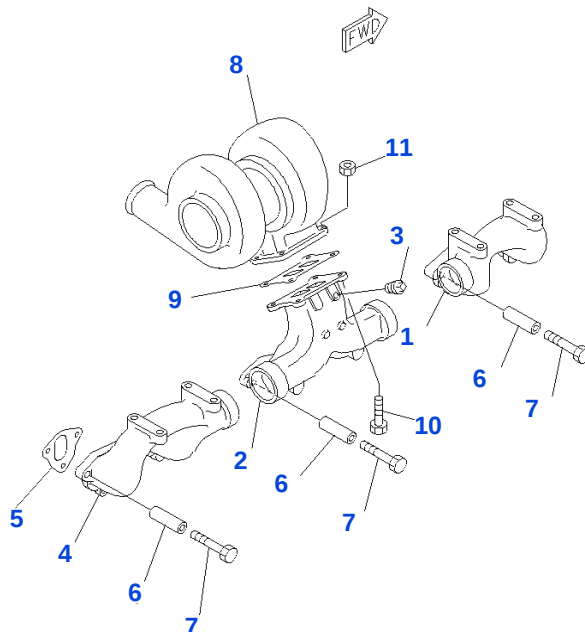


Reference: 0151

030060 EXHAUST MANIFOLD AND TURBOCHARGER

Item	Part No.	Part Name	Qty	Options
1	6151-11-5110	MANIFOLD,EXHAUST□ FRONT	1	SN: 11574-UP
2	6151-11-5140	MANIFOLD,EXHAUST□ CENTER	1	SN: 47046-UP
	6151-11-5150	◆ MANIFOLD,EXHAUST□ CENTER	1	SN: 11574-47045
3	07042-00108	PLUG	1	SN: 11574-UP
4	6151-11-5130	MANIFOLD,EXHAUST□ REAR	1	SN: 11574-UP
5	6150-11-5810	GASKET (K1)	6	SN: 11574-UP
6	6136-11-5120	SPACER	18	SN: 11574-UP
7	01011-31000	BOLT	18	SN: 11574-UP
8	6152-81-8310	TURBOCHARGER A.	1	SN: 23904-UP
	6152-81-8300	TURBOCHARGER A.	1	SN: 12606-23903
	6152-81-8200	□ TURBOCHARGER A.	1	SN: 11574-12605
9	6151-11-5710	GASKET (K1)	1	SN: 11574-UP
10	01050-61045	BOLT	4	SN: 11574-UP
11	6114-11-5590	NUT	4	SN: 11574-UP

Catalog signs: ◆ interchangeable with part above □ part above may be used instead

Reference: 0151

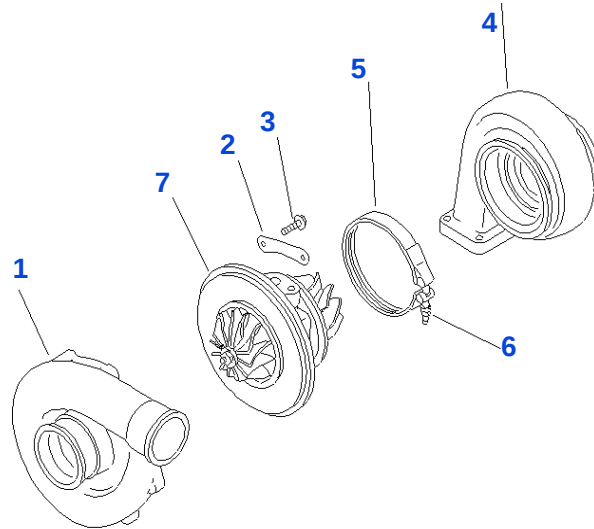


PE3T015

Reference: 0155A

030070 TURBOCHARGER (EXCEPT JAPAN)(#23904-)

Item	Part No.	Part Name	Qty	Options
	6152-81-8310	TURBOCHARGER A.,(TA4532) THE AIR RESEARCH PART NUMBER IS THAT GA IS REMOVED FROM KOMATSU PART NUMBER LISTED BELOW.	1	SN: 23904-UP
1	GA443209-0028	• HOUSING,COMPRESSOR	1	SN: 23904-UP
2	GA410987-0000	• CLAMP	4	SN: 23904-UP
3	GA400627-0810	• BOLT	8	SN: 23904-UP
4	GA442262-0004	• HOUSING,TURBINE	1	SN: 23904-UP
	GA400738-5460	• V-BAND ASS'Y	1	SN: 23904-UP
5	GA400738-0460	• V-BAND	1	SN: 23904-UP
6	GA400580-0000	• NUT,LOCK	1	SN: 23904-UP
7	GA441398-5052	• CENTER HOUSING A.	1	SN: 23904-UP

Reference: 0155A

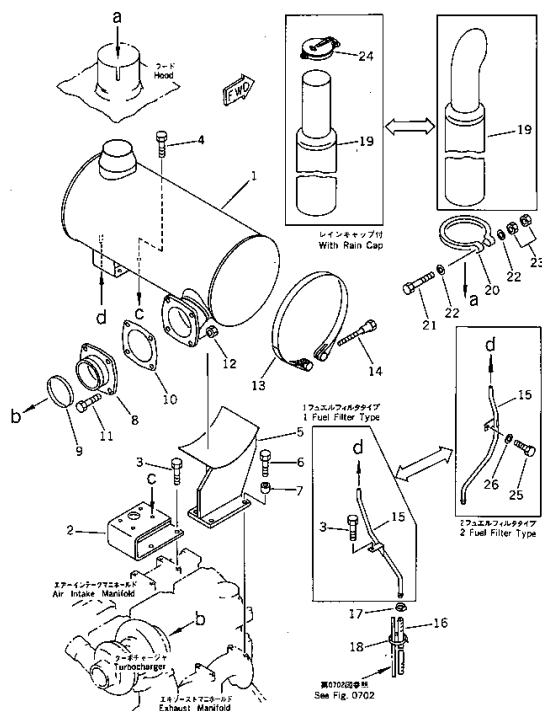

Reference: 0162

030080 MUFFLER AND MOUNTING

Item	Part No.	Part Name	Qty	Options
1	6151-11-5581	MUFFLER	1	SN: 26688-UP
2	6151-11-5651	BRACKET	1	SN: 26688-UP
3	01010-31025	BOLT	4	SN: 26688-UP
4	01010-51025	BOLT	4	SN: 26688-UP
5	6151-11-5641	BRACKET	1	SN: 26688-UP
6	01010-31040	BOLT	4	SN: 26688-UP
7	6631-11-5630	SPACER	4	SN: 26688-UP
8	6151-11-5380	JOINT	1	SN: 26688-UP
9	6151-11-5280	RING	1	SN: 26688-UP
10	6150-11-5750	GASKET (K1)	1	SN: 26688-UP
11	01050-61245	BOLT	4	SN: 26688-UP
12	6685-11-5550	NUT	4	SN: 26688-UP
13	6151-11-5770	BAND ASS'Y	1	SN: 26688-UP
	6110-11-4520	• PIN	1	SN: 26688-UP
	6110-11-4530	• PIN α WITH THREAD	1	SN: 26688-UP
14	6643-11-4641	BOLT	1	SN: 26688-UP
15	6151-11-5841	TUBE,(1 FUEL FILTER TYPE)	1	SN: 26688-UP
	6150-11-5980	TUBE,(2 FUEL FILTER TYPE)	1	SN: 26688-UP
16	07261-20911	HOSE	1	SN: 26688-UP
17	07280-01920	CLAMP	1	SN: 26688-UP
18	08034-00414	BAND	2	SN: 26688-UP
19	6151-11-5590	PIPE,EXHAUST (WITH GLASSWOOL)	1	SN: 26688-UP
	6138-11-5650	PIPE,EXHAUST (WITHOUT GLASSWOOL)	1	SN: 26688-UP
	6150-11-5690	PIPE,EXHAUST (WITH RAIN CAP)	1	SN: 26688-UP
20	6138-11-5620	CLAMP	1	SN: 26688-UP
21	6693-12-5550	BOLT	1	SN: 26688-UP
22	6151-11-5670	WASHER	2	SN: 26688-UP
23	01582-01411	NUT	2	SN: 26688-UP
24	6150-11-5770	CAP,RAIN	1	SN: 26688-UP
25	01010-51035	BOLT,(SEE FIG.0413)	1	SN: 26688-UP
26	01640-21016	WASHER,(SEE FIG.0413)	1	SN: 26688-UP

Reference: 0162

Get the complete PDF catalogue

Komatsu S6D125-1JJ S/N 11574-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.