


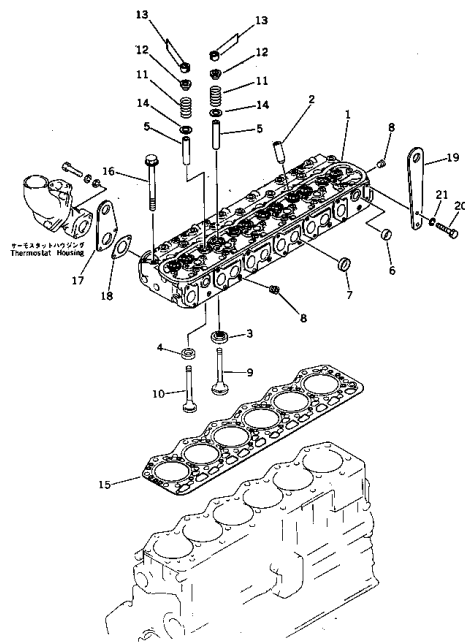


Reference: 0101

030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6138-12-1100	CYLINDER HEAD ASS'Y,VALVE LESS	1	SN: 50001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 50001-UP
2	6136-11-1130	• SLEEVE,HOLDER	6	SN: 50001-UP
3	6138-12-1310	• SEAT,INTAKE VALVE	6	SN: 50001-UP
4	6136-12-1320	• SEAT,EXHAUST VALVE	6	SN: 50001-UP
5	6136-19-1430	• △ GUIDE,VALVE	12	SN: 50001-UP
6	07046-42816	• PLUG	13	SN: 50001-UP
7	07046-44016	• PLUG	9	SN: 50001-UP
8	07043-50108	• PLUG	7	SN: 50001-UP
9	6138-42-4110	VALVE,INTAKE	6	SN: 50001-UP
10	6136-42-4210	VALVE,EXHAUST	6	SN: 50001-UP
11	6136-42-4410	SPRING,VALVE	12	SN: 50001-UP
12	6136-42-4510	GUIDE,SPRING	12	SN: 50001-UP
13	6136-42-4520	COTTER,VALVE	24	SN: 50001-UP
14	6136-41-4530	SEAT,SPRING	12	SN: 50001-UP
15	6138-19-1810	GASKET,HEAD (K1)	1	SN: 50001-UP
16	6136-12-1610	BOLT,HEAD	26	SN: 50001-UP
17	6136-11-1910	HANGER,FRONT	1	SN: 50001-UP
18	6136-11-1821	GASKET (K1)	1	SN: 50001-UP
19	6136-11-1920	HANGER,REAR	1	SN: 54027-UP
	6136-11-1930	HANGER,REAR	1	SN: 50001-54026
20	01435-01020	BOLT	2	SN: 60951-UP
	01010-31025	□ BOLT	2	SN: 50001-60950
21	01602-01030	WASHER,SPRING	2	SN: 50001-60950

Catalog signs: ☆ not supplied separately: assembly only △ semi-finished: additional work required □ part above may be used instead

Reference: 0101

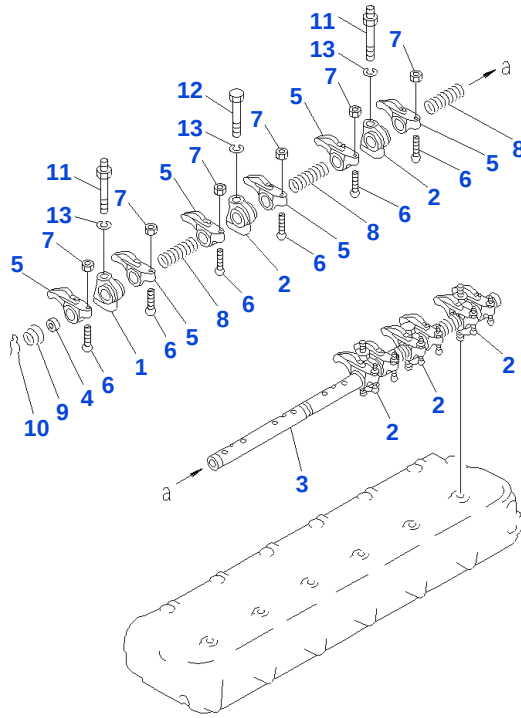

P W 2 6 7 7


Reference: 0111

030020 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
	6138-42-5100	ROCKER ARM ASS'Y	1	SN: 50001-UP
1	6138-42-5110	• BRACKET	1	SN: 50001-UP
2	6138-42-5120	• BRACKET	5	SN: 50001-UP
	6138-42-5020	• ROCKER ARM SHAFT A.	1	SN: 50001-UP
3		• ☆ SHAFT	1	SN: 50001-UP
4	6142-42-5550	• • PLUG	2	SN: 50001-UP
5	6136-42-5130	• ARM,ROCKER	12	SN: 50001-UP
6	6136-42-5140	• SCREW,ADJUST	12	SN: 50001-UP
7	01580-00806	• NUT,LOCK	12	SN: 50001-UP
8	6136-41-5310	• SPRING,ROCKER	5	SN: 50001-UP
9	6136-41-5320	• SPRING,CONICAL	2	SN: 50001-UP
10	6136-41-5330	• CLIP	2	SN: 50001-UP
11	6136-41-5131	STUD	4	SN: 50001-UP
12	01010-31280	BOLT	2	SN: 50001-UP
13	01602-01236	WASHER,SPRING	6	SN: 50001-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0111

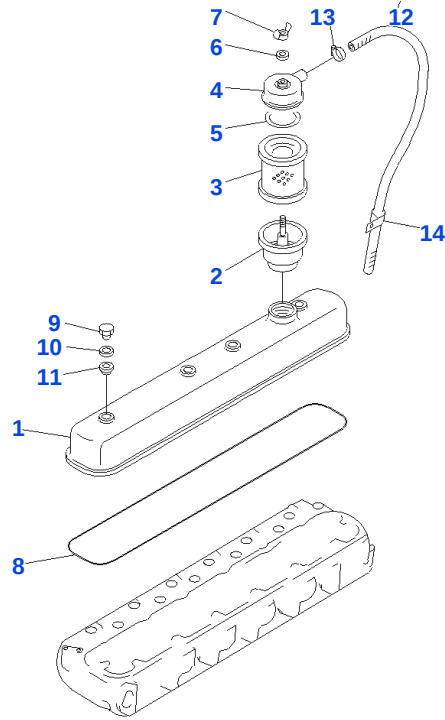


PJ30036

Reference: 0116

030030 CYLINDER HEAD COVER(#53889-54270)

Item	Part No.	Part Name	Qty	Options
1	6138-11-8300	HEAD COVER ASS'Y	1	SN: 53889-54270
	6136-11-8150	• COVER,HEAD	1	SN: 53889-54270
	6138-11-8401	• BREATHER ASS'Y	1	SN: 53889-54270
2	6138-11-8412	•• BODY	1	SN: 53889-54270
3	6138-11-8431	•• ELEMENT	1	SN: 53889-54270
4	6138-11-8420	•• COVER	1	SN: 53889-54270
5	6620-21-7530	••• GASKET (K1)	1	SN: 53889-54270
6	600-181-6510	•• SEAL	1	SN: 53889-54270
7	6138-11-8450	•• NUT,WING	1	SN: 53889-54270
8	6136-11-8812	O-RING (K1)	1	SN: 53889-54270
9	6136-11-8120	NUT	4	SN: 53889-54270
10	6136-11-8130	WASHER	4	SN: 53889-@
11	6136-11-8142	PACKING (K1)	4	SN: 53889-@
12	6136-11-8851	HOSE	1	SN: 53889-@
13	07280-02523	CLAMP	1	SN: 53889-@
14	6600-01-5950	CLIP	1	SN: 53889-@

Reference: 0116

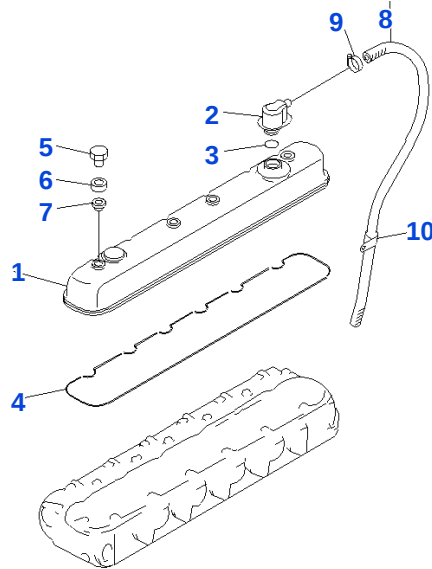

PJ32885


Reference: 0116A

030040 CYLINDER HEAD COVER(#54271-)

Item	Part No.	Part Name	Qty	Options
1	6136-11-8151	COVER,HEAD	1	SN: 54271-UP
2	6150-21-6750	BREATHER	1	SN: 54271-UP
3	6114-21-5190	O-RING (K1)	1	SN: 54271-UP
4	6136-11-8814	O-RING (K1)	1	SN: 54271-UP
5	6134-11-8120	NUT	4	SN: 54271-UP
6	6136-11-8130	WASHER	4	SN: 53889-UP
7	6136-11-8142	PACKING (K1)	4	SN: 53889-UP
8	6138-11-8851	HOSE	1	SN: 53889-UP
9	07285-00230	CLIP	1	SN: 57313-UP
	07285-00220	◆ CLIP	1	SN: 56846-57312
	07280-02523	□ CLAMP	1	SN: 53889-56845
10	6600-01-5950	CLIP	1	SN: 53889-UP

Catalog signs: ◆ interchangeable with part above □ part above may be used instead

Reference: 0116A

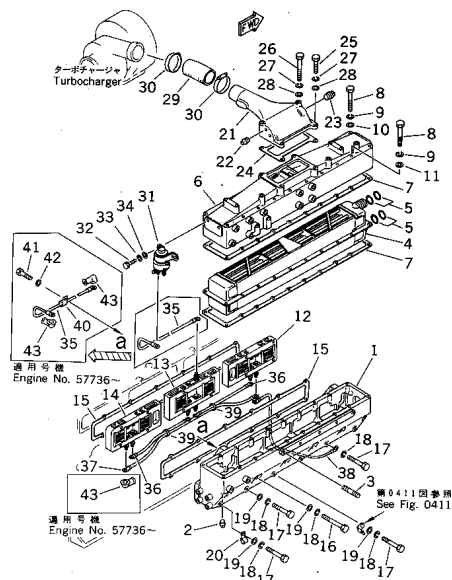

Reference: 0131


030050 AIR INTAKE MANIFOLD AND AFTER COOLER

Item	Part No.	Part Name	Qty	Options
1	6138-11-4113	MANIFOLD,INTAKE	1	SN: 50001-UP
2	07042-00108	PLUG	2	SN: 54151-UP
	07042-00108	PLUG	4	SN: 50001-54150
3	01160-50825	STUD	5	SN: 50001-UP
4	6138-11-4630	CORE ASS'Y	1	SN: 50001-UP
5	6162-63-6240	O-RING (K1)	4	SN: 50001-UP
6	6138-11-4611	COVER	1	SN: 50001-UP
7	6138-11-4620	GASKET (K1)	2	SN: 50001-UP
8	01436-20800	BOLT	20	SN: 60953-UP
	6140-11-8160	☐ BOLT	20	SN: 50001-60952
9	01602-00825	WASHER,SPRING	20	SN: 50001-60952
10	01640-00816	WASHER	19	SN: 50001-60952
11	01640-00816	WASHER	1	SN: 50001-UP
12	600-815-2620	HEATER,RIBBON	1	SN: 50001-UP
13	600-815-2630	HEATER,RIBBON	1	SN: 50001-UP
14	600-815-2640	HEATER,RIBBON	1	SN: 50001-UP
15	6138-11-4810	GASKET (K1)	2	SN: 50001-UP
16	6138-11-4890	BOLT	6	SN: 61164-UP
	6138-11-4880	☐ BOLT	6	SN: 50001-61163
17	6222-11-4910	BOLT	6	SN: 61164-UP
	6138-11-4870	☐ BOLT	6	SN: 50001-61163
18	01602-00825	WASHER,SPRING	12	SN: 50001-61163
19	01640-20816	WASHER	11	SN: 50001-61163
20	08036-10810	CLIP	1	SN: 50001-UP
21	6138-11-4310	CONNECTOR,AIR	1	SN: 50001-UP
22	07042-00108	PLUG	2	SN: 50001-UP
23	07042-00415	PLUG	1	SN: 50001-UP
24	6138-11-4820	GASKET (K1)	1	SN: 50001-UP
25	01435-00825	BOLT	2	SN: 60951-UP
	01010-30835	☐ BOLT	2	SN: 50001-60950
26	01435-00870	BOLT	2	SN: 60951-UP
	01010-30875	☐ BOLT	2	SN: 50001-60950
27	01602-00825	WASHER,SPRING	4	SN: 50001-60950
28	01640-20816	WASHER	4	SN: 50001-60950
29	6137-15-4370	HOSE	1	SN: 54151-UP
	6137-11-4371	◆ HOSE	1	SN: 50001-54150
30	07281-00709	CLAMP	2	SN: 50001-UP
31	600-815-2170	SWITCH,HEATER	1	SN: 50001-UP
32	01435-00614	BOLT	2	SN: 60951-UP
	01010-30620	☐ BOLT	2	SN: 50001-60950
33	01602-00619	WASHER,SPRING	2	SN: 50001-60950
34	01640-20610	WASHER	2	SN: 50001-60950
35	6206-81-4720	WIRE ? 480MM	1	SN: 50001-UP
	6138-81-4260	☒ WIRE ? 550MM	1	SN: (50001-57735)
36	6138-81-4230	WIRE ? 250MM	2	SN: 50001-UP
37	6138-81-4240	WIRE ? 600MM	1	SN: 50001-UP
38	6138-81-4250	WIRE ? 200MM	1	SN: 50001-UP

Item	Part No.	Part Name	Qty	Options
39	08034-00310	BAND	2	SN: 50001-UP
40	08036-11214	CLIP	1	SN: 57736-UP
41	01435-01016	BOLT	1	SN: 60951-UP
	01010-31016	☐ BOLT	1	SN: 57736-60950
42	01640-21016	WASHER	1	SN: 57736-60950
43	08038-00519	CAP	8	SN: 57736-UP

Catalog signs: ☐ part above may be used instead ☒ interchangeable with part above ☒ discontinued: use part above

Reference: 0131

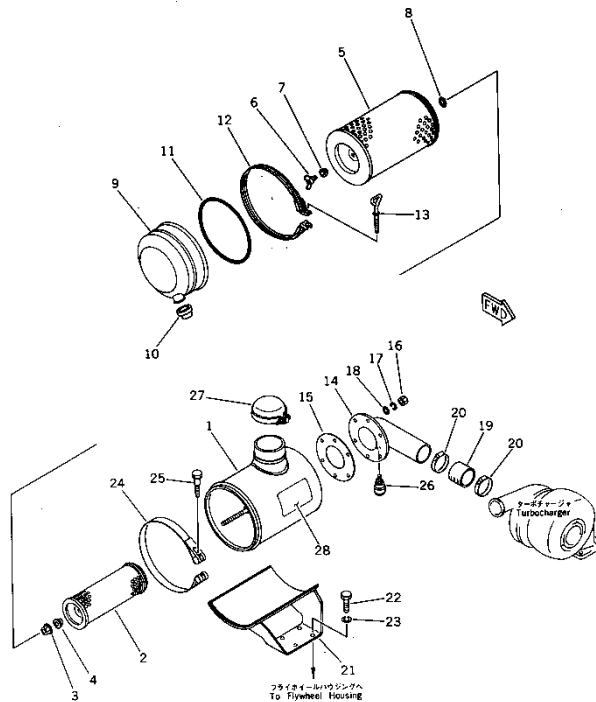


Reference: 0143

030060 AIR CLEANER AND MOUNTING(#53889-55187)

Item	Part No.	Part Name	Qty	Options
	6631-81-7603	AIR CLEANER ASS'Y	1	SN: 53889-55187
1	6631-81-7610	• BODY	1	SN: 53889-55187
	6115-81-7602	• ELEMENT ASS'Y	1	SN: 53889-55187
2		• ☆ ELEMENT, INNER	1	SN: 53889-55187
3	600-181-7910	• NUT	1	SN: 53889-55187
4	600-181-7511	• WASHER, SEAL	1	SN: 53889-55187
	600-181-2300	• ELEMENT ASS'Y	1	SN: 53889-55187
5		• ☆ ELEMENT, OUTER	1	SN: 53889-55187
6	600-181-2990	• NUT, WING	1	SN: 53889-55187
7	600-181-4591	• WASHER, SEAL	1	SN: 53889-55187
8	04064-01510	• RING, SNAP	1	SN: 53889-55187
9	600-181-3280	• PAN, DUST	1	SN: 53889-55187
10	600-181-2550	• VALVE	1	SN: 53889-55187
11	6692-81-7130	• O-RING	1	SN: 53889-55187
12	600-181-3260	• BAND	1	SN: 53889-55187
13	6692-81-7180	• BOLT	1	SN: 53889-55187
14	6138-11-4210	CONNECTOR	1	SN: 53889-@
15	6136-11-4840	GASKET (K1)	1	SN: 54271-@
	6631-11-4381	□ GASKET (K1)	1	SN: 53889-54270
16	01582-01008	NUT	6	SN: 53889-@
17	01602-01030	WASHER, SPRING	6	SN: 53889-@
18	01640-21016	WASHER	6	SN: 53889-@
19	6131-11-4480	HOSE, RUBBER	1	SN: 53889-@
20	07281-00909	CLAMP	2	SN: 53889-@
21	6138-81-8710	BRACKET	1	SN: 53889-@
22	01010-31225	BOLT	4	SN: 53889-@
23	01602-01236	WASHER, SPRING	4	SN: 53889-@
24	6691-11-4610	BAND ASS'Y	1	SN: 53889-@
	6110-11-4520	• PIN	1	SN: 53889-@
	6110-11-4530	• PIN ? WITH THREAD	1	SN: 53889-@
25	6643-11-4641	BOLT	1	SN: 53889-@
26	08670-50635	INDICATOR, DUST	1	SN: 53889-@
27	600-181-3860	CAP	1	SN: 53889-@
28	09637-00161	PLATE ? INSTRUCTION	1	SN: 53889-55187

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 0143

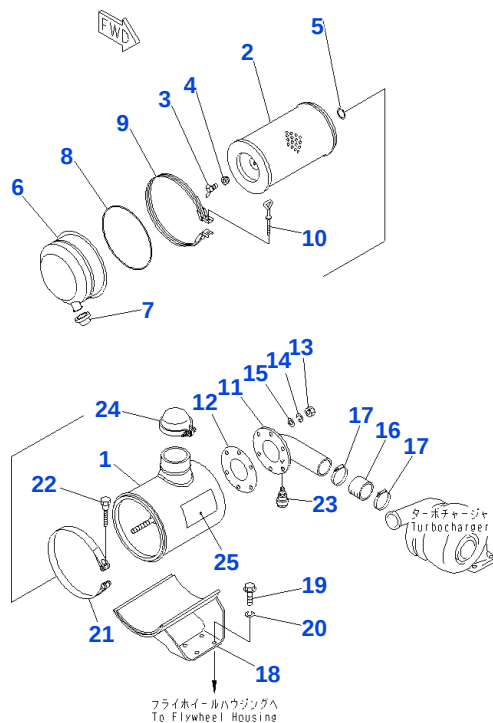

Reference: 0143A

030070 AIR CLEANER AND MOUNTING(#55188-)

Item	Part No.	Part Name	Qty	Options
	6965-86-7100	AIR CLEANER ASS'Y	1	SN: 55188-UP
1	6631-21-7610	• BODY	1	SN: 55188-UP
	600-181-2300	• ELEMENT ASS'Y	1	SN: 55188-UP
2		• ☆ ELEMENT	1	SN: 55188-UP
3	600-181-2990	• • NUT,WING	1	SN: 55188-UP
4	600-181-4591	• • WASHER,SEAL	1	SN: 55188-UP
5	04064-01510	• • RING,SNAP	1	SN: 55188-UP
6	600-181-3280	• PAN,DUST	1	SN: 55188-UP
7	600-181-2550	• VALVE	1	SN: 55188-UP
8	6692-81-7130	• O-RING	1	SN: 55188-UP
9	600-181-3260	• BAND	1	SN: 55188-UP
10	6692-81-7180	• BOLT	1	SN: 55188-UP
11	6138-11-4210	CONNECTOR	1	SN: 53889-UP
12	6136-11-4840	GASKET (K1)	1	SN: 54271-UP
13	01582-01008	NUT	6	SN: 53889-UP
14	01602-01030	WASHER,SPRING	6	SN: 53889-61036
15	01640-21016	WASHER	6	SN: 53889-UP
16	6131-11-4470	HOSE,RUBBER	1	SN: 61037-UP
	6131-11-4480	◆ HOSE,RUBBER	1	SN: 53889-61036
17	07281-00909	CLAMP	2	SN: 53889-UP
18	6138-81-8710	BRACKET,AIR CLEANER	1	SN: 53889-UP
19	01435-21225	BOLT	4	SN: 61037-UP
	01010-31225	□ BOLT	4	SN: 53889-61036
20	01602-01236	WASHER,SPRING	4	SN: 53889-61036
21	6691-11-4610	BAND ASS'Y	1	SN: 53889-UP
	6110-11-4520	• PIN	1	SN: 53889-UP
	6110-11-4530	• PIN ? WITH THREAD	1	SN: 53889-UP
22	6643-11-4641	BOLT	1	SN: 53889-UP
23	08670-02001	INDICATOR,DUST	1	SN: 60252-UP
	08670-50635	□ INDICATOR,DUST	1	SN: 53889-60251
24	600-181-3890	SCREEN	1	SN: 53889-UP
25	09637-00661	PLATE ? INSTRUCTION	1	SN: 55188-UP

Catalog signs: ☆ not supplied separately: assembly only ◆ interchangeable with part above □ part above may be used instead

Get the complete PDF catalogue

Komatsu SA6D110-1N S/N 50001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.