


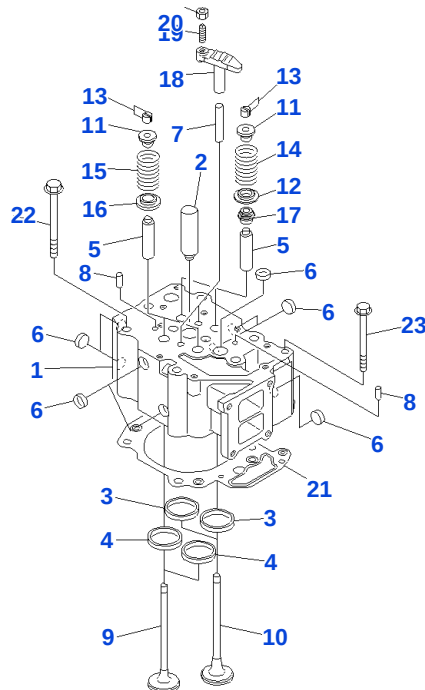


P000868

Reference: A1010-A3C4

030010 CYLINDER HEAD (#10001-10027)

Item	Part No.	Part Name	Qty	Options
	6152-15-1600	CYLINDER HEAD ASSEMBLY, WITHOUT VALVE	6	SN: 10001-@
1		• ☆ HEAD,CYLINDER	1	SN: 10001-@
2	6136-11-1130	• SLEEVE	1	SN: 10001-@
3	6150-11-1320	• INSERT, EXHAUST VALVE (STD)	2	SN: 10001-@
3	6150-19-1320	• INSERT, 0.25MM, EXHAUST VALVE (OS)	2	SN: 10001-@
3	6150-18-1320	• INSERT, 0.50MM, EXHAUST VALVE (OS)	2	SN: 10001-@
3	6150-17-1320	• INSERT, 0.75MM, EXHAUST VALVE (OS)	2	SN: 10001-@
3	6150-16-1320	• INSERT, 1.00MM, EXHAUST VALVE (OS)	2	SN: 10001-@
4	6151-11-1330	• INSERT, INTAKE VALVE (STD)	2	SN: 10001-@
4	6151-19-1330	• INSERT, 0.25MM, INTAKE VALVE (OS)	2	SN: 10001-@
4	6151-18-1330	• INSERT, 0.50MM, INTAKE VALVE (OS)	2	SN: 10001-@
4	6151-17-1330	• INSERT, 0.75MM, INTAKE VALVE (OS)	2	SN: 10001-@
4	6151-16-1330	• INSERT, 1.00MM, INTAKE VALVE (OS)	2	SN: 10001-@
5	6150-12-1341	• GUIDE, INTAKE VALVE	4	SN: 10001-@
6	6162-13-1150	• PLUG	8	SN: 10001-@
7	6150-11-1140	• GUIDE	2	SN: 10001-@
8	04020-00820	• PIN, DOWEL	2	SN: 10001-@
9	6150-41-4111	VALVE, INTAKE	12	SN: 10001-@
10	6150-41-4210	VALVE, EXHAUST	12	SN: 10001-@
11	6150-41-4510	SEAT, UPPER	24	SN: 10001-@
12	6150-41-4430	SEAT,LOWER	12	SN: 10001-@
13	6136-42-4520	COTTER	48	SN: 10001-@
14	6150-41-4411	SPRING, EXHAUST	12	SN: 10001-@
15	6150-41-4420	SPRING, INTAKE	12	SN: 10001-@
16	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 10001-@
17	6150-41-4570	SEAL,EXHAUST VALVE (K1)	12	SN: 10001-@
	6150-41-5600	CROSSHEAD ASSEMBLY	12	SN: 10001-@
18	6150-41-5611	• CROSSHEAD	1	SN: 10001-@
19	6150-41-5620	• SCREW	1	SN: 10001-@
20	6150-41-5630	• NAT	1	SN: 10001-@
21	6150-17-1822	GASKET, HEAD	6	SN: 10001-10015
22	6150-11-1610	BOLT	36	SN: 10001-10015
23	01438-01020	BOLT	6	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only

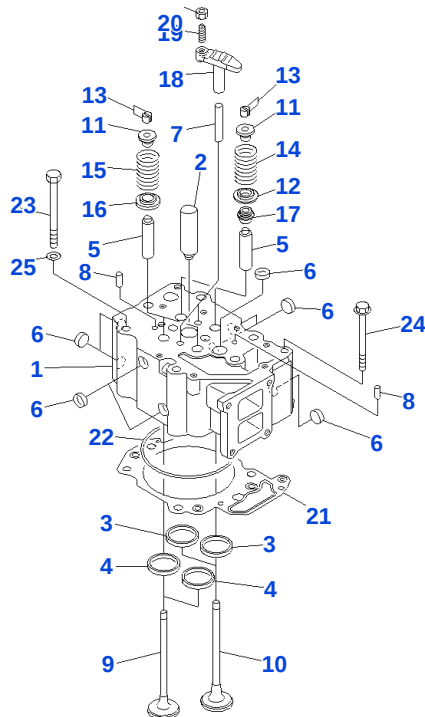

P002935

Reference: A1010-A3C6


030020 CYLINDER HEAD(#10028-)

Item	Part No.	Part Name	Qty	Options
	6152-15-1600	CYLINDER HEAD ASSEMBLY, WITHOUT VALVE	6	SN: 10001-UP
1		• ☆ HEAD,CYLINDER	1	SN: 10001-UP
2	6136-11-1130	• SLEEVE	1	SN: 10001-UP
3	6150-11-1320	• INSERT, EXHAUST VALVE (STD)	2	SN: 10001-UP
3	6150-19-1320	• INSERT, 0.25MM, EXHAUST VALVE (OS)	2	SN: 10001-UP
3	6150-18-1320	• INSERT, 0.50MM, EXHAUST VALVE (OS)	2	SN: 10001-UP
3	6150-17-1320	• INSERT, 0.75MM, EXHAUST VALVE (OS)	2	SN: 10001-UP
3	6150-16-1320	• INSERT, 1.00MM, EXHAUST VALVE (OS)	2	SN: 10001-UP
4	6151-11-1330	• INSERT, INTAKE VALVE (STD)	2	SN: 10001-UP
4	6151-19-1330	• INSERT, 0.25MM, INTAKE VALVE (OS)	2	SN: 10001-UP
4	6151-18-1330	• INSERT, 0.50MM, INTAKE VALVE (OS)	2	SN: 10001-UP
4	6151-17-1330	• INSERT, 0.75MM, INTAKE VALVE (OS)	2	SN: 10001-UP
4	6151-16-1330	• INSERT, 1.00MM, INTAKE VALVE (OS)	2	SN: 10001-UP
5	6150-12-1341	• GUIDE, INTAKE VALVE	4	SN: 10001-UP
6	6162-13-1150	• PLUG	8	SN: 10001-UP
7	6150-11-1140	• GUIDE	2	SN: 10001-UP
8	04020-00820	• PIN, DOWEL	2	SN: 10001-UP
9	6150-41-4111	VALVE, INTAKE	12	SN: 10001-UP
10	6150-41-4210	VALVE, EXHAUST	12	SN: 10001-UP
11	6150-41-4510	SEAT, UPPER	24	SN: 10001-UP
12	6150-41-4430	SEAT,LOWER	12	SN: 10001-UP
13	6136-42-4520	COTTER	48	SN: 10001-UP
14	6150-41-4411	SPRING, EXHAUST	12	SN: 10001-UP
15	6150-41-4420	SPRING, INTAKE	12	SN: 10001-UP
16	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 10001-UP
17	6150-41-4570	SEAL,EXHAUST VALVE (K1)	12	SN: 10001-UP
	6150-41-5600	CROSSHEAD ASSEMBLY	12	SN: 10001-UP
18	6150-41-5611	• CROSSHEAD	1	SN: 10001-UP
19	6150-41-5621	• SCREW	1	SN: 10081-UP
19	6150-41-5620	• □ SCREW	1	SN: 10001-10080
20	6150-41-5630	• NAT	1	SN: 10001-UP
21	6150-17-1830	GASKET, HEAD (K1)	6	SN: 10016-UP
22	6150-17-1880	RING, INNER (K1)	6	SN: 10034-UP
23	6150-11-1620	BOLT	36	SN: 10016-UP

Item	Part No.	Part Name	Qty	Options
24	01438-01020	BOLT	6	SN: 10001-UP
25	6164-31-3330	WASHER	36	SN: 10016-UP

Catalog signs: ☆ not supplied separately; assembly only ☐ part above may be used instead

Reference: A1010-A3C6

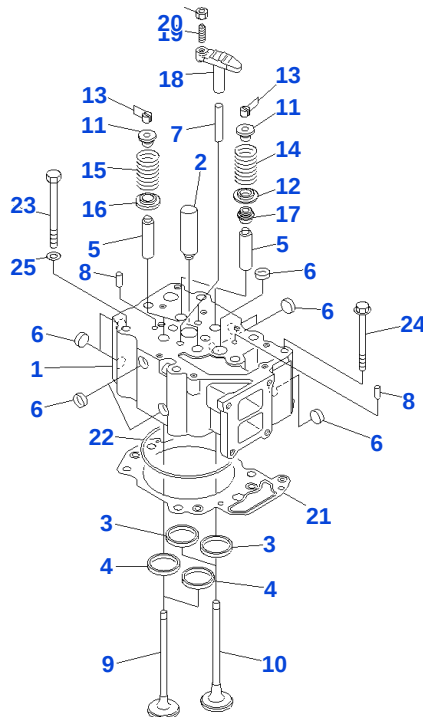

P002935

Reference: A1010-A3D5


030030 CYLINDER HEAD (FOR JG)(#10080-)

Item	Part No.	Part Name	Qty	Options
	6152-15-1800	CYLINDER HEAD ASSEMBLY, WITHOUT VALVE	6	SN: 10080-UP
1		• ☆ HEAD,CYLINDER	1	SN: 10080-UP
2	6136-11-1130	• SLEEVE	1	SN: 10080-UP
3	6150-11-1320	• INSERT, EXHAUST VALVE (STD)	2	SN: 10080-UP
3	6150-19-1320	• INSERT, 0.25MM, EXHAUST VALVE (OS)	2	SN: 10080-UP
3	6150-18-1320	• INSERT, 0.50MM, EXHAUST VALVE (OS)	2	SN: 10080-UP
3	6150-17-1320	• INSERT, 0.75MM, EXHAUST VALVE (OS)	2	SN: 10080-UP
3	6150-16-1320	• INSERT, 1.00MM, EXHAUST VALVE (OS)	2	SN: 10080-UP
4	6151-11-1330	• INSERT, INTAKE VALVE (STD)	2	SN: 10080-UP
4	6151-19-1330	• INSERT, 0.25MM, INTAKE VALVE (OS)	2	SN: 10080-UP
4	6151-18-1330	• INSERT, 0.50MM, INTAKE VALVE (OS)	2	SN: 10080-UP
4	6151-17-1330	• INSERT, 0.75MM, INTAKE VALVE (OS)	2	SN: 10080-UP
4	6151-16-1330	• INSERT, 1.00MM, INTAKE VALVE (OS)	2	SN: 10080-UP
5	6150-12-1341	• GUIDE, INTAKE VALVE	4	SN: 10080-UP
6	6162-13-1150	• PLUG	8	SN: 10080-UP
7	6150-11-1140	• GUIDE	2	SN: 10080-UP
8	04020-00820	• PIN, DOWEL	2	SN: 10080-UP
9	6150-41-4111	VALVE, INTAKE	12	SN: 10080-UP
10	6150-41-4210	VALVE, EXHAUST	12	SN: 10080-UP
11	6150-41-4510	SEAT, UPPER	24	SN: 10080-UP
12	6150-41-4430	SEAT,LOWER	12	SN: 10080-UP
13	6136-42-4520	COTTER	48	SN: 10080-UP
14	6150-41-4411	SPRING, EXHAUST	12	SN: 10080-UP
15	6150-41-4420	SPRING, INTAKE	12	SN: 10080-UP
16	6150-41-4540	ROTATOR,INTAKE VALVE	12	SN: 10080-UP
17	6150-41-4570	SEAL,EXHAUST VALVE (K1)	12	SN: 10080-UP
	6150-41-5600	CROSSHEAD ASSEMBLY	12	SN: 10080-UP
18	6150-41-5611	• CROSSHEAD	1	SN: 10080-UP
19	6150-41-5621	• SCREW	1	SN: 10081-UP
19	6150-41-5620	• □ SCREW	1	SN: 10080-10080
20	6150-41-5630	• NAT	1	SN: 10080-UP
21	6150-17-1830	GASKET, HEAD (K1)	6	SN: 10080-UP
22	6150-17-1880	RING, INNER (K1)	6	SN: 10080-UP
23	6150-11-1620	BOLT	36	SN: 10080-UP

Item	Part No.	Part Name	Qty	Options
24	01438-01020	BOLT	6	SN: 10080-UP
25	6164-31-3330	WASHER	36	SN: 10080-UP

Catalog signs: ☆ not supplied separately; assembly only ☐ part above may be used instead

Reference: A1010-A3D5

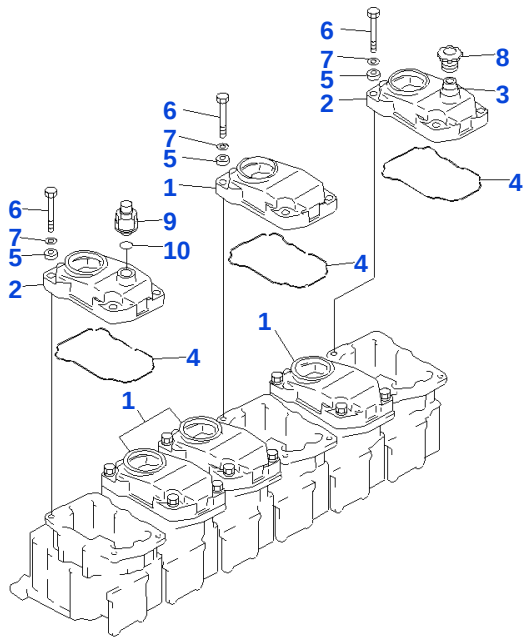


PGD0984

Reference: A1110-A3B1

030040 HEAD COVER

Item	Part No.	Part Name	Qty	Options
1	6150-11-8111	COVER,HEAD, NO.2,3,4,5	4	SN: 10001-UP
2	6150-11-8151	COVER, HEAD, NO.1	2	SN: 10001-UP
3	6150-21-6510	TUBE	1	SN: 10001-UP
4	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
5	6150-11-8820	RUBBER (K1)	24	SN: 10001-UP
6	6150-81-9370	BOLT	24	SN: 10001-UP
7	01640-21016	WASHER	24	SN: 10001-UP
8	6130-12-8610	CAP, OIL FILLER	1	SN: 10001-UP
9	6150-25-6720	BREATHER	1	SN: 10001-UP
10	6114-21-5190	O RING (K1)	1	SN: 10001-UP

Reference: A1110-A3B1

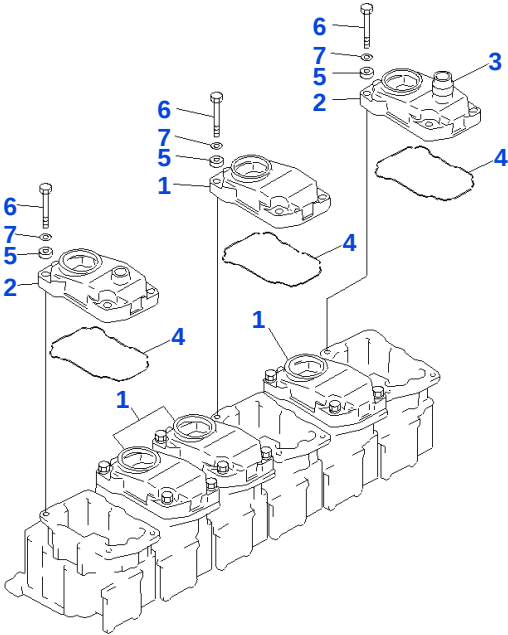


P 00 4 3 8 7

Reference: A1110-A3C1

030050 HEAD COVER, BASE

Item	Part No.	Part Name	Qty	Options
1	6150-11-8111	COVER,HEAD, NO.2,3,4,5	4	SN: 10001-UP
2	6150-11-8151	COVER, HEAD, NO.1,6	2	SN: 10001-UP
3	6150-21-6510	TUBE	1	SN: 10001-UP
4	6150-11-8810	GASKET (K1)	6	SN: 10001-UP
5	6150-11-8820	RUBBER (K1)	24	SN: 10001-UP
6	6150-81-9370	BOLT	24	SN: 10001-UP
7	01640-21016	WASHER	24	SN: 10001-UP

Reference: A1110-A3C1

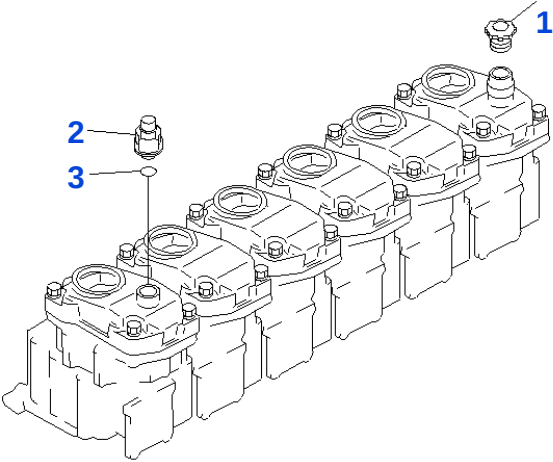


P 0 0 4 3 8 8

Reference: A1111-A3B4

030060 HEAD COVER, AZURE

Item	Part No.	Part Name	Qty	Options
1	6130-12-8610	CAP, OIL FILLER	1	SN: 10001-UP
2	6150-25-6720	BREATHER	1	SN: 10001-UP
3	6114-21-5190	O RING (K1)	1	SN: 10001-UP

Reference: A1111-A3B4

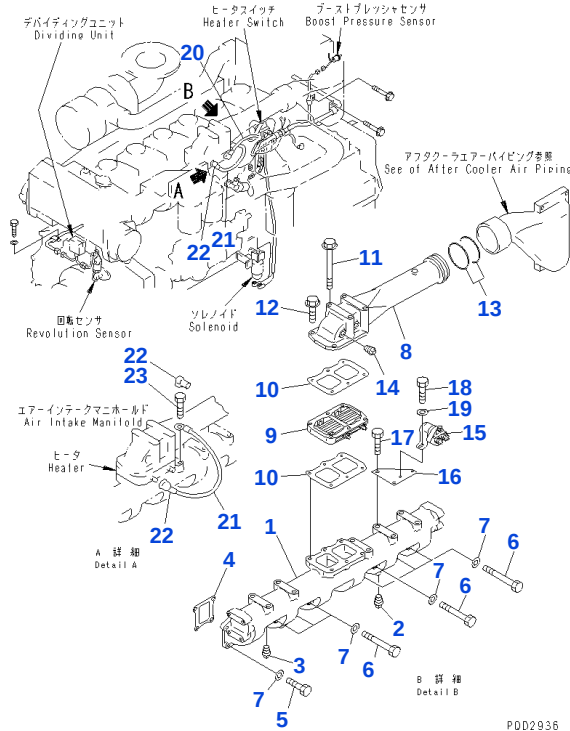

Reference: A1310-A3H9

030070 AIR INTAKE MANIFOLD(#10001-10031)

Item	Part No.	Part Name	Qty	Options
	6151-11-4910	INTAKE MANIFOLD ASSEMBLY	1	SN: 10001-@
1		• ☆ MANIFOLD, AIR INTAKE	1	SN: 10001-@
2	07042-00108	• PLUG	1	SN: 10001-@
3	07042-00415	• PLUG	1	SN: 10001-@
4	6150-13-4810	GASKET (K1)	6	SN: 10001-@
5	01010-81030	BOLT	12	SN: 10001-10031
6	01011-81010	BOLT	7	SN: 10001-@
7	01640-21016	WASHER	19	SN: 10001-10031
8	6152-15-4540	CONNECTOR	1	SN: 10001-@
9	600-815-3811	HEATER, RIBBON	1	SN: 10001-@
10	6150-11-4821	GASKET (K1)	2	SN: 10001-@
11	01436-21035	BOLT	4	SN: 10001-@
12	01435-21055	BOLT	2	SN: 10001-@
13	02895-67075	O RING (K1)	2	SN: 10001-@
14	6151-15-5970	PLUG	2	SN: 10001-@
15	600-815-2170	SWITCH	1	SN: 10001-@
16	6152-85-4510	PLATE	1	SN: 10001-@
17	01010-81020	BOLT	2	SN: 10001-@
18	01010-80616	BOLT	2	SN: 10001-@
19	01640-20610	WASHER	2	SN: 10001-@
20	6151-81-4410	WIRE, 265MM	1	SN: 10001-@
21	6211-81-4280	WIRE, 220MM	1	SN: 10001-@
22	08038-00519	CAP	4	SN: 10001-@
23	01010-81016	BOLT	1	SN: 10001-@

Catalog signs: ☆ not supplied separately: assembly only

Reference: A1310-A3H9

Get the complete PDF catalogue

Komatsu SA6D125-1FF (JPN) S/N 10001-UP (Japanese)

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.

Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.