


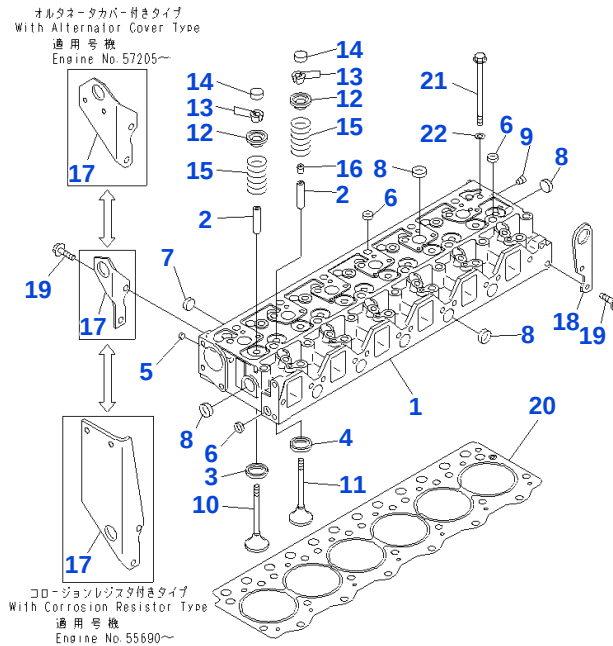


PJ35088A

Reference: 0101

030010 CYLINDER HEAD

Item	Part No.	Part Name	Qty	Options
	6209-11-1100	CYLINDER HEAD ASS'Y, VALVE LESS	1	SN: 35398-UP
1		• ☆ HEAD, CYLINDER	1	SN: 35398-UP
2	6204-19-1310	• GUIDE, VALVE	12	SN: 35398-UP
3	6209-11-1430	• SEAT, INTAKE VALVE (STD)	6	SN: 35398-UP
	6209-19-1430	• SEAT □ 0.25MM, INTAKE VALVE (OS)	6	SN: 35398-UP
	6209-18-1430	• SEAT □ 0.50MM, INTAKE VALVE (OS)	6	SN: 35398-UP
4	6207-11-1440	• SEAT, EXHAUST VALVE (STD)	6	SN: 35398-UP
	6207-19-1440	• SEAT □ 0.25MM, EXHAUST VALVE (OS)	6	SN: 35398-UP
	6207-18-1440	• SEAT □ 0.50MM, EXHAUST VALVE (OS)	6	SN: 35398-UP
5	07046-41008	• PLUG	6	SN: 35398-UP
6	07046-41810	• PLUG	13	SN: 35398-UP
7	07046-42216	• PLUG	5	SN: 35398-UP
8	07046-42516	• PLUG	15	SN: 35398-UP
9	02720-40104	• PLUG	1	SN: 35398-UP
10	6209-41-4110	VALVE, INTAKE	6	SN: 35398-UP
11	6209-41-4210	VALVE, EXHAUST	6	SN: 35398-UP
12	6204-41-4510	SEAT, SPRING	12	SN: 35398-UP
13	6204-41-4520	COTTER	24	SN: 35398-UP
14	6204-41-4550	CAP, VALVE	12	SN: 35398-UP
15	6204-41-4431	SPRING, VALVE	12	SN: 35398-UP
16	6204-41-4540	SEAL, VALVE (K1)	6	SN: 35398-UP
17	6206-11-1930	HANGER, FRONT	1	SN: 35398-UP
	6207-11-1910	HANGER, FRONT (WITH ALTERNATOR COVER)	1	SN: 57205-UP
	6207-61-8110	HANGER, FRONT (WITH CORROSION RESISTOR)	1	SN: 55690-UP
18	6206-11-1910	HANGER, REAR	1	SN: 35398-UP
19	01435-01020	BOLT	4	SN: 35398-UP
20	6207-11-1822	GASKET, HEAD (K1)	1	SN: 35398-UP
	6207-11-1821	☒ GASKET, HEAD (K1)	1	SN: (35398-77240)
21	6204-13-1610	BOLT	25	SN: 35398-UP
22	01643-51232	WASHER	25	SN: 81676-UP
	01643-31232	☐ WASHER	25	SN: 35398-81675

Catalog signs: ☆ not supplied separately: assembly only ☒ discontinued: use part above ☐ part above may be used instead

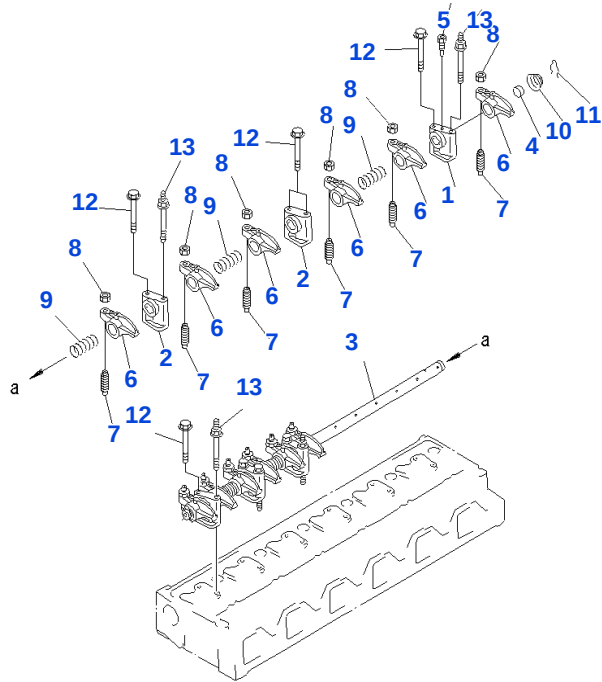

PE30001


Reference: 0111

030020 ROCKER ARM

Item	Part No.	Part Name	Qty	Options
1	6204-41-5110	BRACKET	1	SN: 35398-UP
2	6204-41-5120	BRACKET	5	SN: 35398-UP
	6206-41-5201	SHAFT ASS'Y	1	SN: 35398-UP
3		• ☆ SHAFT	1	SN: 35398-UP
4	6221-41-5540	• PLUG	2	SN: 35398-UP
5	6221-41-5310	BOLT	1	SN: 35398-UP
6	6202-43-5410	ARM,ROCKER	12	SN: 35398-UP
7	6221-41-5410	SCREW,ADJUST	12	SN: 35398-UP
8	6221-41-5420	NUT	12	SN: 35398-UP
9	6202-43-5320	SPRING	5	SN: 35398-UP
10	6221-41-5520	SPRING	2	SN: 35398-UP
11	6136-41-5330	CLIP	2	SN: 35398-UP
12	01435-00865	BOLT	8	SN: 35398-UP
13	6204-41-5710	BOLT	4	SN: 35398-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0111

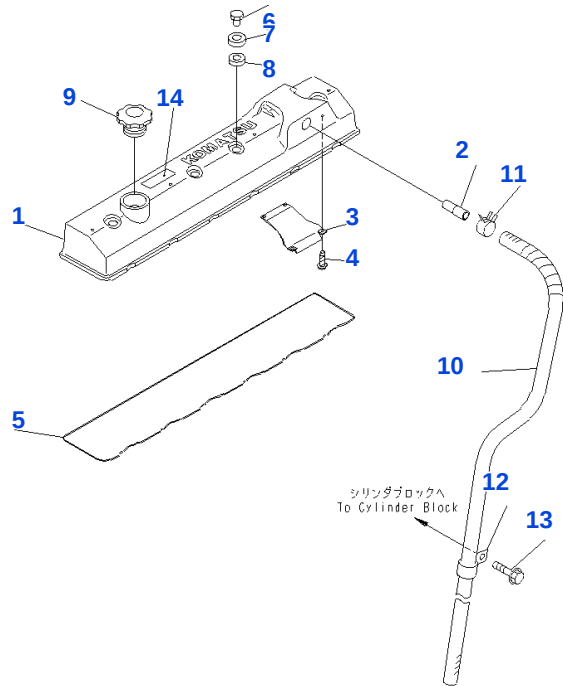


Reference: 0115

030030 CYLINDER HEAD COVER

Item	Part No.	Part Name	Qty	Options
	6207-11-8100	HEAD COVER ASS'Y	1	SN: 35398-UP
1	6207-11-8110	• COVER,HEAD	1	SN: 35398-UP
2	6207-11-8170	• TUBE	1	SN: 35398-UP
3	6207-11-8140	• PLATE	1	SN: 35398-UP
4	04418-02550	• SCREW	4	SN: 35398-UP
5	6206-11-8810	O-RING (K1)	1	SN: 35398-UP
6	6136-11-8120	NUT	4	SN: 35398-UP
7	6136-11-8130	WASHER	4	SN: 35398-UP
8	6136-11-8142	PACKING (K1)	4	SN: 35398-UP
9	6130-12-8610	CAP	1	SN: 35398-UP
10	6207-11-8920	TUBE,BREATHER	1	SN: 35398-UP
11	07285-00180	CLIP	1	SN: 35398-UP
12	424-06-12760	CLIP	1	SN: 35398-UP
13	01435-21016	BOLT	1	SN: 35398-UP
14	6204-81-2210	PLATE $\square$ NAME,(LIMITED SUPPLY) (ENGLISH)	1	SN: 35398-UP
	6204-81-2260	PLATE $\square$ NAME,(LIMITED SUPPLY) (GERMAN)	1	SN: 55690-UP
	6204-81-2290	PLATE $\square$ NAME,(LIMITED SUPPLY) (FRENCH)	1	SN: 55690-UP
	6204-81-2240	PLATE $\square$ NAME,(LIMITED SUPPLY) (SPANISH)	1	SN: 55690-UP
	6204-81-2310	PLATE $\square$ NAME,(LIMITED SUPPLY) (ITALIAN)	1	SN: 55690-UP
	6204-81-2280	PLATE $\square$ NAME,(LIMITED SUPPLY) (RUSSIAN)	1	SN: 55690-UP

Reference: 0115

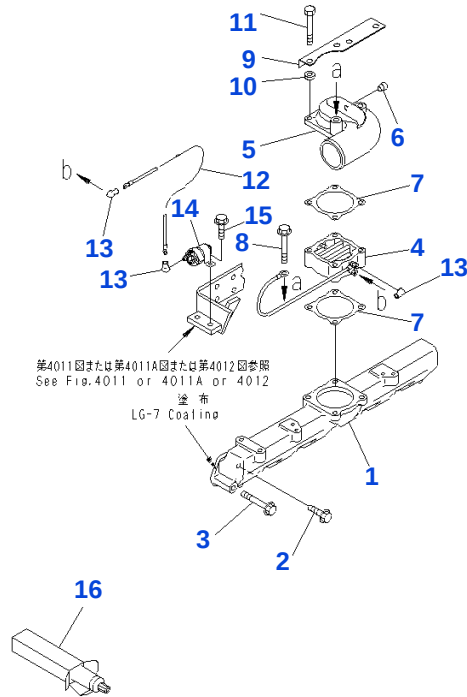

PJ35118


Reference: 0131

030040 AIR INTAKE MANIFOLD AND CONNECTION

Item	Part No.	Part Name	Qty	Options
1	6206-11-4120	MANIFOLD,AIR INTAKE	1	SN: 35398-UP
2	01435-21025	BOLT	11	SN: 35398-UP
3	01435-21075	BOLT	1	SN: 35398-UP
4	600-815-2341	HEATER,RIBBON	1	SN: 35398-UP
5	6206-11-4220	CONNECTOR,AIR	1	SN: 35398-UP
6	02720-20204	PLUG	1	SN: 35398-UP
7	6136-11-4820	GASKET (K1)	2	SN: 35398-UP
8	01436-01005	BOLT	2	SN: 48447-UP
	01436-21005	□ BOLT	2	SN: 35398-48446
9	6209-11-4630	BRACKET	1	SN: 35398-UP
10	6132-21-4630	SPACER	2	SN: 35398-UP
11	01435-21085	BOLT	2	SN: 35398-UP
12	6151-81-4520	WIRE□ 265MM	1	SN: 35398-UP
13	08038-00519	CAP	3	SN: 35398-UP
14	600-815-2170	SWITCH,HEATER	1	SN: 35398-UP
15	01435-20612	BOLT	2	SN: 35398-UP
16	09920-00150	LIQUID GASKET,LG-7□ 150G	-2	SN: 35398-UP

Catalog signs: □ part above may be used instead

Reference: 0131

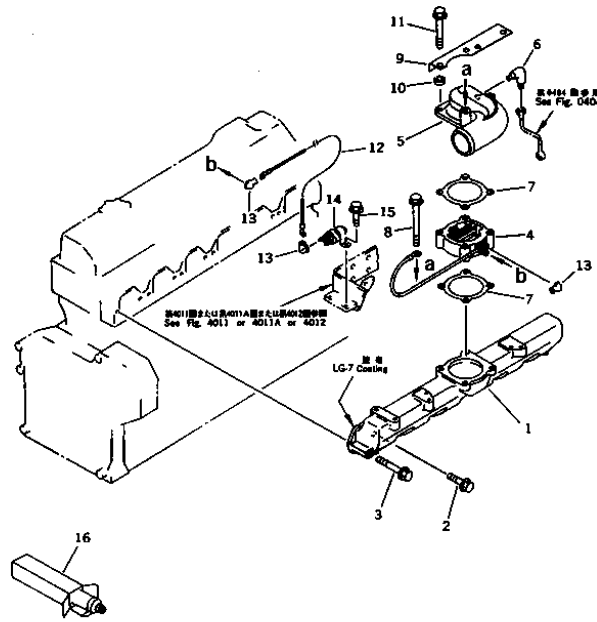


Reference: 0132

030050 AIR INTAKE MANIFOLD AND CONNECTION (FOR BOOST COMPENSATE TYPE FUEL INJECTION PUMP)

Item	Part No.	Part Name	Qty	Options
1	6206-11-4120	MANIFOLD,AIR INTAKE	1	SN: 35398-UP
2	01435-21025	BOLT	11	SN: 35398-UP
3	01435-21075	BOLT	1	SN: 35398-UP
4	600-815-2341	HEATER,RIBBON	1	SN: 35398-UP
5	6206-11-4220	CONNECTOR,AIR	1	SN: 35398-UP
6	6138-71-3880	ELBOW	1	SN: 35398-UP
7	6136-11-4820	GASKET (K1)	2	SN: 35398-UP
8	01436-01005	BOLT	2	SN: 48447-UP
	01436-21005	□ BOLT	2	SN: 35398-48446
9	6209-11-4630	BRACKET	1	SN: 35398-UP
10	6132-21-4630	SPACER	2	SN: 35398-UP
11	01435-21085	BOLT	2	SN: 35398-UP
12	6151-81-4520	WIREφ 265MM	1	SN: 35398-UP
13	08038-00519	CAP	3	SN: 35398-UP
14	600-815-2170	SWITCH,HEATER	1	SN: 35398-UP
15	01435-20612	BOLT	2	SN: 35398-UP
16	09920-00150	LIQUID GASKET,LG-7φ 150G	-2	SN: 35398-UP

Catalog signs: □ part above may be used instead

Reference: 0132

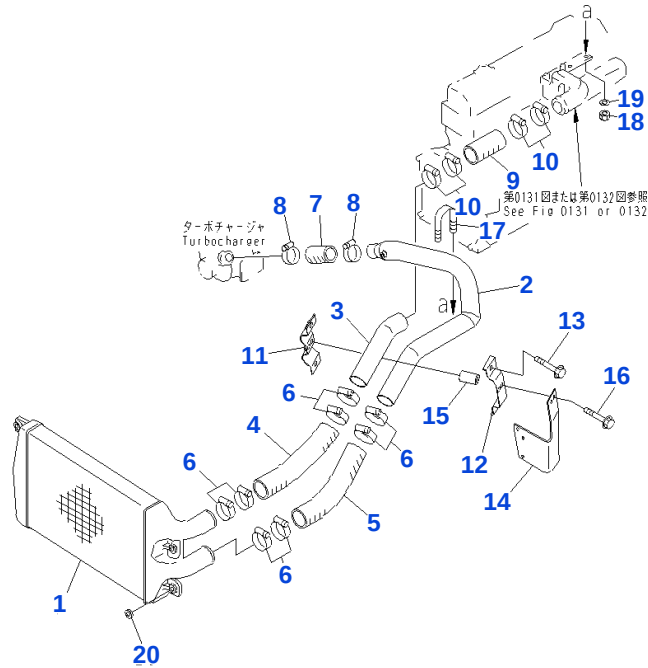


PJ35118

Reference: 0135

030060 AFTER COOLER AND PIPING

Item	Part No.	Part Name	Qty	Options
1	6209-61-4100	AFTER COOLER ASS'Y	1	SN: 35398-UP
2	6209-11-4610	TUBE	1	SN: 35398-UP
3	6209-11-4620	TUBE	1	SN: 35398-UP
4	6209-11-4691	HOSE	1	SN: 35398-UP
5	6209-11-4681	HOSE	1	SN: 35398-UP
6	208-09-11120	CLAMP	8	SN: 35398-UP
7	6207-11-4390	HOSE	1	SN: 35398-UP
8	07281-00709	CLAMP	2	SN: 35398-UP
9	6209-11-4380	HOSE	1	SN: 35398-UP
10	07281-00809	CLAMP	4	SN: 35398-UP
11	6209-11-4640	CLAMP	1	SN: 35398-UP
12	6209-11-4650	CLAMP	1	SN: 35398-UP
13	01435-21025	BOLT	2	SN: 35398-UP
14	6209-11-4660	BRACKET	1	SN: 35398-UP
15	6134-11-5120	SPACER	2	SN: 35398-UP
16	01435-21070	BOLT	2	SN: 35398-UP
17	07283-27060	CLIP	1	SN: 35398-UP
18	01599-01011	NUT	2	SN: 35398-UP
19	01643-31032	WASHER	2	SN: 35398-UP
20	6110-23-6490	SPACER	4	SN: 48447-UP

Reference: 0135

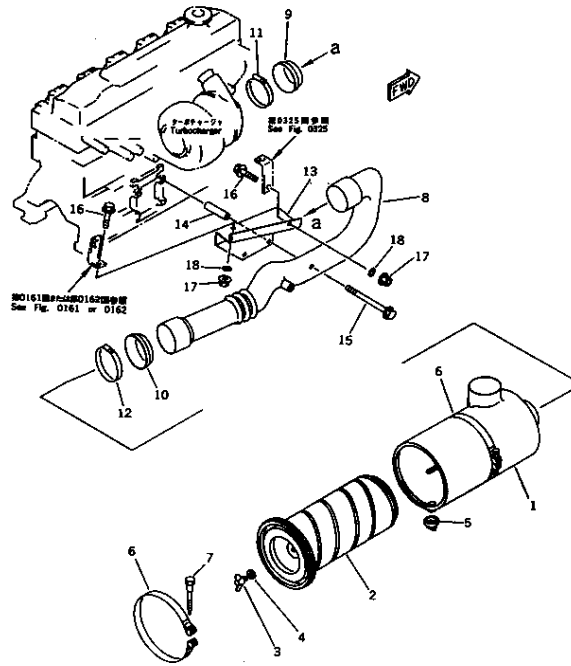


Reference: 0141

030070 AIR CLEANER AND CONNECTION (SINGLE ELEMENT TYPE) (#35398-81675)

Item	Part No.	Part Name	Qty	Options
1	6207-81-7210	BODY	1	SN: 35398-@
	600-181-6540	ELEMENT ASS'Y	1	SN: 35398-@
2		• ☆ ELEMENT	1	SN: 35398-@
3	600-181-6570	• NUT,WING	1	SN: 35398-@
4	600-181-6580	• WASHER,SEAL	1	SN: 35398-@
5	600-181-6590	VALVE	1	SN: 35398-@
6	6207-81-7190	BAND	2	SN: 35398-@
	6110-21-6530	PIN	2	SN: 35398-@
	6110-21-6540	PIN ^α WITH THREAD	2	SN: 35398-@
7	6110-23-6520	BOLT	2	SN: 35398-@
8	6207-11-4882	AIR DUCT ASS'Y	1	SN: 35398-@
	6207-11-4881	□ AIR DUCT ASS'Y	1	SN: 35398-81675
9	6207-11-4990	• INSULATOR (K1)	1	SN: 48447-81675
	6207-11-4990	• INSULATOR	1	SN: 35398-48446
10	6207-11-4980	• INSULATOR (K1)	1	SN: 48447-81675
	6207-11-4980	• INSULATOR	1	SN: 35398-48446
11	20D-09-11130	CLAMP	1	SN: 35398-@
12	207-09-11120	CLAMP	1	SN: 35398-81675
13	6207-11-4910	PLATE	1	SN: 35398-@
14	6136-11-5120	SPACER	2	SN: 35398-@
15	01436-01005	BOLT	2	SN: 48447-@
	01436-21005	□ BOLT	2	SN: 35398-48446
16	01435-20820	BOLT	2	SN: 35398-@
17	01584-00806	NUT	2	SN: 35398-@
18	6201-81-6560	SPACER	2	SN: 35398-@
19	08670-12001	INDICATOR,DUST (NOT SHOWN)	1	SN: (45001)-@
20	09637-00661	PLATE ^α INSTRUCTION,(NOT SHOWN)	1	SN: (45001)-@

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Reference: 0141

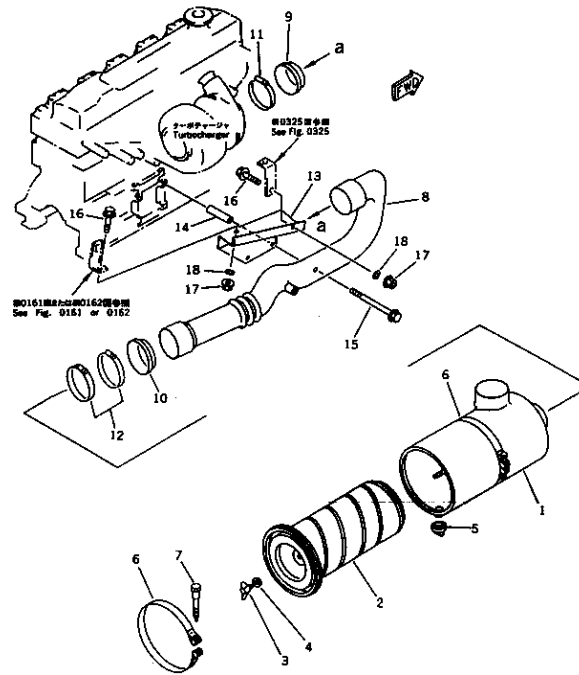


Reference: 0141A

030080 AIR CLEANER AND CONNECTION (SINGLE ELEMENT TYPE) (#81676-)

Item	Part No.	Part Name	Qty	Options
1	6207-81-7210	BODY	1	SN: 35398-UP
	600-181-6540	ELEMENT ASS'Y	1	SN: 35398-UP
2		• ☆ ELEMENT	1	SN: 35398-UP
3	600-181-6570	• NUT,WING	1	SN: 35398-UP
4	600-181-6580	• WASHER,SEAL	1	SN: 35398-UP
5	600-181-6590	VALVE	1	SN: 35398-UP
6	6207-81-7190	BAND	2	SN: 35398-UP
	6110-21-6530	PIN	2	SN: 35398-UP
	6110-21-6540	PIN ^α WITH THREAD	2	SN: 35398-UP
7	6110-23-6520	BOLT	2	SN: 35398-UP
	6207-11-4882	AIR DUCT ASS'Y	1	SN: 81676-UP
8	6207-11-4971	• AIR DUCT	1	SN: 81676-UP
9	6207-11-4991	• INSULATOR (K1)	1	SN: 81676-UP
10	6207-11-4981	• INSULATOR (K1)	1	SN: 81676-UP
11	20D-09-11130	CLAMP	1	SN: 35398-UP
12	207-09-11120	CLAMP	2	SN: 81676-UP
13	6207-11-4910	PLATE	1	SN: 35398-UP
14	6136-11-5120	SPACER	2	SN: 35398-UP
15	01436-01005	BOLT	2	SN: 48447-UP
16	01435-20820	BOLT	2	SN: 35398-UP
17	01584-00806	NUT	2	SN: 35398-UP
18	6201-81-6560	SPACER	2	SN: 35398-UP
19	08670-12001	INDICATOR,DUST (NOT SHOWN)	1	SN: (45001)-UP
20	09637-00661	PLATE ^α INSTRUCTION,(NOT SHOWN)	1	SN: (45001)-UP

Catalog signs: ☆ not supplied separately: assembly only

Reference: 0141A

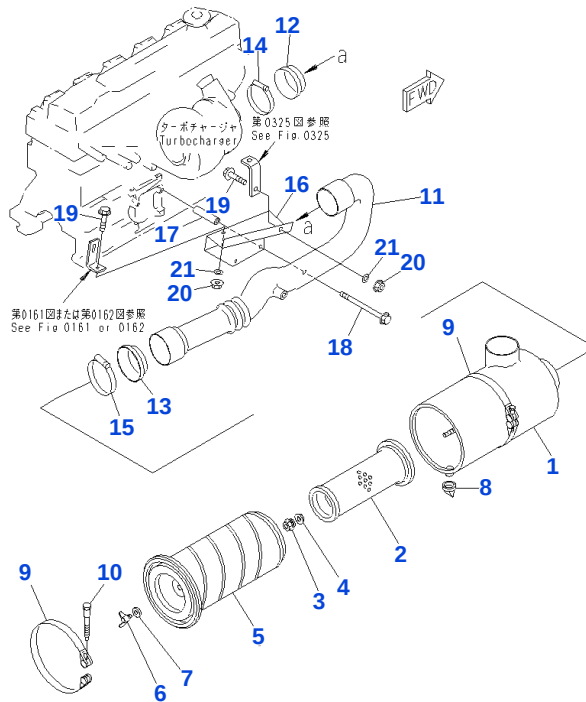

PJ35083

Reference: 0142

030090 AIR CLEANER AND CONNECTION (DOUBLE ELEMENT TYPE) (#35398-81675)

Item	Part No.	Part Name	Qty	Options
1	6207-81-7210	BODY	1	SN: 35398-@
	600-181-6050	ELEMENT ASS'Y	1	SN: 35398-@
2		• ☆ ELEMENT, INNER	1	SN: 35398-@
3	600-181-9671	• NUT	1	SN: 35398-@
4	600-181-7511	• WASHER, SEAL	1	SN: 35398-@
	600-181-6540	• ELEMENT ASS'Y, OUTER	1	SN: 35398-@
5		• • ☆ ELEMENT, OUTER	1	SN: 35398-@
6	600-181-6570	• • NUT, WING	1	SN: 35398-@
7	600-181-6580	• • WASHER, SEAL	1	SN: 35398-@
8	600-181-6590	VALVE	1	SN: 35398-@
9	6207-81-7190	BAND	2	SN: 35398-@
	6110-21-6530	PIN	2	SN: 35398-@
	6110-21-6540	PIN [□] WITH THREAD	2	SN: 35398-@
10	6110-23-6520	BOLT	2	SN: 35398-@
11	6207-11-4882	AIR DUCT ASS'Y	1	SN: 35398-@
	6207-11-4881	□ AIR DUCT ASS'Y	1	SN: 35398-81675
12	6207-11-4990	• INSULATOR (K1)	1	SN: 48447-81675
	6207-11-4990	• INSULATOR	1	SN: 35398-48446
13	6207-11-4980	• INSULATOR (K1)	1	SN: 48447-81675
	6207-11-4980	• INSULATOR	1	SN: 35398-48446
14	20D-09-11130	CLAMP	1	SN: 35398-@
15	207-09-11120	CLAMP	1	SN: 35398-81675
16	6207-11-4910	PLATE	1	SN: 35398-@
17	6136-11-5120	SPACER	2	SN: 35398-@
18	01436-01005	BOLT	2	SN: 48447-@
	01436-21005	□ BOLT	2	SN: 35398-48446
19	01435-20820	BOLT	2	SN: 35398-@
20	01584-00806	NUT	2	SN: 35398-@
21	6201-81-6560	SPACER	2	SN: 35398-@
22	08670-12001	INDICATOR, DUST (NOT SHOWN)	1	SN: (45001)-@
23	09637-00161	PLATE [□] INSTRUCTION, (NOT SHOWN)	1	SN: (45001)-@

Catalog signs: ☆ not supplied separately: assembly only □ part above may be used instead

Get the complete PDF catalogue

Komatsu SA6D95L-1C S/N 35398-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.