


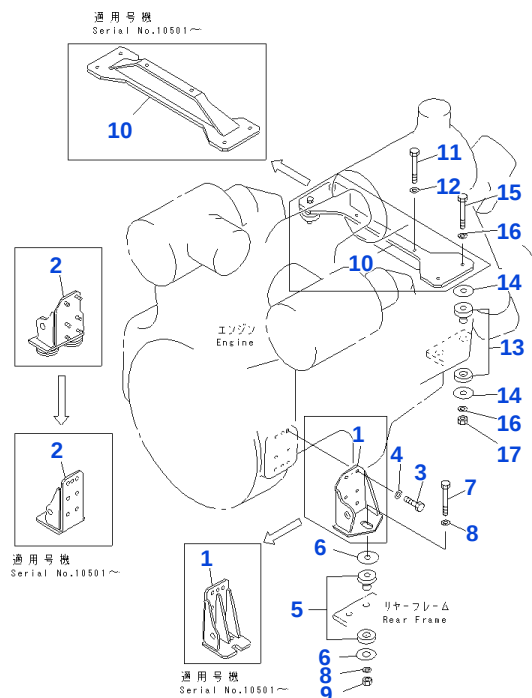


PN42400

Reference: 1001

030010 ENGINE MOUNTING PARTS

Item	Part No.	Part Name	Qty	Options
1	427-01-11341	BRACKET,L.H.	1	SN: 10501-UP
1	427-01-11112	BRACKET,L.H.	1	SN: 10001-10499
2	427-01-11351	BRACKET,R.H.	1	SN: 10501-UP
2	427-01-11122	BRACKET,R.H.	1	SN: 10001-10499
3	01010-62055	BOLT	12	SN: 10001-UP
4	01643-32060	WASHER	12	SN: 10001-UP
5	424-01-11310	CUSHION ASS'Y	4	SN: 10001-UP
6	424-01-11220	WASHER	8	SN: 10001-UP
7	01011-62450	BOLT	4	SN: 10001-UP
8	01643-32460	WASHER	8	SN: 10001-UP
9	01596-02419	NUT	4	SN: 10001-UP
10	427-01-11361	BRACKET	1	SN: 10501-UP
10	427-01-11130	BRACKET	1	SN: 10001-10499
11	01011-62000	BOLT	2	SN: 10501-UP
11	01011-62020	BOLT	2	SN: 10001-10499
12	01643-32060	WASHER	2	SN: 10001-UP
13	424-01-11310	CUSHION ASS'Y	4	SN: 10001-UP
14	424-01-11220	WASHER	8	SN: 10001-UP
15	01011-62455	BOLT	4	SN: 10001-UP
16	01643-32460	WASHER	8	SN: 10001-UP
17	01596-02419	NUT	4	SN: 10001-UP

Reference: 1001

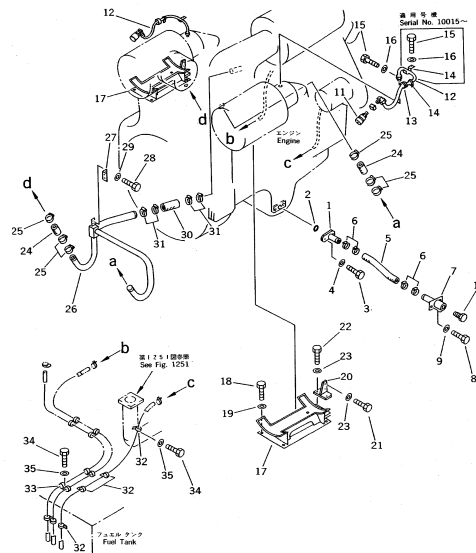

Reference: 1011


030020 ENGINE RERATED PARTS(#10001-10499)

Item	Part No.	Part Name	Qty	Options
1	427-01-11290	TUBE	1	SN: 10001-10499
2	07000-03035	O-RING	1	SN: 10001-10499
3	01010-51030	BOLT	2	SN: 10001-10499
4	01643-31032	WASHER	2	SN: 10001-10499
5	07260-23250	HOSE	1	SN: 10001-10499
6	07281-00489	CLAMP	4	SN: 10001-10499
7	427-01-11260	TUBE	1	SN: 10001-10499
8	01010-51025	BOLT	2	SN: 10001-10499
9	01643-31032	WASHER	2	SN: 10001-10499
10	427-01-11280	PLUG	1	SN: 10001-10499
11	08670-01635	INDICATOR,DUST (ENGLISH-JAPANESE)	2	SN: 10060-@
11	08670-50635	□ INDICATOR,DUST (ENGLISH-JAPANESE)	2	SN: 10001-10059
11	08670-01641	INDICATOR,DUST (FRENCH)	2	SN: 10001-@
11	08670-11635	INDICATOR,DUST (SPANISH)	2	SN: 10001-@
11	08670-41640	INDICATOR,DUST (ARABIC)	2	SN: 10001-@
11	08670-11645	INDICATOR,DUST (INDONESIAN)	2	SN: 10001-@
11	08670-01645	INDICATOR,DUST (PORTUGUESE)	2	SN: 10001-@
11	08670-31640	INDICATOR,DUST (CHINESE)	2	SN: 10001-@
11	08670-21640	INDICATOR,DUST (ITALIAN)	2	SN: 10001-@
11	08670-31635	INDICATOR,DUST (RUSSIAN)	2	SN: 10001-@
11	08670-21635	INDICATOR,DUST (GERMAN)	2	SN: 10001-@
12	08671-40110	HOSE	2	SN: 10001-10499
13	08037-01610	GROMMET	2	SN: 10001-@
14	08036-01414	CLIP	4	SN: 10015-@
14	08036-01414	CLIP	2	SN: 10001-10014
15	01010-51016	BOLT	4	SN: 10015-@
15	01010-51016	BOLT	2	SN: 10001-10014
16	01643-51032	WASHER	4	SN: 10015-@
16	01643-51032	WASHER	2	SN: 10001-10014
17	427-01-11230	BRACKET	2	SN: 10001-@
18	01010-51230	BOLT	8	SN: 10001-10499
19	01643-31232	WASHER	8	SN: 10001-10499
20	427-01-11210	BRACKET	2	SN: 10001-10499
21	01010-51035	BOLT	4	SN: 10001-10499
22	01010-51030	BOLT	4	SN: 10001-10499
23	01643-31032	WASHER	8	SN: 10001-10499
24	427-01-11170	HOSE	2	SN: 10001-@
25	07281-00549	CLAMP	6	SN: 10001-10499
26	427-01-11251	TUBE	1	SN: 10034-10499
26	427-01-11250	TUBE	1	SN: 10001-10033
27	427-01-11180	PLATE	1	SN: 10001-10499
28	01010-51025	BOLT	4	SN: 10001-10499
29	01643-31032	WASHER	4	SN: 10001-10499
30	427-01-11161	HOSE	1	SN: 10034-10499
30	427-01-11160	HOSE	1	SN: 10001-10033
31	07281-00809	CLAMP	4	SN: 10001-10499
32	08036-01814	CLIP	4	SN: 10001-10499

Item	Part No.	Part Name	Qty	Options
33	08036-02514	CLIP	14	SN: 10001-10499
34	01010-51020	BOLT	11	SN: 10001-10499
35	01643-51032	WASHER	11	SN: 10001-10499

Catalog signs: ☐ part above may be used instead

Reference: 1011

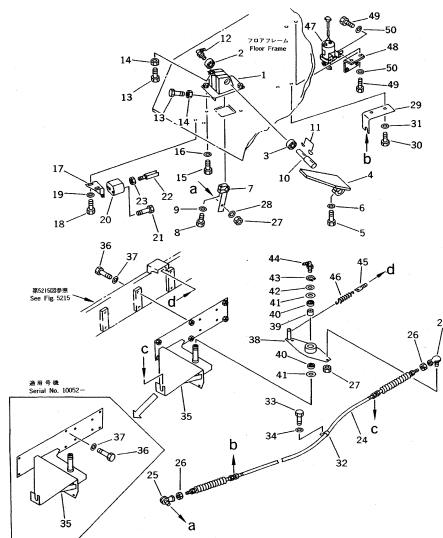

Reference: 1101


030030 ACCELERATOR PEDAL AND LINKAGE (1/2)(#10001-10499)

Item	Part No.	Part Name	Qty	Options
1	421-43-11123	BRACKET	1	SN: 10001-10499
2	426-43-11110	BEARING	1	SN: 10001-10499
3	426-43-11120	BEARING	1	SN: 10001-10499
4	421-43-11112	PEDAL	1	SN: 10001-10499
5	01010-50825	BOLT	1	SN: 10001-10499
6	01602-20825	WASHER,SPRING	1	SN: 10001-10499
7	427-43-11310	LEVER	1	SN: 10001-10499
8	01010-50825	BOLT	1	SN: 10001-10499
9	01643-30823	WASHER	1	SN: 10001-10499
10	421-43-11160	SHAFT	1	SN: 10001-10499
11	04010-00519	KEY	2	SN: 10001-10499
12	07020-00900	FITTING,GREASE	1	SN: 10001-10499
13	01016-51250	BOLT	2	SN: 10001-10499
14	01580-11210	NUT	2	SN: 10001-10499
15	01010-51225	BOLT	2	SN: 10001-10499
16	01643-31232	WASHER	2	SN: 10001-10499
17	427-43-11261	BRACKET	1	SN: 10001-10499
18	01010-50616	BOLT	2	SN: 10001-10499
19	01643-30623	WASHER	2	SN: 10001-10499
20	427-43-11240	AIR CYLINDER ASS'Y	1	SN: 10001-@
21	01252-40550	BOLT	2	SN: 10001-@
22	427-43-11270	YOKE	1	SN: 10001-@
23	01580-10504	NUT	1	SN: 10001-@
24	427-43-11321	CABLE	1	SN: 10001-10499
24	427-43-11320	☒ CABLE	1	SN: (10001-10033)
25	424-09-12450	JOINT	2	SN: 10001-10499
26	01580-10605	NUT	2	SN: 10001-10499
27	426-09-11130	NUT	2	SN: 10001-@
28	01643-30623	WASHER	1	SN: 10001-10499
29	426-43-11141	BRACKET	1	SN: 10001-10499
30	01010-51230	BOLT	2	SN: 10001-10499
31	01643-31232	WASHER	2	SN: 10001-10499
32	426-35-11250	CLIP	1	SN: 10001-10499
33	01010-51016	BOLT	1	SN: 10001-10499
34	01643-31032	WASHER	1	SN: 10001-@
35	427-62-11362	BRACKET	1	SN: 10052-10499
35	427-62-11361	BRACKET	1	SN: 10001-10051
36	01010-31040	BOLT	6	SN: 10001-10499

Item	Part No.	Part Name	Qty	Options
37	01643-31032	WASHER	6	SN: 10001-10499
38	427-43-11190	LEVER	1	SN: 10001-10499
39	06120-02030	BEARING,NEEDLE	1	SN: 10001-@
40	06122-02004	SEAL,BEARING	2	SN: 10001-@
41	01643-32060	WASHER	2	SN: 10001-@
42	01643-31845	WASHER	1	SN: 10001-@
43	04064-01812	RING,SNAP	1	SN: 10001-@
44	07020-00675	FITTING,GREASE	1	SN: 10001-10499
45	426-43-11180	ROD	1	SN: 10001-@
46	415-43-11240	SPRING	1	SN: 10001-@
47	425-06-11150	VALVE	1	SN: 10001-@
48	427-43-11291	PLATE	1	SN: 10001-@
49	01010-50820	BOLT	4	SN: 10001-@
50	01643-30823	WASHER	4	SN: 10001-@

Catalog signs: ☒ discontinued: use part above

Reference: 1101

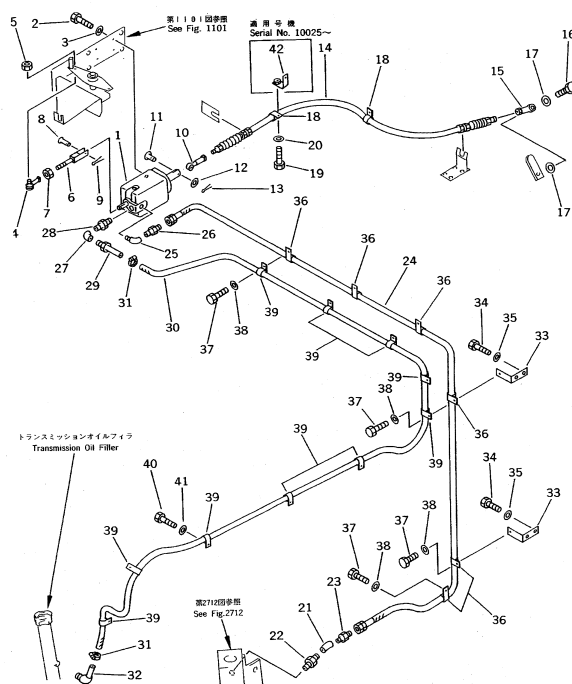

Reference: 1102


030040 ACCELERATOR PEDAL AND LINKAGE (2/2)(#10001-10499)

Item	Part No.	Part Name	Qty	Options
1	6164-71-7542	CYLINDER ASS'Y,SERVO	1	SN: 10001-@
2	01010-31020	BOLT	4	SN: 10001-10499
3	01643-31032	WASHER	4	SN: 10001-10499
4	424-09-12450	JOINT	1	SN: 10001-@
5	426-09-11130	NUT	1	SN: 10001-@
6	427-43-11380	YOKE	1	SN: .-@
6	04244-40605	□ ROD	1	SN: 10001-.
7	01580-10605	NUT	1	SN: 10001-@
8	04205-10618	PIN	1	SN: 10001-@
9	04050-11612	PIN,COTTER	1	SN: 10001-@
10	04250-51056	END,ROD	1	SN: 10001-@
11	04205-11032	PIN	1	SN: 10001-@
12	01641-21016	WASHER	1	SN: 10001-@
13	04050-13020	PIN,COTTER	1	SN: 10001-@
14	427-43-11230	CABLE	1	SN: 10001-10499
15	04250-51056	END,ROD	1	SN: 10001-@
16	01010-51040	BOLT	1	SN: 10001-@
17	04254-01032	SPACER	2	SN: 10001-@
18	424-09-12410	CLIP	2	SN: 10025-10499
18	08036-01814	CLIP	2	SN: 10001-10024
19	01010-51020	BOLT	2	SN: 10001-@
20	01643-31032	WASHER	2	SN: 10001-@
21	07323-50300	ELBOW	1	SN: 10001-@
22	07325-10300	NIPPLE	1	SN: 10001-@
23	07238-00315	CONNECTOR	1	SN: 10001-@
24	07102-20332	HOSE	1	SN: 10001-@
25	07323-30300	ELBOW	1	SN: 10001-@
26	427-43-11330	CONNECTOR	1	SN: 10001-@
27	07323-10400	ELBOW	1	SN: 10001-@
28	07325-10400	NIPPLE	1	SN: 10001-@
29	281-04-15570	TUBE	1	SN: 10001-@
30	07261-01448	HOSE	1	SN: 10001-@
31	07281-00259	CLAMP	2	SN: 10001-@
32	232-43-54460	ELBOW	1	SN: 10001-@

Item	Part No.	Part Name	Qty	Options
33	427-43-11340	BRACKET	2	SN: 10001-@
34	01010-51020	BOLT	4	SN: 10001-10499
35	01643-31032	WASHER	4	SN: 10001-10499
36	08036-01814	CLIP	6	SN: 10001-@
37	01010-51020	BOLT	7	SN: 10001-@
38	01643-31032	WASHER	7	SN: 10001-@
39	08036-02514	CLIP	10	SN: 10001-@
40	01010-51016	BOLT	3	SN: 10001-@
41	01643-31032	WASHER	3	SN: 10001-@
42	427-43-11370	BRACKET	1	SN: 10025-10499

Catalog signs: ☐ part above may be used instead

Reference: 1102

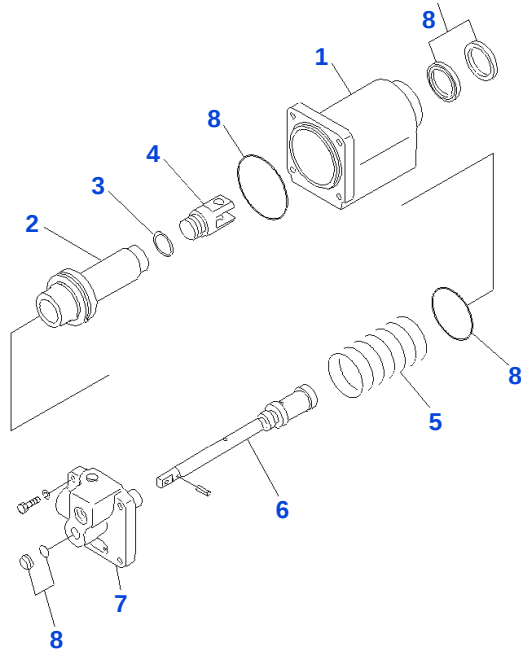


PV42165

Reference: 1111

030050 SERVO CYLINDER

Item	Part No.	Part Name	Qty	Options
	6164-71-7542	CYLINDER ASS'Y,SERVO	1	SN: 10001-UP
1	NA72727939-02	• BODY	1	SN: 10001-UP
2	NA74727940-01	• PISTON	1	SN: 10001-UP
3	NA74591289-16	• GASKET	1	SN: 10001-UP
4	NA74732031-01	• YOKE	1	SN: 10001-UP
5	NA74727942-01	• SPRING	1	SN: 10001-UP
6	NA74735997-01	• ROD	1	SN: 10001-UP
7	NA74727945-01	• COVER	1	SN: 10001-UP
8	NA74Y49991-10	• REPAIR KIT	1	SN: 10001-UP

Reference: 1111

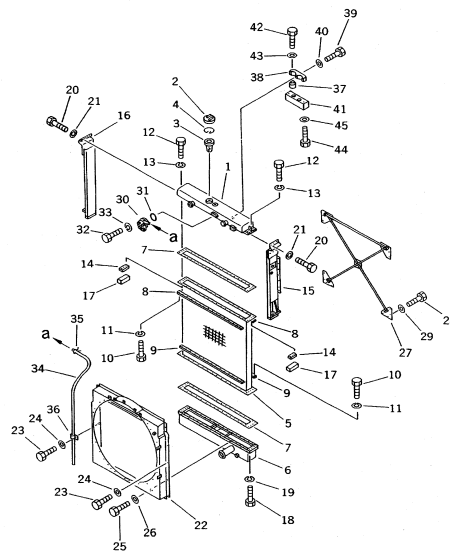

Reference: 1202

030060 RADIATOR(#10001-10043)

Item	Part No.	Part Name	Qty	Options
	427-03-11101	RADIATOR ASS'Y	1	SN: 10001-10043
1	427-03-11120	• TANK,UPPER	1	SN: 10001-@
2	07053-10001	• CAP	1	SN: 10001-@
2	07053-00002	• GASKET	1	SN: 10001-@
3	07056-00048	• STRAINER	1	SN: 10001-@
4	170-03-91180	• RING,SNAP	1	SN: 10001-@
5	427-03-11130	• CORE	1	SN: 10001-@
6	427-03-11140	• TANK,LOWER	1	SN: 10001-10043
7	427-03-11190	• GASKET	2	SN: 10001-@
8	427-03-11150	• PLATE	2	SN: 10001-@
9	427-03-11160	• PLATE	2	SN: 10001-@
10	01010-51030	• BOLT	124	SN: 10001-@
11	01602-21030	• WASHER,SPRING	124	SN: 10001-@
12	01010-51250	• BOLT	8	SN: 10001-@
13	01602-21236	• WASHER,SPRING	8	SN: 10001-@
14	425-03-11180	• PLATE	2	SN: 10001-@
15	427-03-11170	• SUPPORT,L.H.	1	SN: 10001-10043
16	427-03-11180	• SUPPORT,R.H.	1	SN: 10001-10043
17	427-03-11210	• PACKING	2	SN: 10001-@
18	01010-51260	• BOLT	8	SN: 10001-@
19	01602-21236	• WASHER,SPRING	8	SN: 10001-@
20	01010-51225	• BOLT	10	SN: 10001-10043
21	01643-31232	• WASHER	10	SN: 10001-@
22	427-03-11221	• SHROUD	1	SN: 10001-@
23	01010-51225	• BOLT	10	SN: 10001-@
24	01643-31232	• WASHER	10	SN: 10001-@
25	01010-51220	• BOLT	6	SN: 10001-@
26	01643-31232	• WASHER	6	SN: 10001-@
27	427-03-11230	• STAY,CROSS	1	SN: 10001-@
28	01010-51230	• BOLT	12	SN: 10001-10043
29	01643-31232	• WASHER	12	SN: 10001-10043
30	154-03-11682	• VALVE	1	SN: 10001-@
31	07000-03045	• O-RING	1	SN: 10001-@
32	01010-51025	• BOLT	2	SN: 10001-@
33	01602-21030	• WASHER,SPRING	2	SN: 10001-@
34	427-03-11260	• PIPE	1	SN: 10001-@
35	04059-01010	• WIRE,LOCK	1	SN: 10001-@
36	175-03-11140	• CLIP	5	SN: 10001-@
37	198-03-22290	• ISOLATOR	4	SN: 10001-@
38	198-03-22330	• BRACKET	2	SN: 10001-@
39	01010-51260	• BOLT	2	SN: 10001-@
40	198-03-22450	• WASHER	2	SN: 10001-@
41	427-03-11250	• BLOCK	2	SN: 10001-@
42	01090-52290	• BOLT	4	SN: 10001-@
43	01643-32260	• WASHER	4	SN: 10001-@
44	01010-51025	• BOLT	4	SN: 10001-@
45	01643-31032	• WASHER	4	SN: 10001-@

Get the complete PDF catalogue

Komatsu WA800-1 S/N 10001-UP

\$89

with PayPal | Store cart: \$99

Buy this PDF on Manuals Komatsu

Check the model, serial range and language before payment.
Download instructions are emailed after payment confirmation.

This free sample contains 10 catalogue pages.